




WARDROBE

MODEL:WA-MEXI-WH

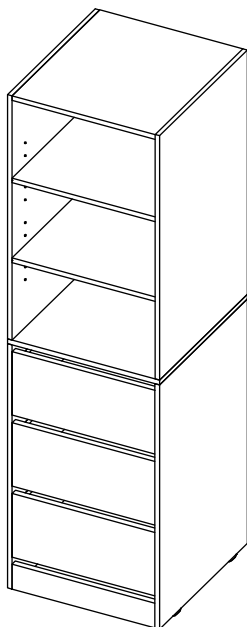

ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.






Two persons and
tools required for
assembly

HARDWARE

A	x16	B	x4	C	x4	D	x32	E	x16	F	x1
7x35mm		15x12mm		Ø6x30mm		M4x40mm				M4x30mm	
G	x1	H	x1	I	x1	J	x6	K	x6	L	x18
M4x14mm						M4x10mm				M3x12mm	
M	x12	N	x26	O	x2	P	x12	Q	x4	R	x4
M3x14mm						12x10mm				Ø6x50mm	
S	x8										
7x8mm											






PARTS

Wipe with dry cloths

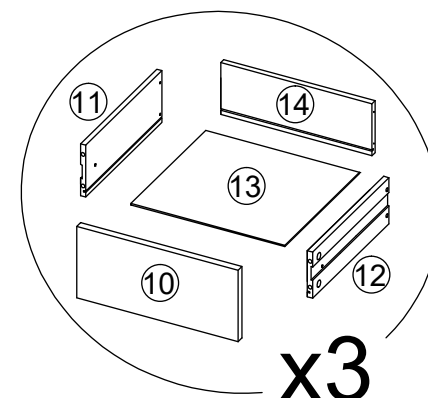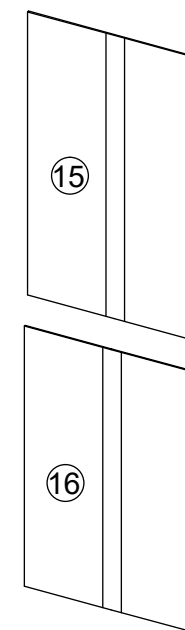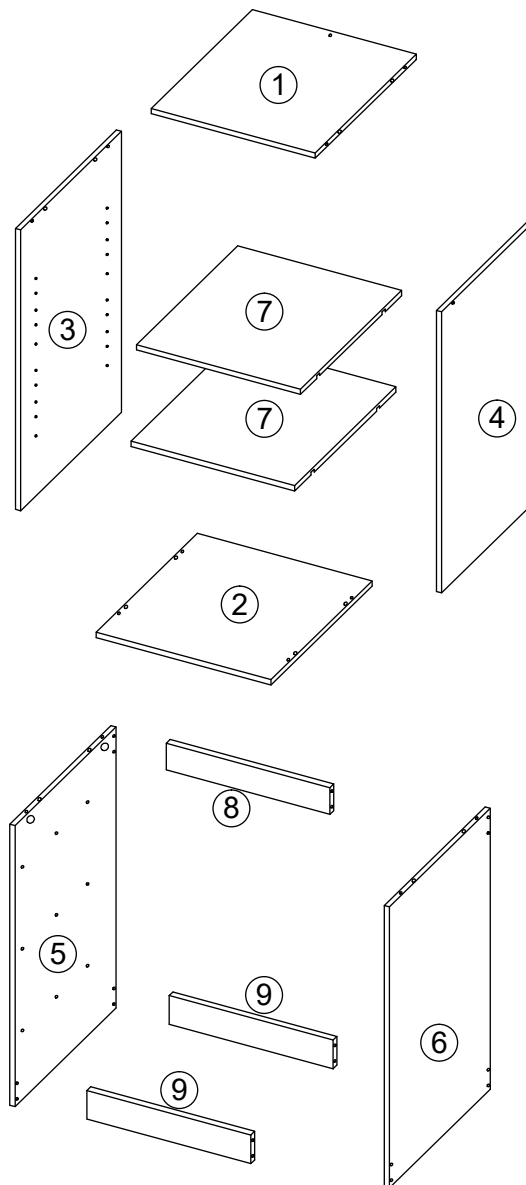

x3


1

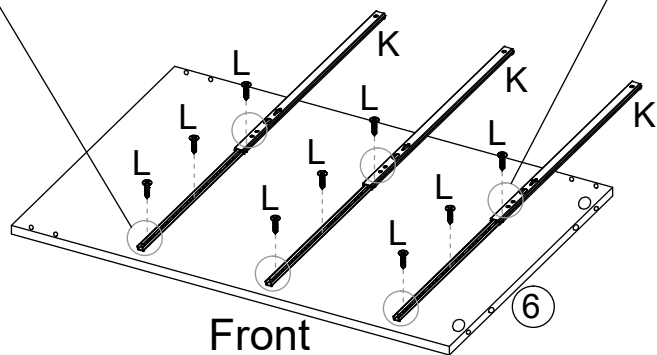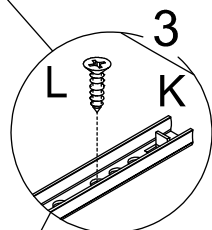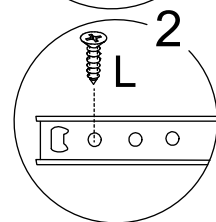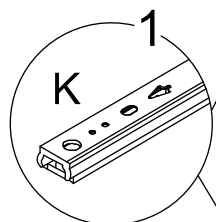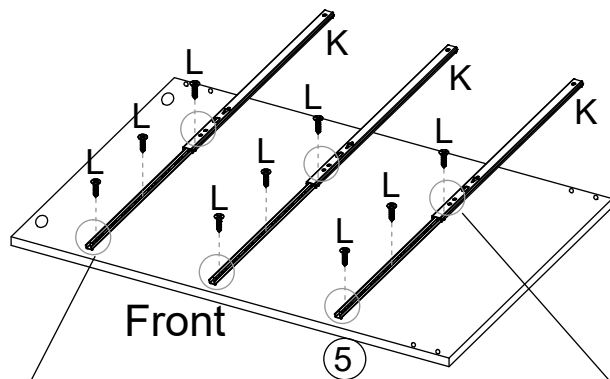


a.1




a.2




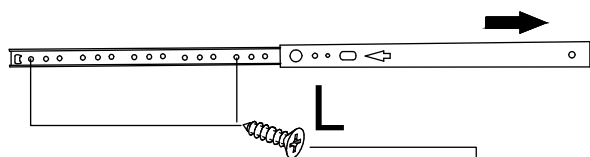


a.3





L	x18	K	x6
			
M3x12mm			

2

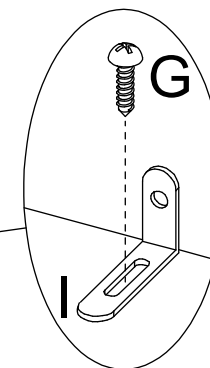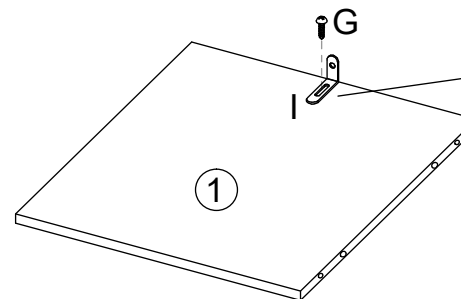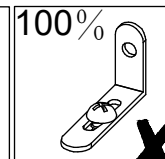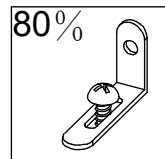


I	x1	G	x1
			
M4x12mm			

3

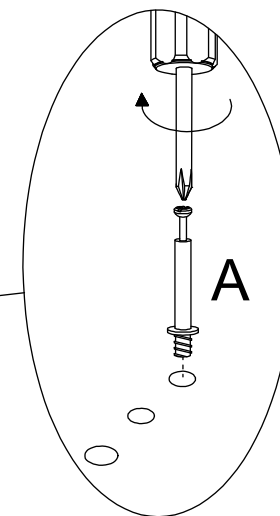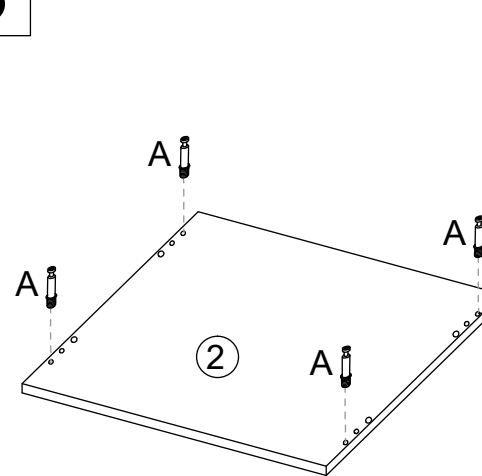


A	x4
	
7x35mm	

4

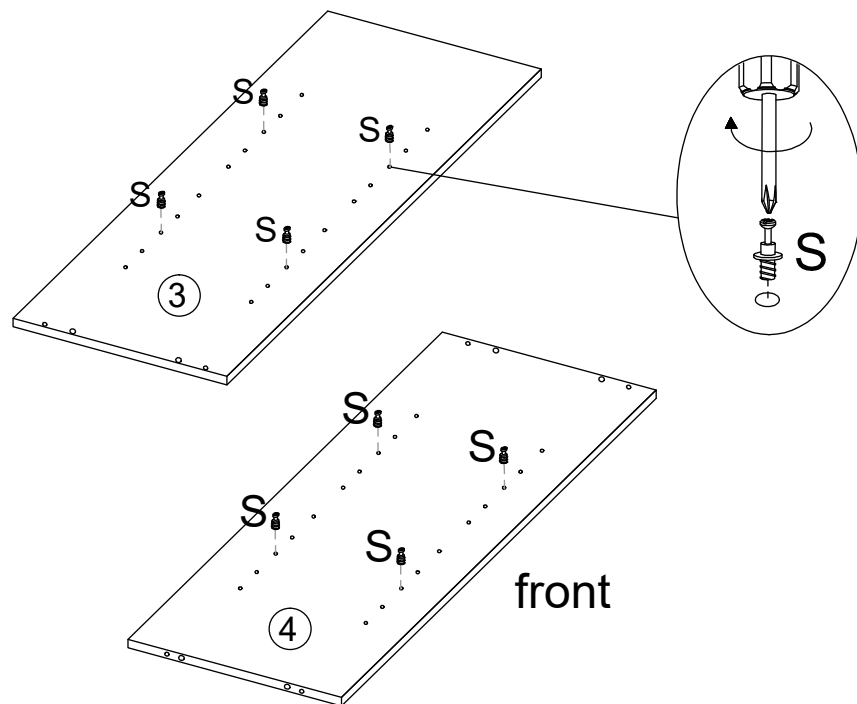


S	x8
	
7x8mm	

6

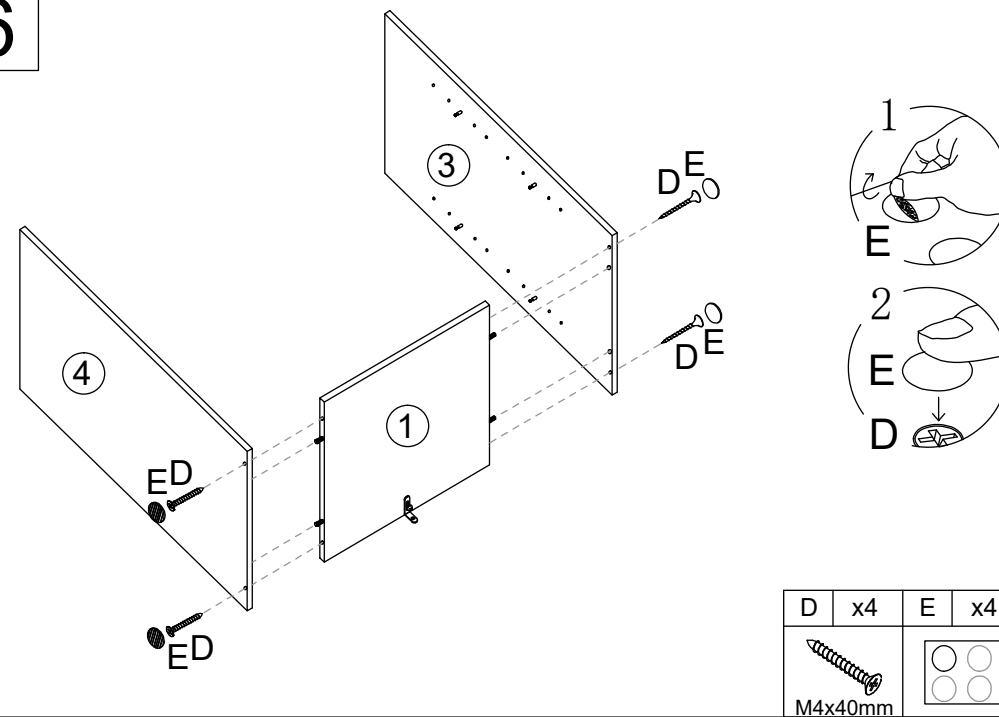


D	x4	E	x4
			
M4x40mm			

5

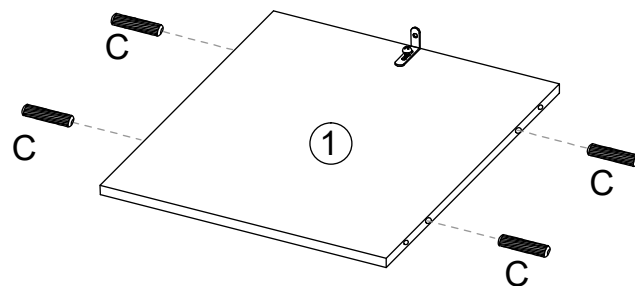


C	x4
	
Ø6x30mm	

7

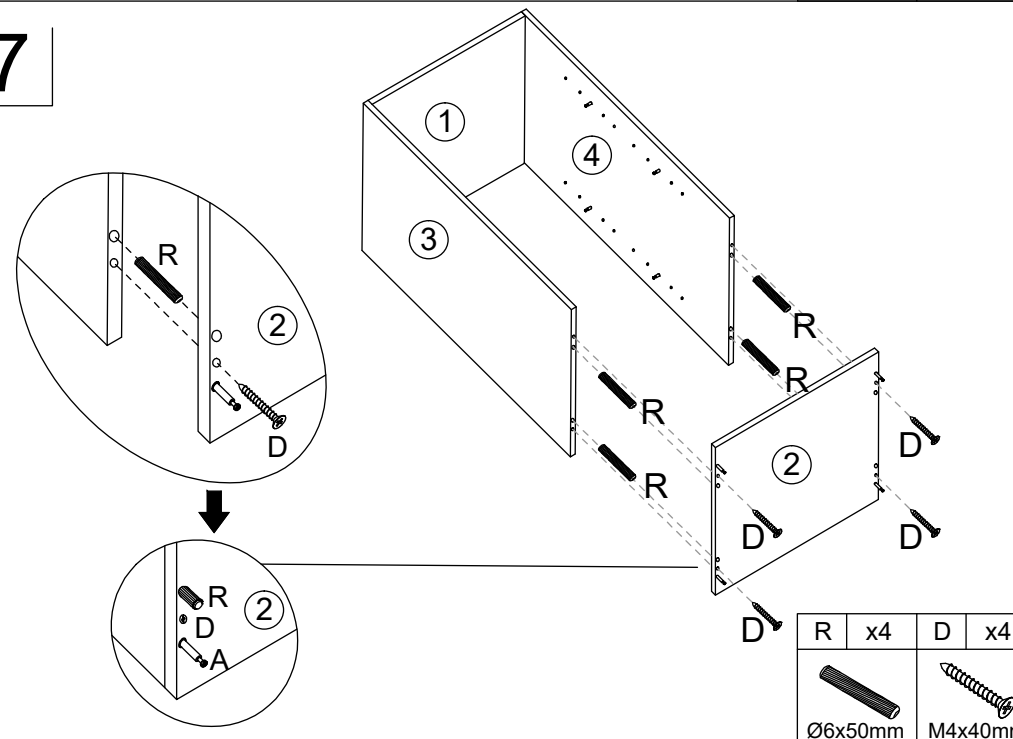


R	x4	D	x4
			
Ø6x50mm		M4x40mm	




8

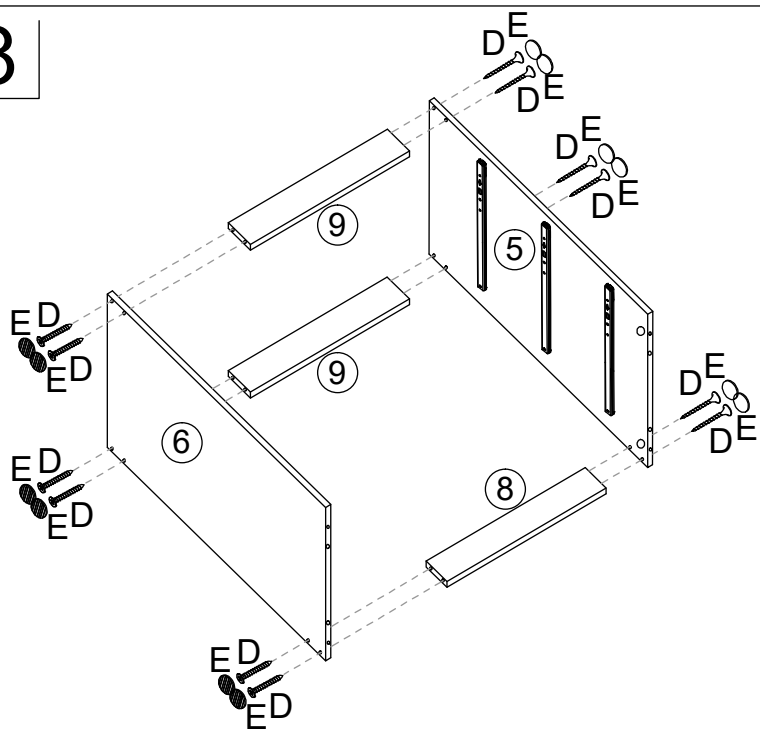




10

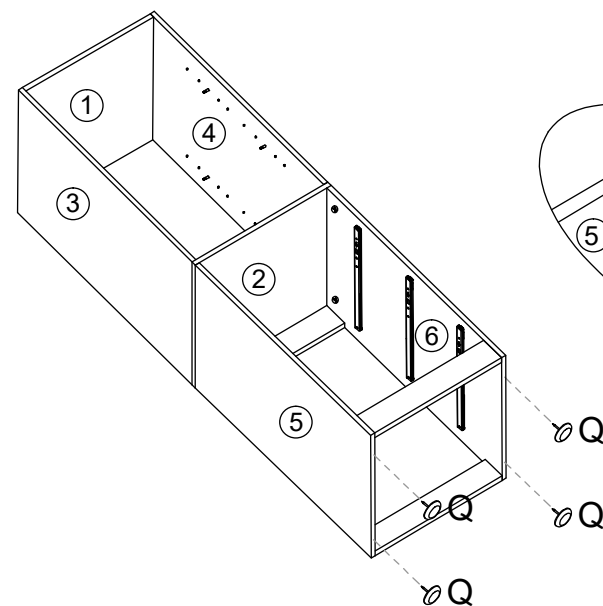

9

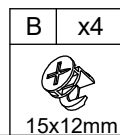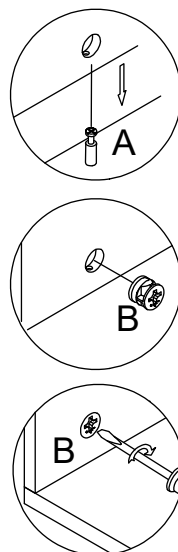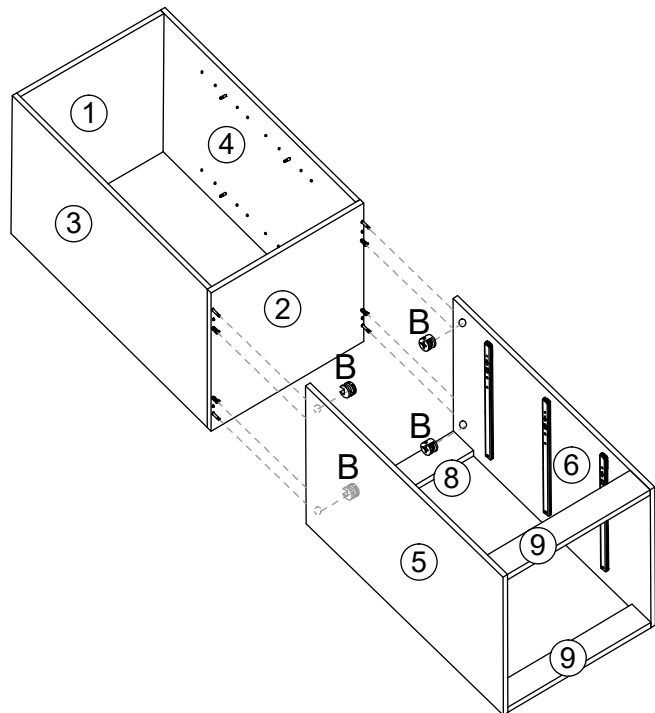


11

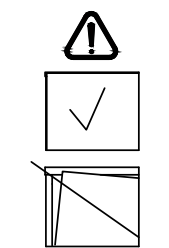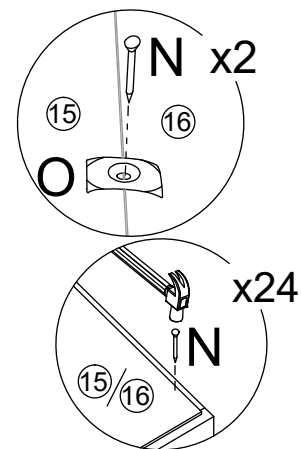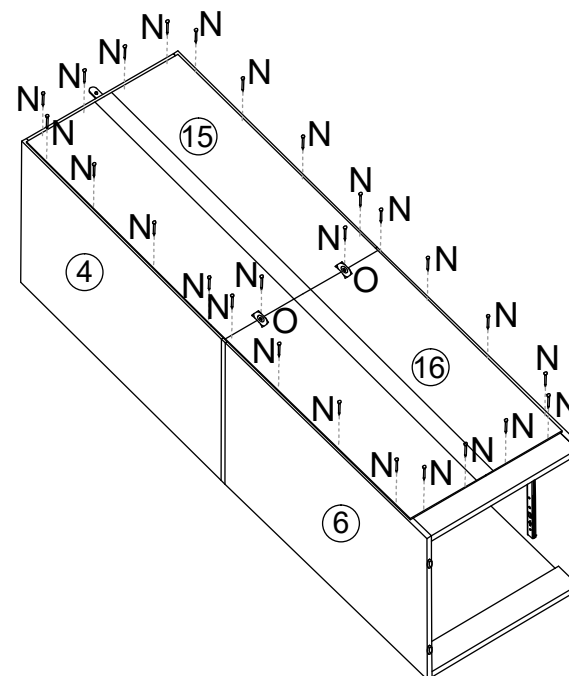

rear panels


12

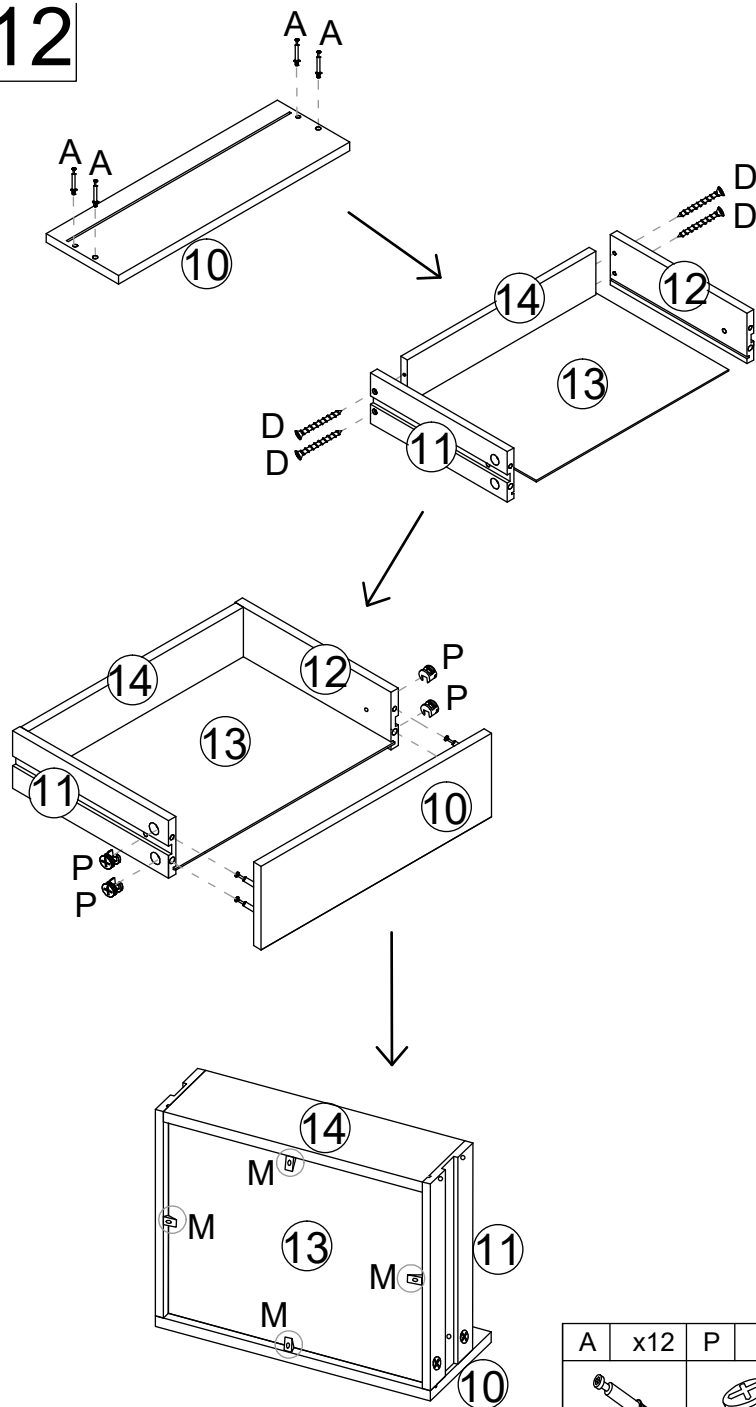

x3


A	x12	P	x12	M	x12	D	x12
							
7x35mm		12x10mm		M3x14mm		M4x40mm	

13




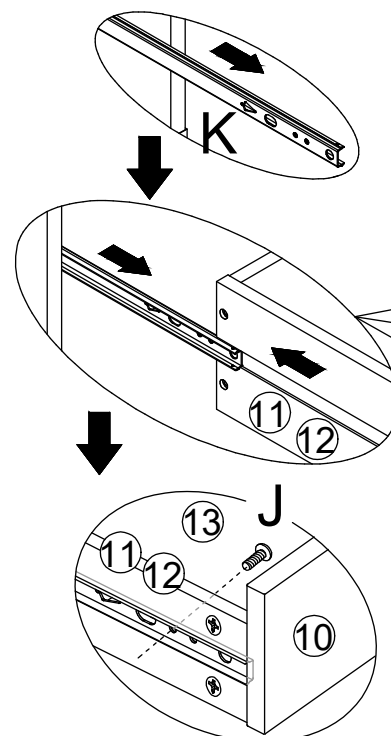


Screw from the inside of the drawers

J	x6
	
M4x10mm	







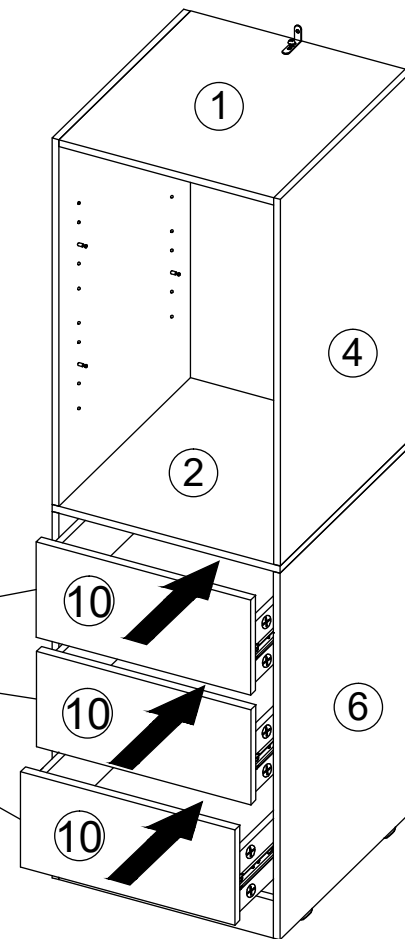


14

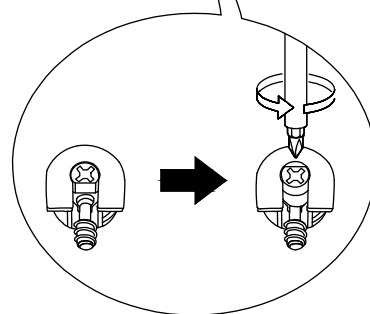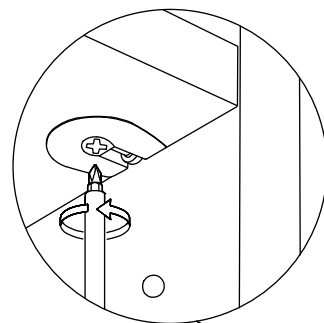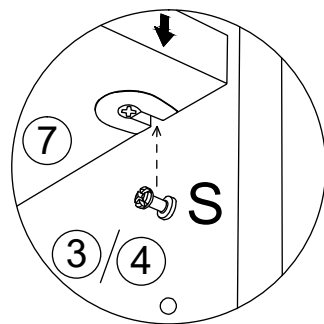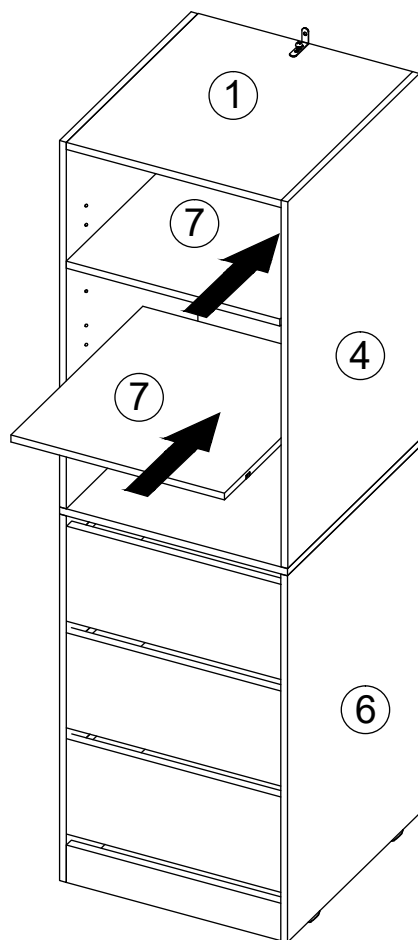

15

Pre-drilled hole at wall

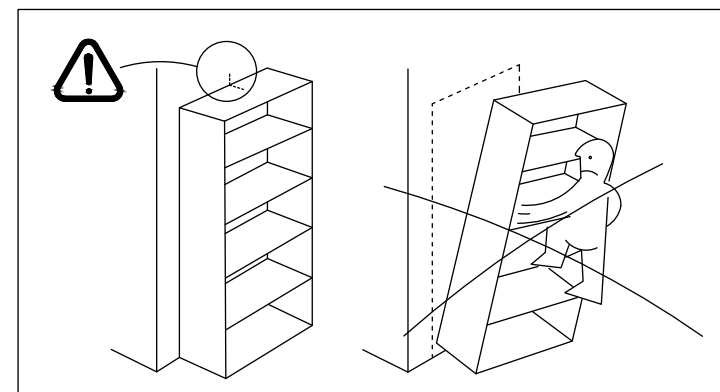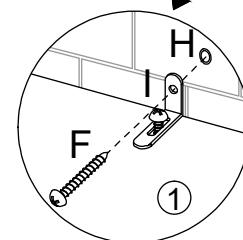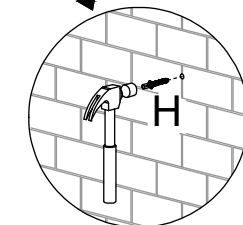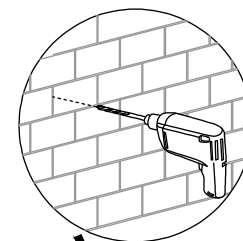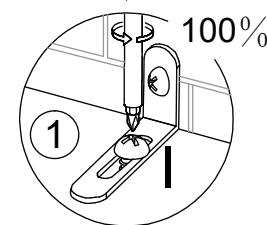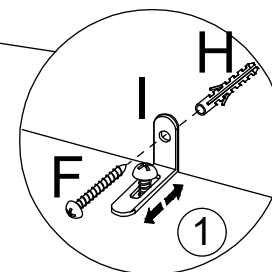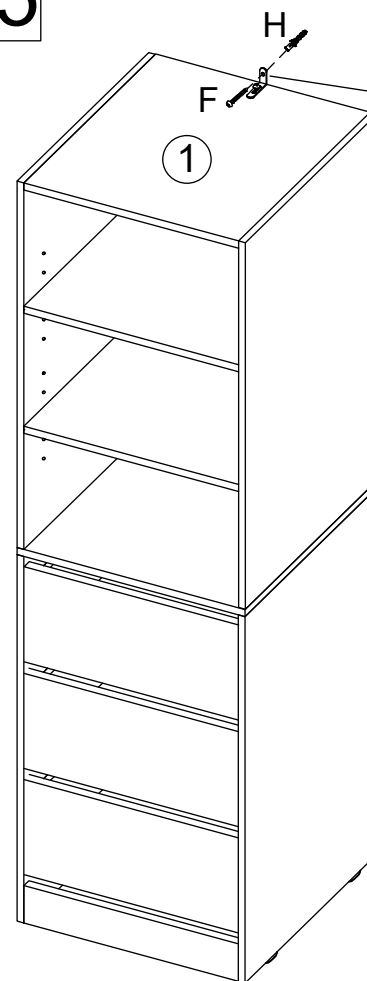

H	x1	F	x1
		M4x30mm	