


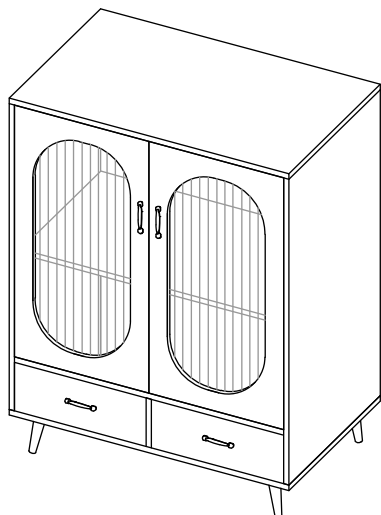

SIDEBORD

MODEL:SB-KIRI-A35-BK-A



ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.





Two persons and
tools required for
assembly

HARDWARE



A	x10	B	x6	C	x24	D	x26	E	x12	F	x2
7x35mm		15x12mm		Ø6x30mm		M4x40mm				M4x30mm	
G	x2	H	x4	I	x16	J	x20	K	x4	L	x12
				M3.5x14mm						M3x12mm	
M	x4	N	x8	O	x4	P	x4	Q	x4	R	x4
		M4x18mm				12x10mm		M4x10mm			
S	x20	T	x4	U	x2	V	x1				
M4x14mm		M3x14mm									

PARTS

Wipe with dry cloths

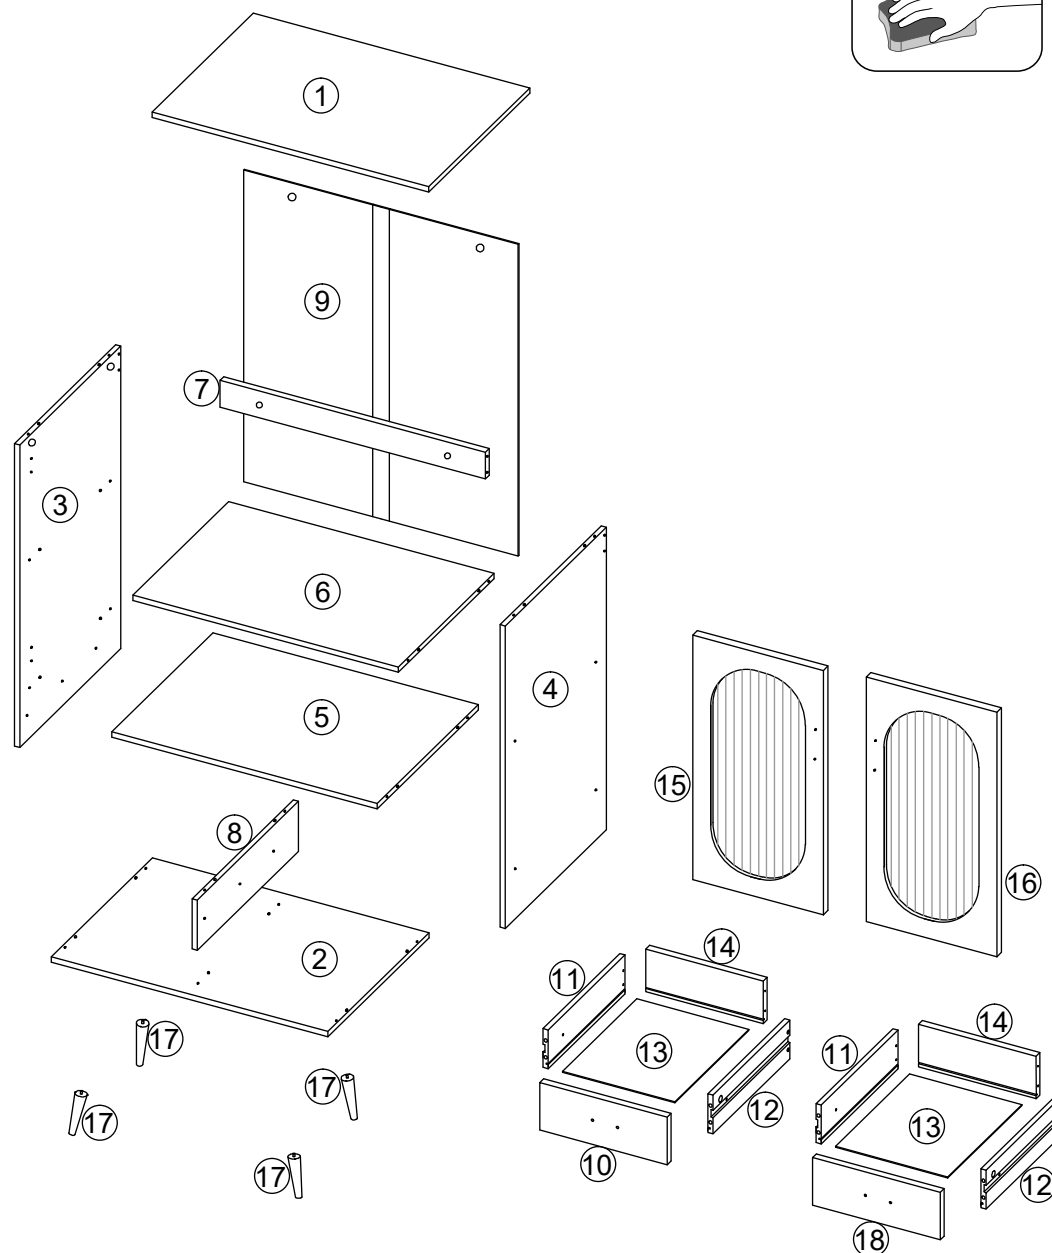
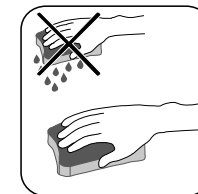


1

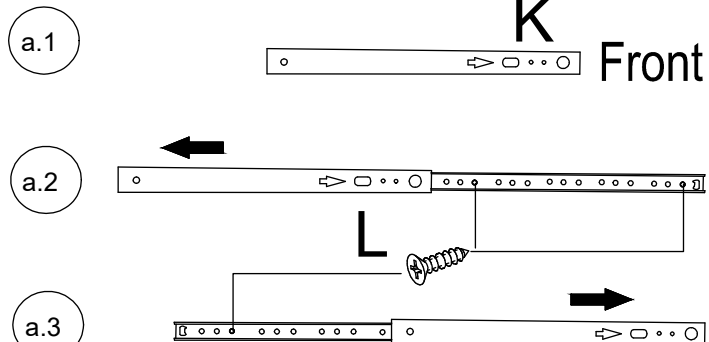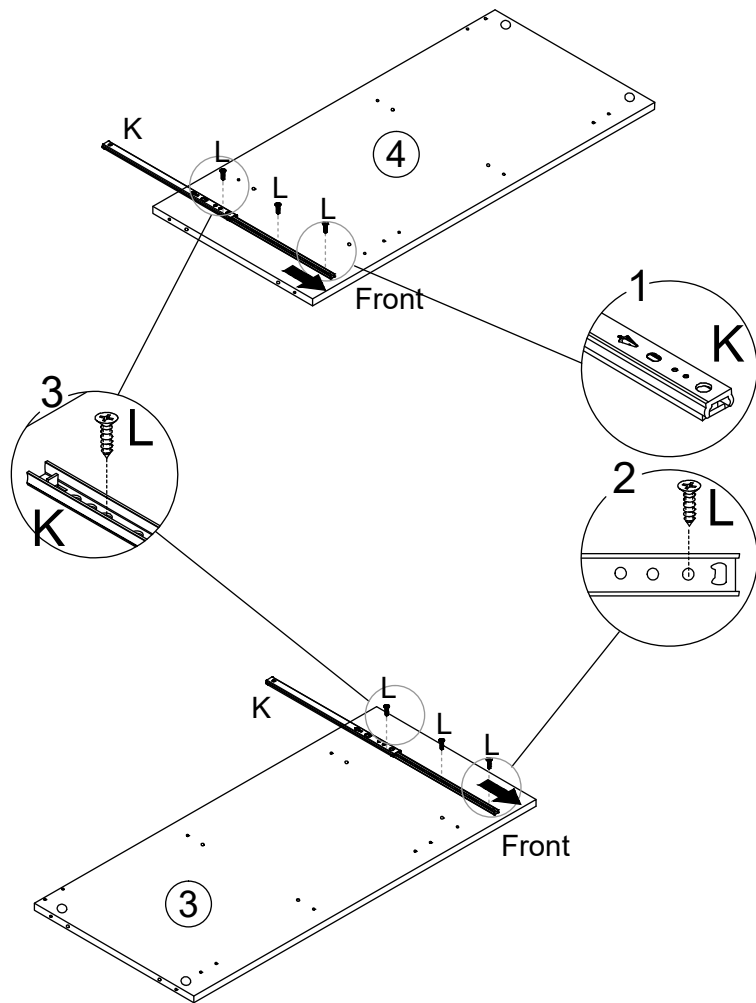


K	x2	L	x6
M3x12mm			

2

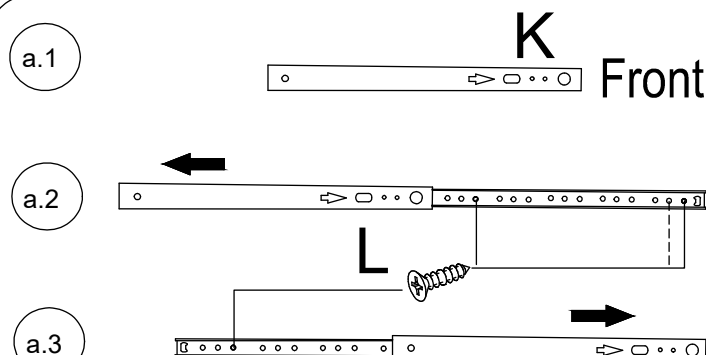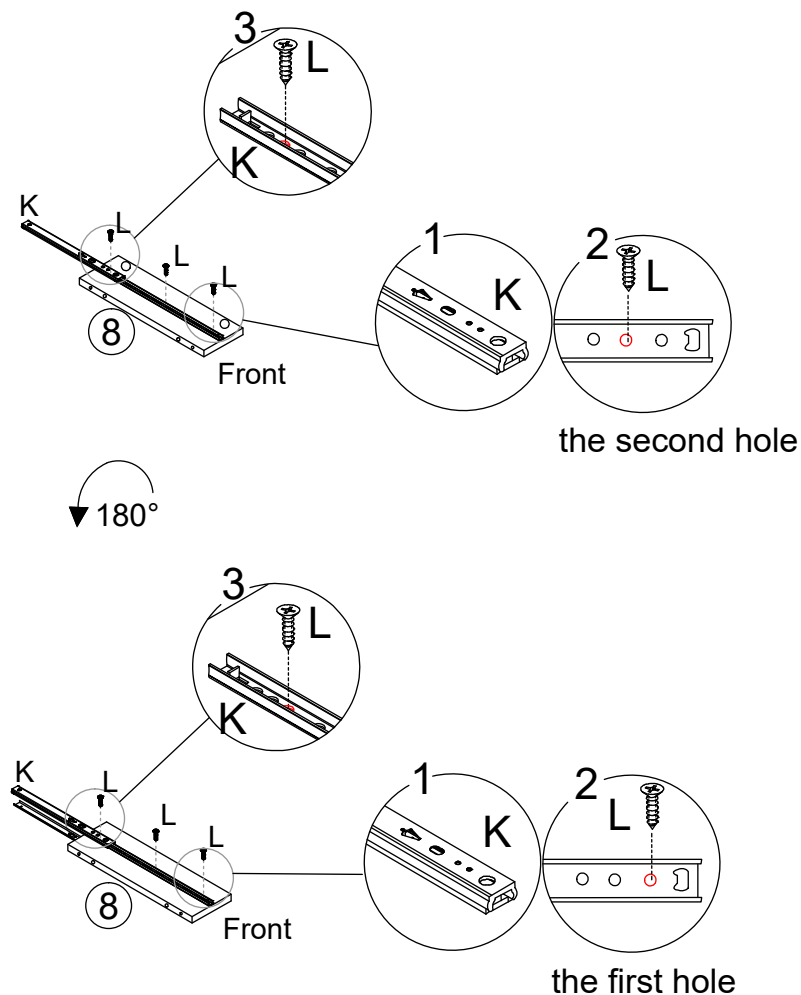


K	x2	L	x6
M3x12mm			

3



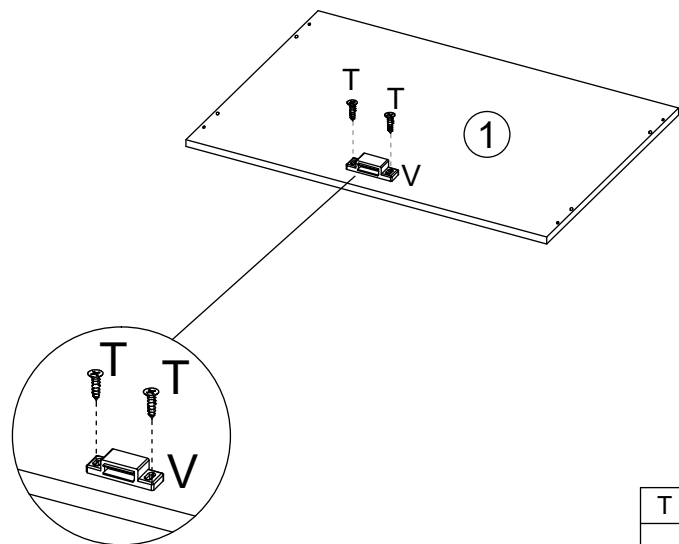


T	x2	V	x1
			
M3x14mm			


5

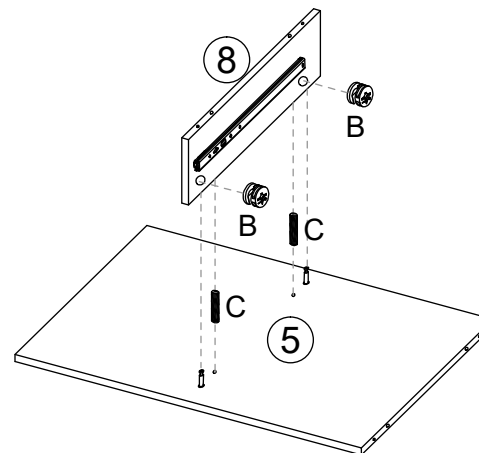

B	x2	C	x2
			
15x12mm		Ø6x30mm	

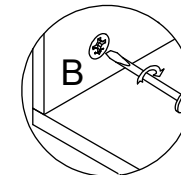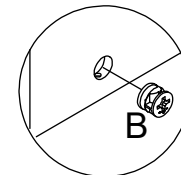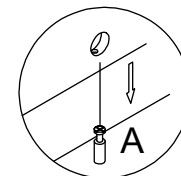


4

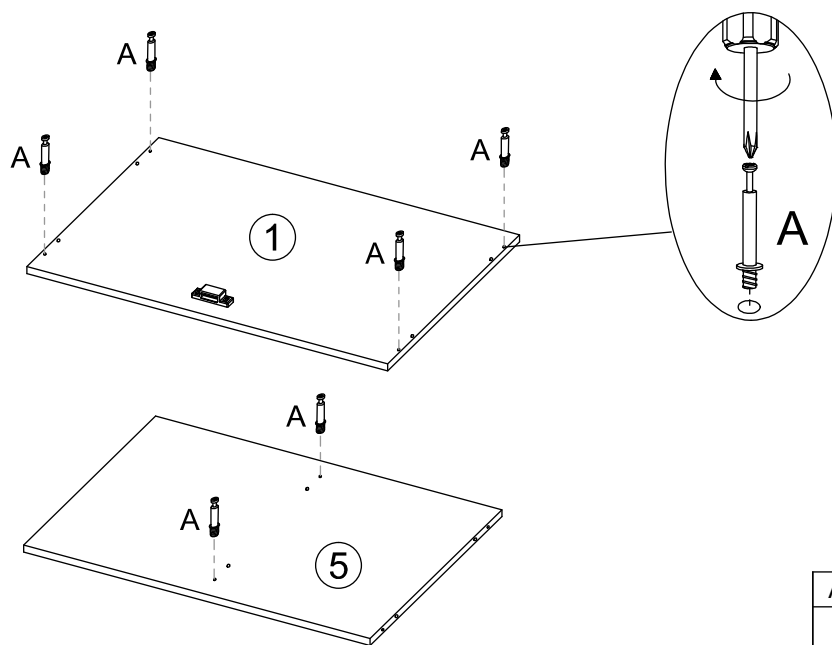


A	x6
	
7x35mm	


6

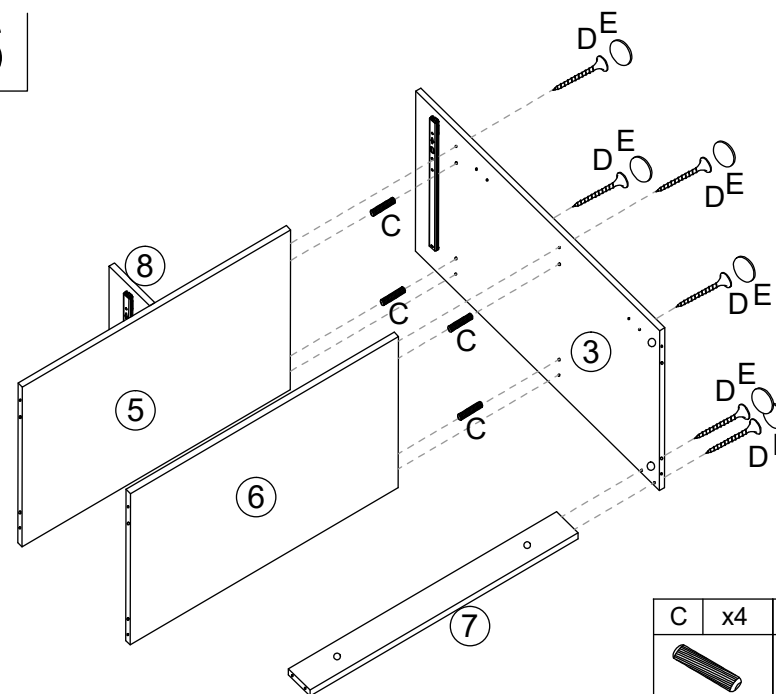

C	x4	D	x6	E	x6
					
Ø6x30mm		M4x40mm			

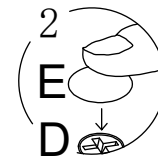


7

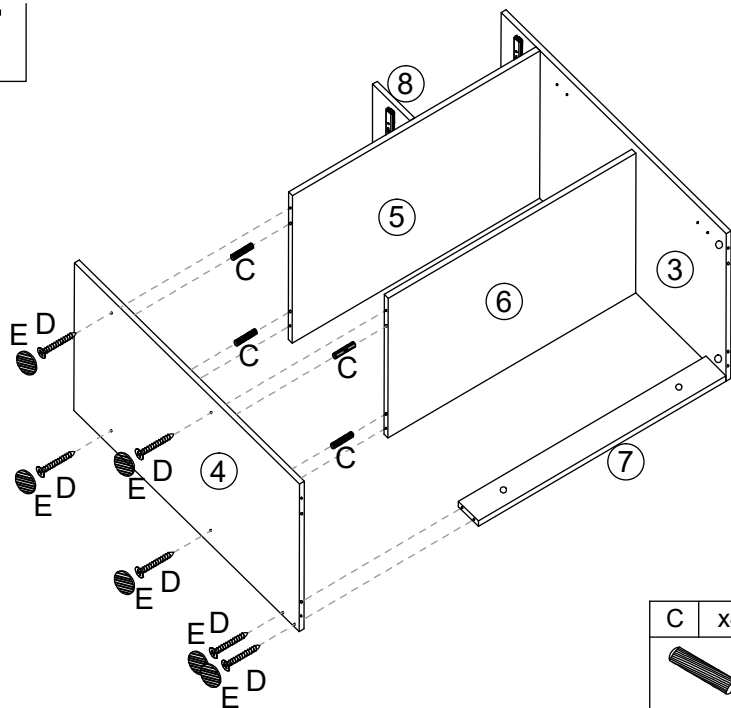



C	x4	D	x6	E	x6
Ø6x30mm		M4x40mm			

9

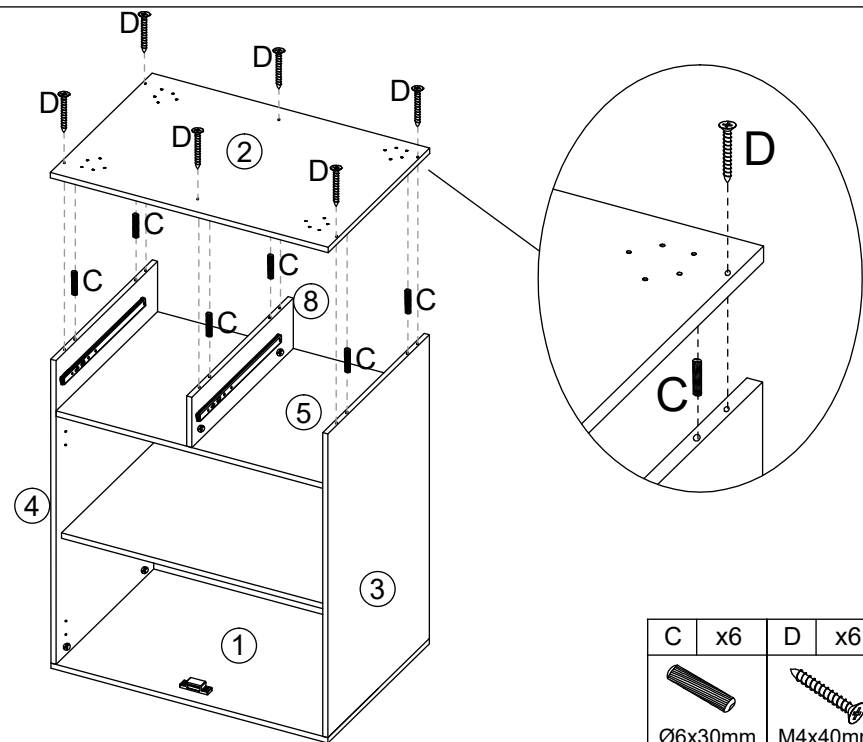


C	x6	D	x6
Ø6x30mm		M4x40mm	

8

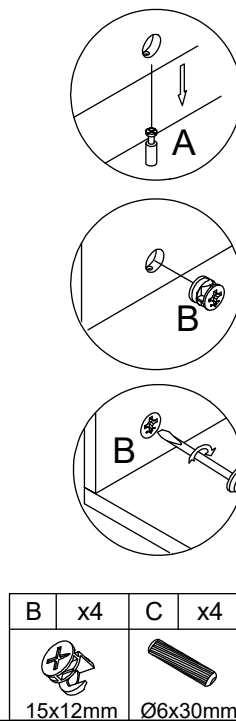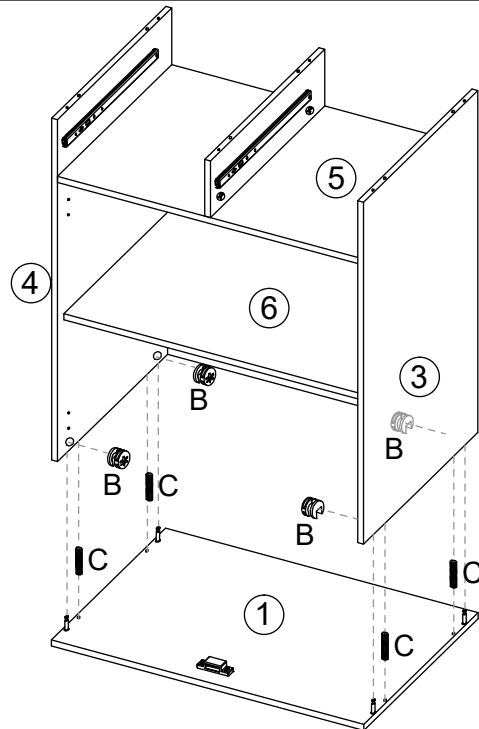


B	x4	C	x4
15x12mm		Ø6x30mm	

10

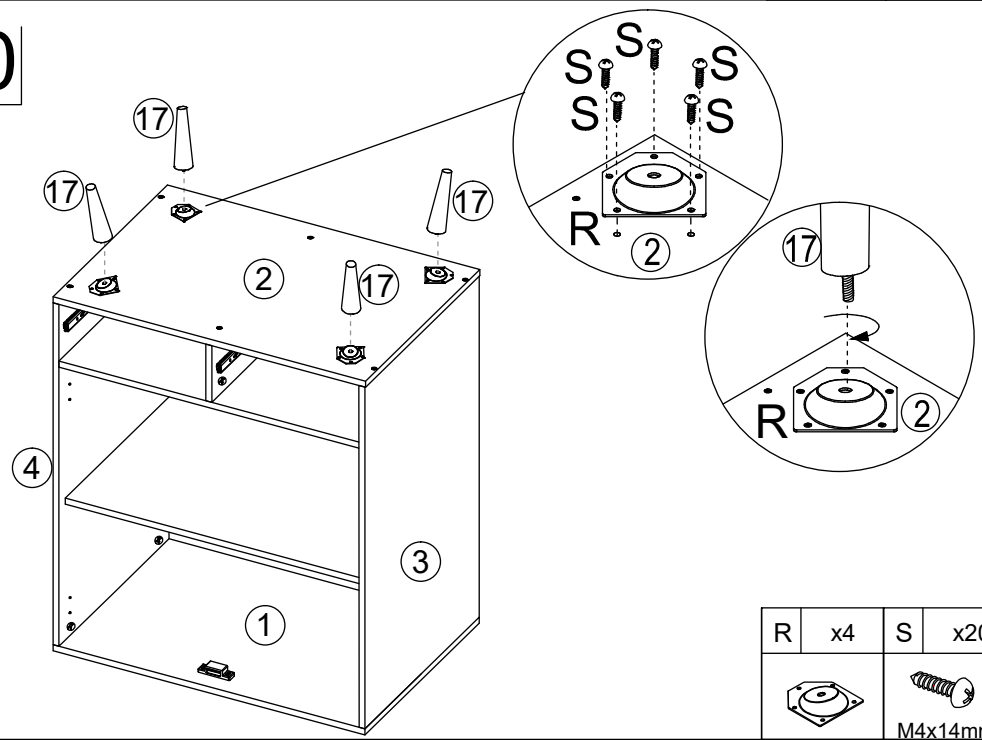



R	x4	S	x20
		M4x14mm	

11

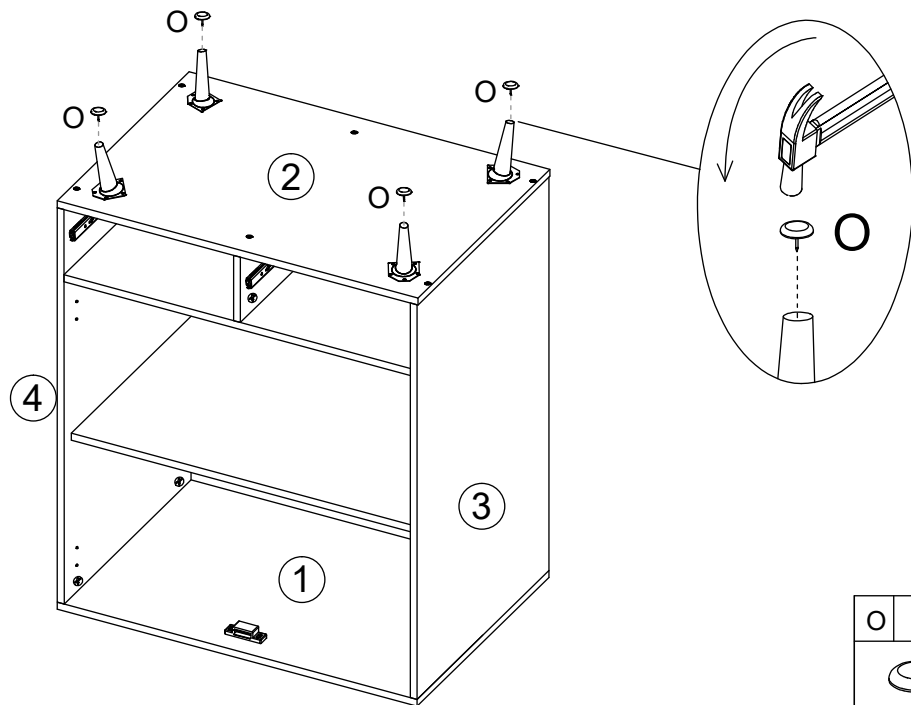

O	x4



12

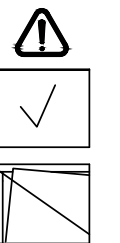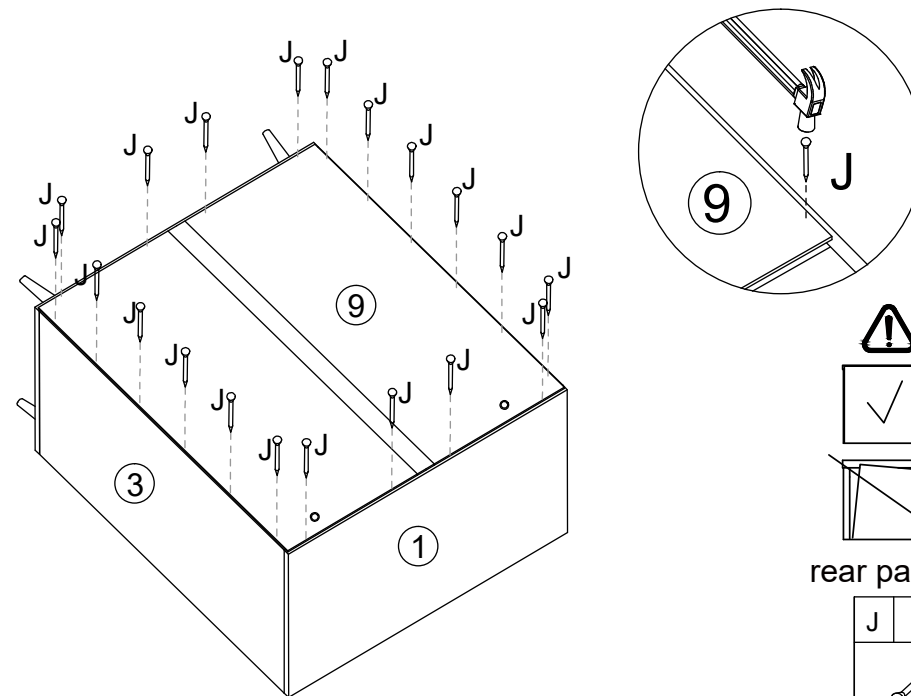

rear panels

J	x20


13

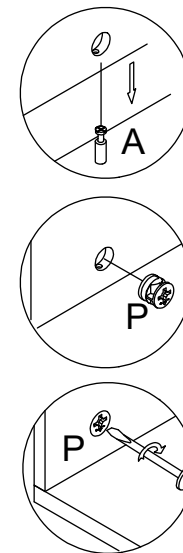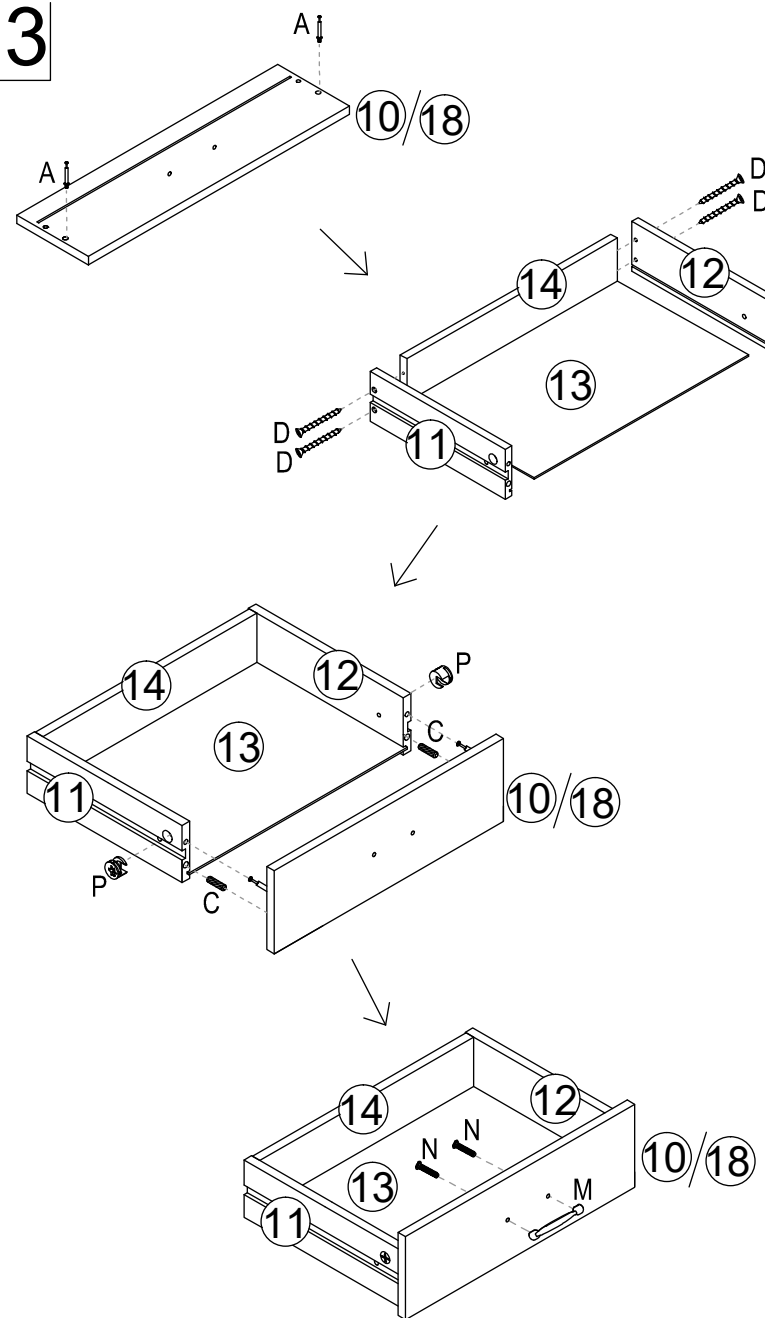

x2

A	x4	C	X4	P	x4	D	x8	M	x2	N	x4
7x35mm		Ø6x30mm		12x10mm		M4x40mm		M4x18mm		M4x18mm	


14

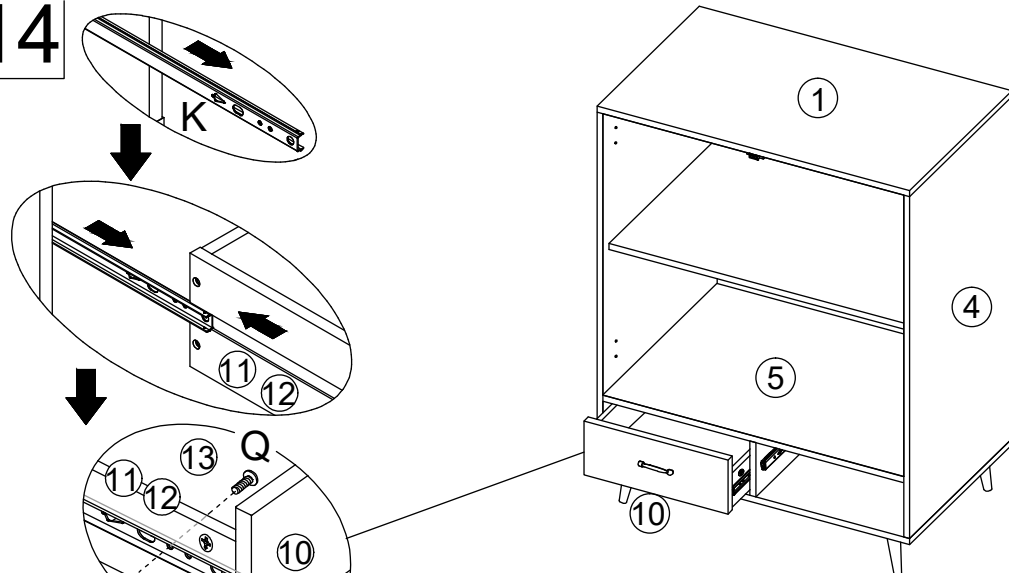

Screw from the inside of the drawers

Q	x2
	
M4x10mm	


15

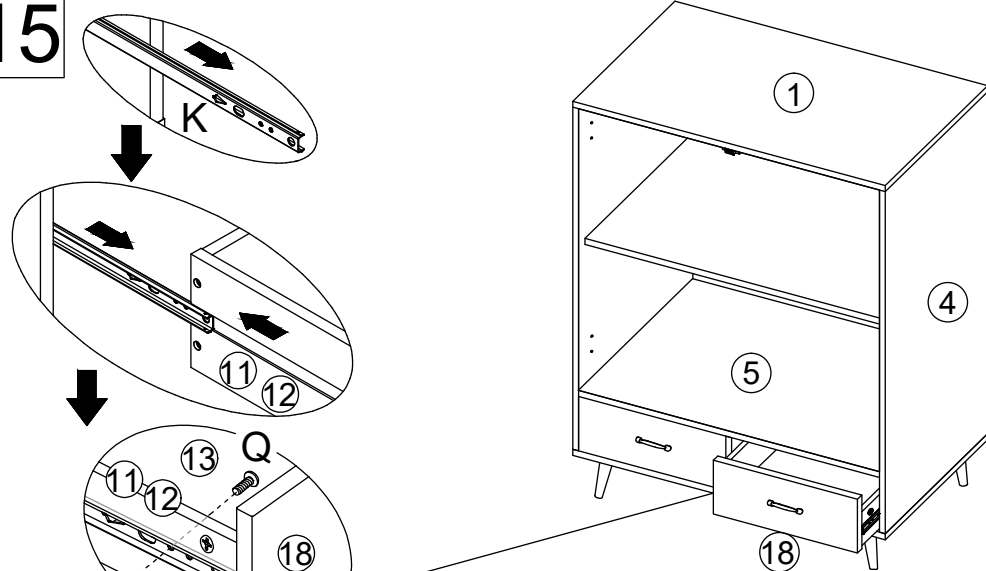

Screw from the inside of the drawers



Q	x2
	
M4x10mm	

16

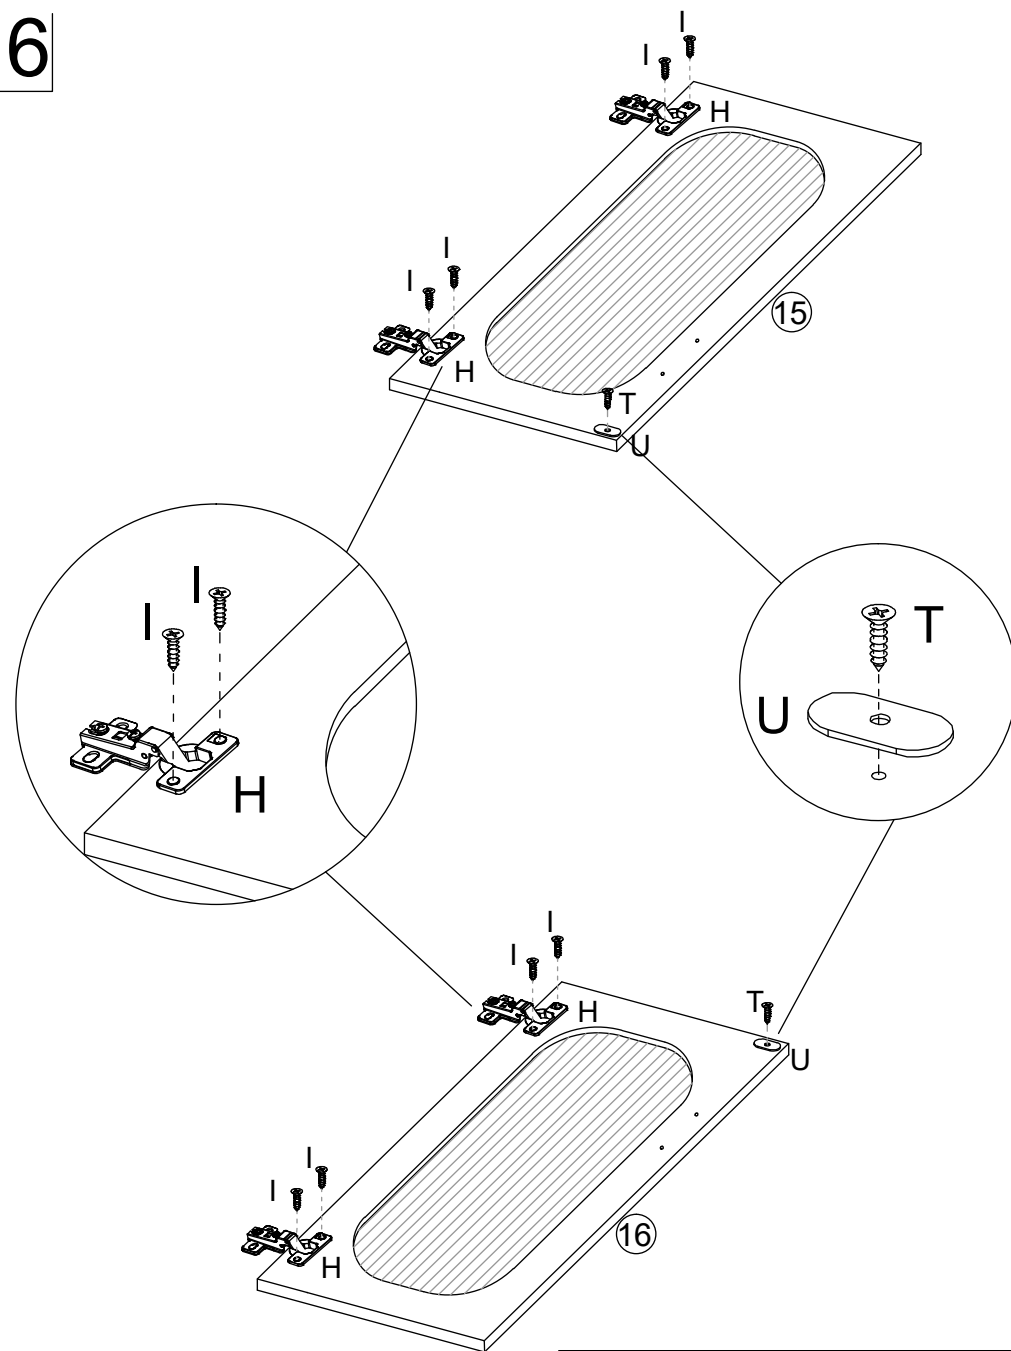



H	x4	I	x8	T	x2	U	x2
							
		M3.5x14mm		M3x14mm			

17

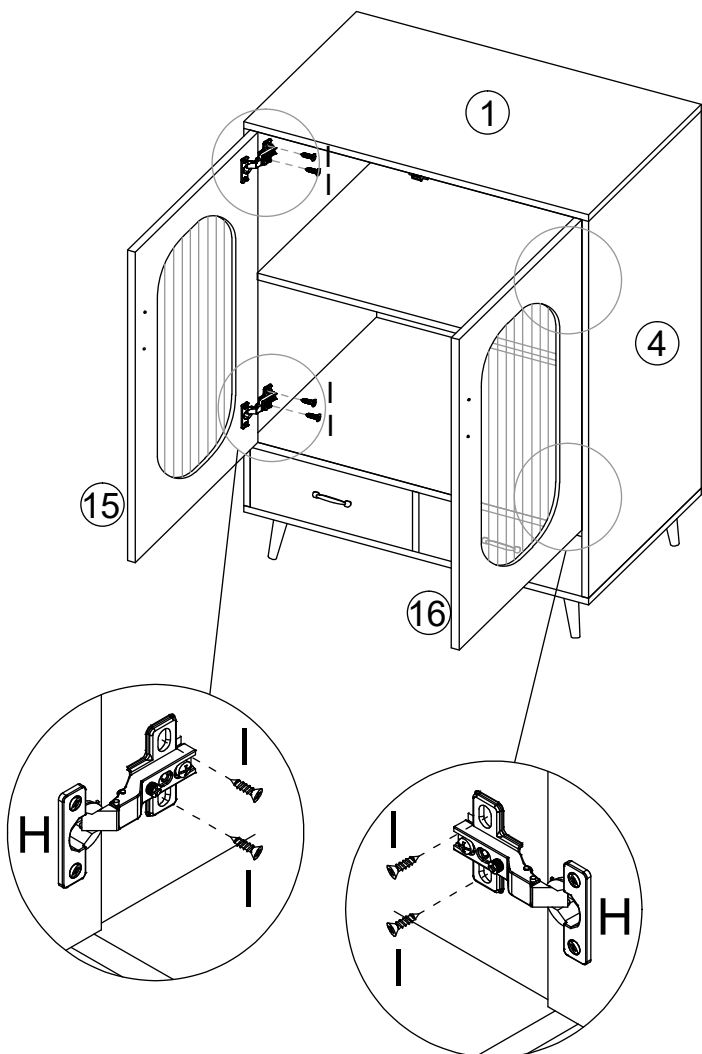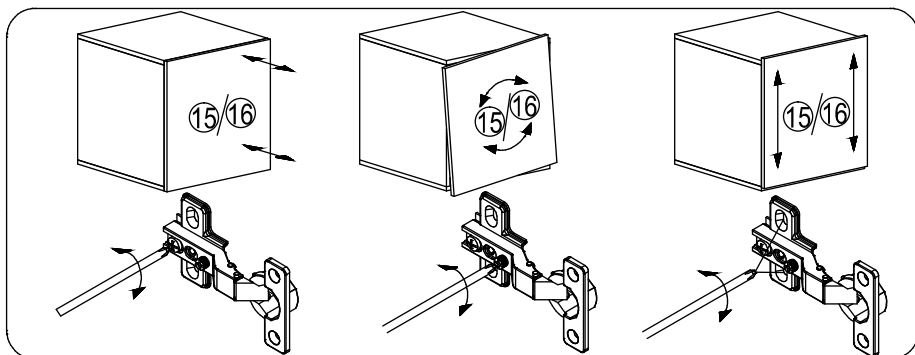

I	x8
M3.5x14mm	




18

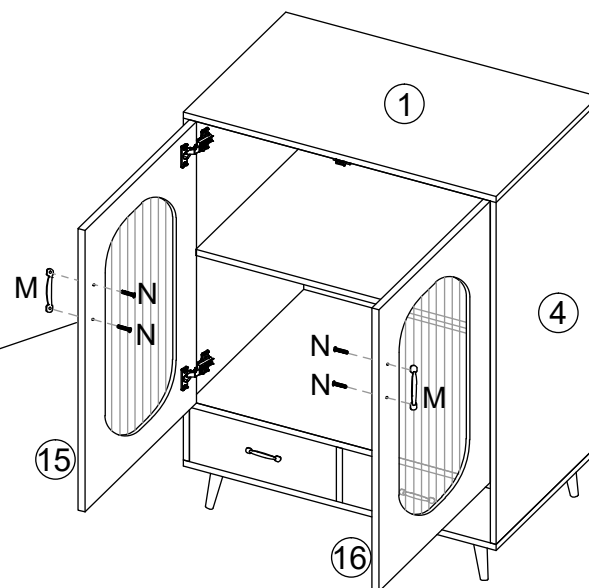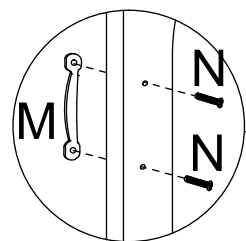

M	x2	N	x4
		M4x18mm	

19

Pre-drilled hole at wall

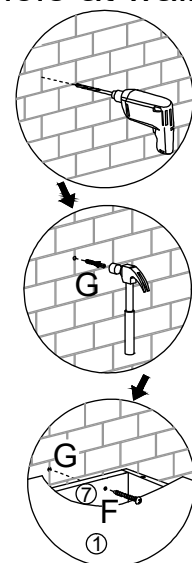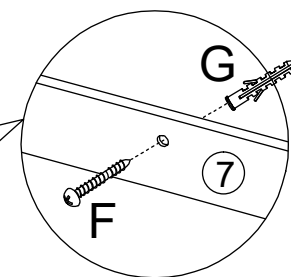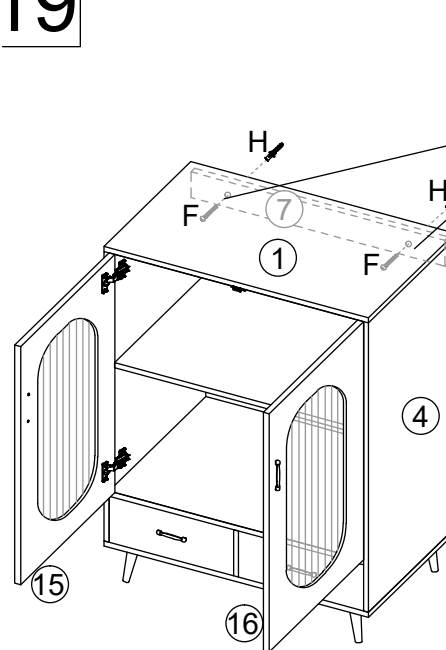

G	x2	F	x2
		M4x30mm	