





CHEST OF DRAWER

MODEL:COD-0591-WHWD

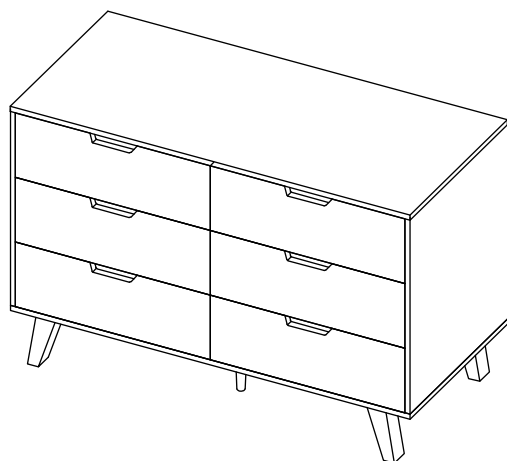

ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.







Two persons and
tools required for
assembly

HARDWARE




A	x36	B	x12	C	x12	D	x44	E	x4	F	x12
7x35mm		15x12mm		Ø6x30mm		M4x40mm				M4x10mm	
G	x12	H	x36	I	x16	J	x8	K	x4	L	x1
		M3x12mm		M6x12mm		M5x35mm					
M	x4	N	x2	O	x16	P	x24	Q	x2	R	x2
		M4x30mm				12x10mm				M4x14mm	
S	x2	T	x12	U	x1						
		M3x14mm		3mm							

PARTS

Wipe with dry cloths

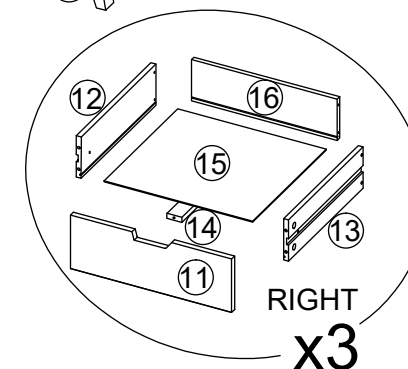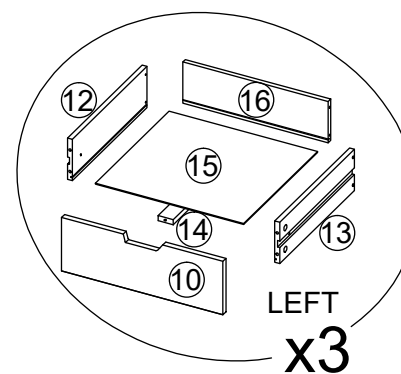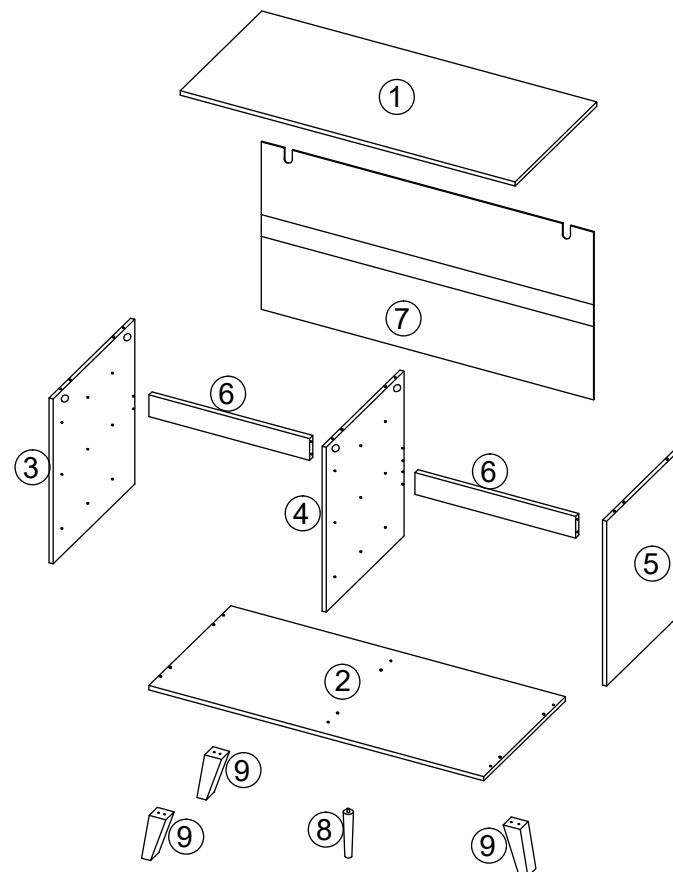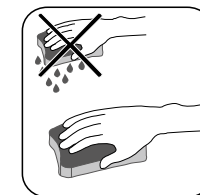


1

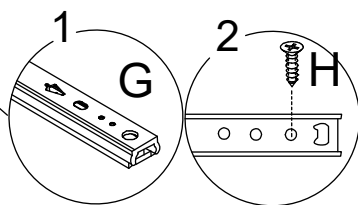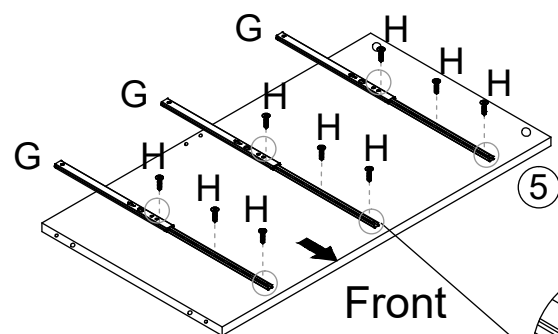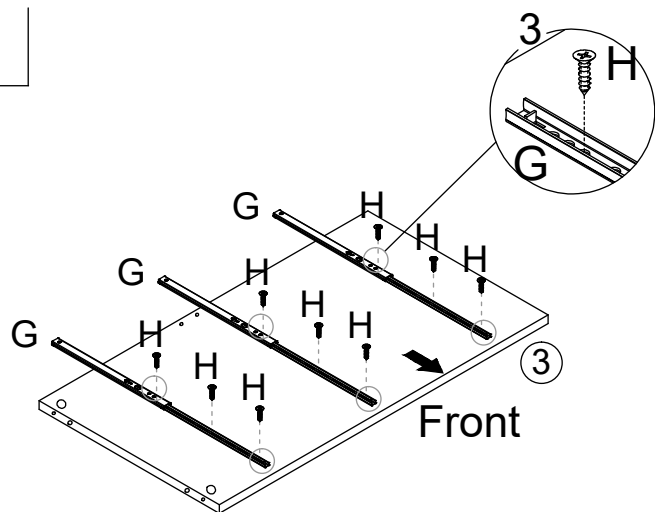


a.1



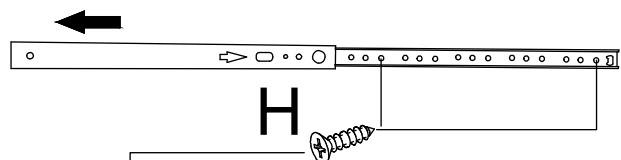

a.2







a.3




H	X18	G	x6
			
M3x12mm			

2

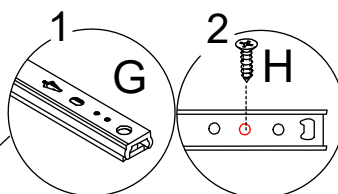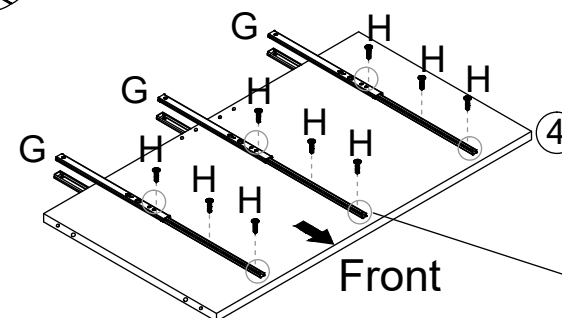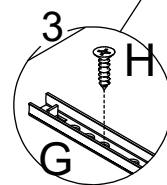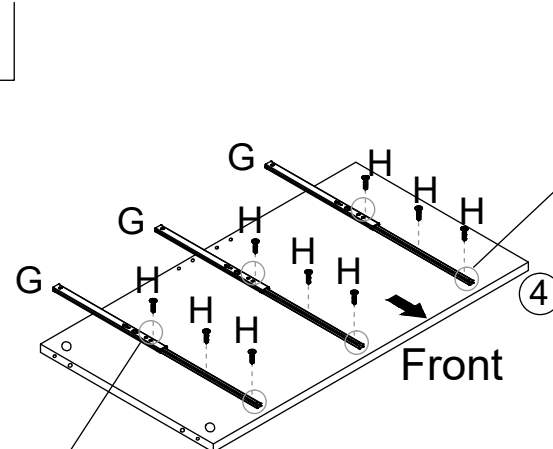


the second hole

180°

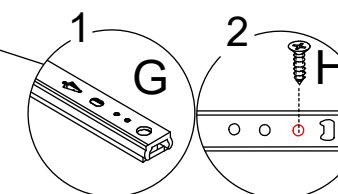


the first hole

a.1



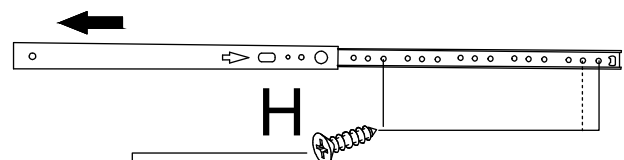

a.2






a.3




H	X18	G	x6
			
M3x12mm			

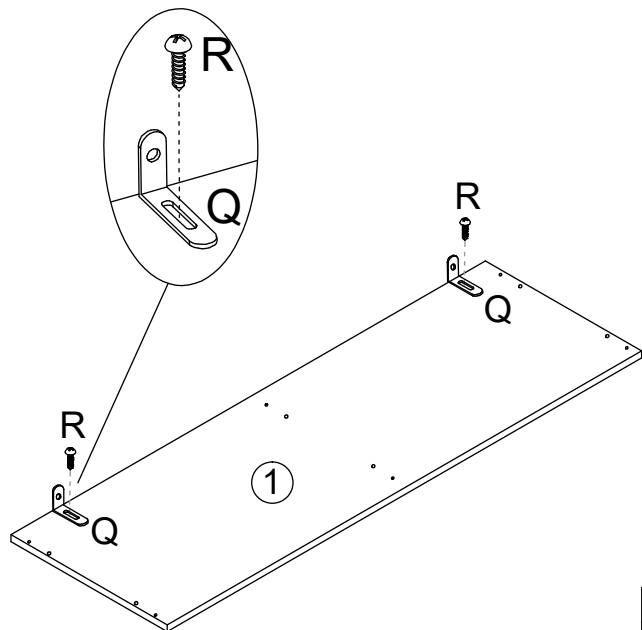
3




Q	x2	R	x2
			M4x14mm

5

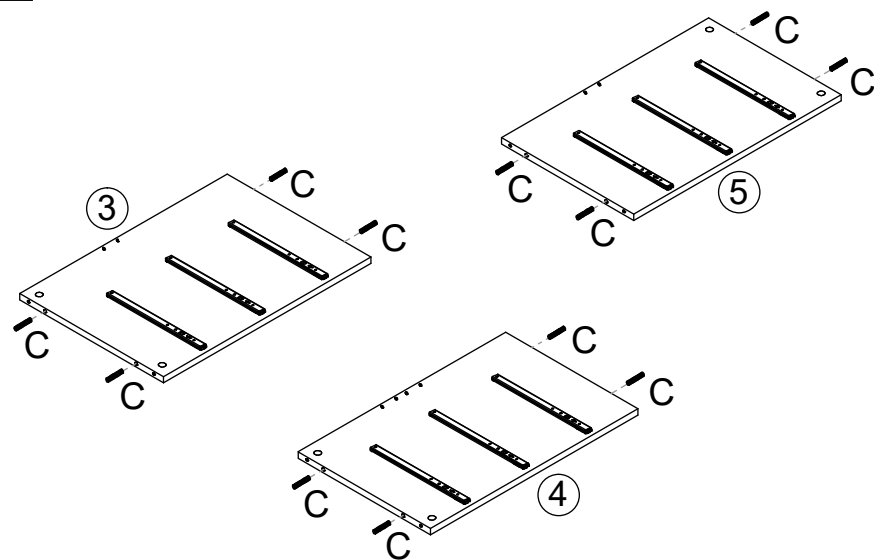


C	X12
	
Ø6x30mm	

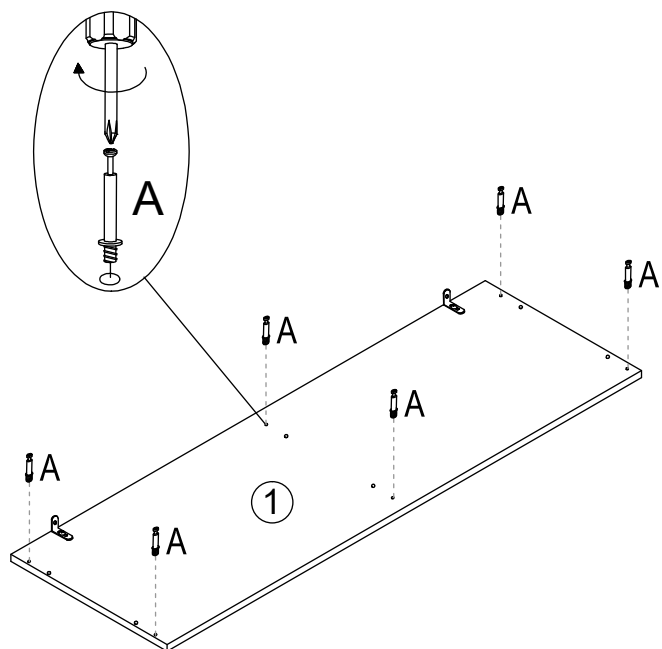

4




A	x6
	
7x35mm	

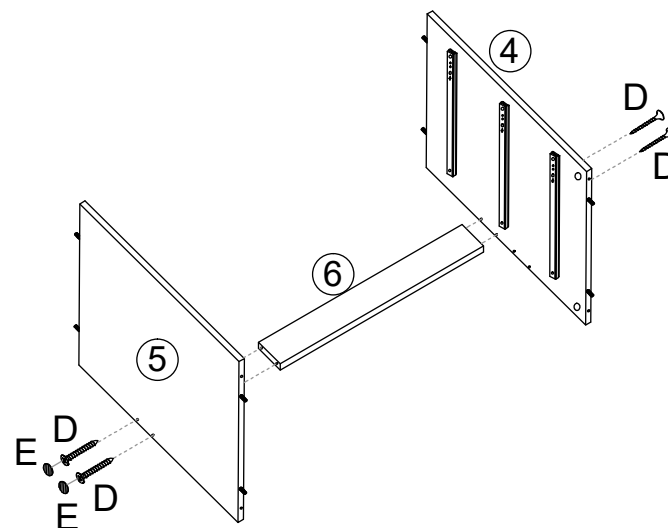

6




D	x4	E	x2
			
M4x40mm			


7

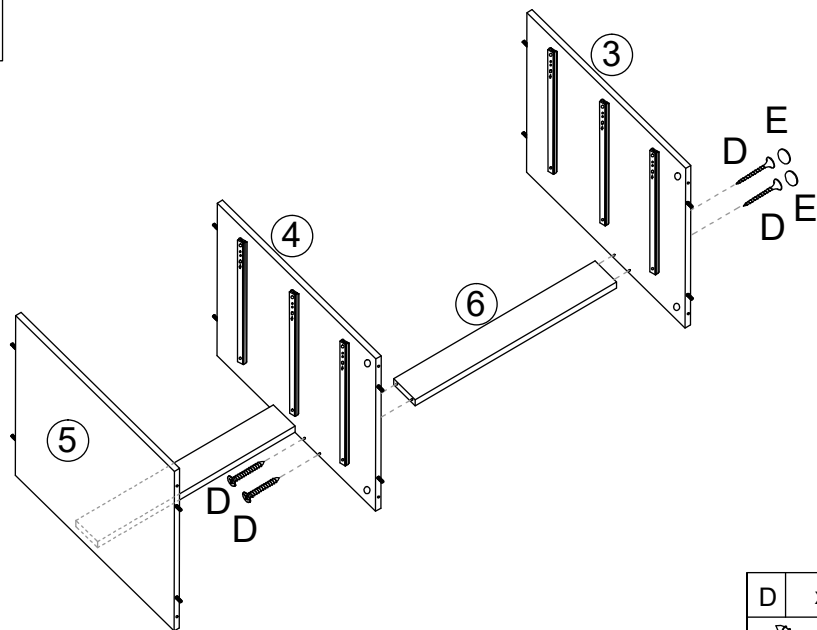



D	x4	E	x2
			
M4x40mm			


9

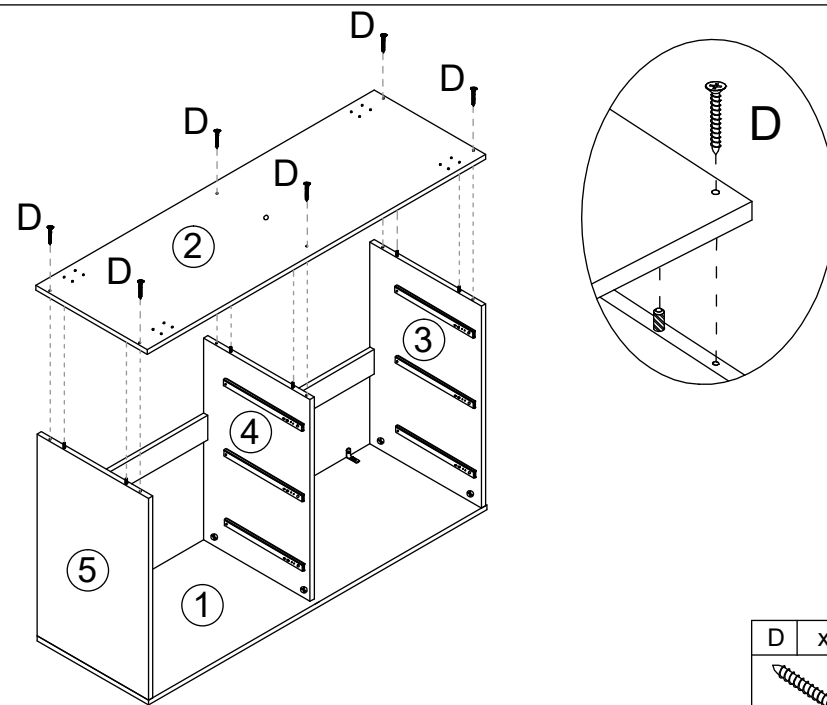


D	x6
	
M4x40mm	






8

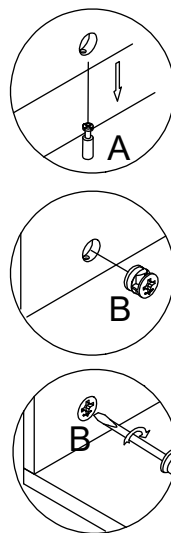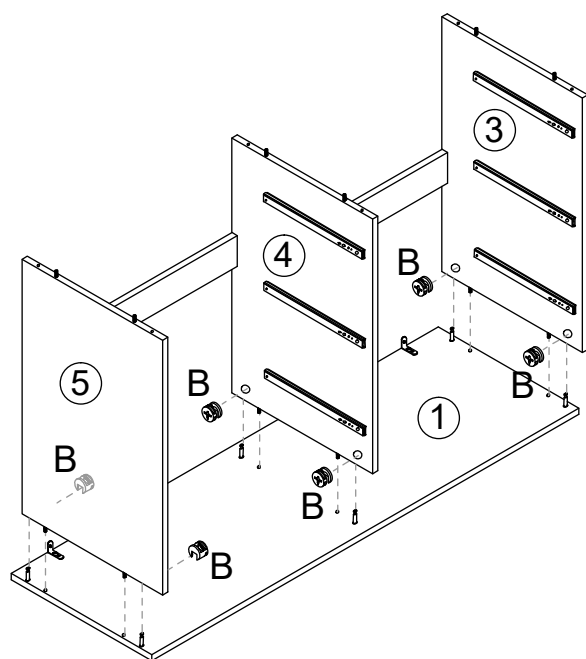


B	x6
	
15x12mm	

10


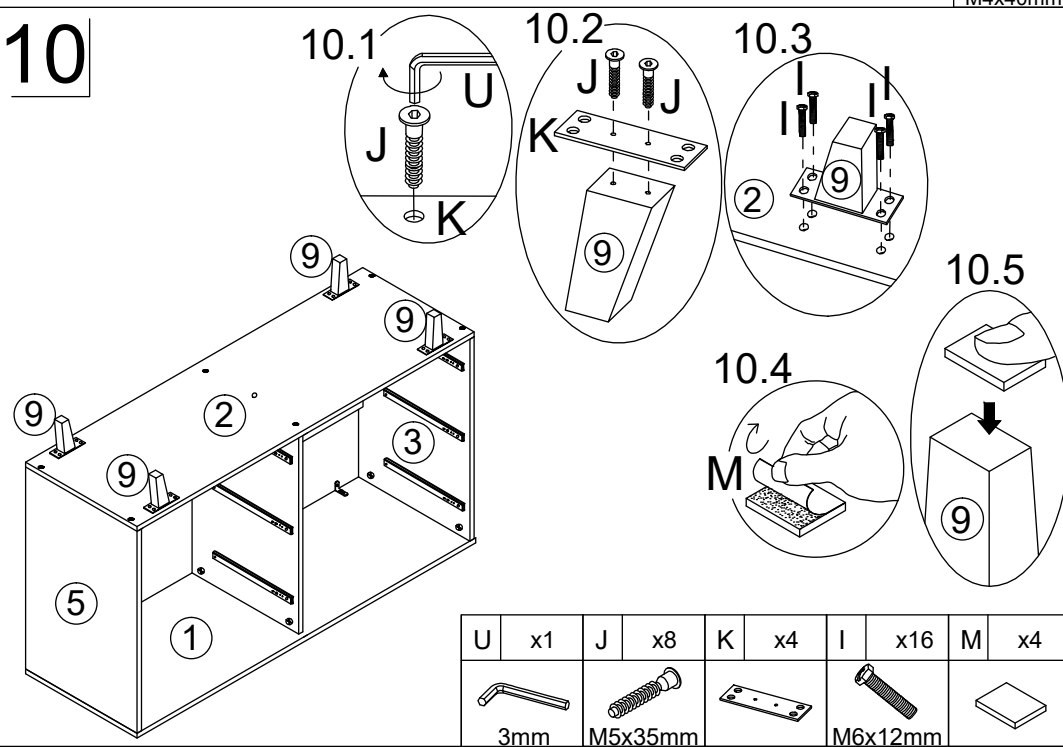


U	x1	J	x8	K	x4	I	x16	M	x4
									
3mm		M5x35mm		M6x12mm					


11

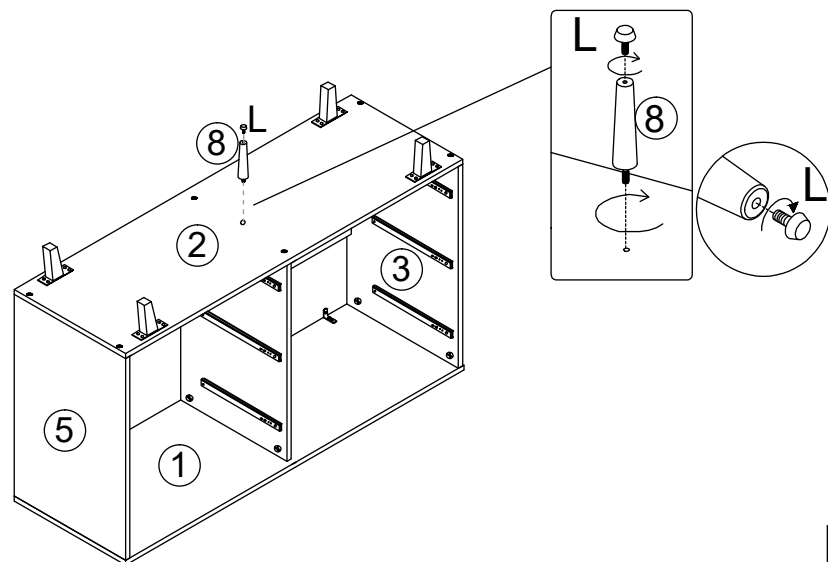


12

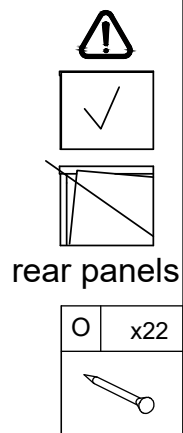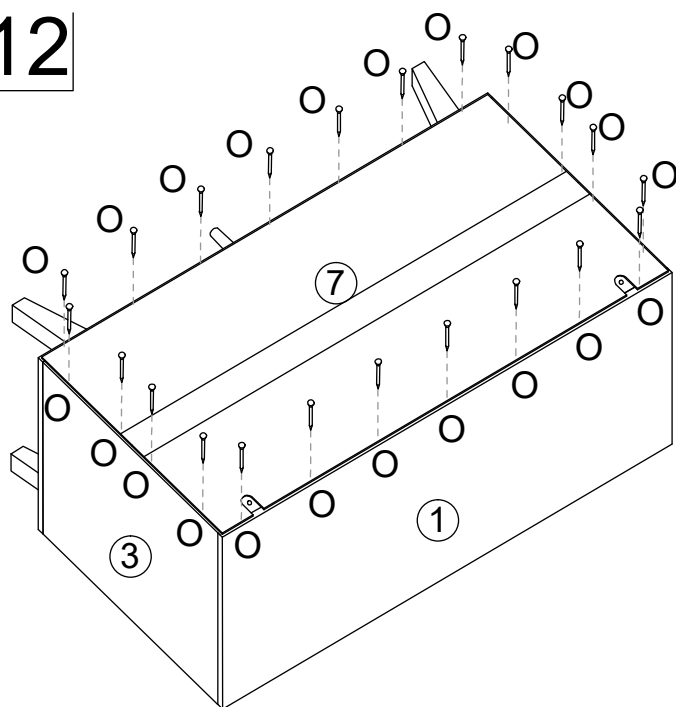

13

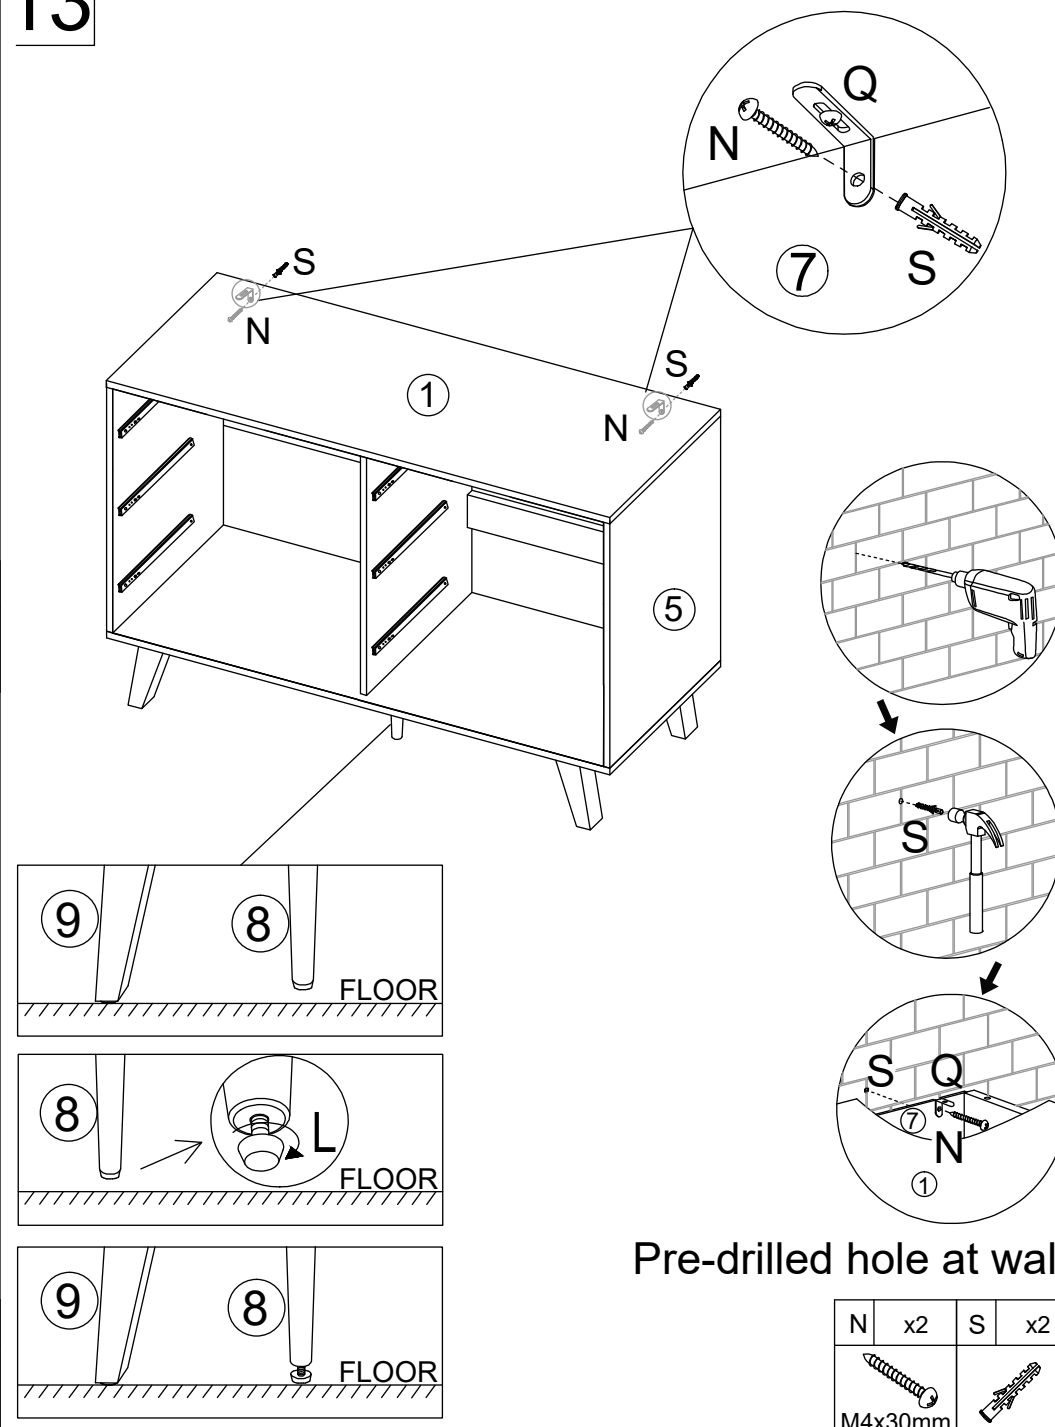


14

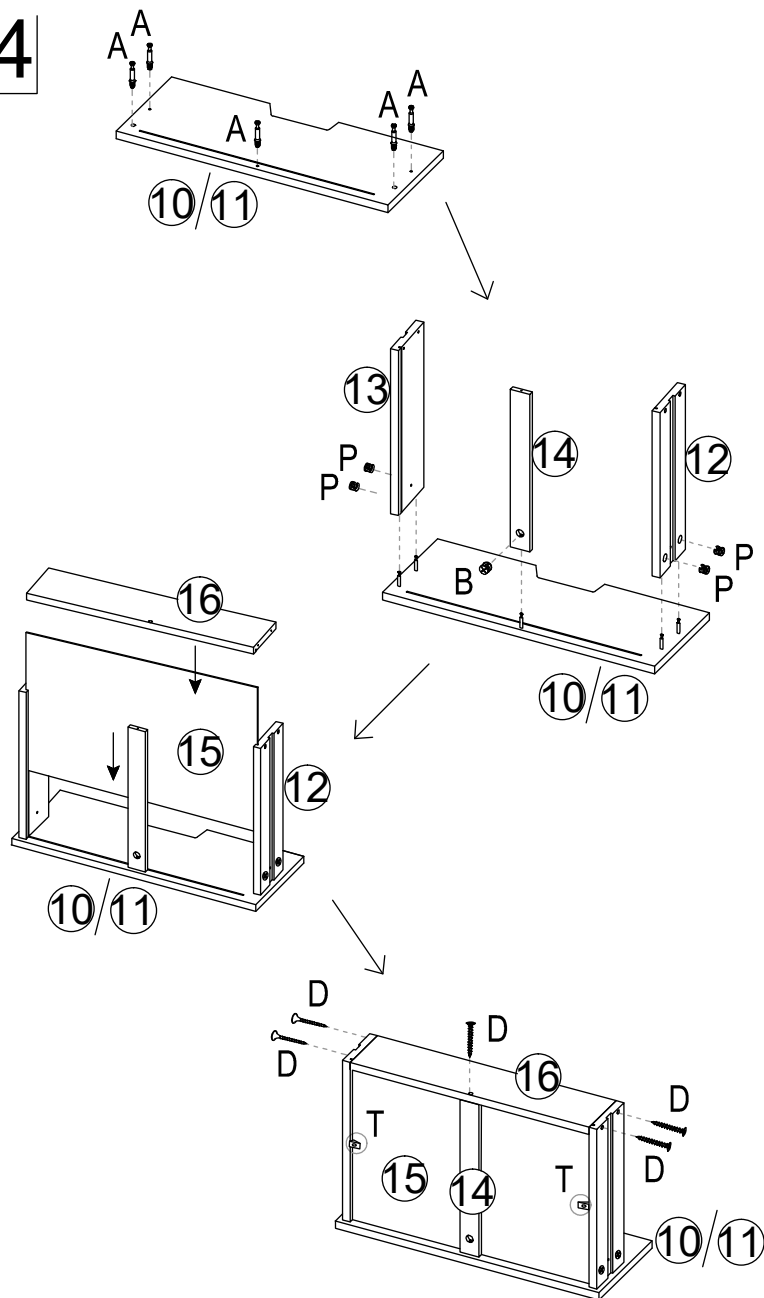

x6

T	x12	B	x6	A	x30	P	x24	D	x30
M3x14mm		15x12mm		7x35mm		12x10mm		M4x40mm	


15

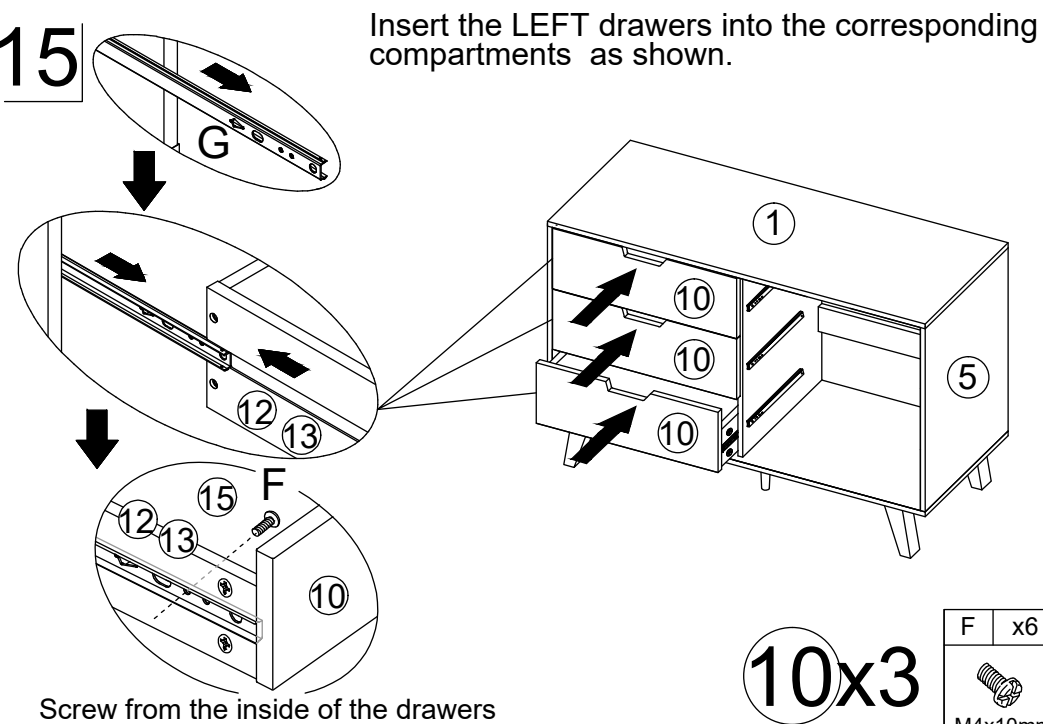

10x3

F	x6
M4x10mm	

16

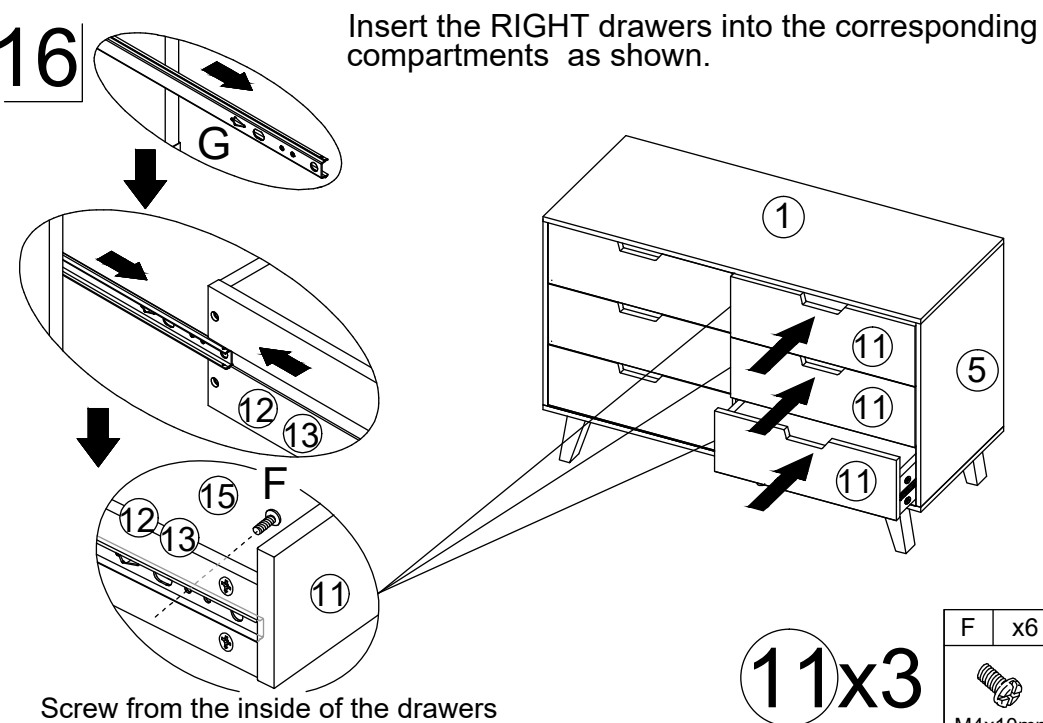

11x3

F	x6
M4x10mm	