




CHEST OF DRAWERS

MODEL:COD-TIKO-WH/BK/WD

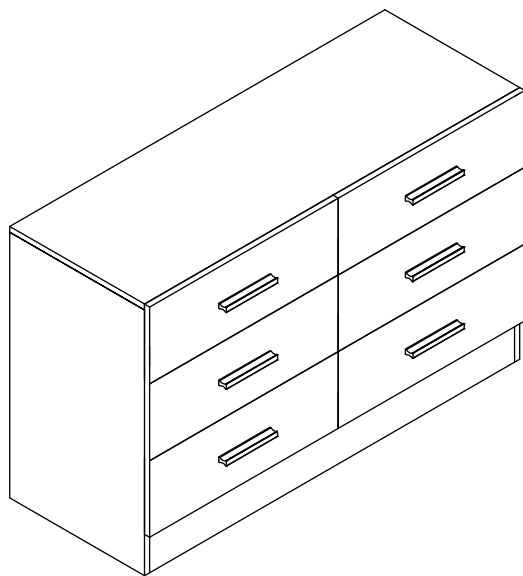



















ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.





Two persons and tools required for assembly

HARDWARE


A	x32	B	x8	C	x6	D	x40	E	x12	F	x2
											
7x35mm		15x12mm		Ø6x30mm		M4x40mm					
G	x6	H	x36	I	x2	J	x22	K	x12	L	x24
											
		M3x12mm		M4x30mm						M3x14mm	
M	x12	N	x6	O	x2	P	x24	Q	x12	R	x2
											
M4x10mm						12x10mm		M4x18mm		M4x14mm	

PARTS


Wipe with dry cloths

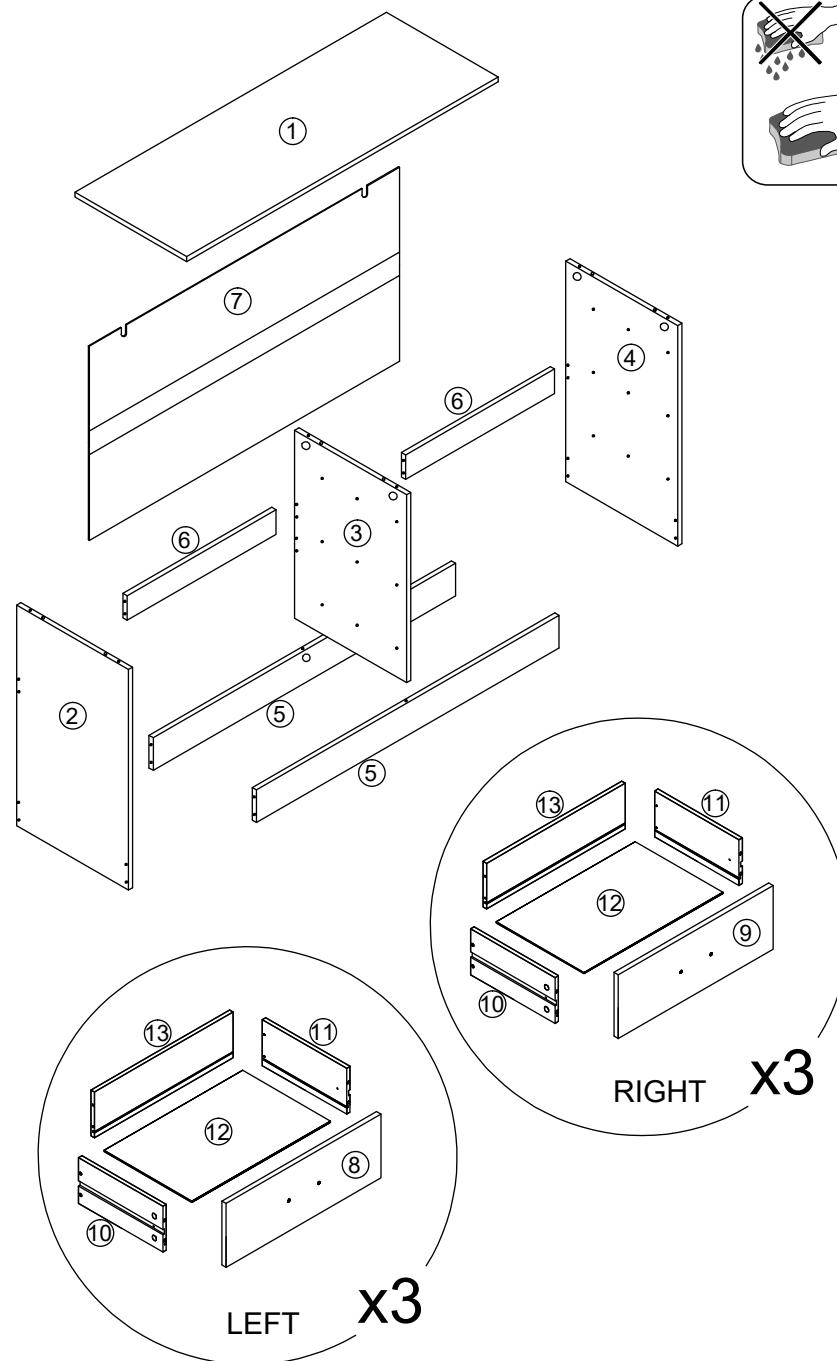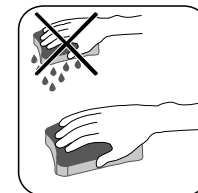

1

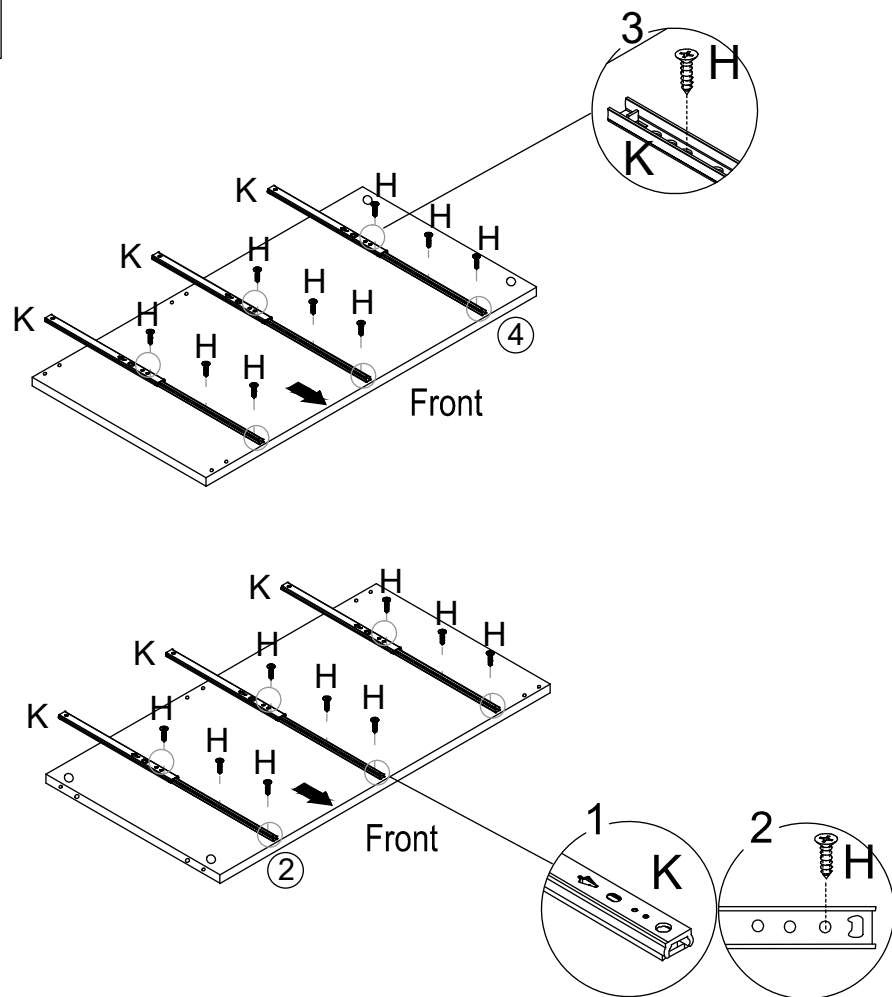


2

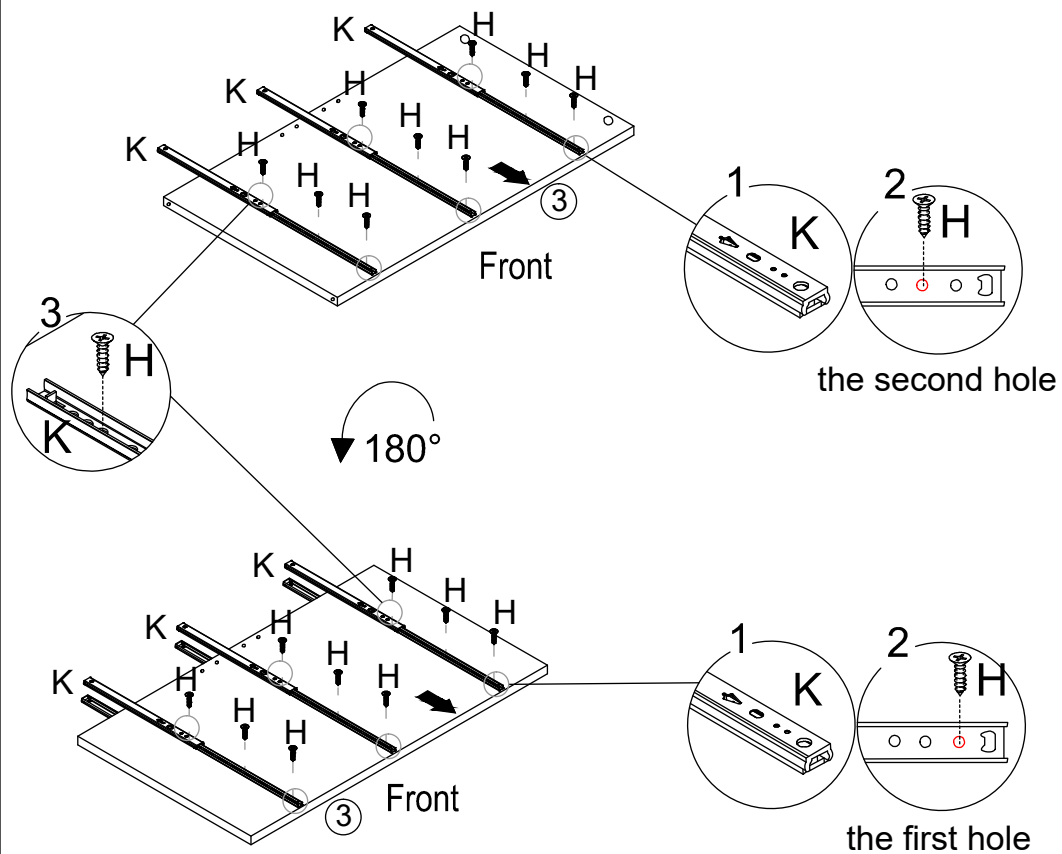

a.1



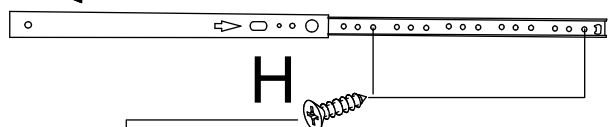

a.2



a.3




K	x6	H	x18
			
M3x12mm			

a.1



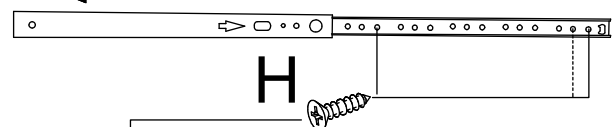

a.2




a.3




K	x6	H	x18
			
M3x12mm			


3

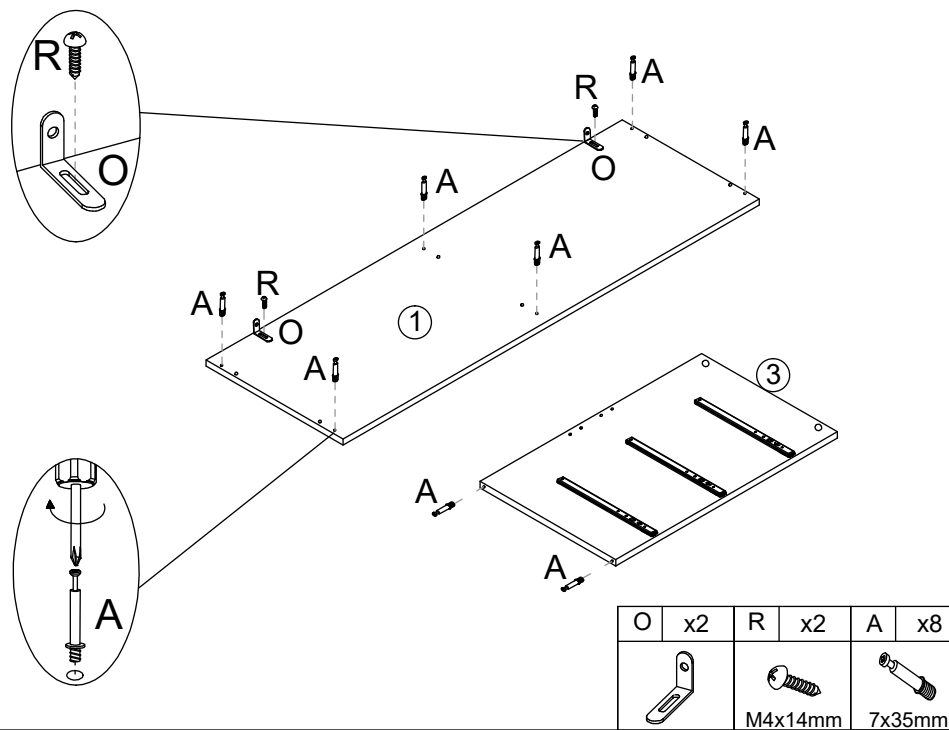


5

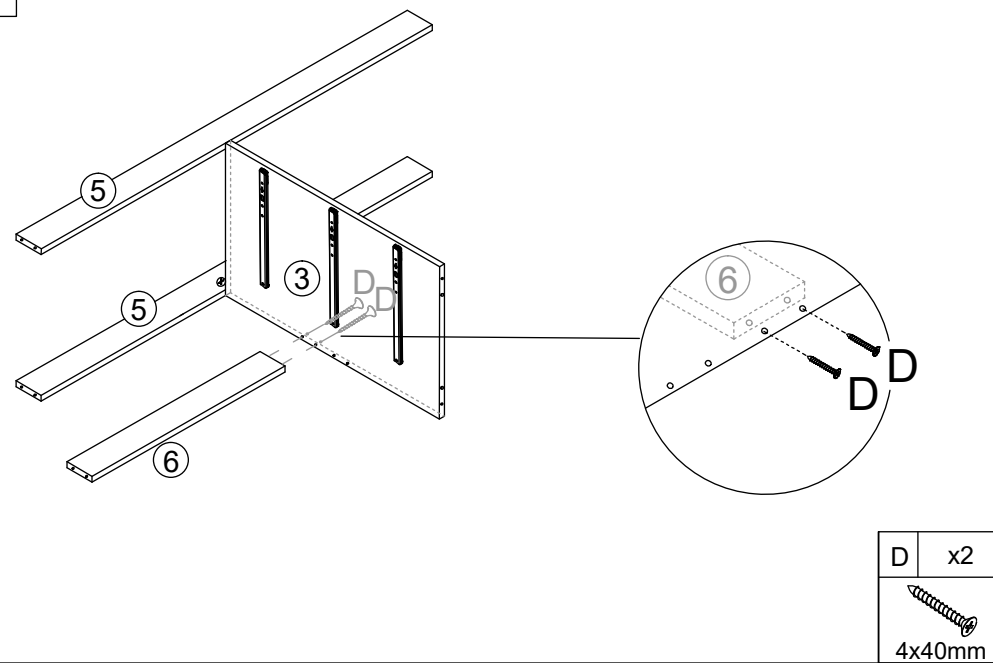


4

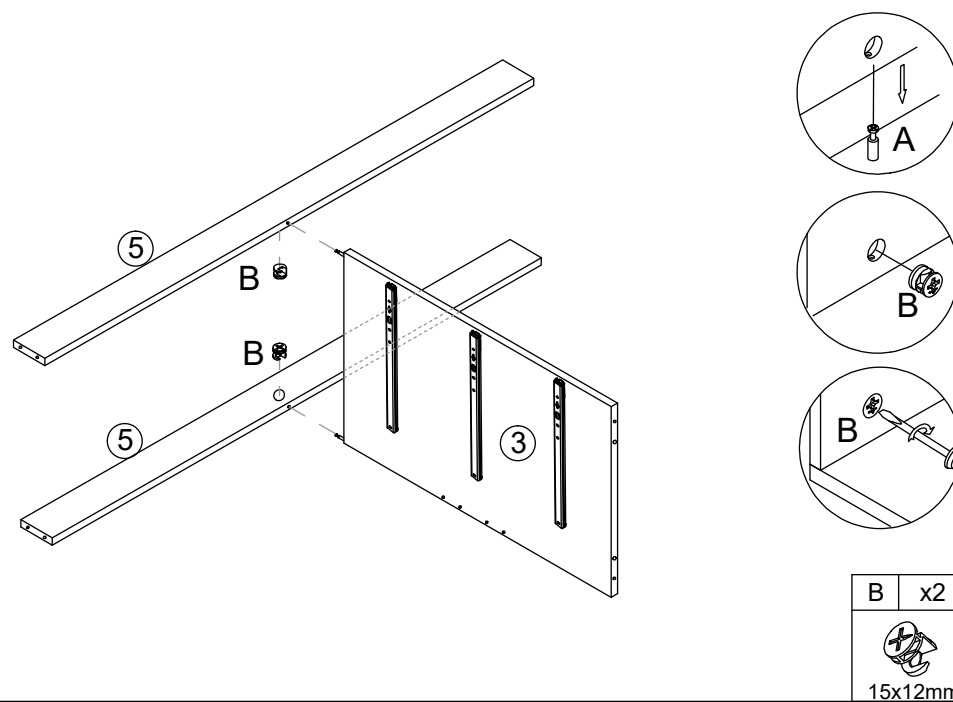


6

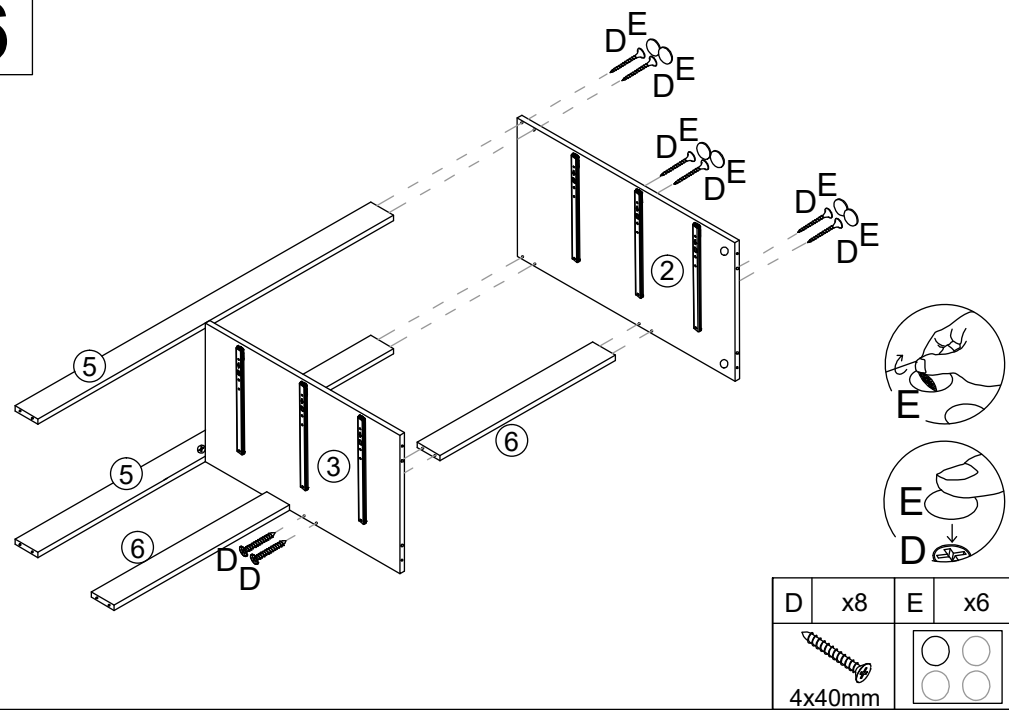


7

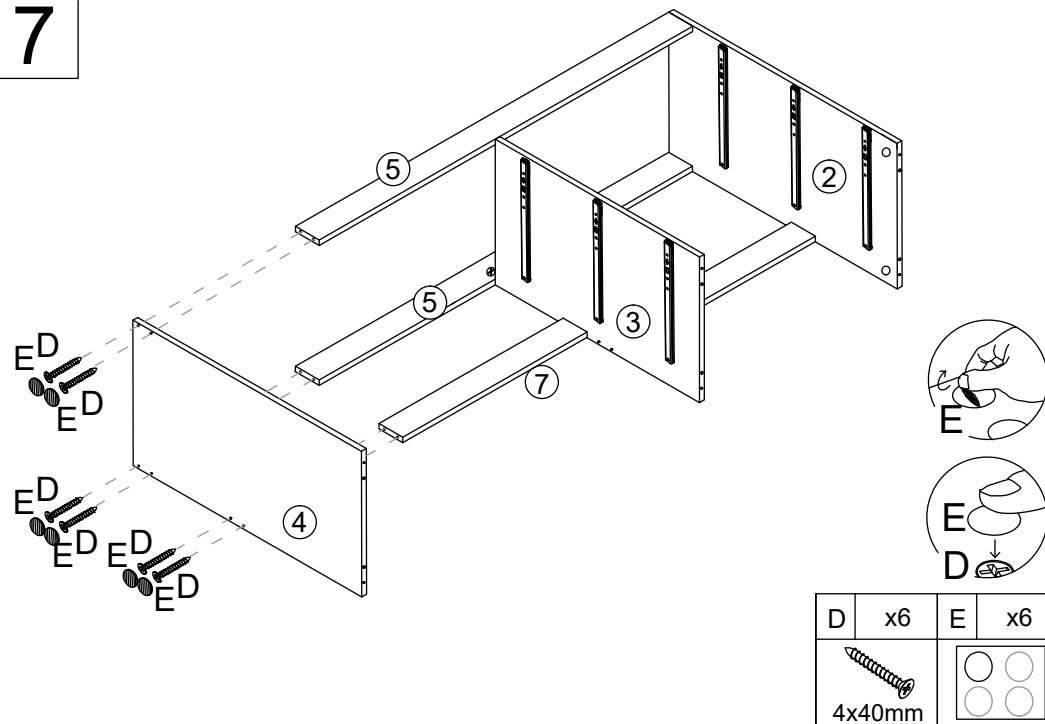


9

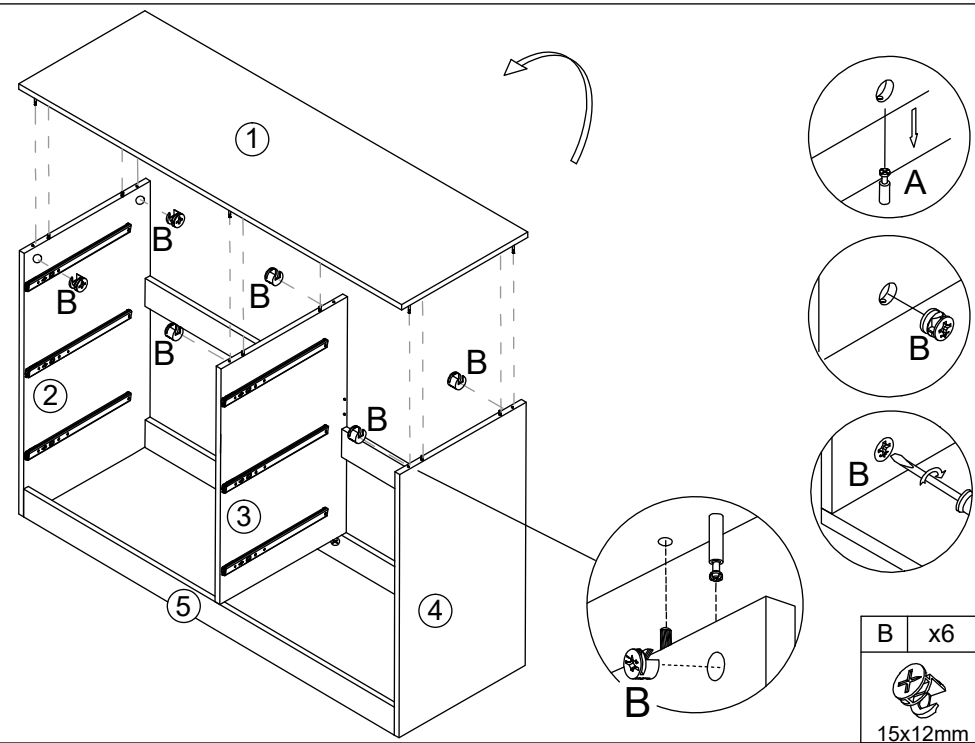

8


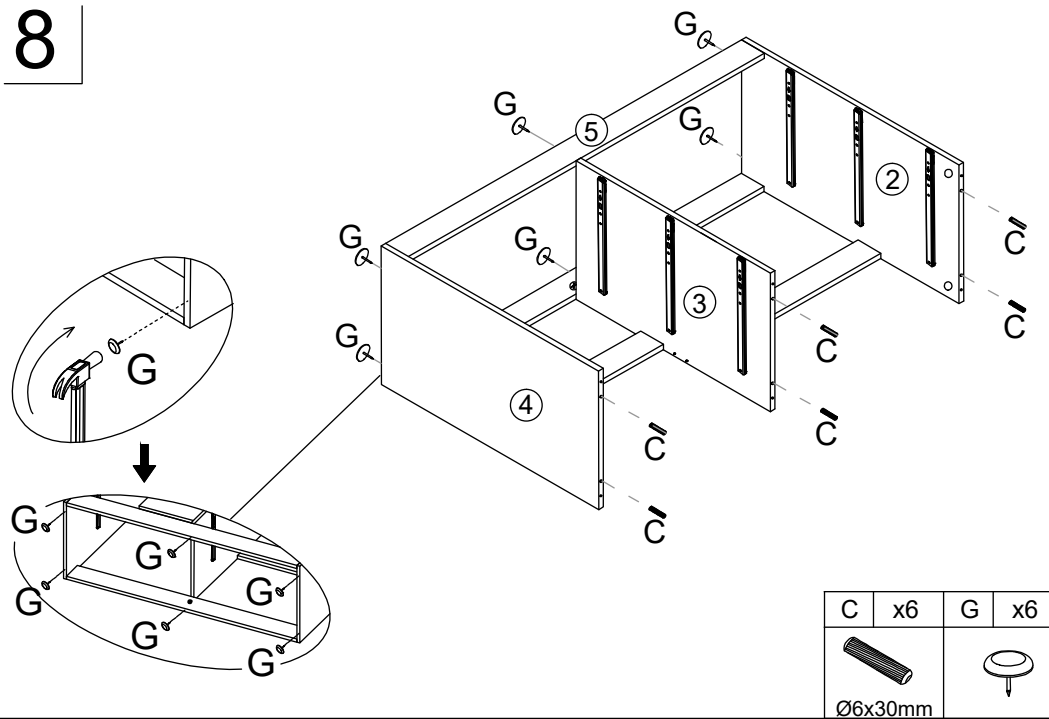


10

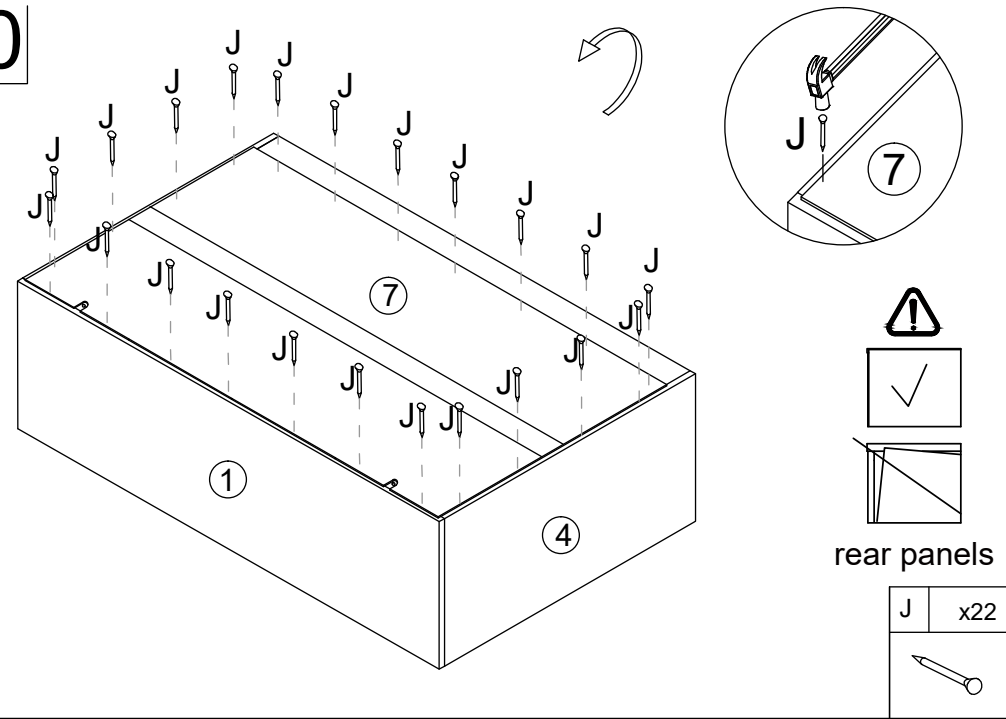



11

Pre-drill hole in wall

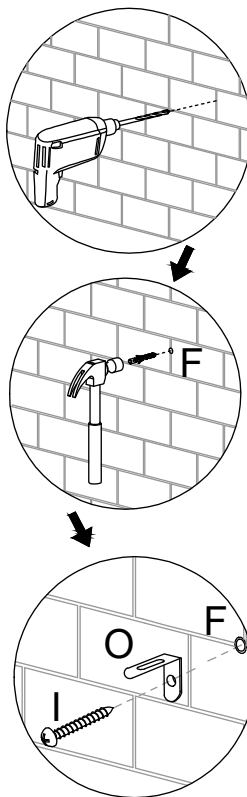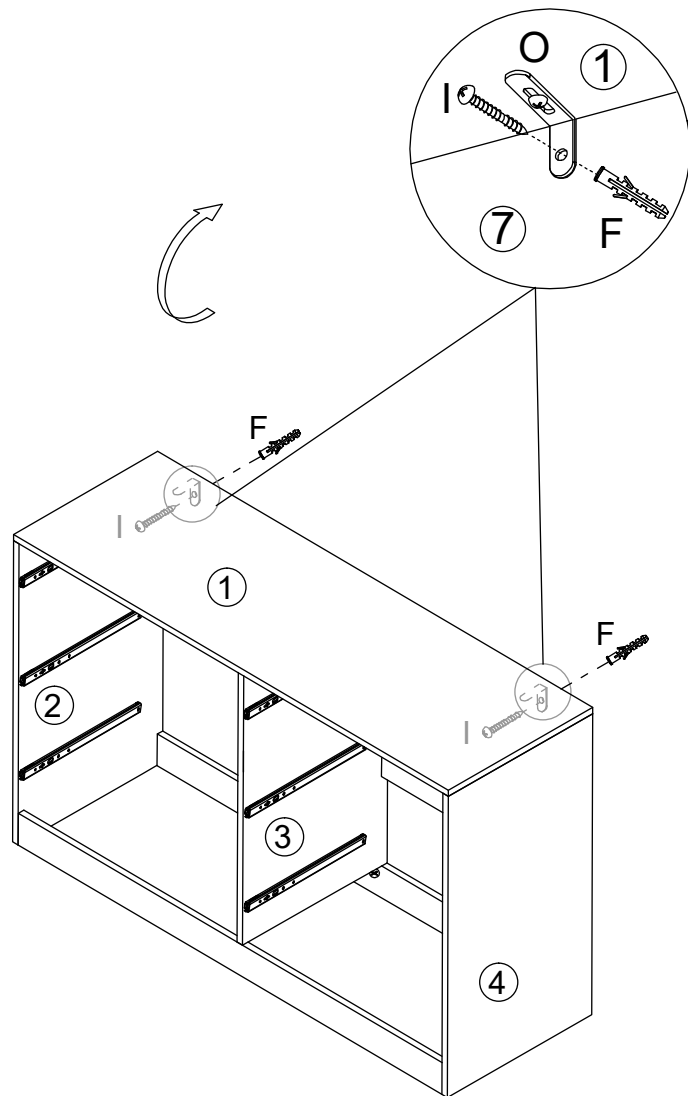

F	x2	I	x2
M4x30mm			

12

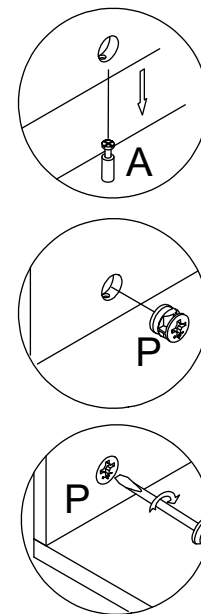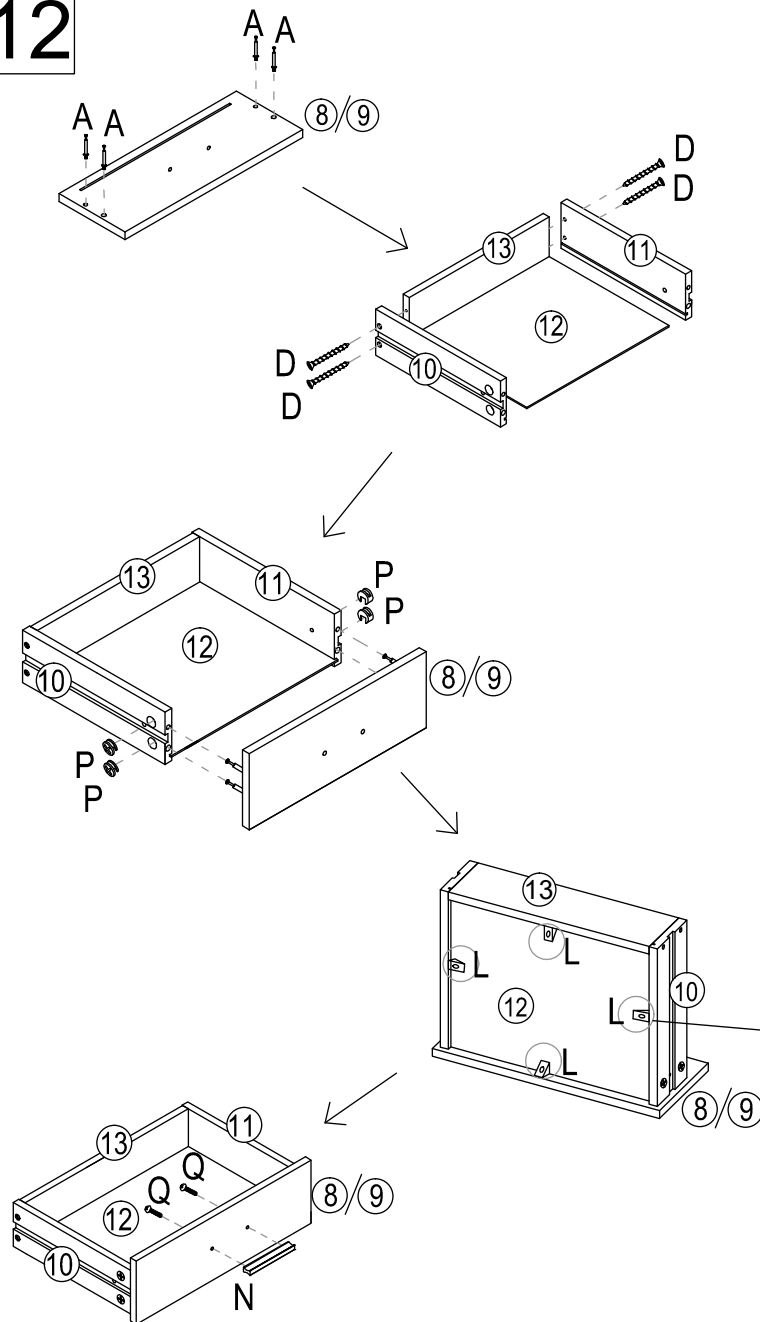


A	x24	L	X24	P	x24	D	x24	N	x6	Q	x12
7x35mm M3x14mm 12x10mm M4x40mm M4x18mm											

x6

13

Insert the LEFT drawers into the corresponding compartments as shown.

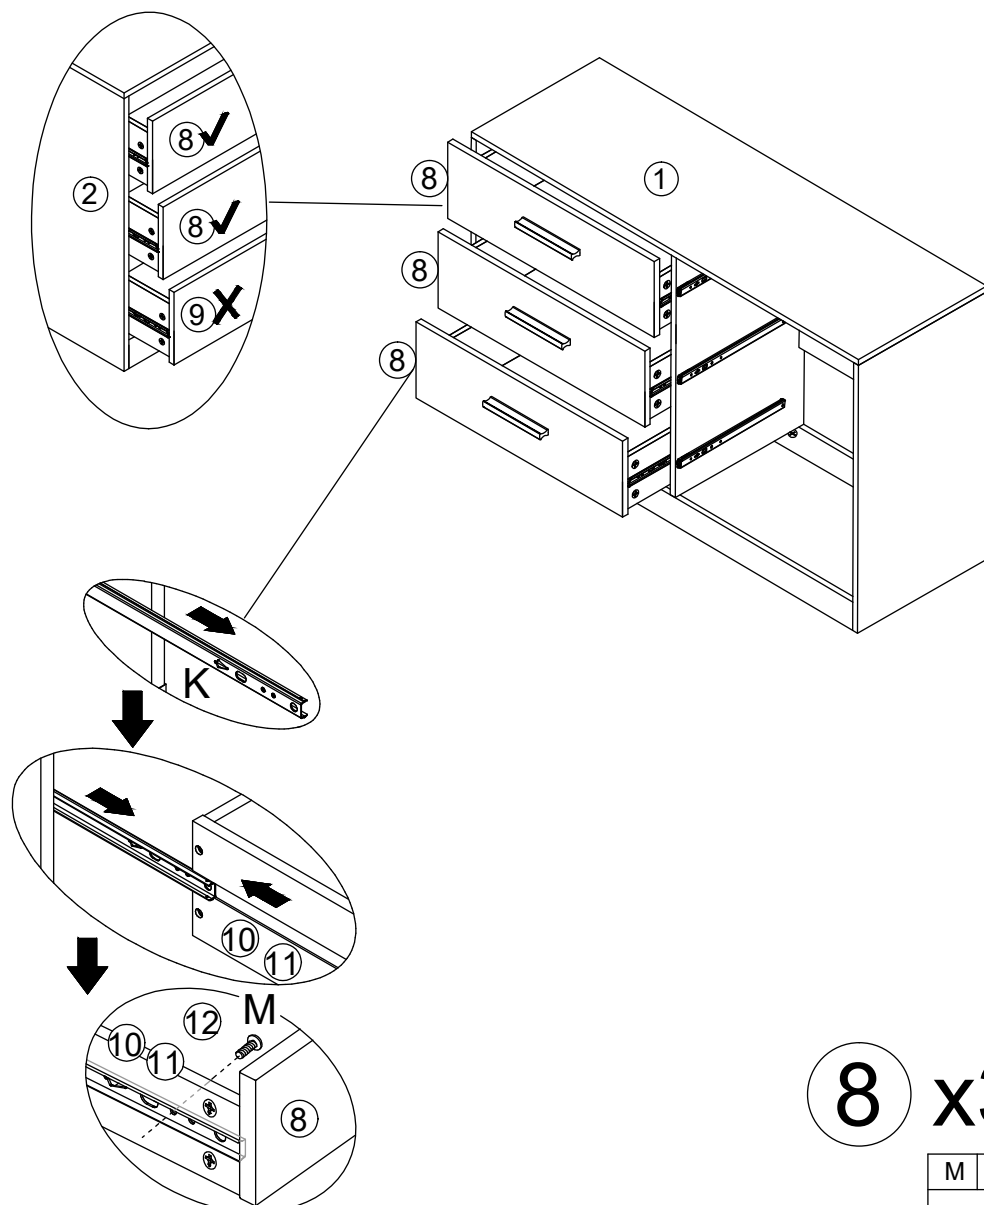

8 x3

M x6




M4x10mm

Screw from the inside of the drawers

14

Insert the RIGHT drawers into the corresponding compartments as shown.

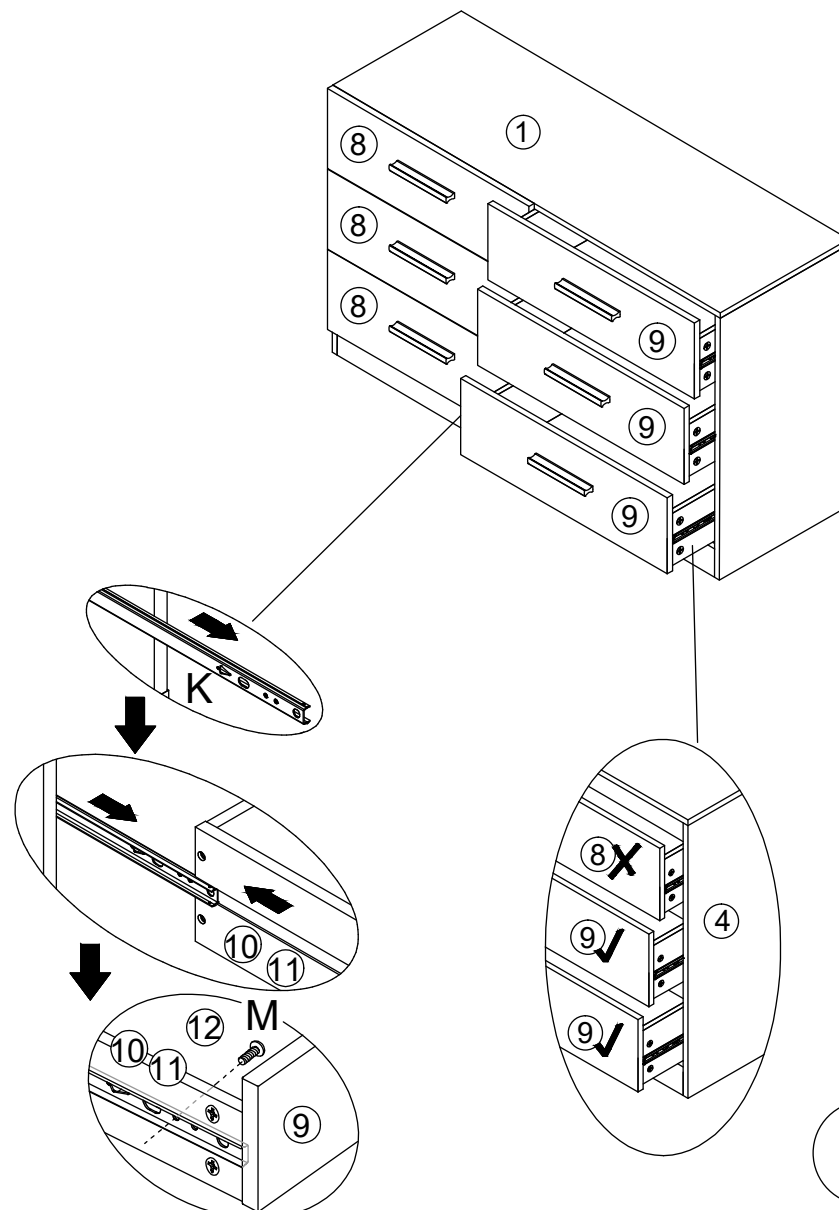

9 x3

M x6



M4x10mm

Screw from the inside of the drawers