





SHOE STORAGE CABINET

MODEL:SS-RAT-S3-WD

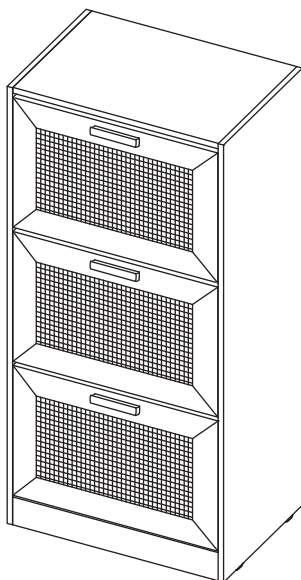

ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.






Two persons and
tools required for
assembly

HARDWARE


| A | x3 | B | x6 | C | x4 | D | x20 | E | x20 | F | x2 |
|---|---------|---|-----------|---|---------|---|---------|---|-----|---|----|
| | | | M4x20mm | | Ø6x30mm | | M4x40mm | | | | |
| G | x2 | H | x48 | I | x4 | J | x6 | K | x6 | L | x6 |
| | M4x30mm | | M3.5x14mm | | | | | | | | |
| M | x6 | N | x3 | O | x3 | | | | | | |
| | M4x10mm | | | | | | | | | | |



PARTS

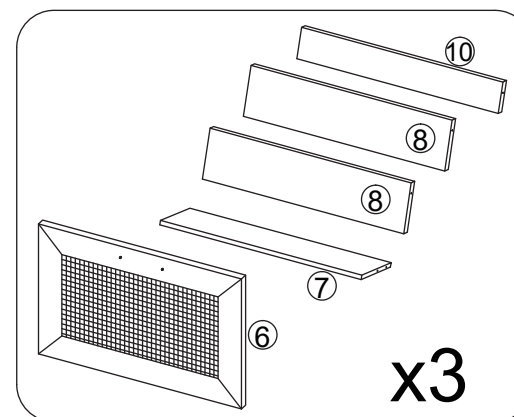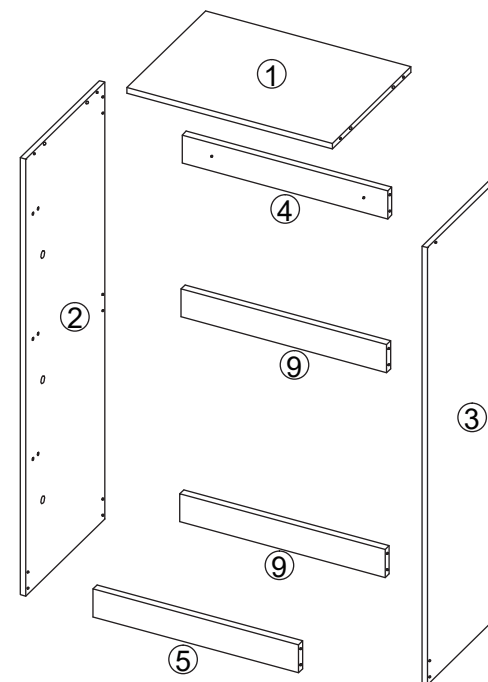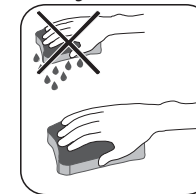Wipe with dry cloths




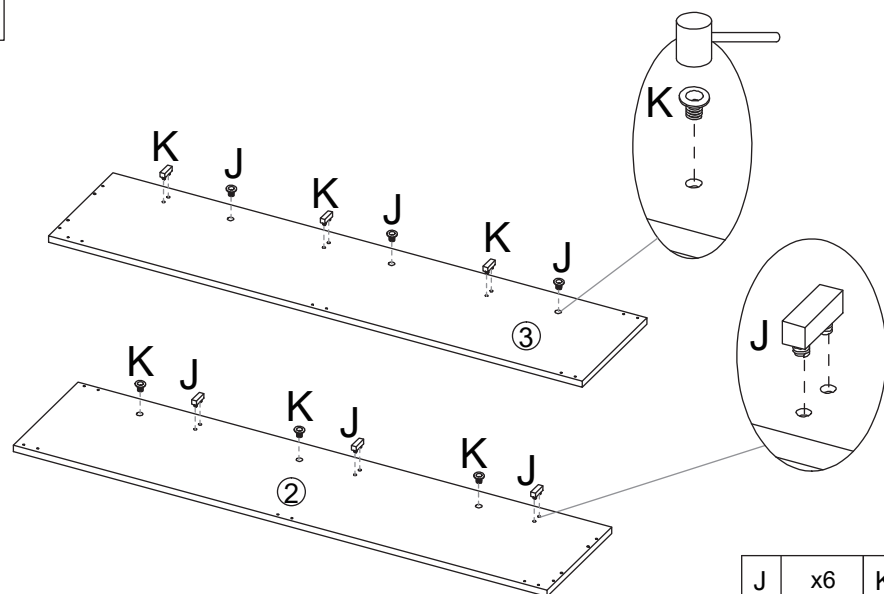

1




| | | | |
|---|----|---|----|
| J | x6 | K | x6 |
|  | |  | |

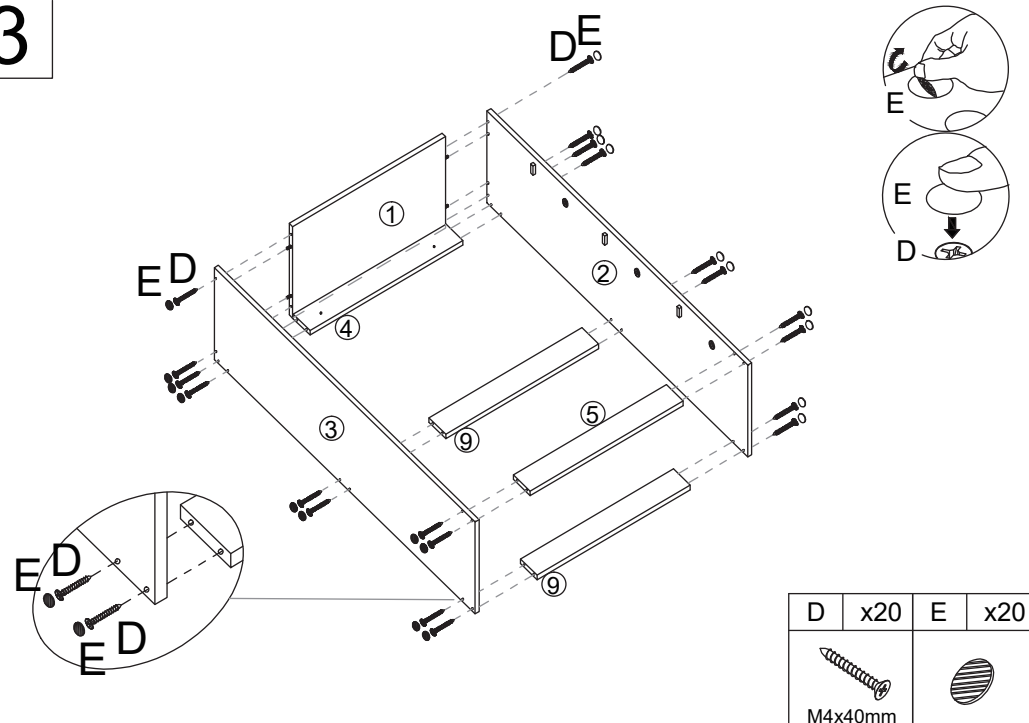
3




| | | | |
|---|-----|---|-----|
| D | x20 | E | x20 |
|  | |  | |
| M4x40mm | | | |


2

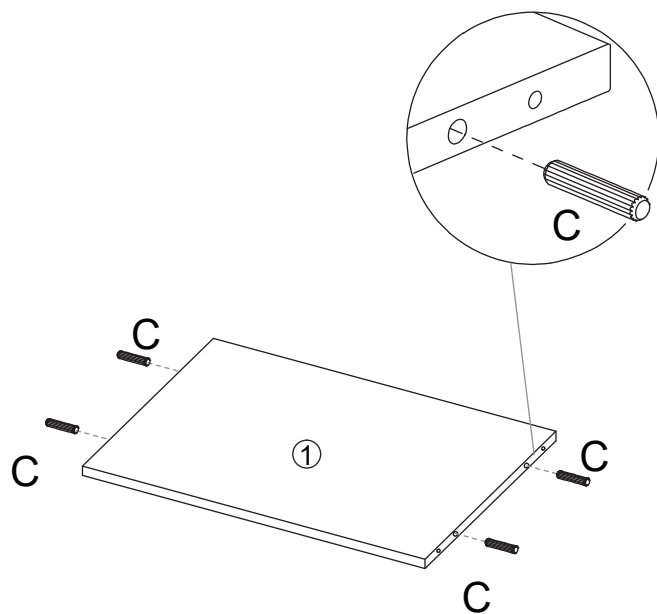

| | |
|---|----|
| C | x4 |
|  | |
| Ø6x30mm | |

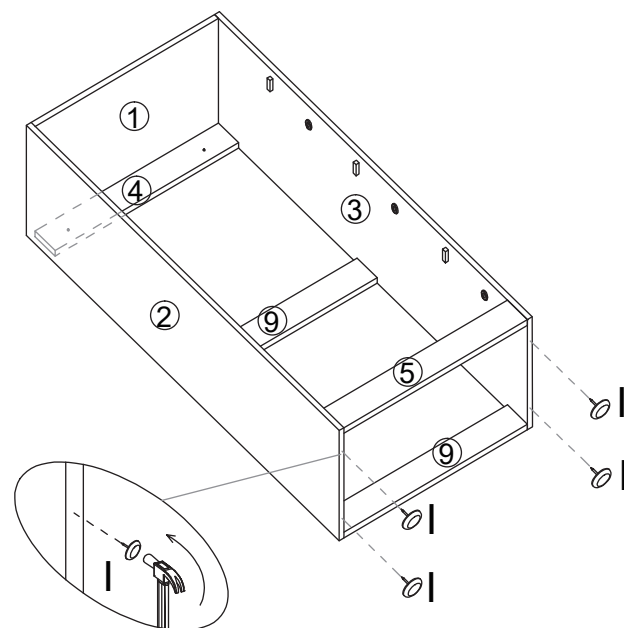

4



| | |
|---|----|
| I | x4 |
|  | |

5

Diagram 5 illustrates the mounting of the cabinet to the wall. The cabinet is shown with its back panel (1) and shelves (9). The back panel is secured to the wall using screws (F) and brackets (G). The shelves are also secured to the back panel using screws (G). The base (5) is shown at the bottom of the cabinet.

| F | x2 | G | x2 |
|---|----|---|----|
|  | |  | |
| | | M4x30mm | |

7

6

7

H

H




x3

| | |
|---|-----|
| H | x12 |
|---|-----|

M3.5x14mm

6

Diagram 6 illustrates the assembly of the rear panel. The main unit is shown with a label 6. The rear panel is being attached to the back of the unit. A circular inset shows a close-up of a screw being inserted into a slot. The rear panel has several mounting points labeled H, N, and O. The quantity 'x3' is indicated for the rear panel.

| H | x18 | N | x3 | O | x3 |
|---|-----|---|----|---|----|
|  | |  | |  | |
| M3.5x14mm | | | | | |

8



Diagram 8 illustrates the step of attaching the back of the cabinet. The main illustration shows the cabinet frame (6) with the back panel (7) being attached. A large arrow points down to the next step. Two circular insets provide close-up details: the top inset shows the back panel (7) being aligned with the frame (6) and secured with a screw (10); the bottom inset shows the back panel (7) being secured with a screw (H).

x3

| | |
|---|----|
| H | x6 |
|---|----|

M3.5x14mm




9

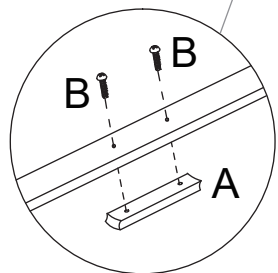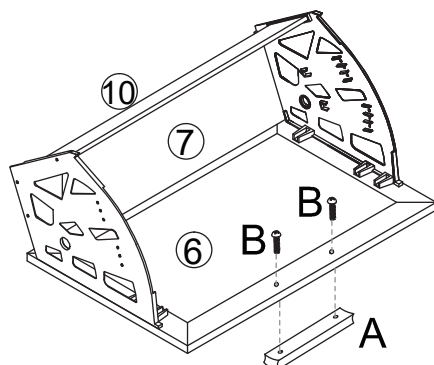

x3





| A | x3 | B | x6 |
|---------|----|---|----|
| | | | |
| M4x20mm | | | |

11

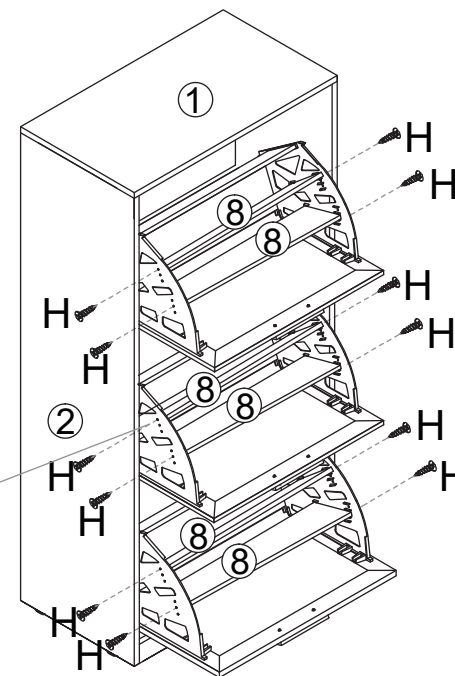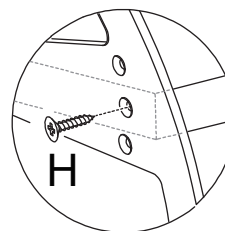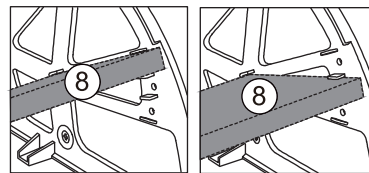

| H | x12 |
|-----------|-----|
| | |
| M3.5x14mm | |

10

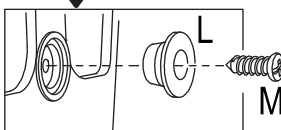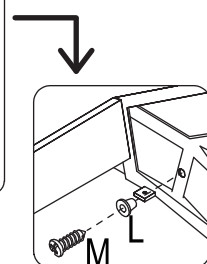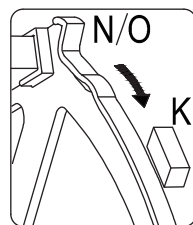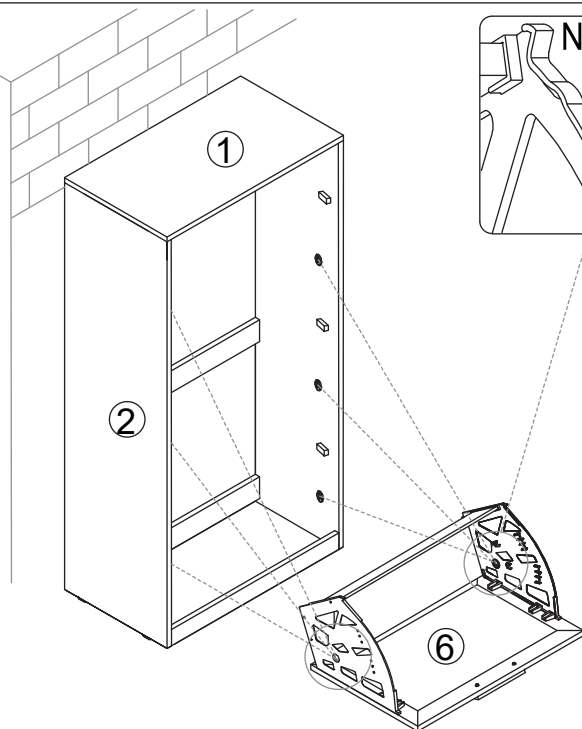

x3

| L | x6 | M | x6 |
|---------|----|---|----|
| | | | |
| M4x10mm | | | |

12

