





BEDSIDE TABLE

MODEL:BT-PESI-BK/WH

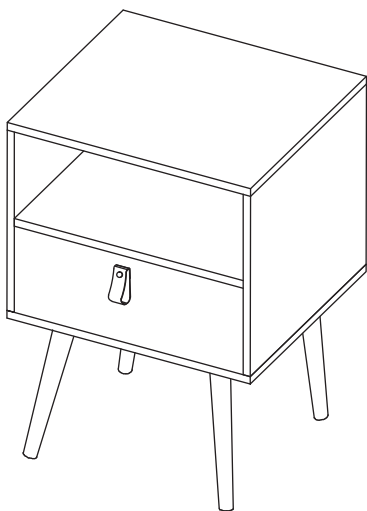



ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.




Two persons and tools required for assembly

HARDWARE



A	x6	B	x6	C	x14	D	x12	E	x4	F	x2
											
7x35mm		12x10mm		Ø6x30mm		M4x40mm				M4x11mm	
G	x2	H	x6	I	x4	J	x21	K	x4	L	x4
											
		M3x12mm				M4x12mm		M3x14mm			
M	x1	N	x1	O	x1	P	x14	Q	x1	R	x1
											
		M4x30mm									
S	x1										
											
M4x11mm											

PARTS

Wipe with dry cloths

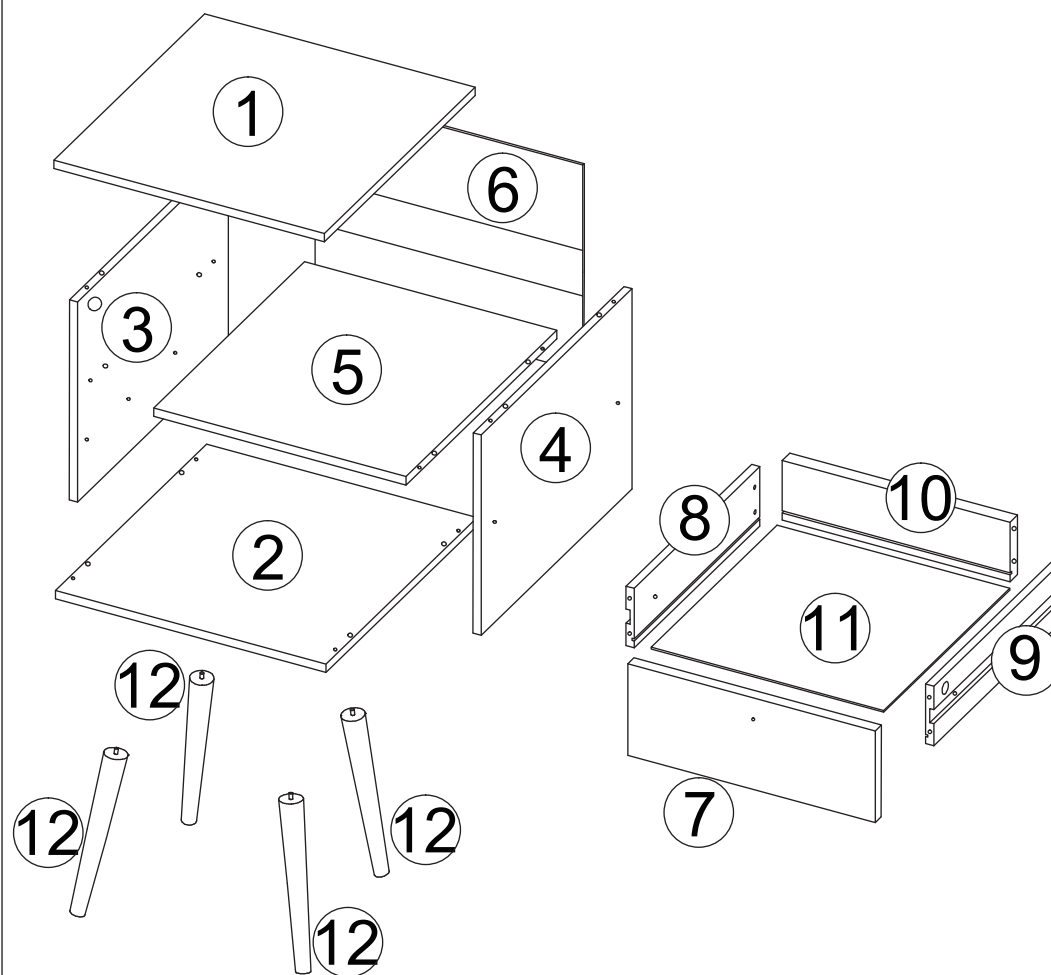


1

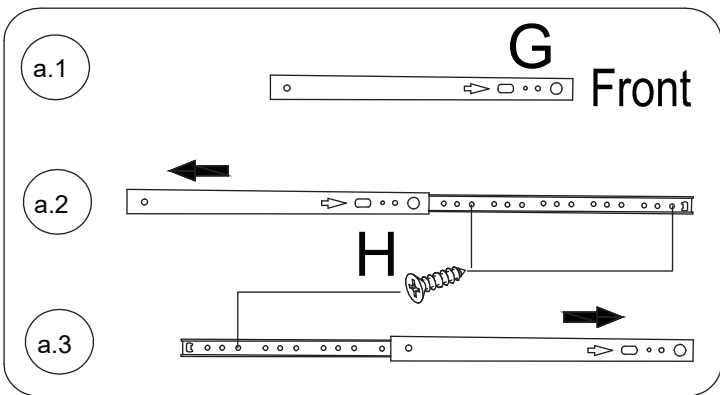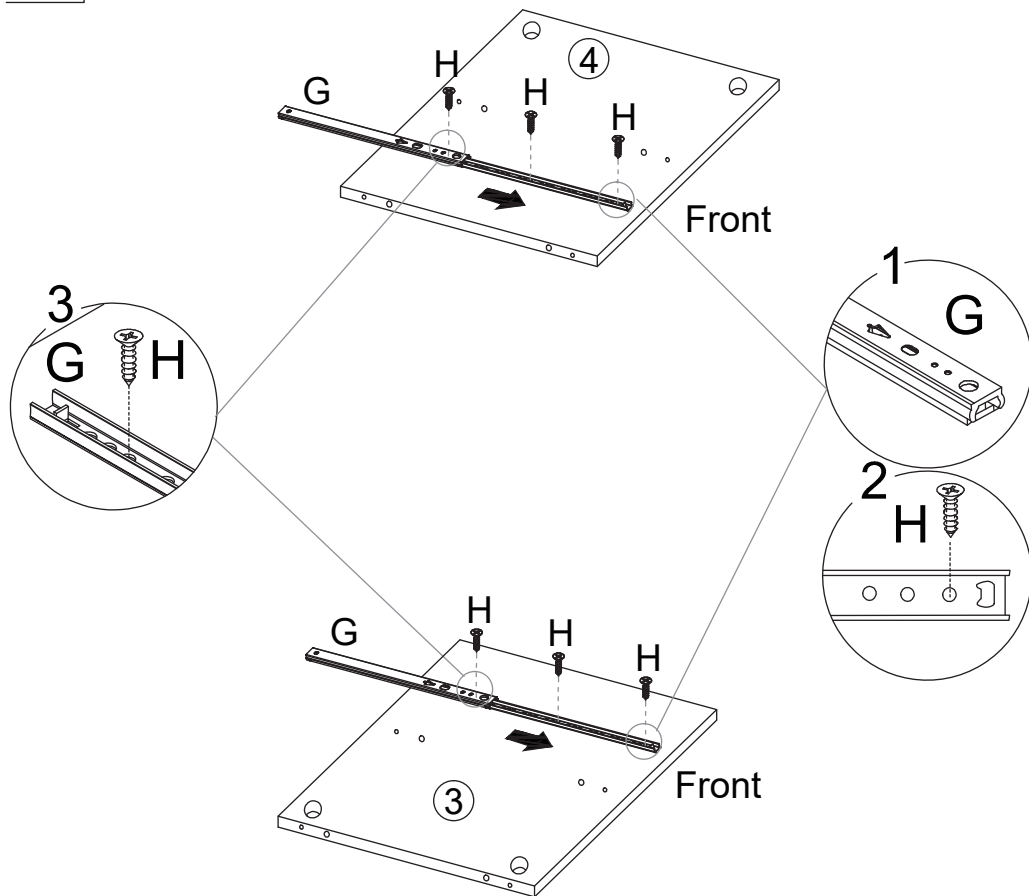


G	x2	H	x6
M3x12mm			

2

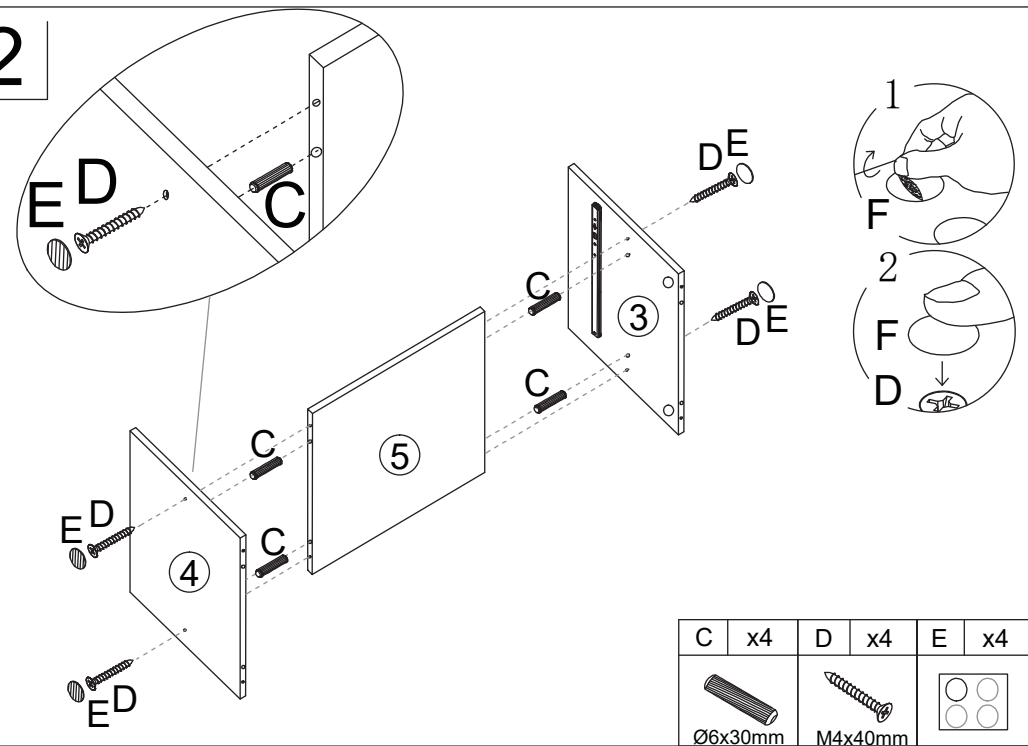


C	x4	D	x4	E	x4
Ø6x30mm		M4x40mm			

3

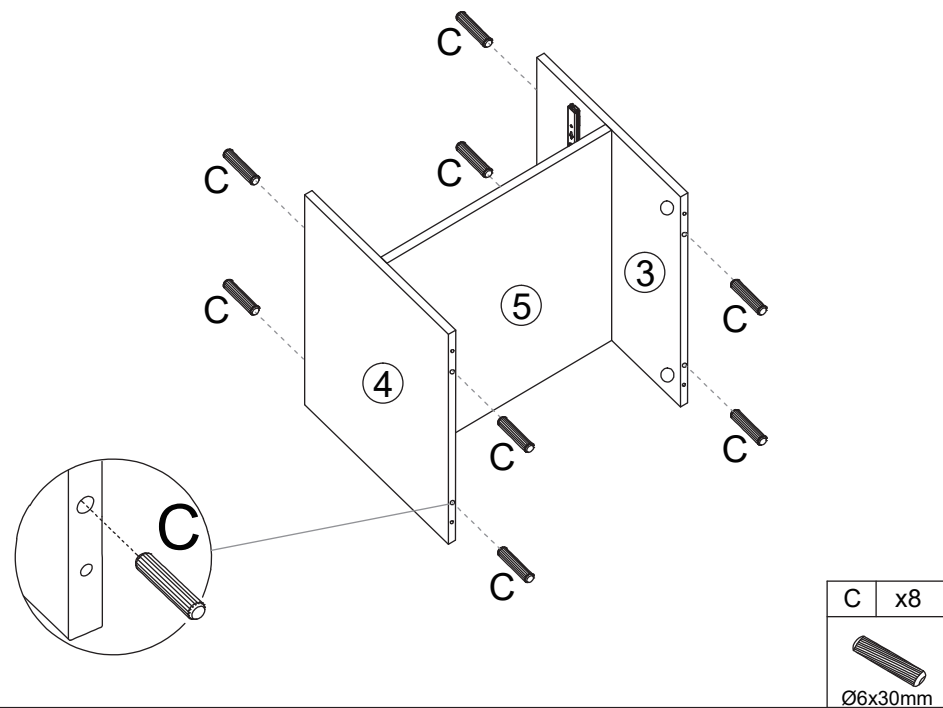


C	x8
Ø6x30mm	

4

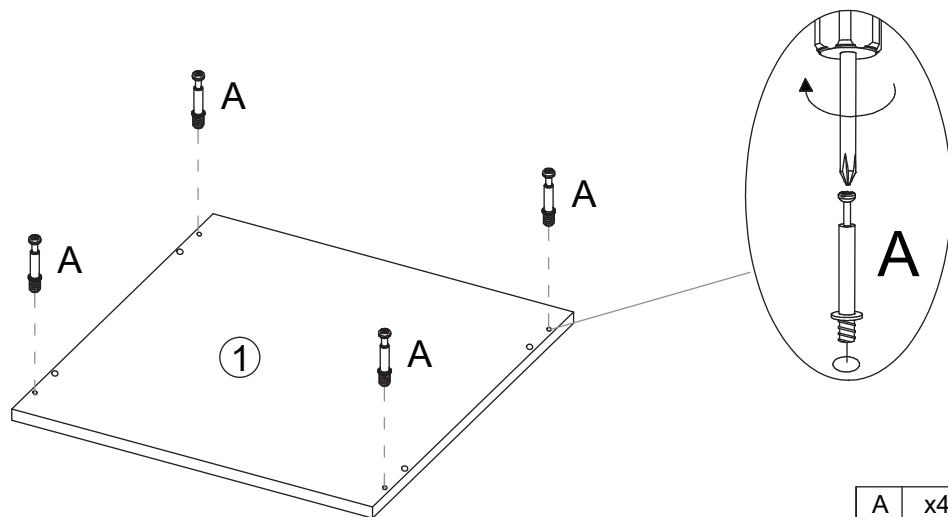



A	x4
 7x35mm	

6

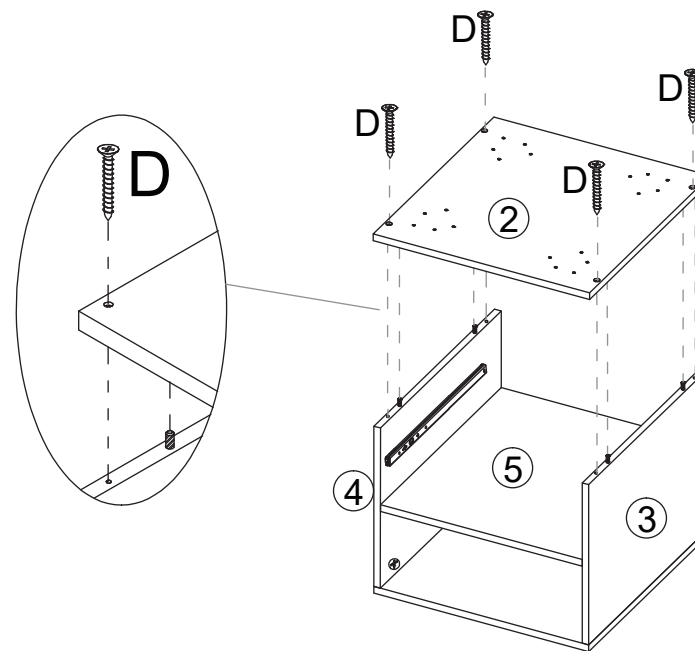


D	x4
 M4x40mm	

5

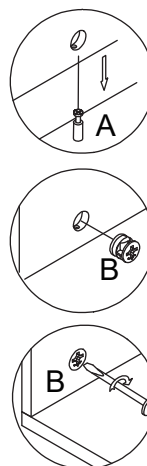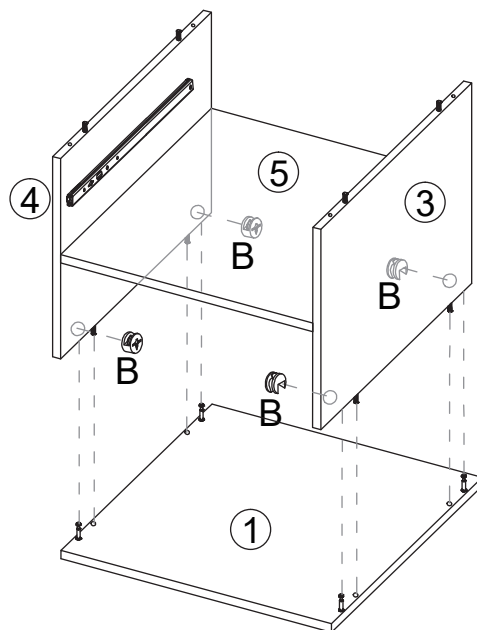


B	x4
 12x10mm	

7

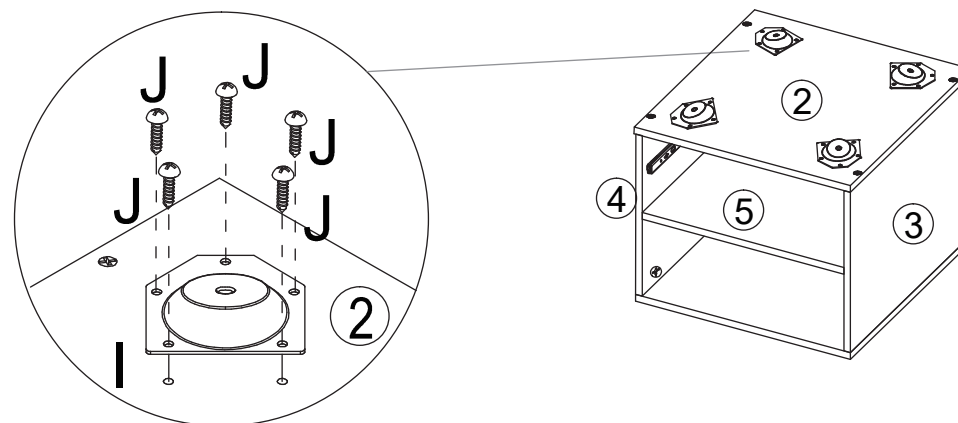

J	x20	I	x4
 M4x12mm			




8

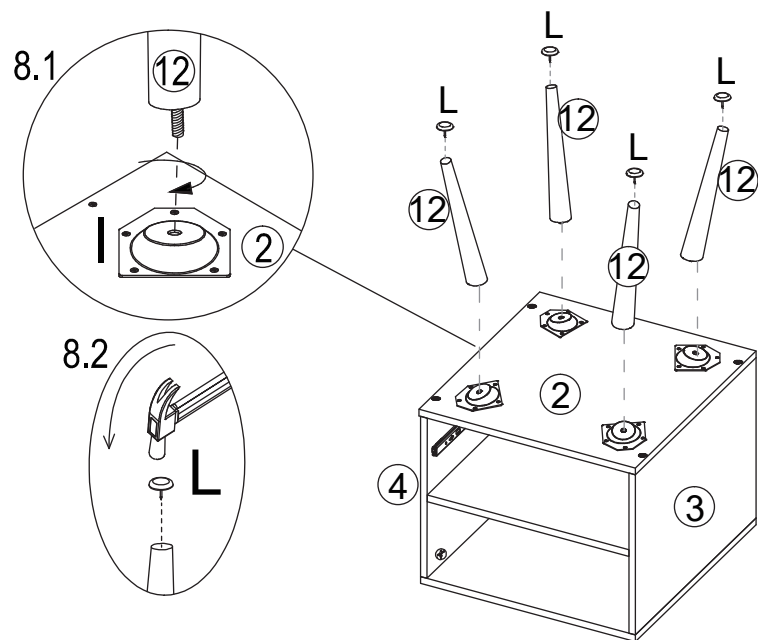

L x4



9

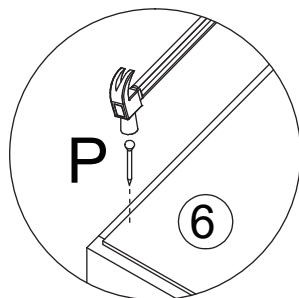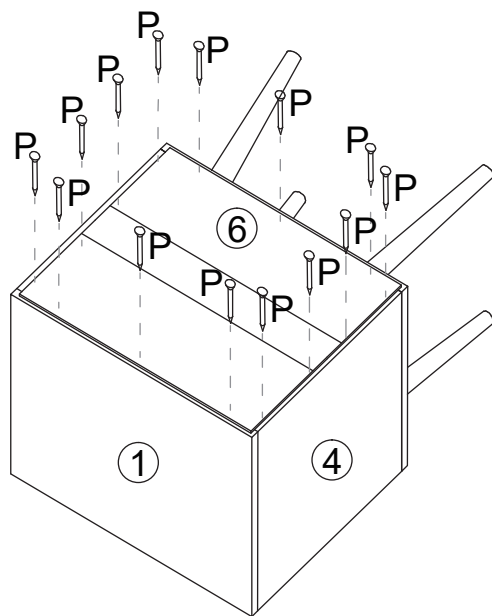


rear panels

P x14




10

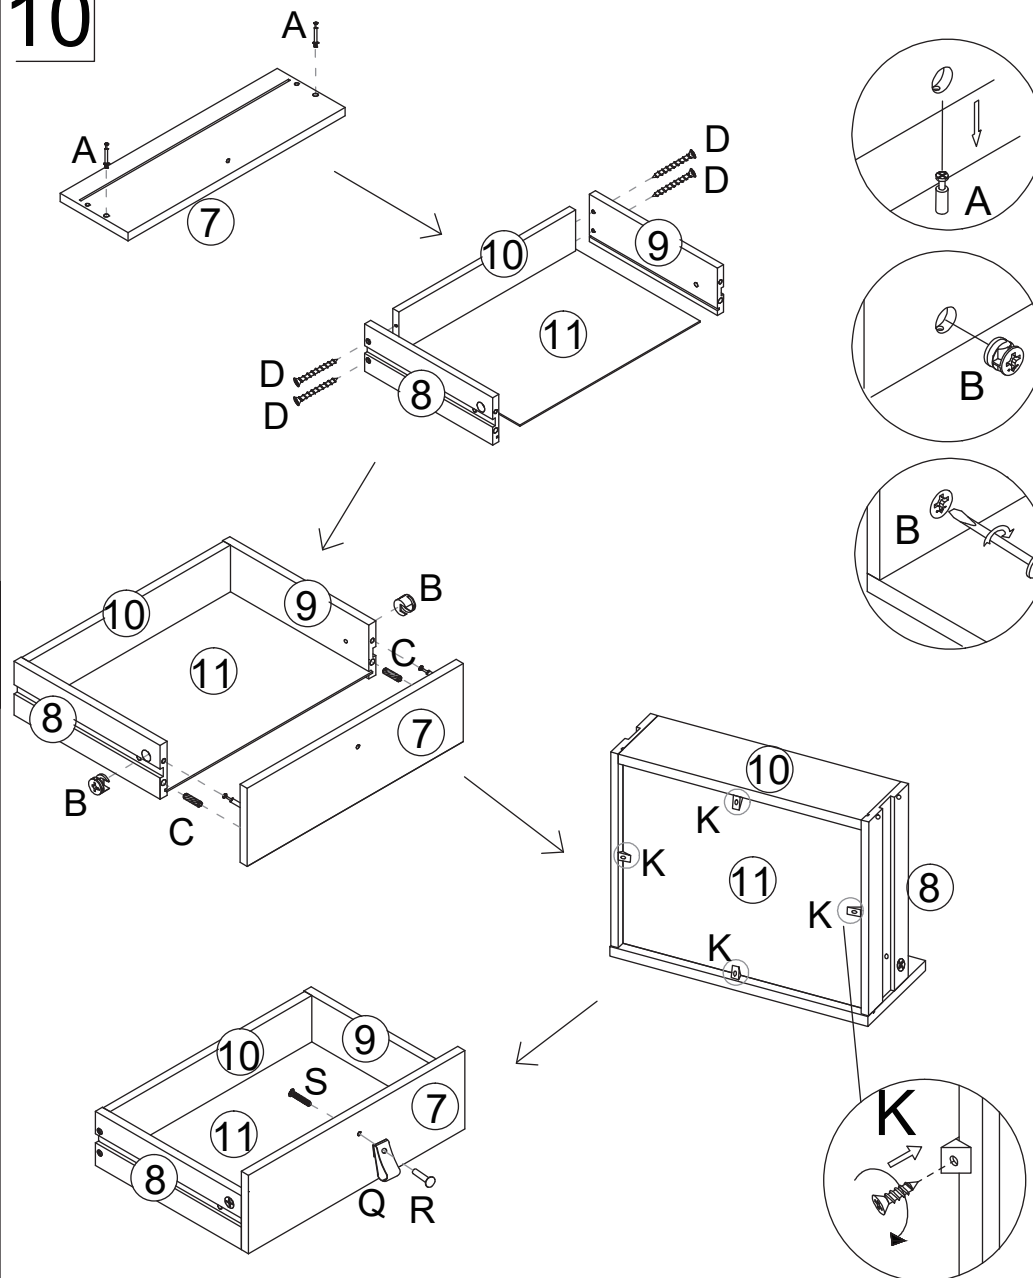

A	x2	B	x2	D	x4	C	x2	Q	x1	R	x1	S	x1	K	x4
7x35mm		12x10mm		M4x40mm		Ø6x30mm						M4x11mm		M3x14mm	


11

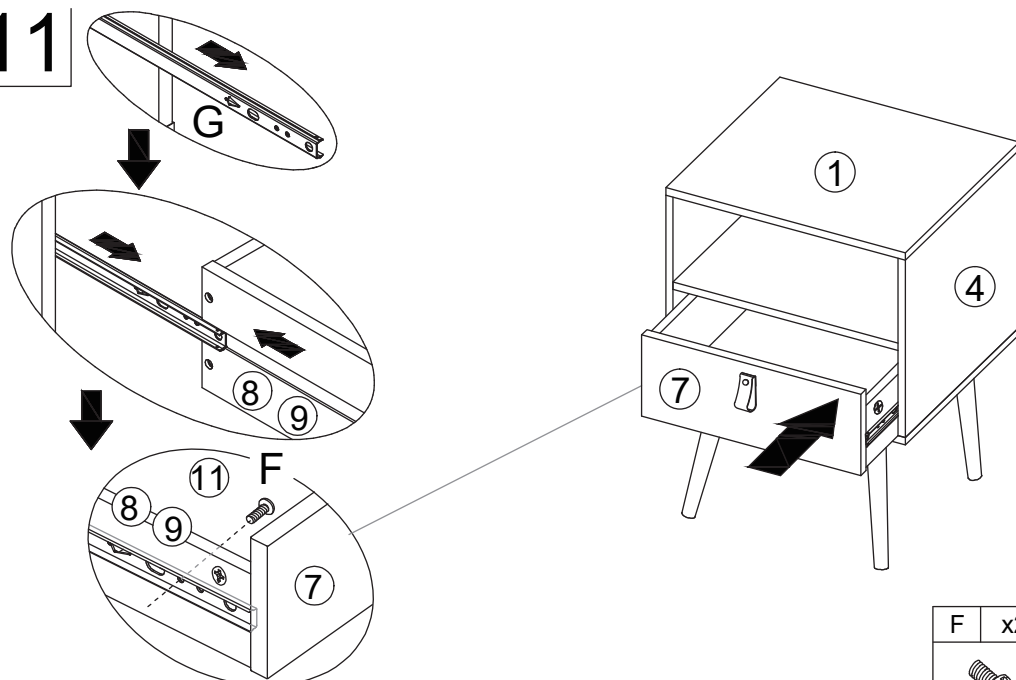

Screw from the inside of the drawers

F	x2
	
M4x11mm	



12

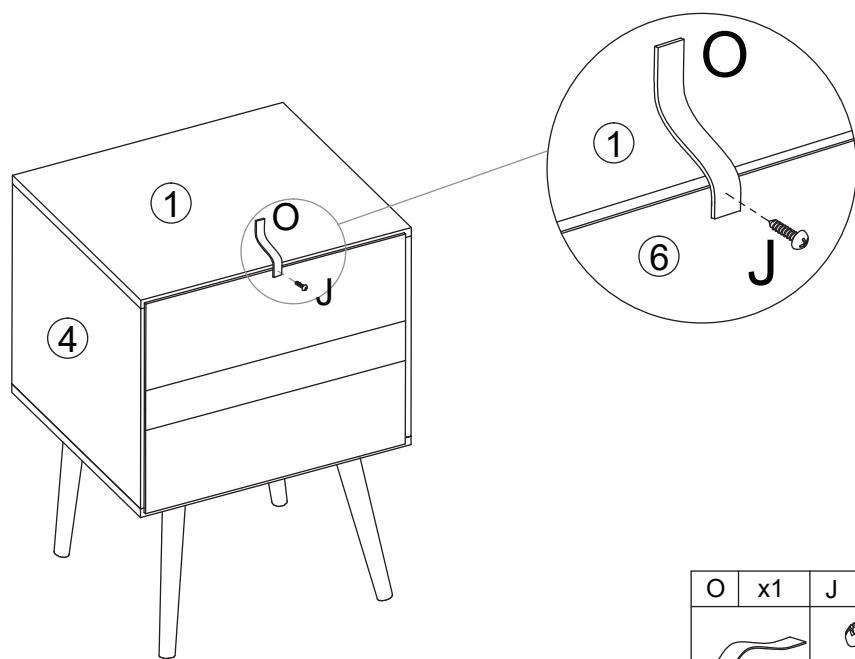

O	x1	J	x1
		 M4x12mm	

13

Pre-drilled hole at wall

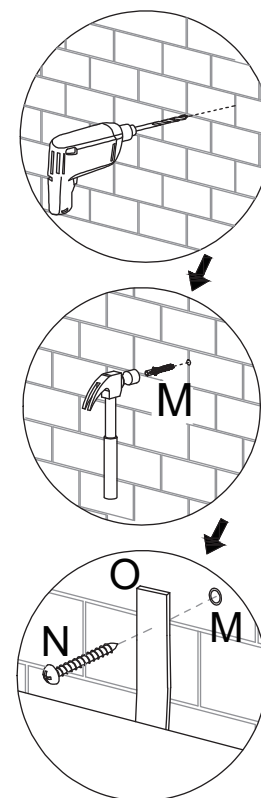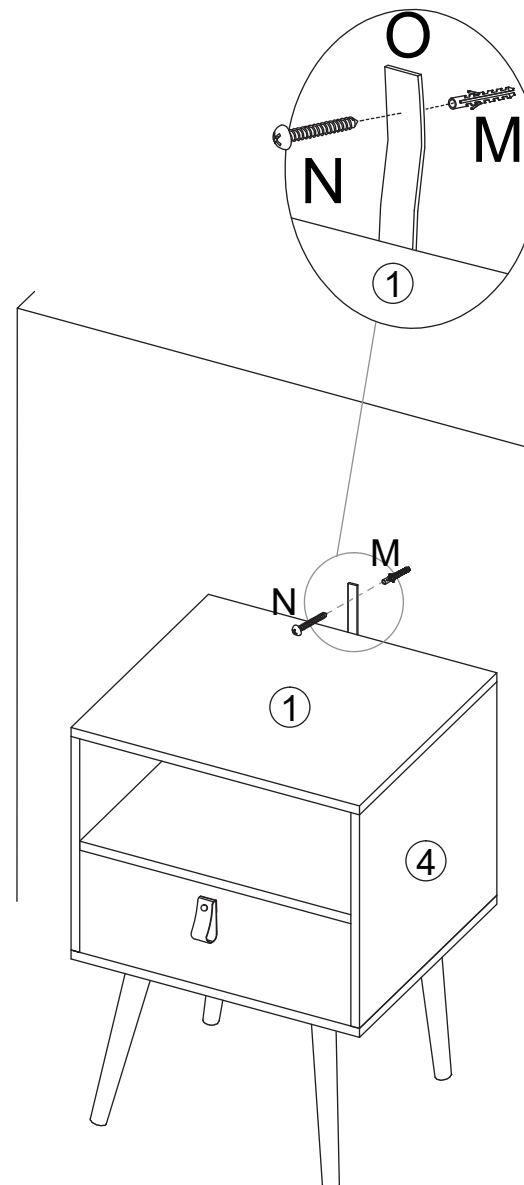

M	x1	N	x1
		 M4x30mm	