


BEDSIDE TABLE

MODEL:BT-HAMP-WH/BK

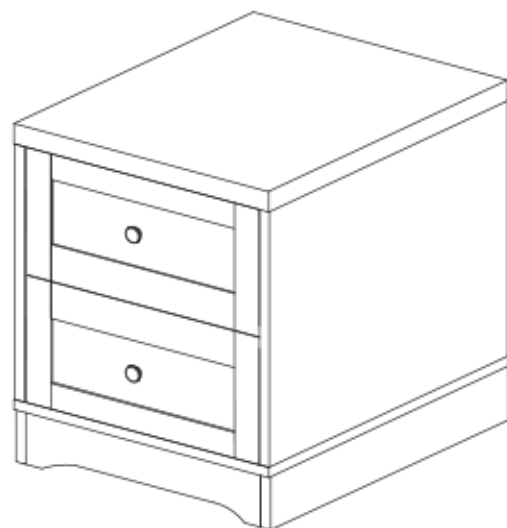


















ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.





Two persons and
tools required for
assembly

HARDWARE


A	x18	B	x18	C	x8	D	x18	E	x6	F	x1
											
7x35mm		12x10mm		Ø6x30mm		M4x40mm				M4x14mm	
G	x2	H	x12	I	x4	J	x6	K	x4	L	x2
											
		M3x12mm		Ø6x50mm		M4x10mm				M6mm	
M	x1	N	x1	O	x1	P	x12	Q	x4		
											
		M4x30mm				M3x14mm					

PARTS


Wipe with dry cloths

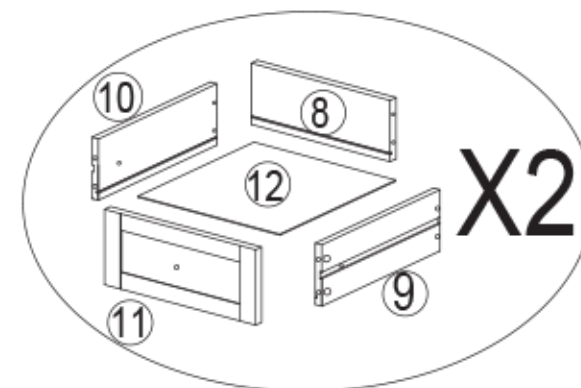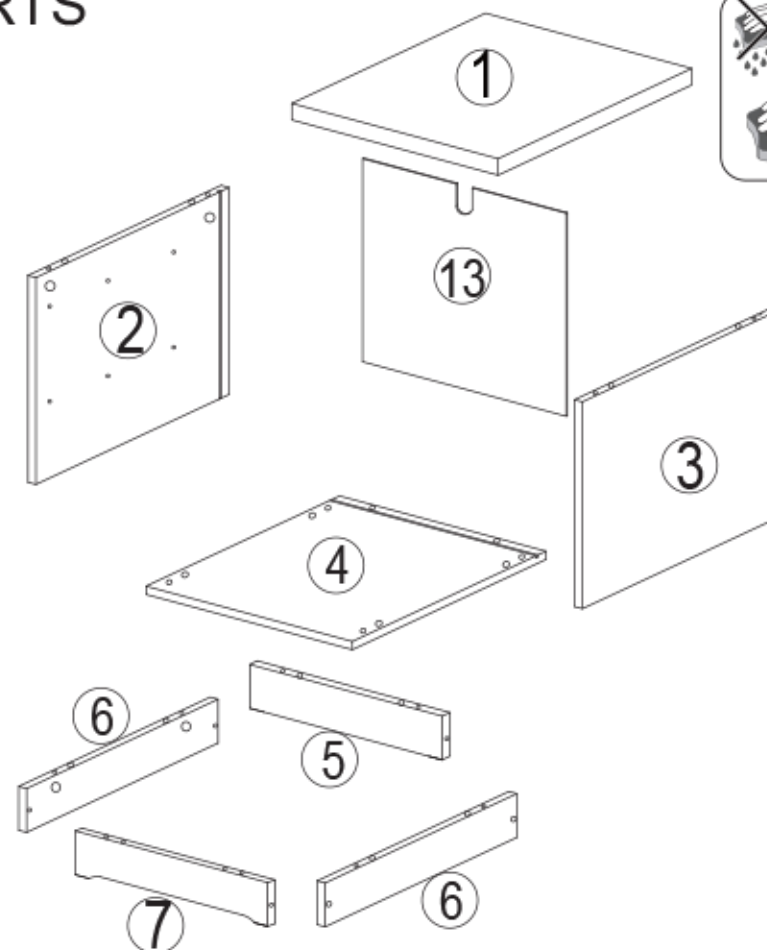


1

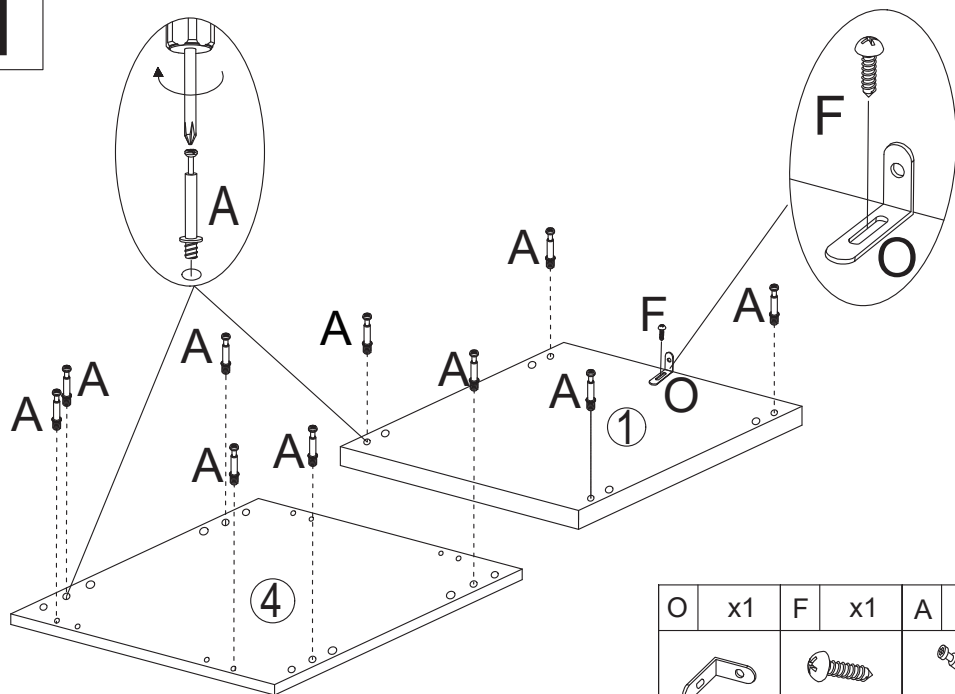

2

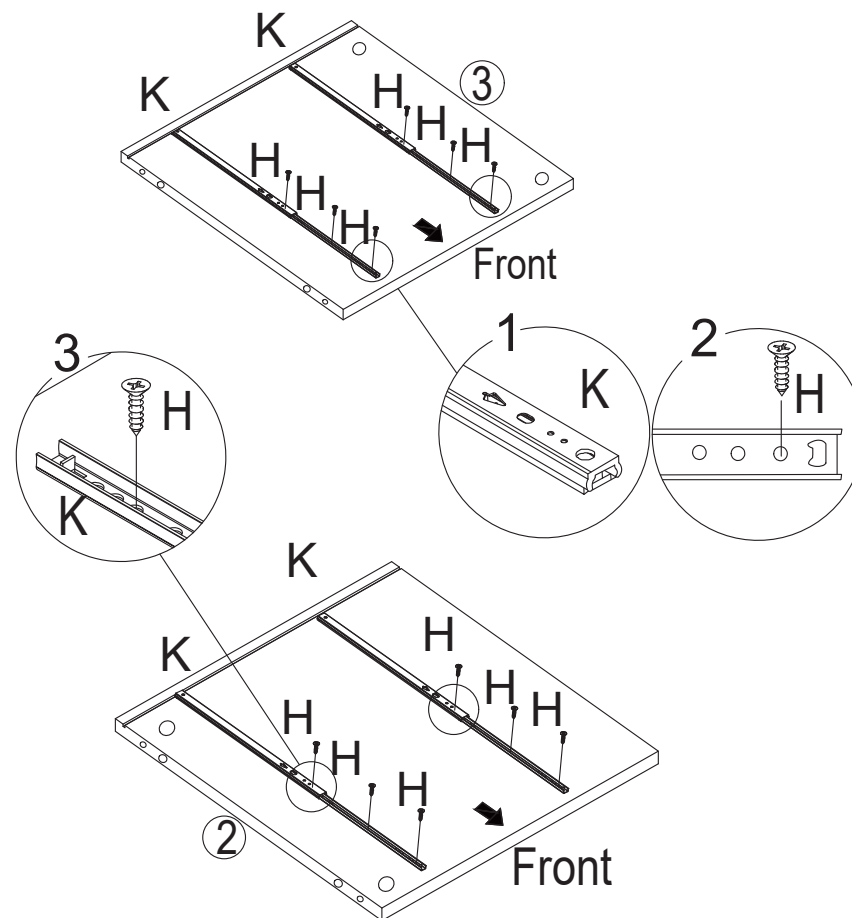


3

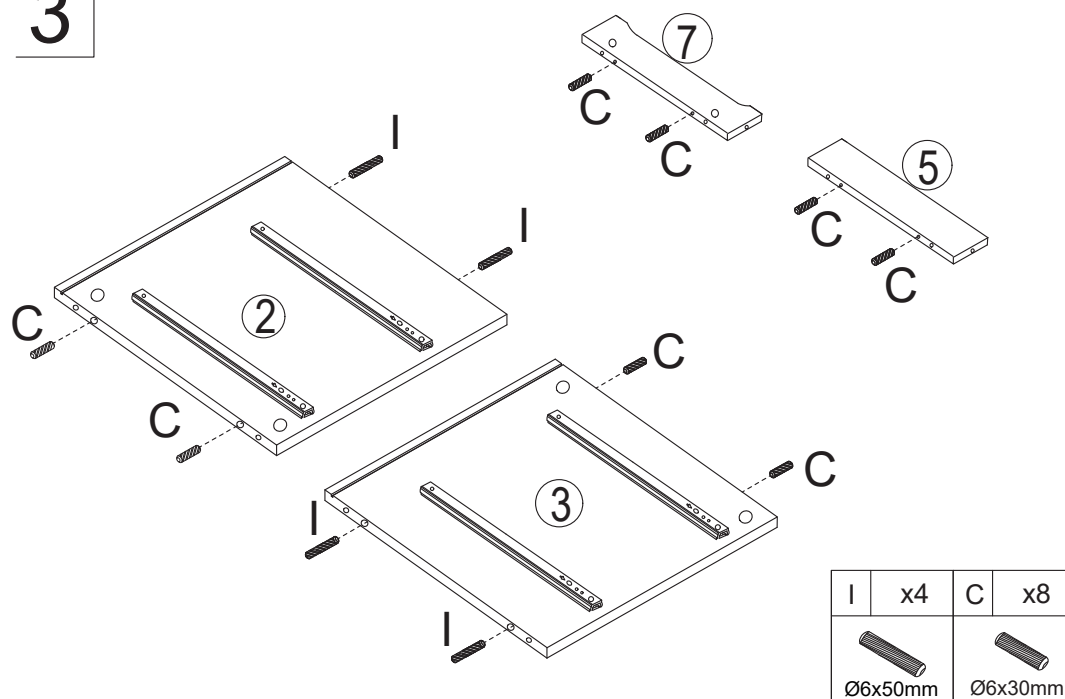


a.1



a.2




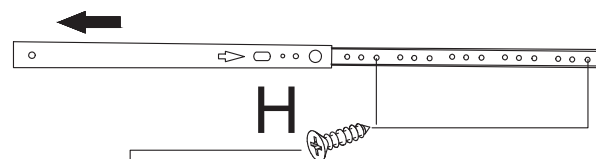



a.3




K	x4	H	x12
		M3x12mm	

4

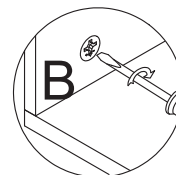
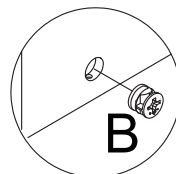
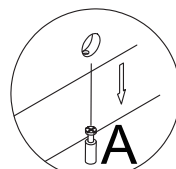
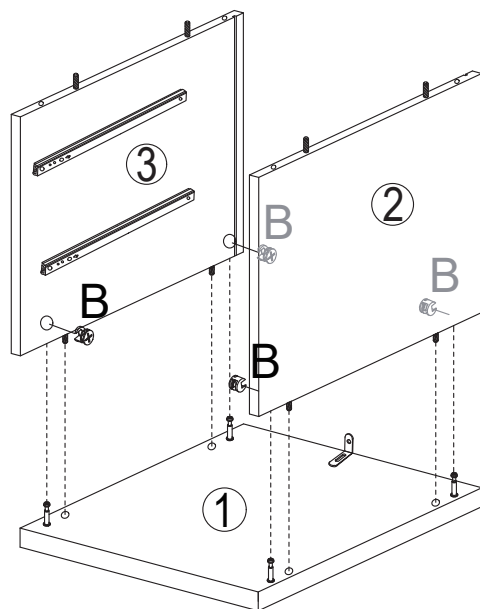





B	x4
 12x10mm	

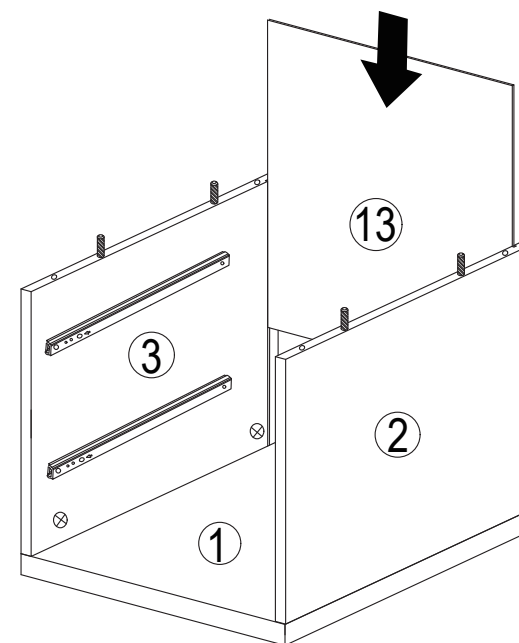6

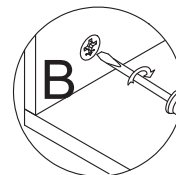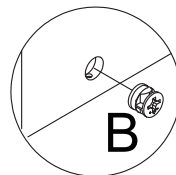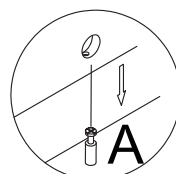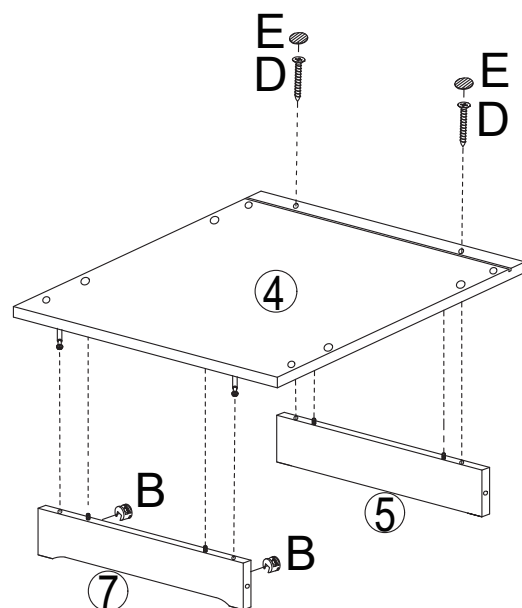



5







B	x2	D	x2	E	x2
 12x10mm		 M4x40mm		 12x10mm	

7

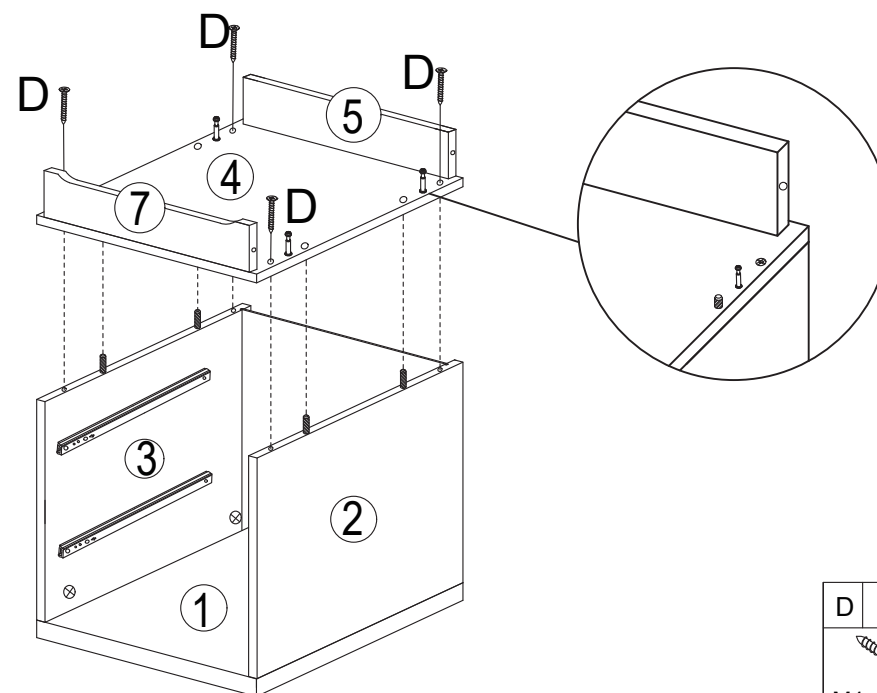


D	x4
 M4x40mm	

8

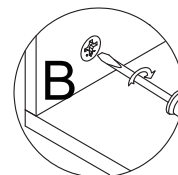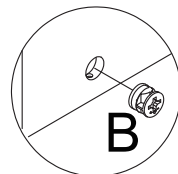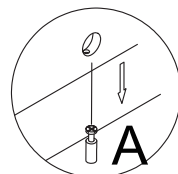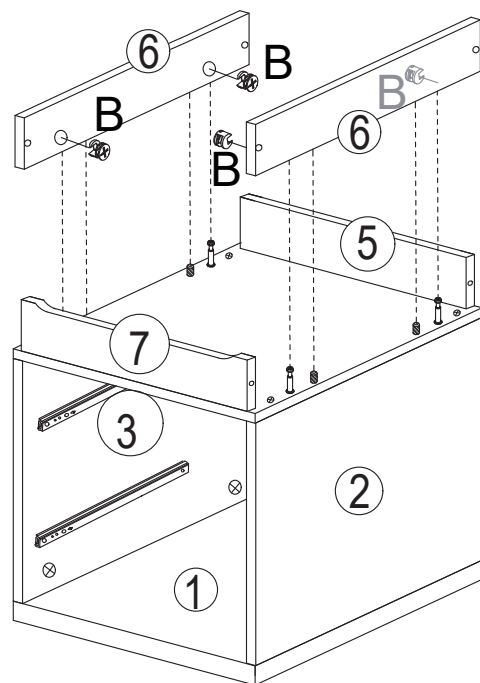







B	x4
12x10mm	

9

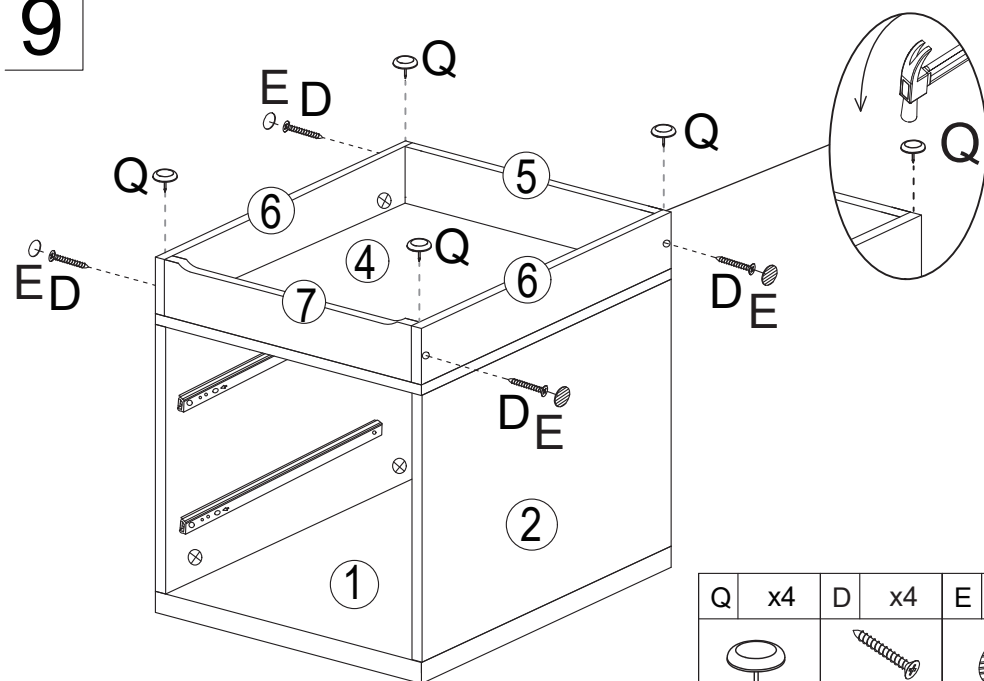

Q	x4	D	x4	E	x4
		M4x40mm			


10

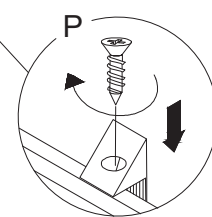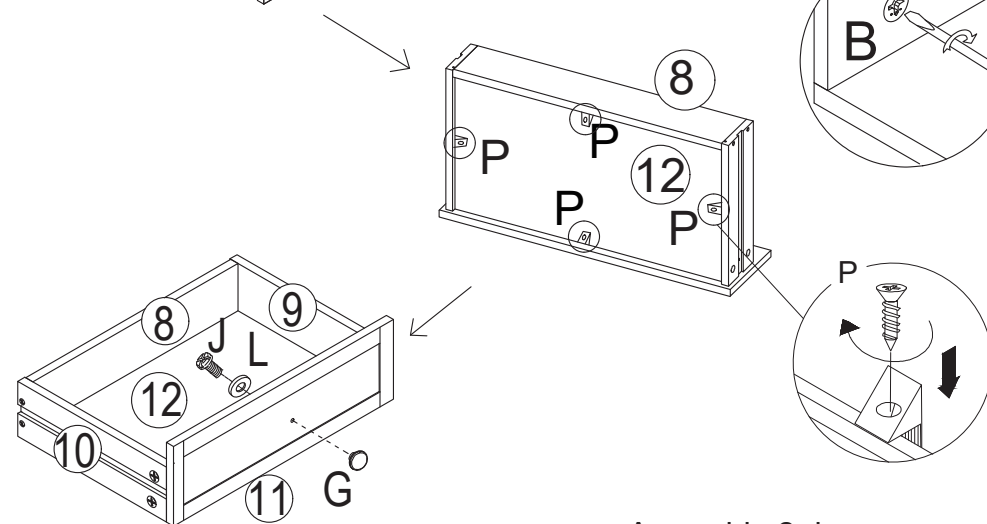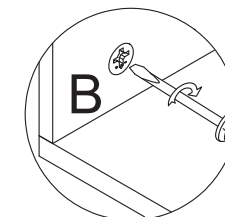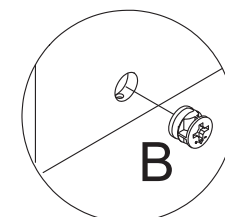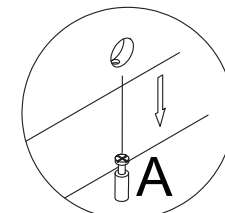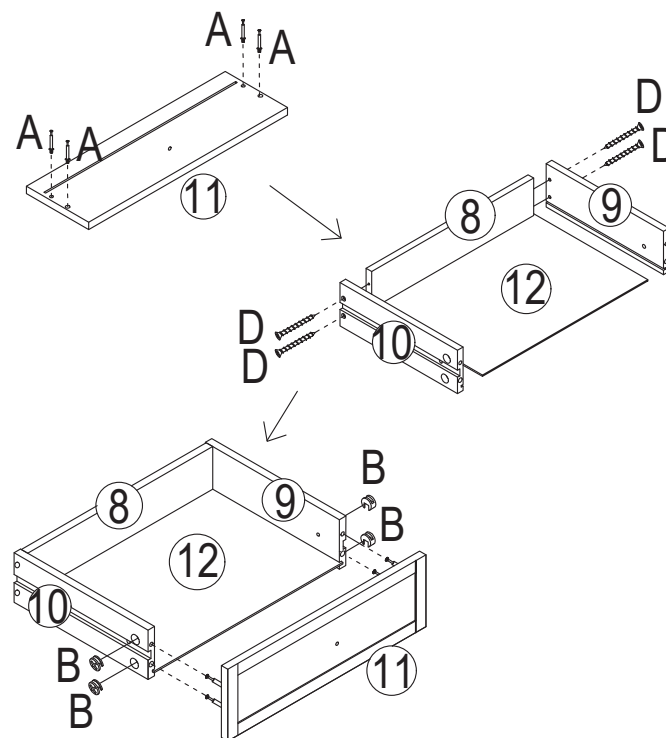


Assemble 2 drawers


P	x8	L	x2	J	x2	A	x8	B	x8	G	x2	D	x8
M3x14mm		M6mm		M4x10mm		7x35mm		12x10mm				M4x40mm	


11

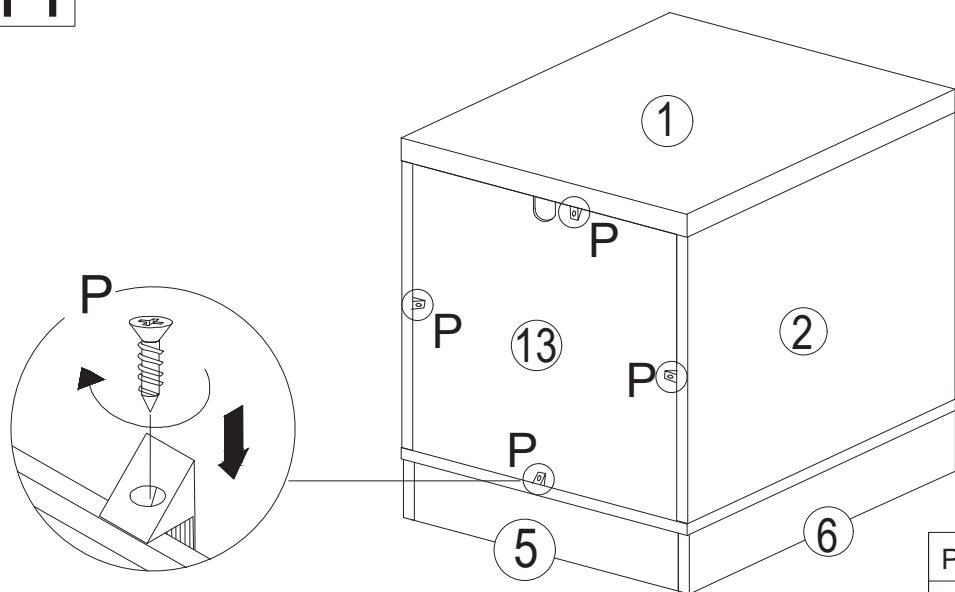

P	x4
	
M3x14mm	


13

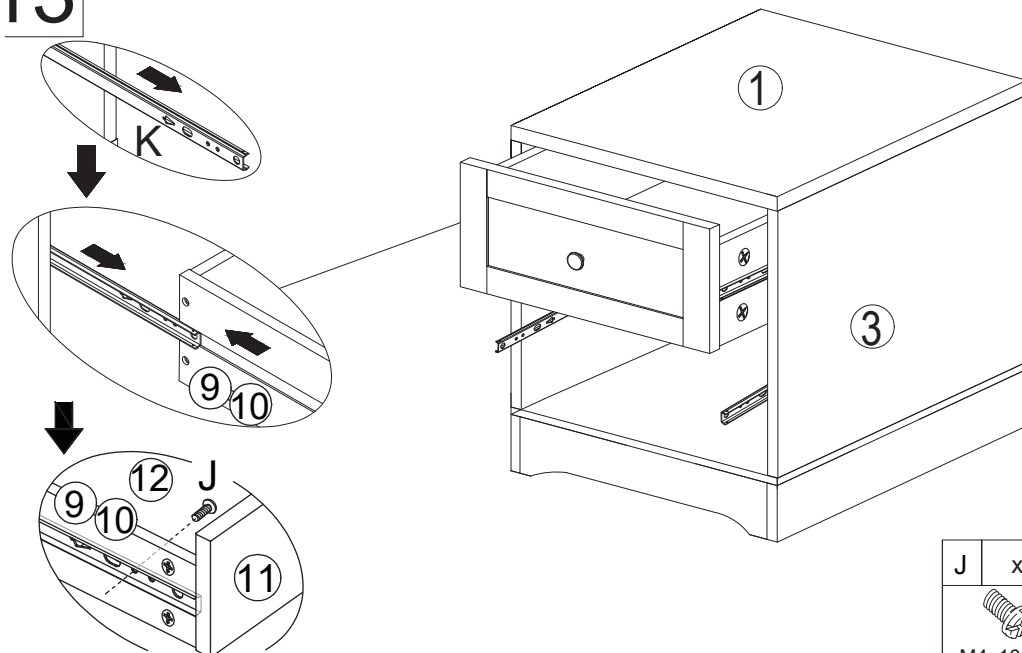

J	x2
	
M4x10mm	


Screw from the inside of the drawers



12

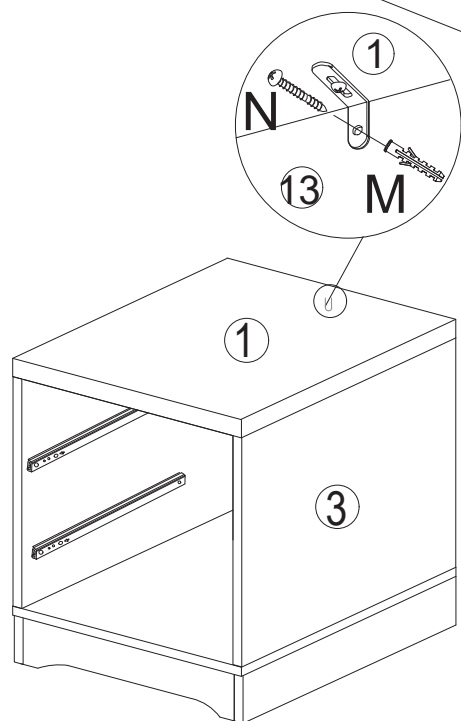


Pre-drilled hole at wall


WALL

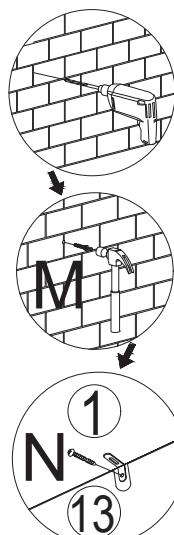

M	x1	N	x1
			
M4x30mm			

14

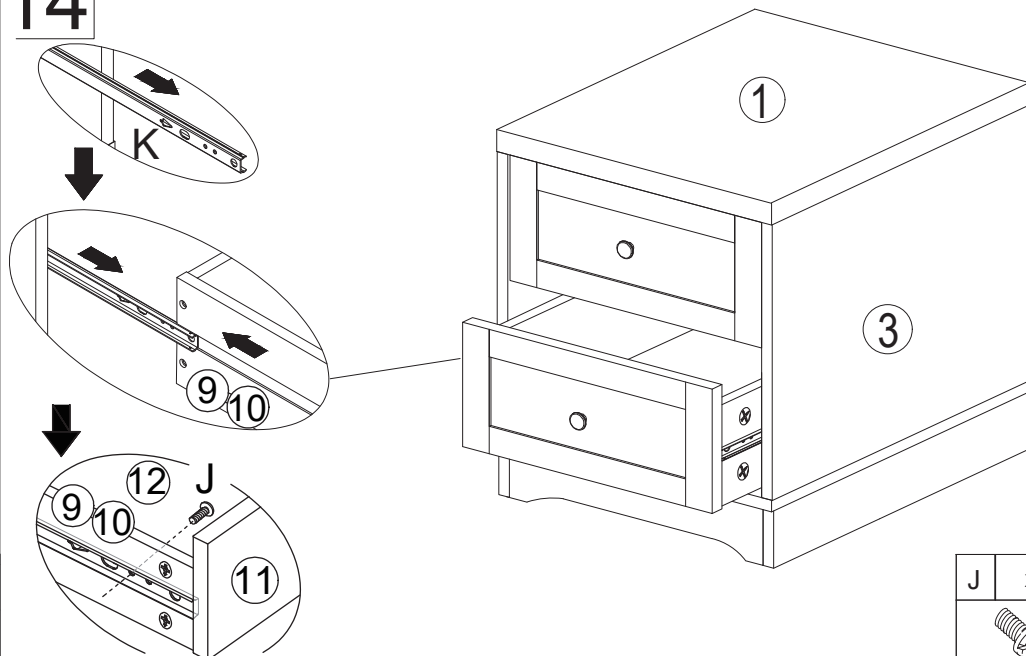

J	x2
	
M4x10mm	

Screw from the inside of the drawers