


SIDEBORD

MODEL:SB-A18-RAT-WD

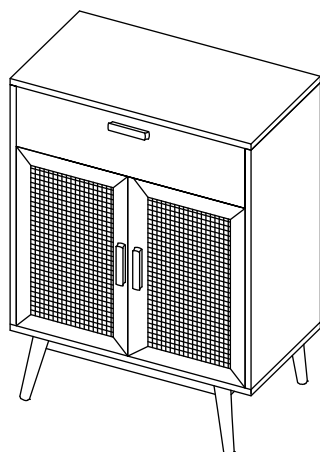




ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.




Two persons and
tools required for
assembly



HARDWARE

A	x7	B	x5	C	x14	D	x25	E	x6	F	x4
											
7x35mm		15x12mm		Ø6x30mm		M4x40mm		M3x12mm			
G	x2	H	x4	I	x4	J	x6	K	x2	L	x16
											
M4x10mm		M6				M4x18mm					
M	x8	N	x1	O	x4	P	x2	Q	x4	R	x3
											
M4x25mm				M8x60mm		12x10mm					
S	x16	T	x2	U	x2	W	x4	X	x16	Y	x2
											
		M4x30mm						M3.5x14mm		M3x14mm	



PARTS

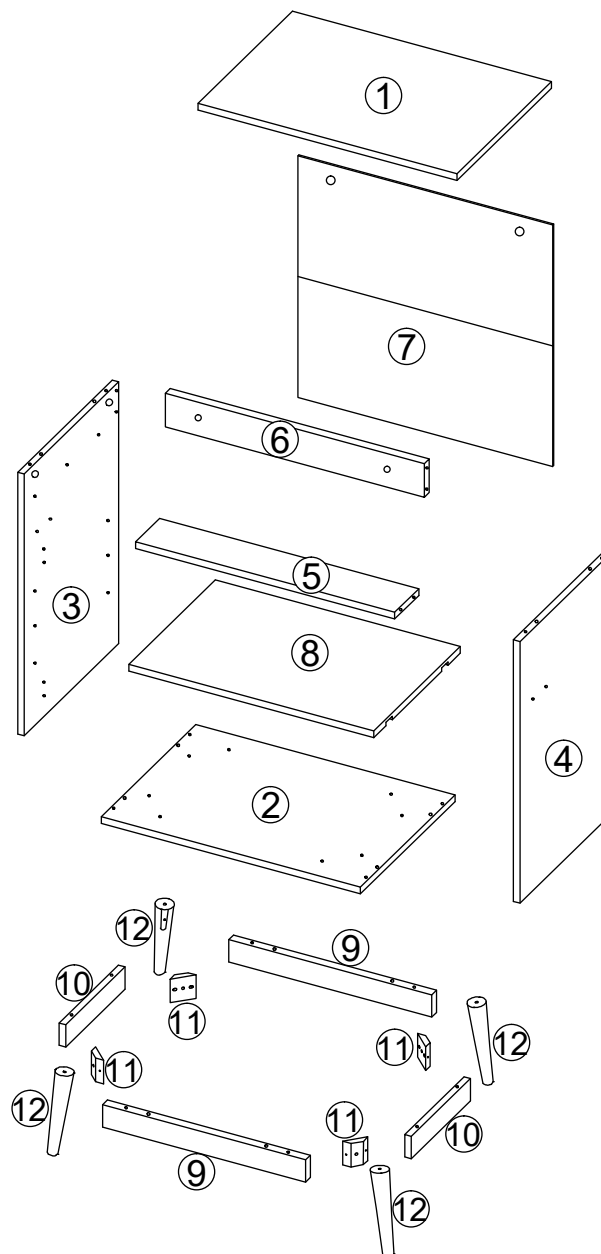

Wipe with dry cloths

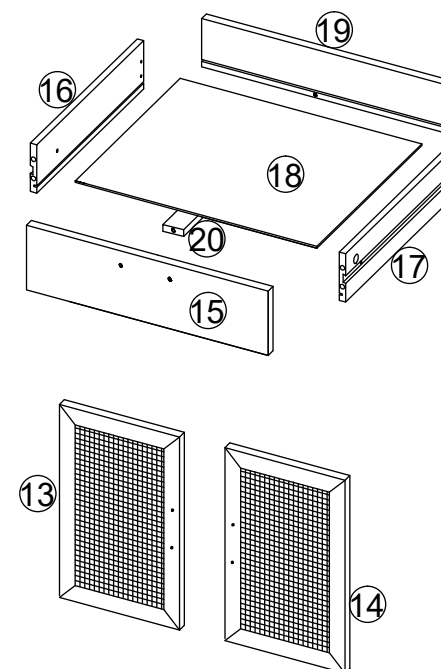
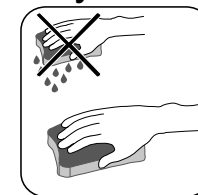


1

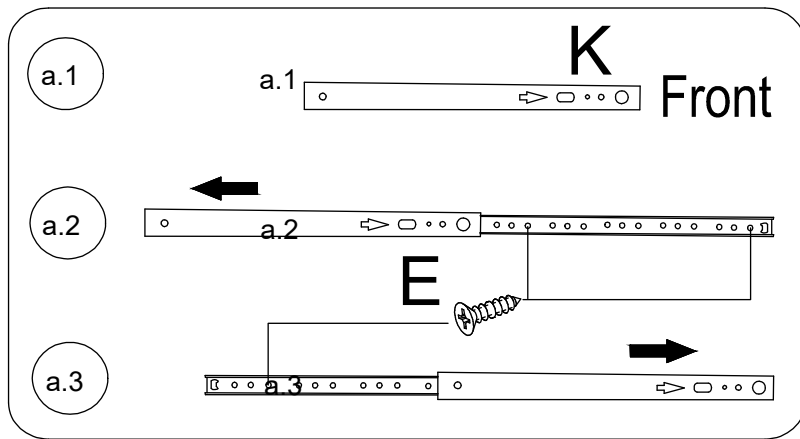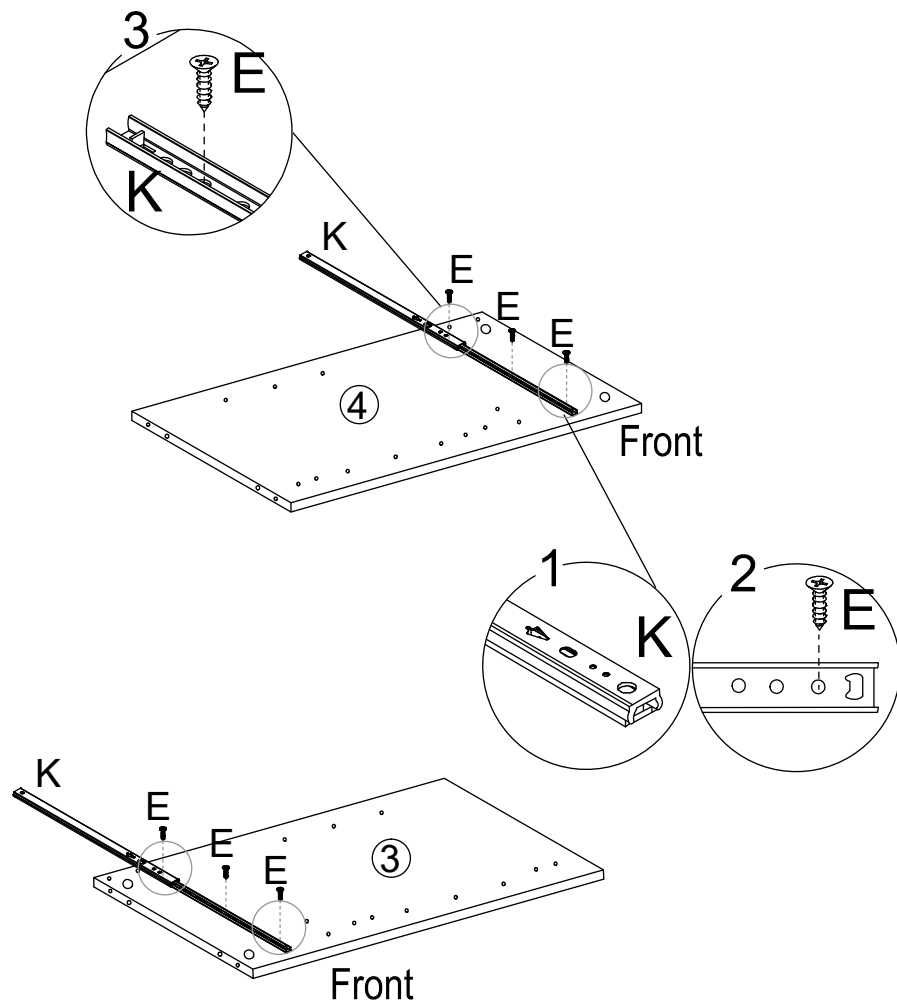


K	x2	E	x6
			
		M3x12mm	

2

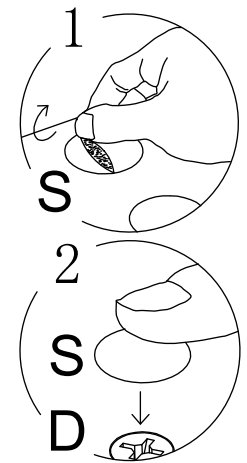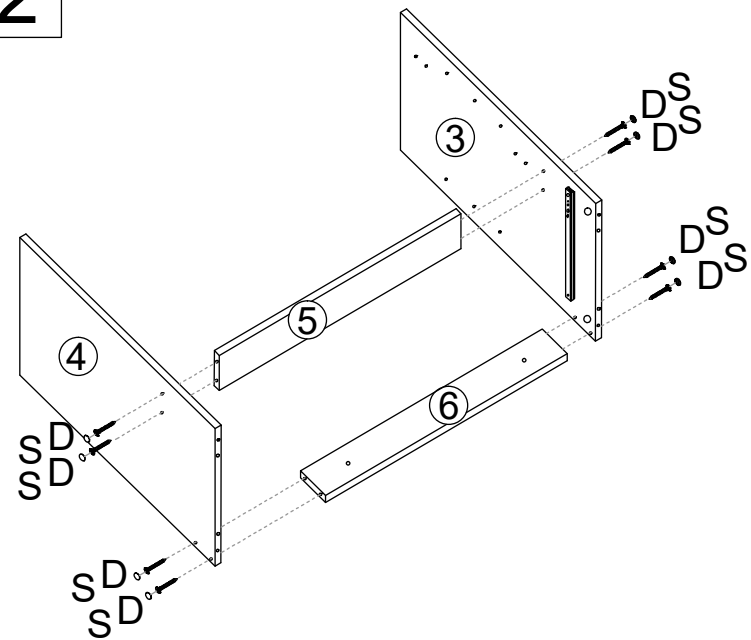


D	x8	S	x8
			
		M4x40mm	

3

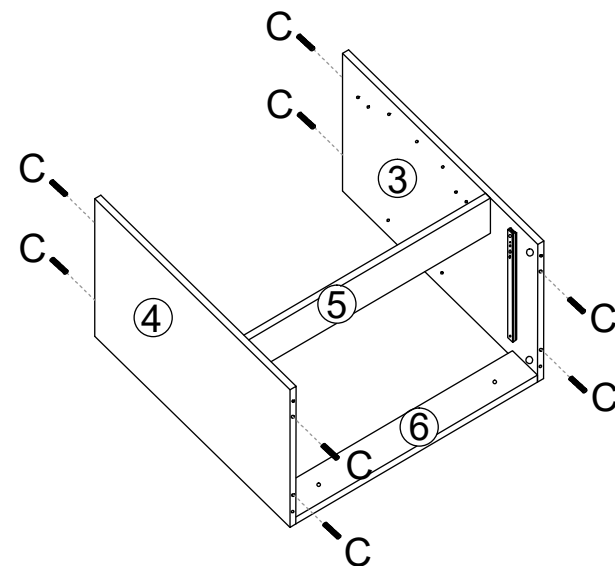


C	x8
	
Ø6x30mm	


4

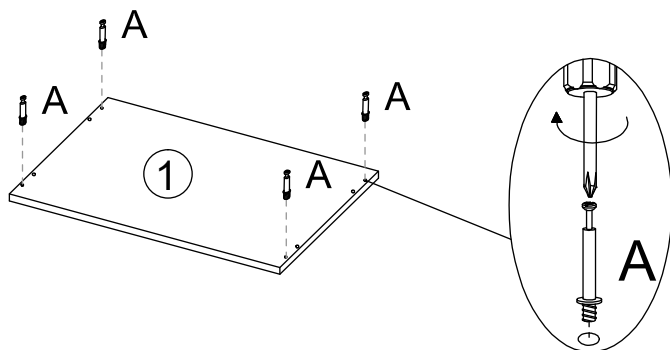


A	x4
 7x35mm	



6

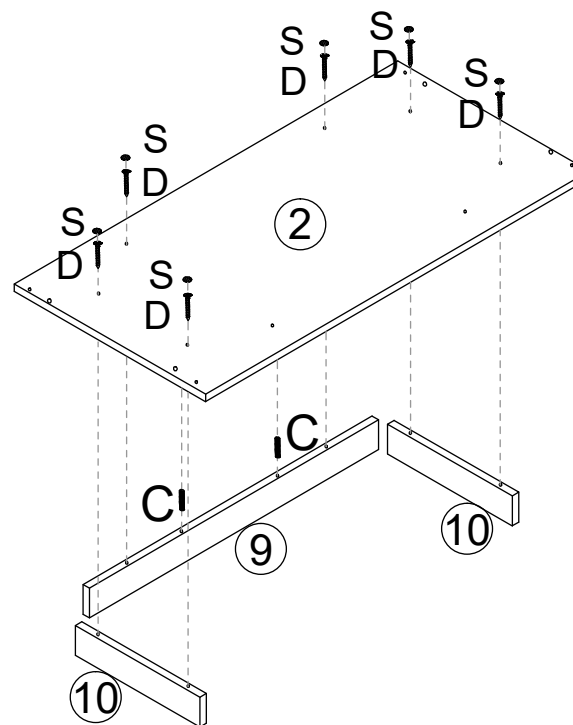

C	x2	D	x6	S	x6
 Ø6x30mm		 M4x40mm		 (4 holes shown)	

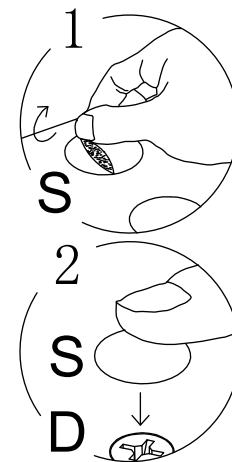


5

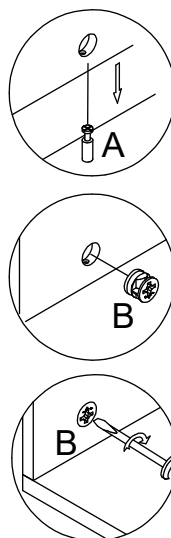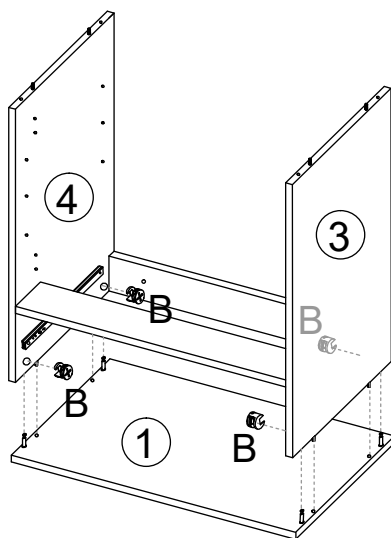


B	x4
 15x12mm	

7

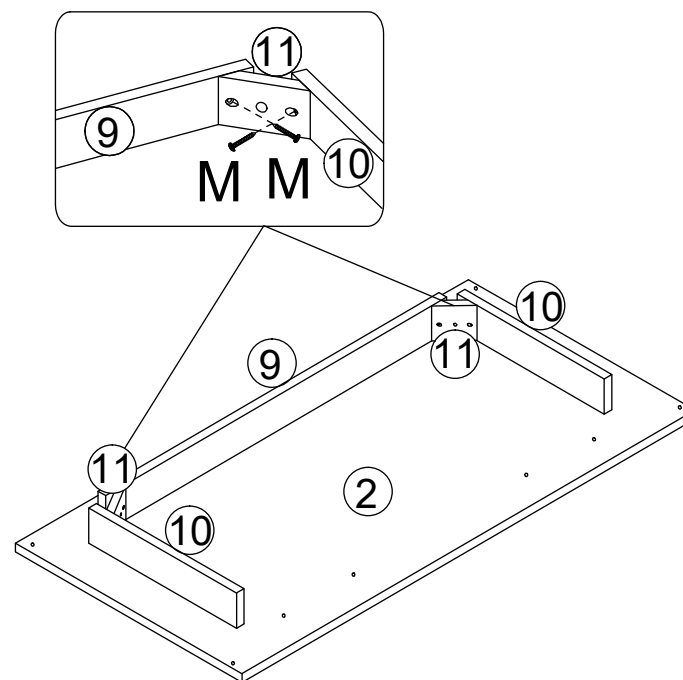


M	x4
 M4x25mm	

8

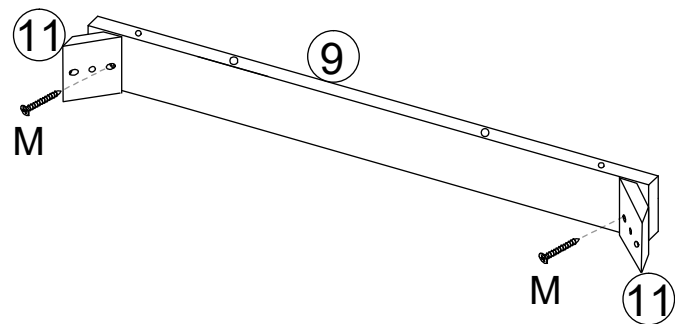


M	x2
M4x25mm	

10

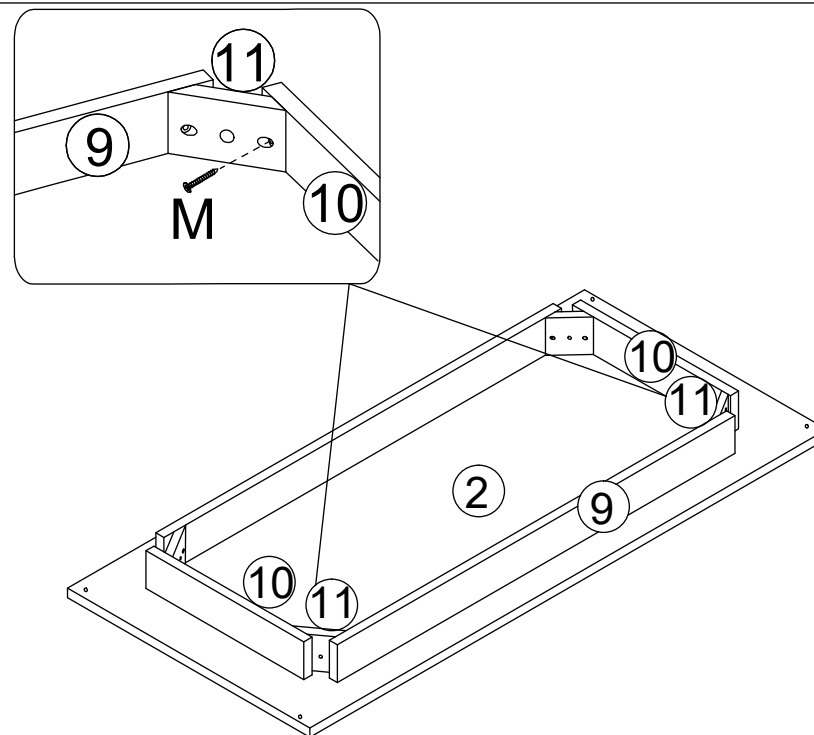


M	x2
M4x25mm	


9

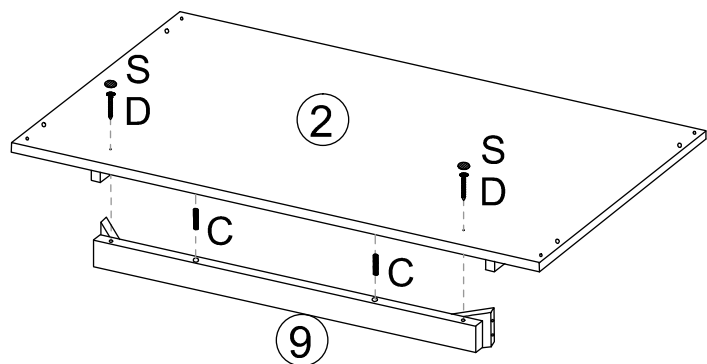

C	x2	D	x2	S	x2
Ø6x30mm		M4x40mm			

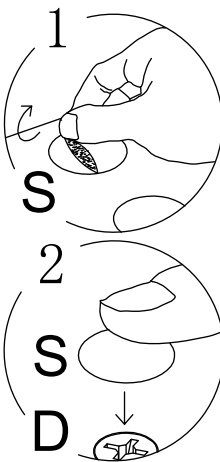


11

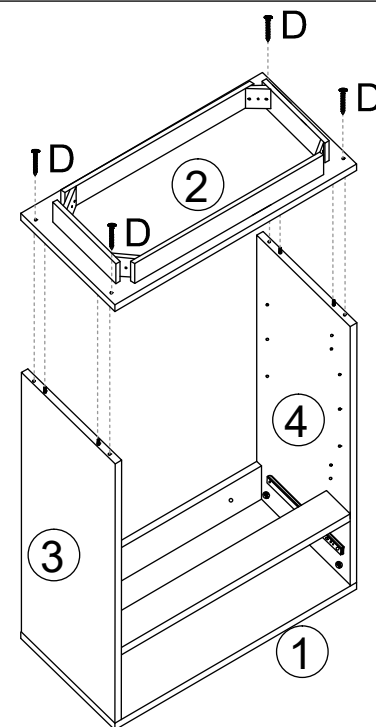




D	x4
M4x40mm	

12









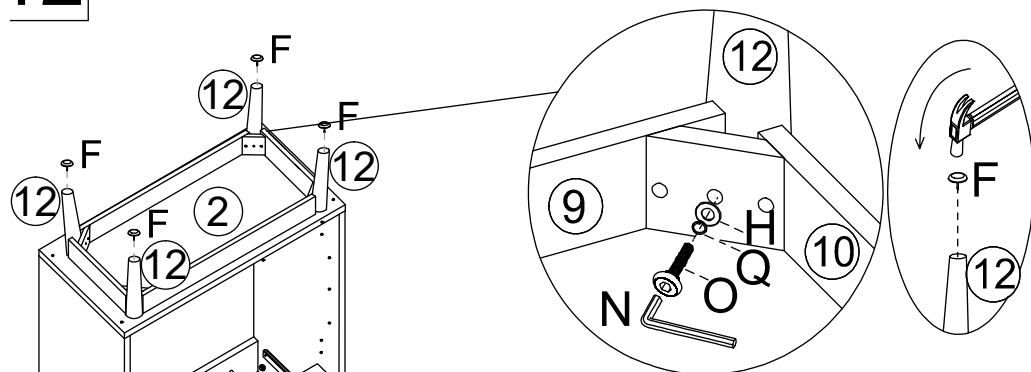


N	x1	H	x4	O	x4	Q	x4	F	x4
			M6		M6x60mm				

13

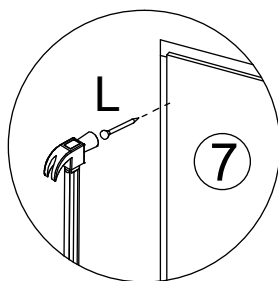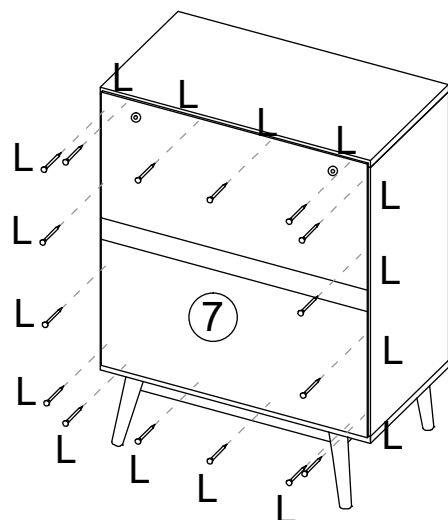


14

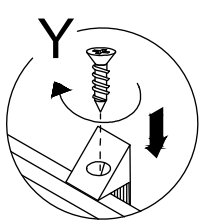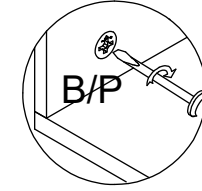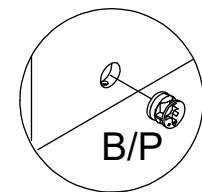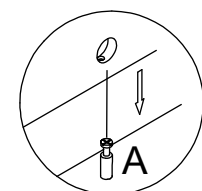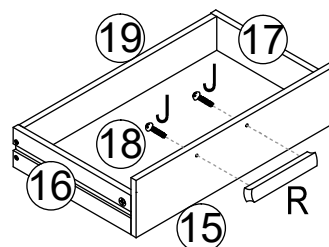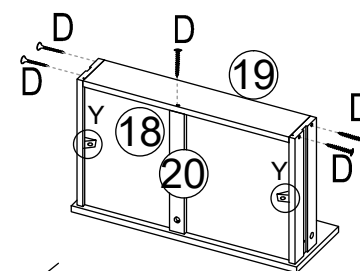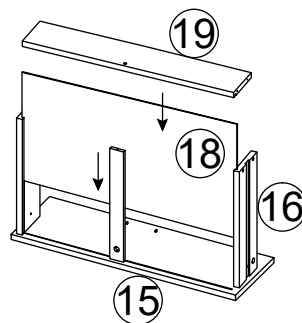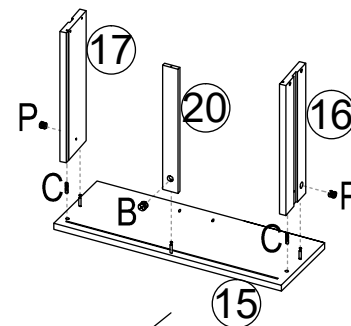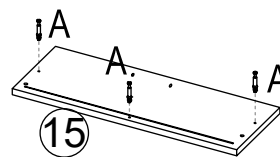


Y	x2	A	x3	B	x1	P	x2	C	x2	D	x5	R	x1	J	x2
	M3x14mm		7x35mm		15x12mm		12x10mm		Ø6x30mm		M4x40mm				M4x18mm

15


Pre-drill hole in wall

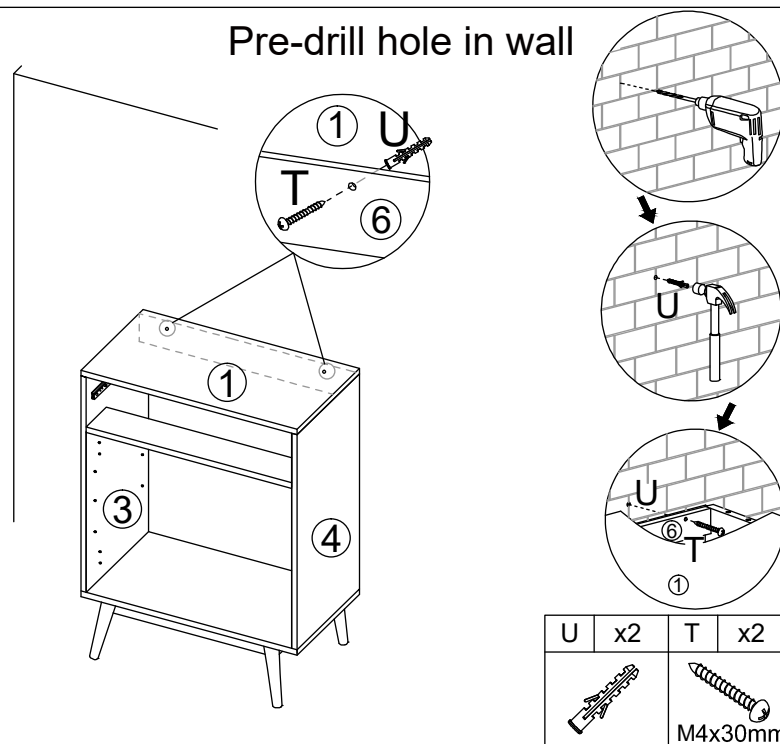


17

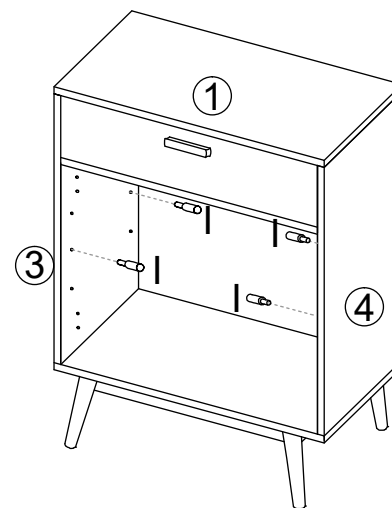


16

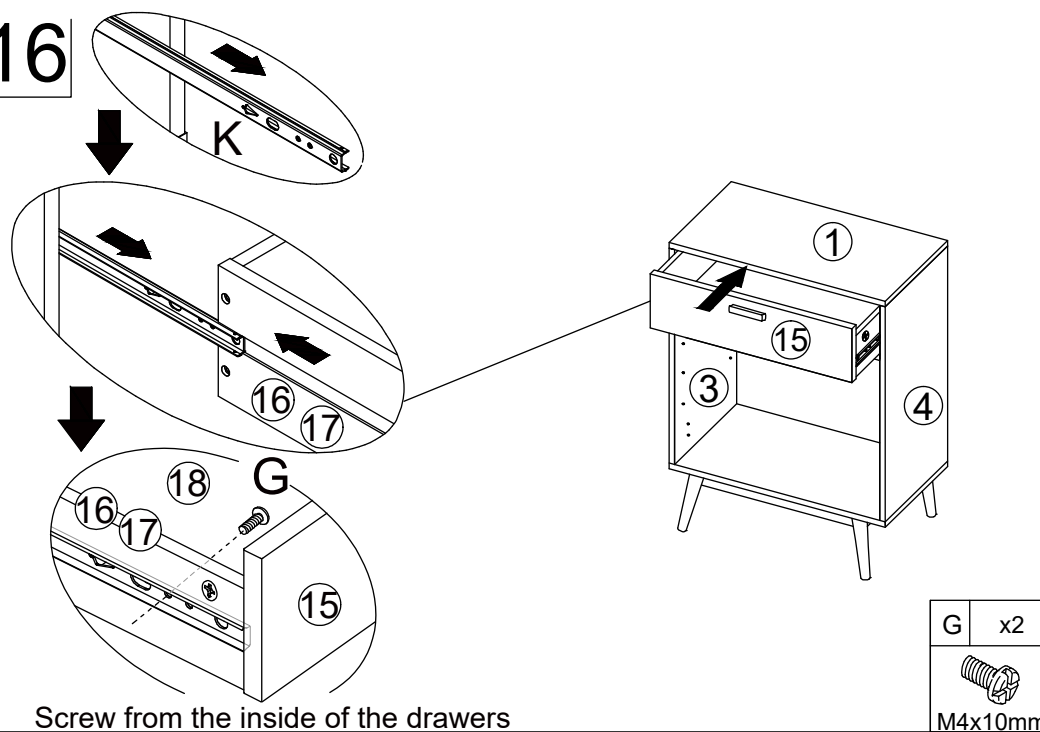

18

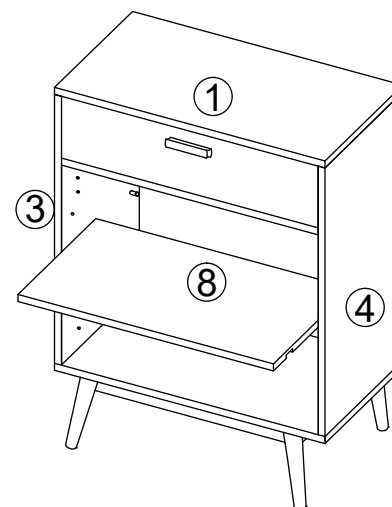


19

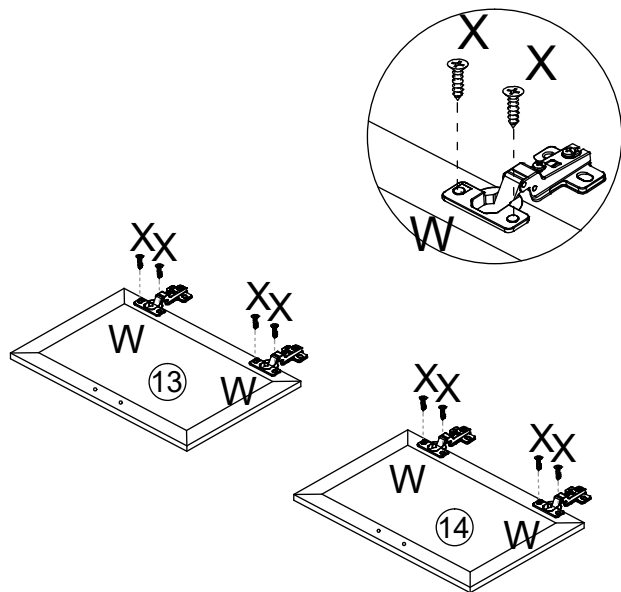




W	x4	X	x8
			
M3.5x14mm			

21

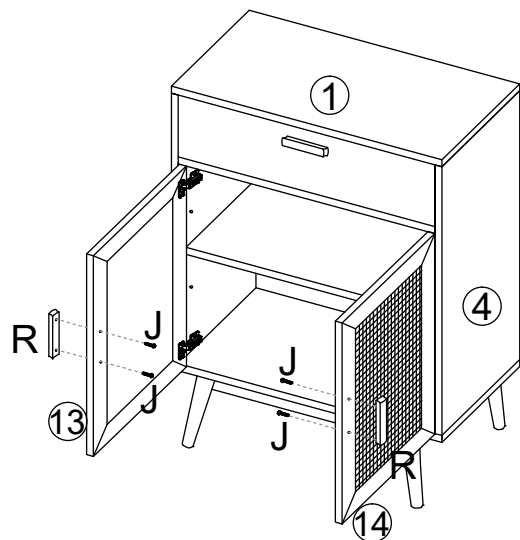

R	x2	J	x4
			
M4x18mm			

20

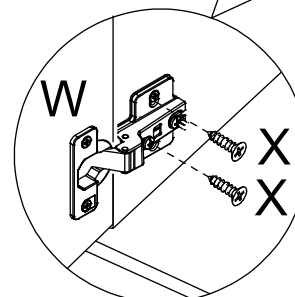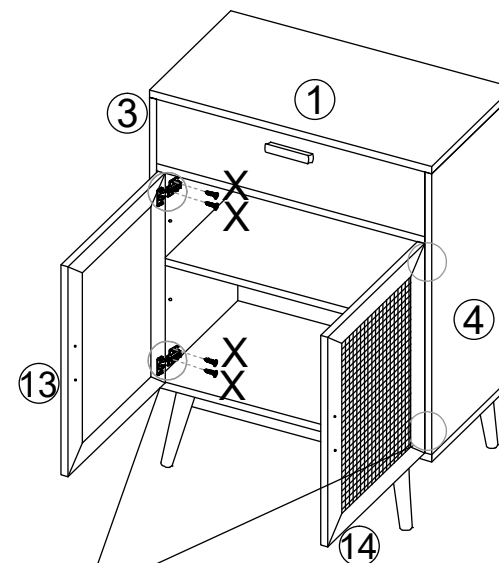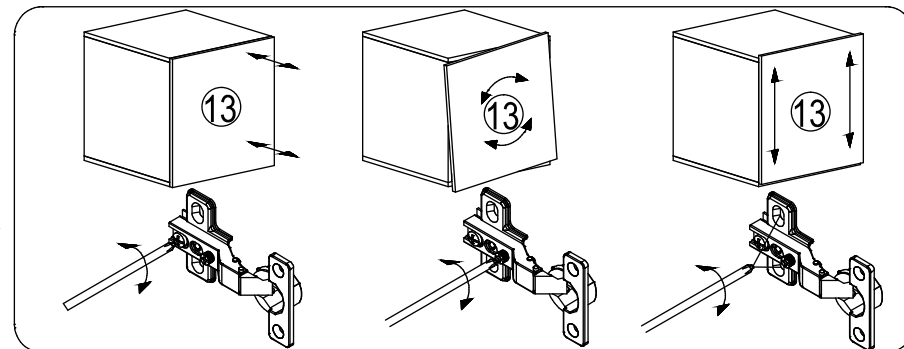

X	x8
	
M3.5x14mm	