



Caution: Please take the protection for the hand before installation.
Wear the gloves and be aware of the burrs or sharp edges of the panel.


Accessories table



① Left-side frame x 1



② Right-side frame x 1



③ Door panels



④ Back panels



⑤ Base panels
(5 layer Model: 6pcs,
3 layer Model: 4pcs)



⑥ Magnetic door catch



⑦ Door knobs



⑧ Metal rod connectors



⑨ Door gasket



⑩ Feet pad



A Small screws




B Medium screws



C Large screws



D Allen key x 1

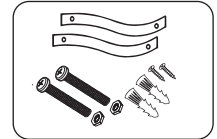

E Wall locked kits

Installation diagram

Installation steps: Please pill off the protection film of all the panel before installation.

<p>1</p> <p>1.Place the magnetic door catch on the base panels and secure them with Small screws. Repeat this for other base panels(Leave one panel without magnetic door catch).</p>	<p>2</p> <p>2.Take the left-side frame panel and secure all base panels on the frame with large screws.</p>	<p>3</p> <p>3.Take the remaining base panel and place it on the top of the frame, and secure it with a large screw.</p>	<p>4</p> <p>4.Take the back panels and slide into the groove on the frame.</p>
<p>5</p> <p>5.Take the door panels, door gaskets and door knobs. Secure the door knob on each door panel with the gasket and medium screw. Repeat for other panels. Then insert the metal rod connectors on each end of the door panel.</p>	<p>6</p> <p>6.Place the right-side frame panel with the partially installed frame. Pull the right-side frame outwards lightly and insert the door panel into the groove on the right-side frame panel.Insert the Rod connector in each side frame.Secure the right-side frame panel with screws.</p>	<p>7</p> <p>7.Install the wall-locked string on left & right side frame panel.Stick the feet pad if ineed</p>	

Notice:

Recommend weight load:12kg for each panels; Assembly must be done by adults.
Check the product regularly for any damages.Keep away from any hazardous contents.