














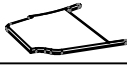

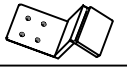
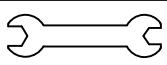
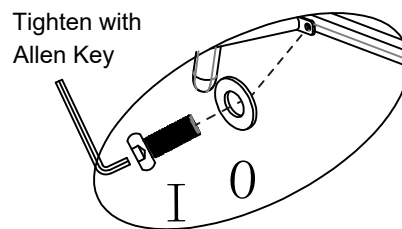
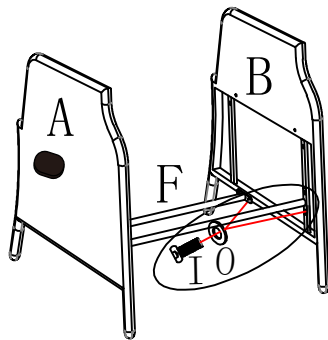


## ODR-RW-FTR ASSEMBLY INSTRUCTIONS

1. Do not tighten screws until all screws are lined up with the holes.
2. If holes are not aligned, loosen some screws which are already tightened and adjust accordingly. Tighten screws diagonally across the product.
3. If the product is uneven on ground after assembly, loosen the screws and press down the product so that all legs are on the ground. Then tighten screws.



NO.	Part	QTY		NO.	Part	QTY
A		1		B		1
C		1		D		1
E		1		F		2
G		1		H		2
I	 M6*20L	18		J	 M6*40L	4
K	 M8	4		L	 M8*25L	2
M	 M6	4		N	 M8*40L	2
O	 M6	26		P	 M8	8
Q	 Allen Key	1		R	 4mm	4
S	 Spanne	2				

**Step1:Assemble the main frame.Attach A and B and F with one joint plates.**




**Requires:**  
8 X I  
8 X O

**Step2:Assemble the seat.Attach E and C with one joint plates.**

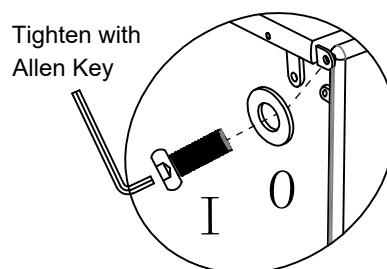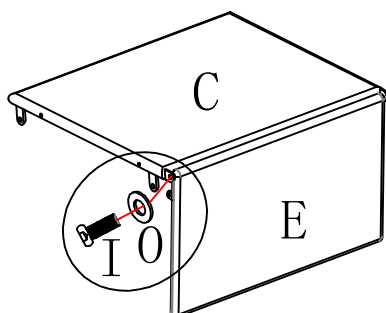


**Requires:**  
2 X I  
2 X O

Step3: Assemble the seat C to the handrail.

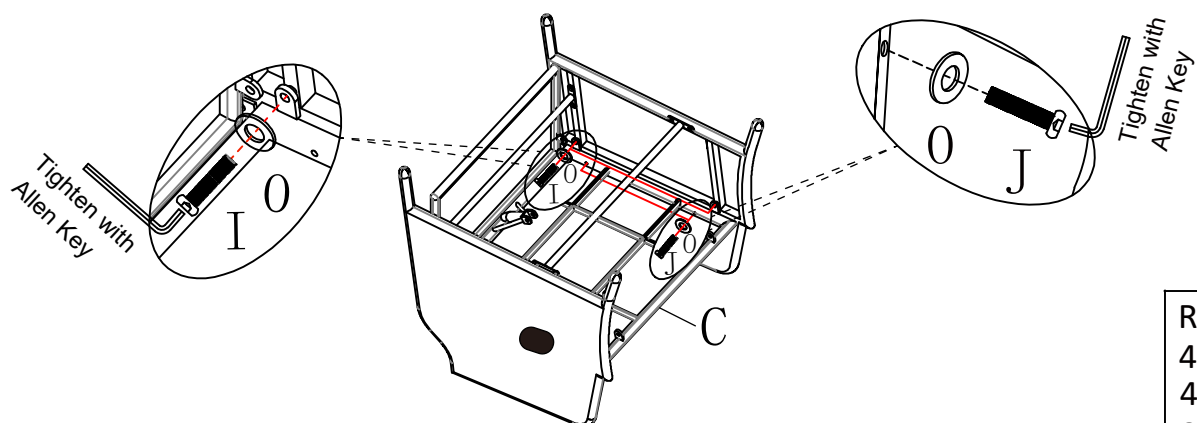


Requires:  
4 X I  
4 X J  
8 X O

Step4: Assemble the back D to the seat.

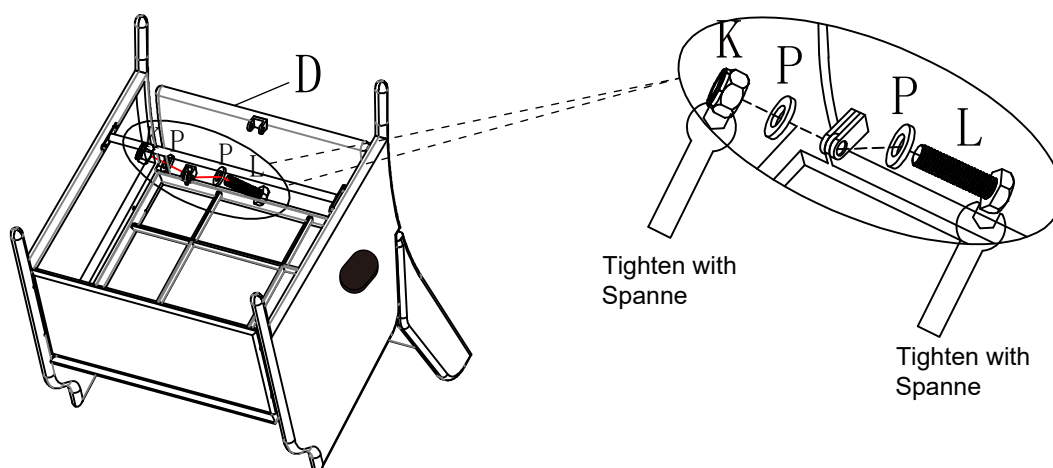


Requires:  
2 X L  
2 X K  
4 X P

Step5: Assemble the cylinder to the seat and back.

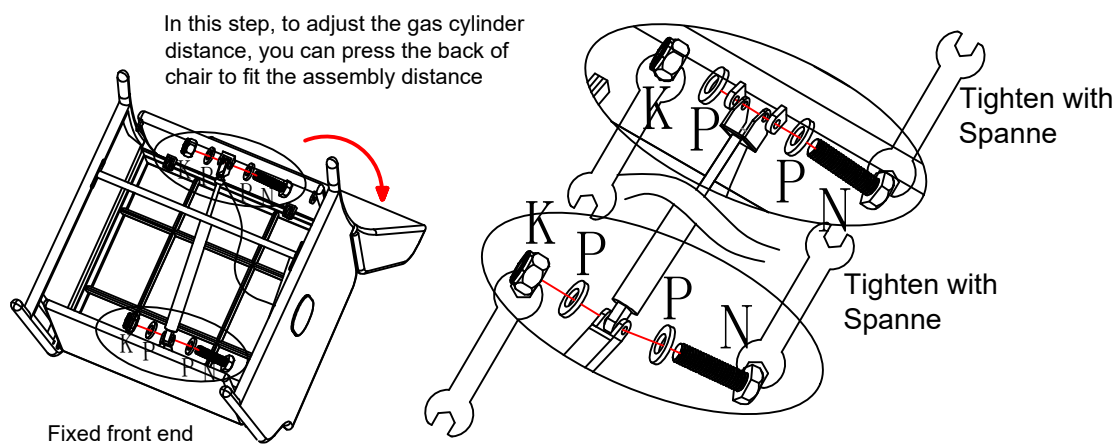


Requires:  
2 X N  
2 X K  
4 X P

## Step6: Assembly connecting rod H

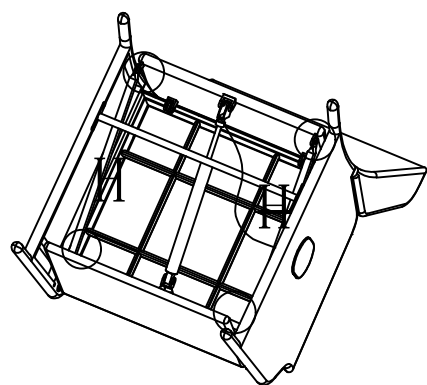

Tighten with  
Allen Key

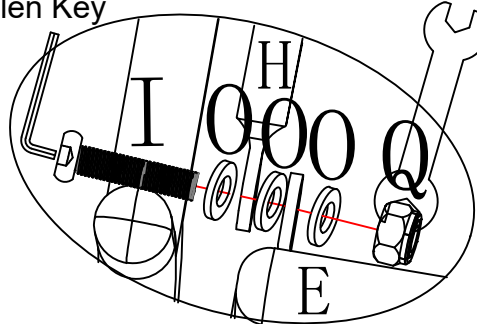

Tighten with  
Spanne


Requires:

4 X I



4 X Q

12 X O

## Step7:Put on seat cushion G.

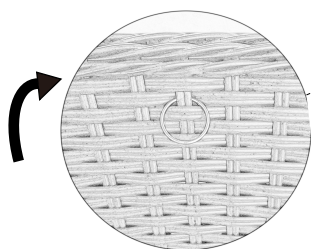

The iron ring on the backrest ,  
can be hidden after turning over.

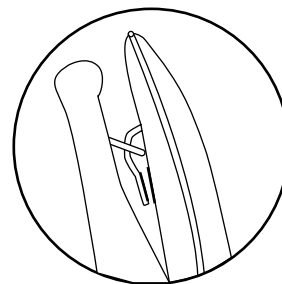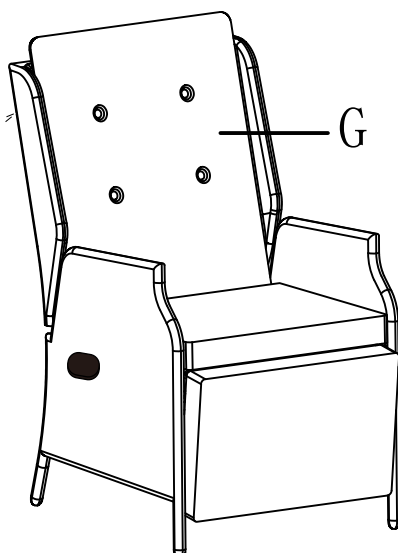

The cushion fabric loop with Velcro  
is fixed through the iron ring .

## Step8: Lie stretched out.

