
## WARDROBE

MODEL:WA-HAMP-2D-WH

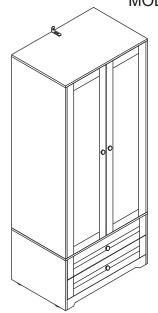

## ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.



tools required for assembly

## **HARDWARE**

1 1			-						_							
	Α	x10	В	x6	С	x12	D	x34	Е	x16	F	x1				
	7x35mm		15x12mm		Ø6x30mm		M4x40mm				AMMINIME.					
Н					J JOX				1/	v2	V 4) 	(30mm				
П	G	x1	Н	x1	ı	x1	J	x30	K	x2	<u> </u>	x4				
	Cana															
Ц	M4x14mm				9						M3x14mm					
Ш	M	x6	N	x24	0	x5	P	x4	Q	x2	R	x4				
			Ø27253 M3.5x14mm		9		12x10mm		M4x20mm							
	S	x4	Т	x2	U	x4	٧	x20	W	x2	Х	x4	Υ	x2	Z	x6
					0		O. T.		0		N. Contraction of the Contractio		0			
Ø6x50mm			M3x	(14mm			M3x12mm		9		-		4mm		M4x11mm	

