


WOODEN BOOKSHELF BED FRAME

MODEL: BF-W-A13-SHELF-WH

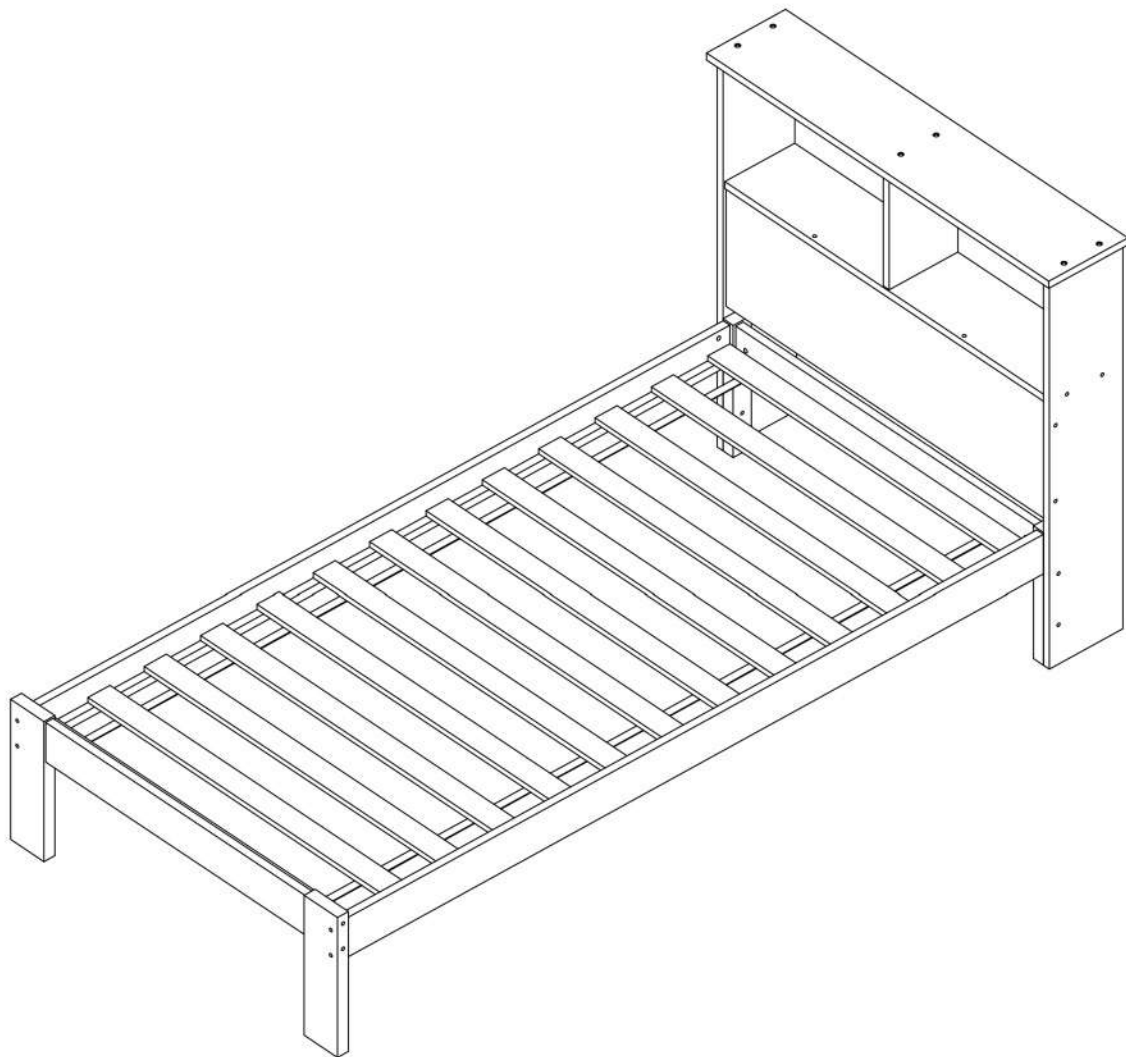

ASSEMBLY INSTRUCTIONS

Please read the instructions carefully
before assembling and using the product


IMPORTANT

When moving the bed, please lift it off the ground to transport it with two persons. DO NOT drag, push or pull the bed across the floor as this will damage the supporting legs.

ASSEMBLY CHECKLIST




Read through the instructions carefully before starting assembly.

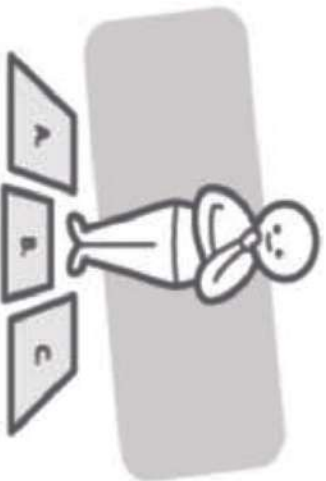

Identify and lay out all parts to familiarise yourself with them.



Make sure that you have the required tools. Do not use power tools.

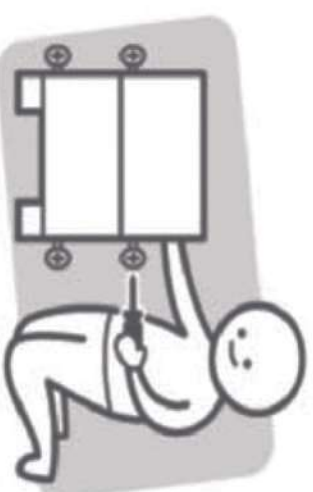


Do not fully tighten all screws until the step or process has been completed.







USEFUL INFORMATION

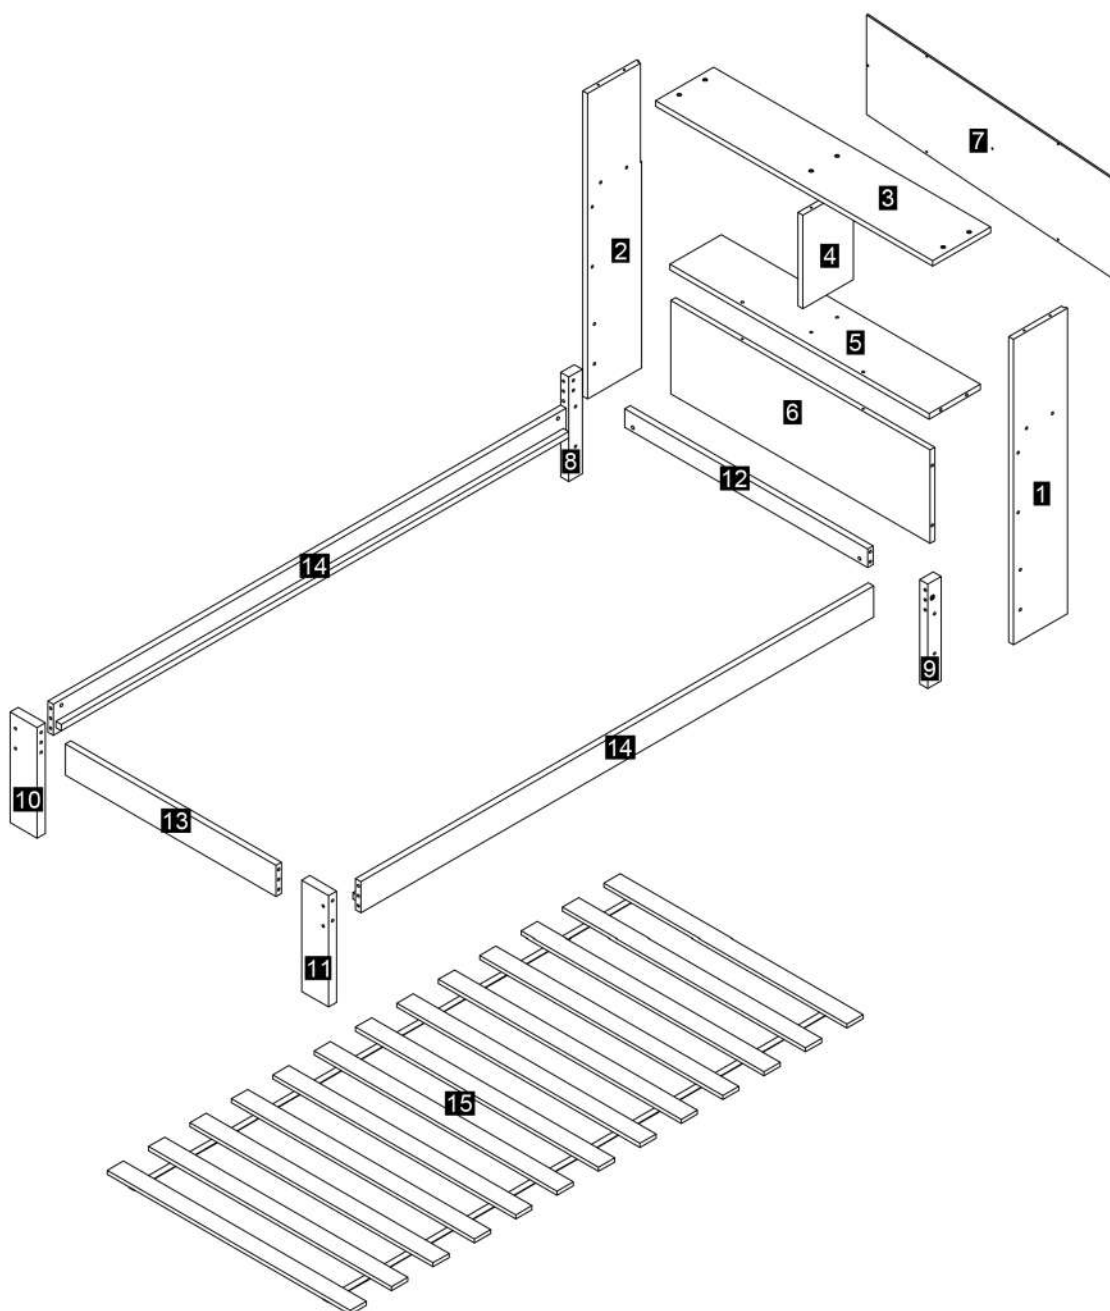






1. Never use power tools for assembly. They can damage the components or hardware if used incorrectly.
2. The most common mistakes made during assembly are using the wrong hardware or getting components from back to front.
3. Always assemble the product on a soft surface such as a carpet or cardboard to avoid scratching or damaging the surface of the product.

PARTS





HARDWARE

A		Ø7x50mm	10 pcs
B		M6x50mm	8 pcs
C			22 pcs
D		4x30mm	26 pcs
E		Ø8x30mm	8 pcs
F		M6x70mm	6 pcs


G		M6x140mm	4 pcs
H		M6x90mm	4 pcs
I		M6x40mm	4 pcs
J		M6x20mm	4 pcs
K			28 pcs
L			1 pc
M			12 pcs

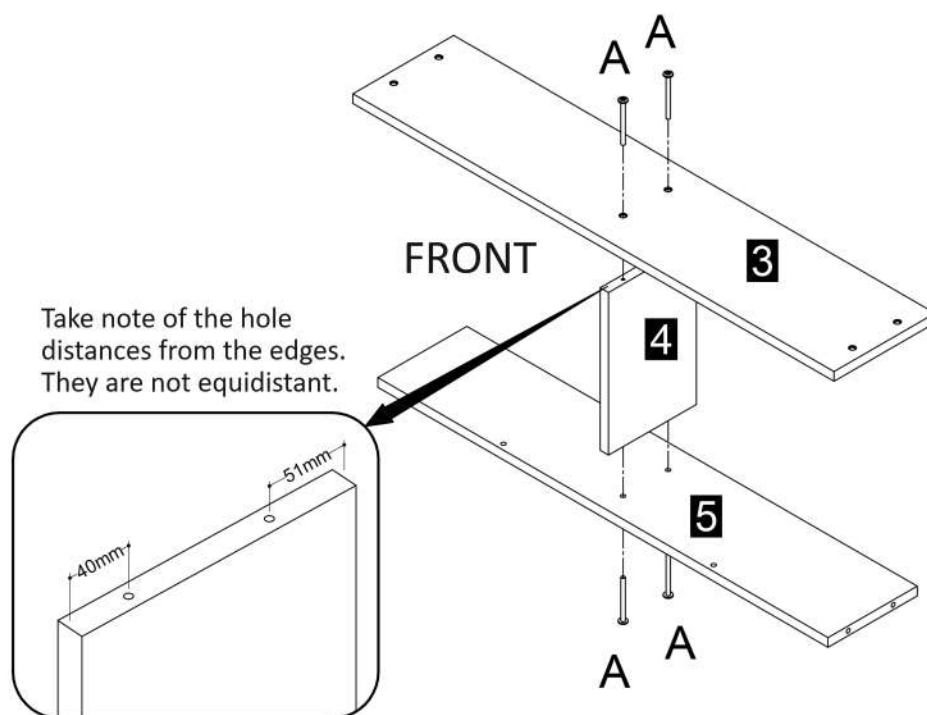


STEP 1




A		Ø7x50mm	4 pcs
---	---	---------	-------

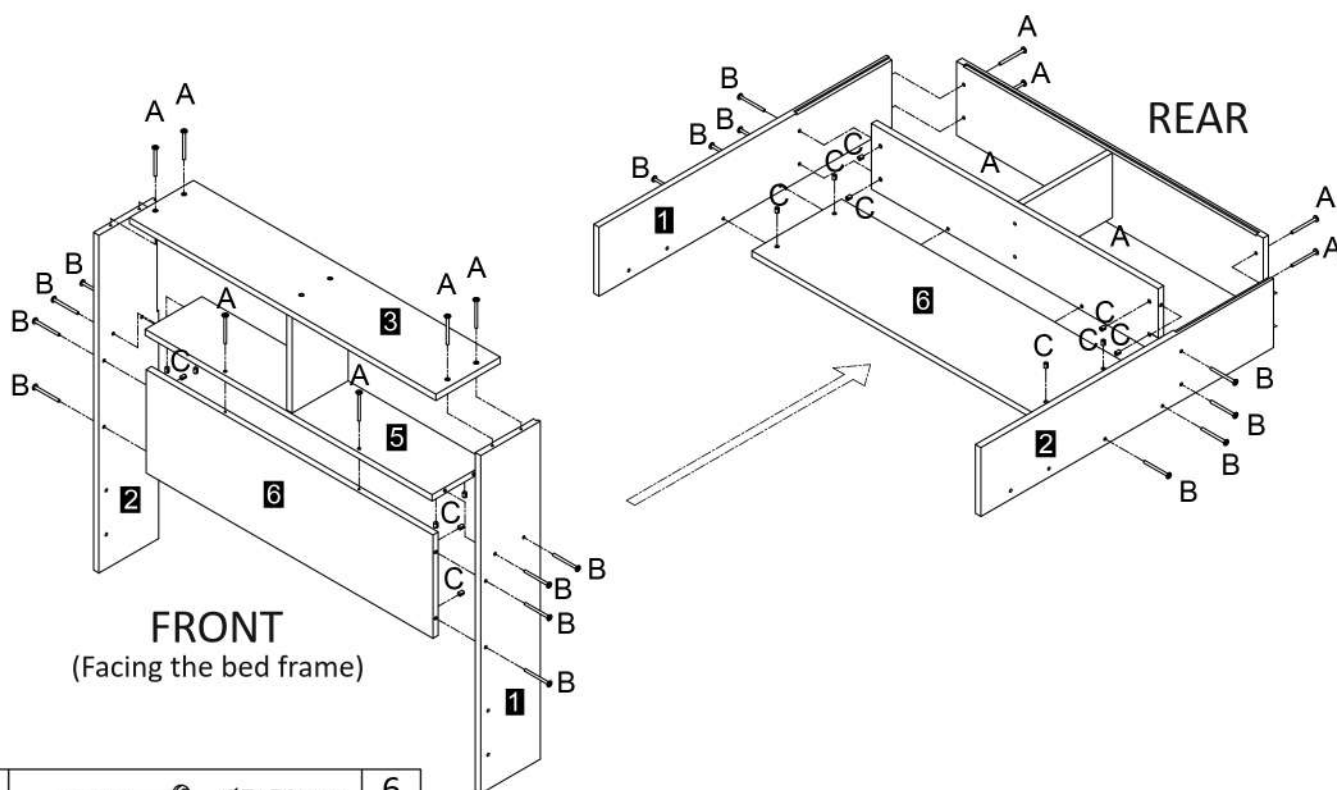STEP 2



A		Ø7x50mm	6 pcs
B		M6x50mm	8 pcs
C			8 pcs


STEP 3

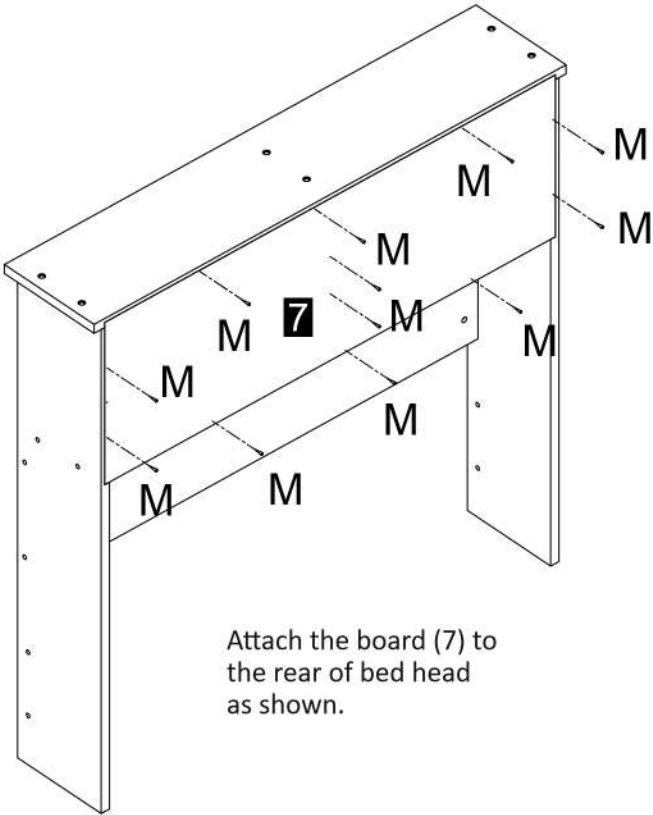


Attach the board (7) to the rear of bed head as shown.


M		12 pcs
---	---	--------

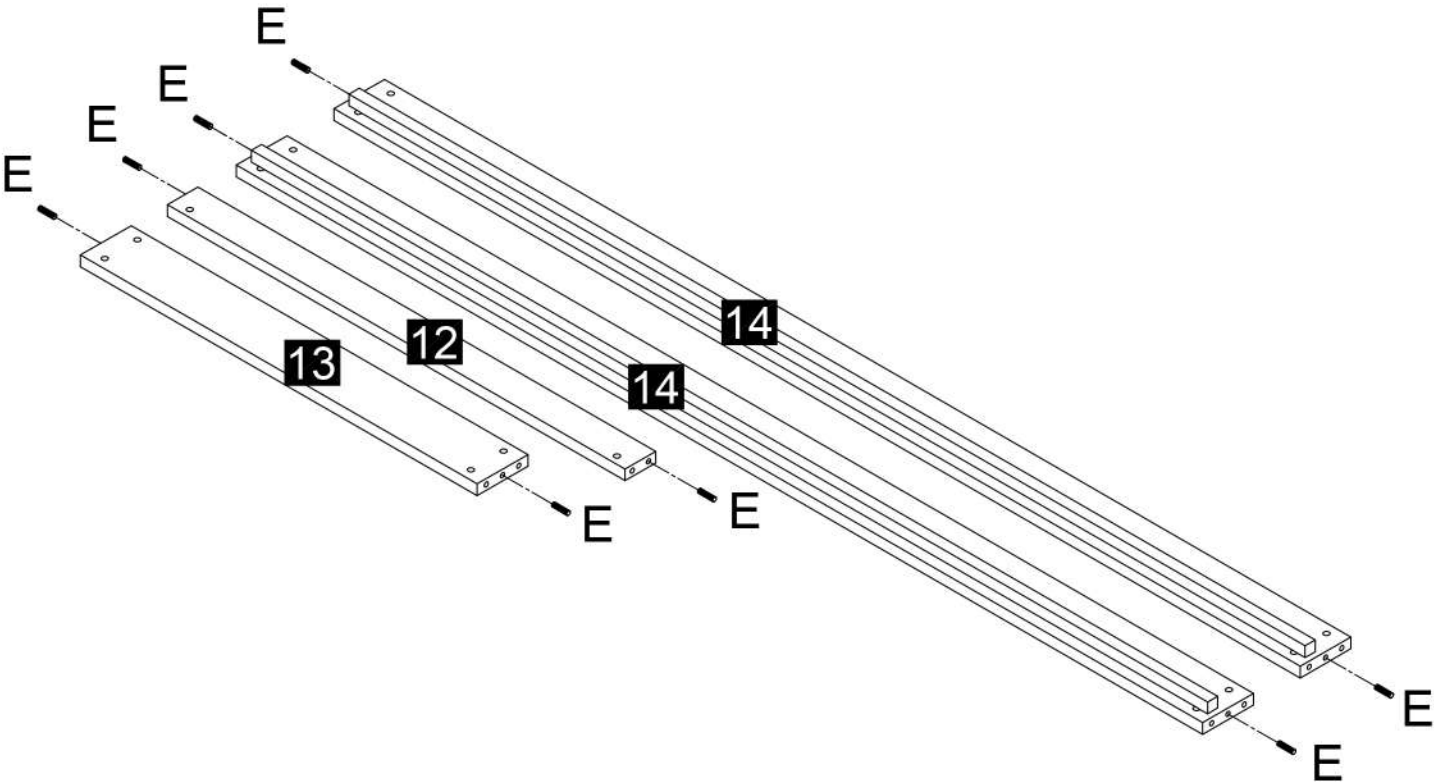


STEP 4




E	 Ø8x30mm	8 pcs
---	---	-------

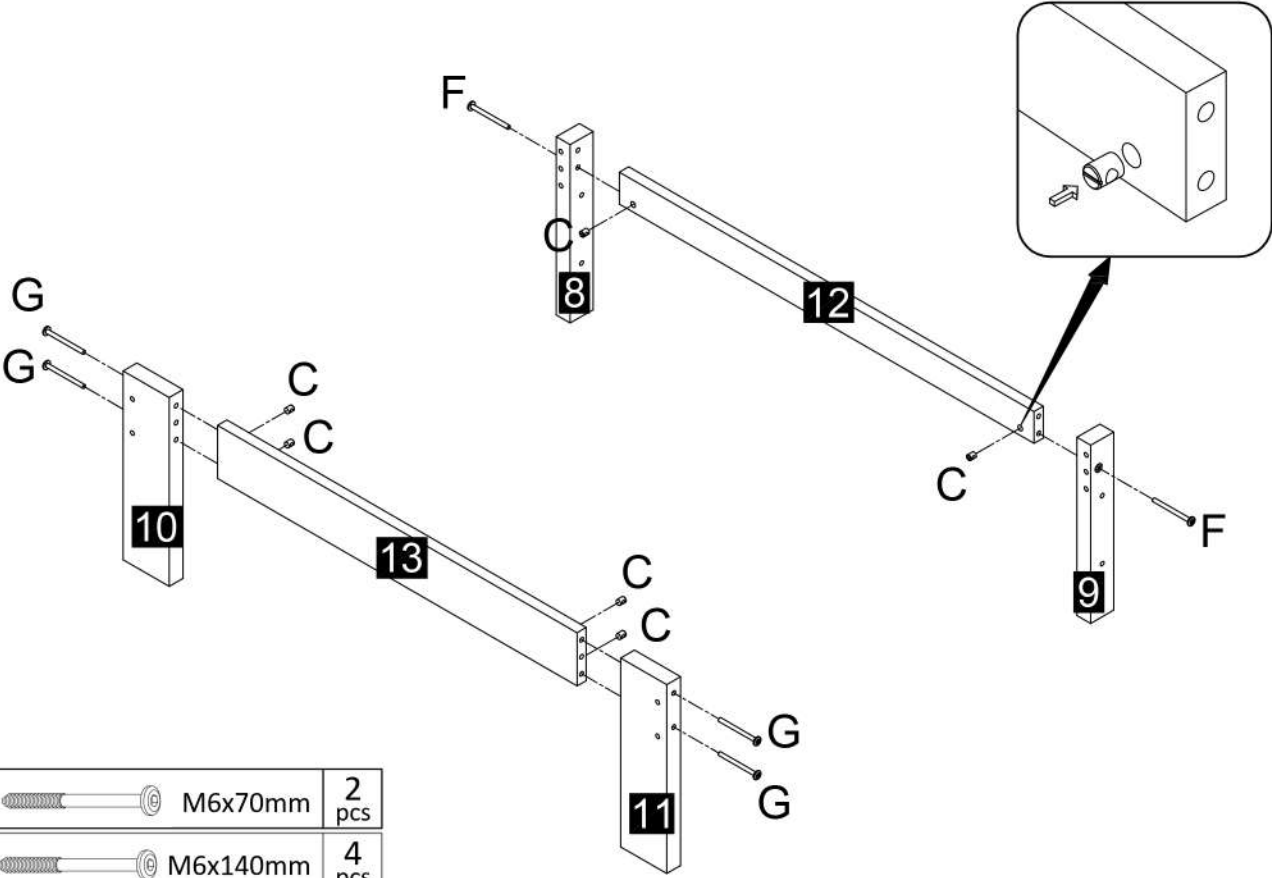


STEP 5




F		M6x70mm	2 pcs
G		M6x140mm	4 pcs
C			6 pcs

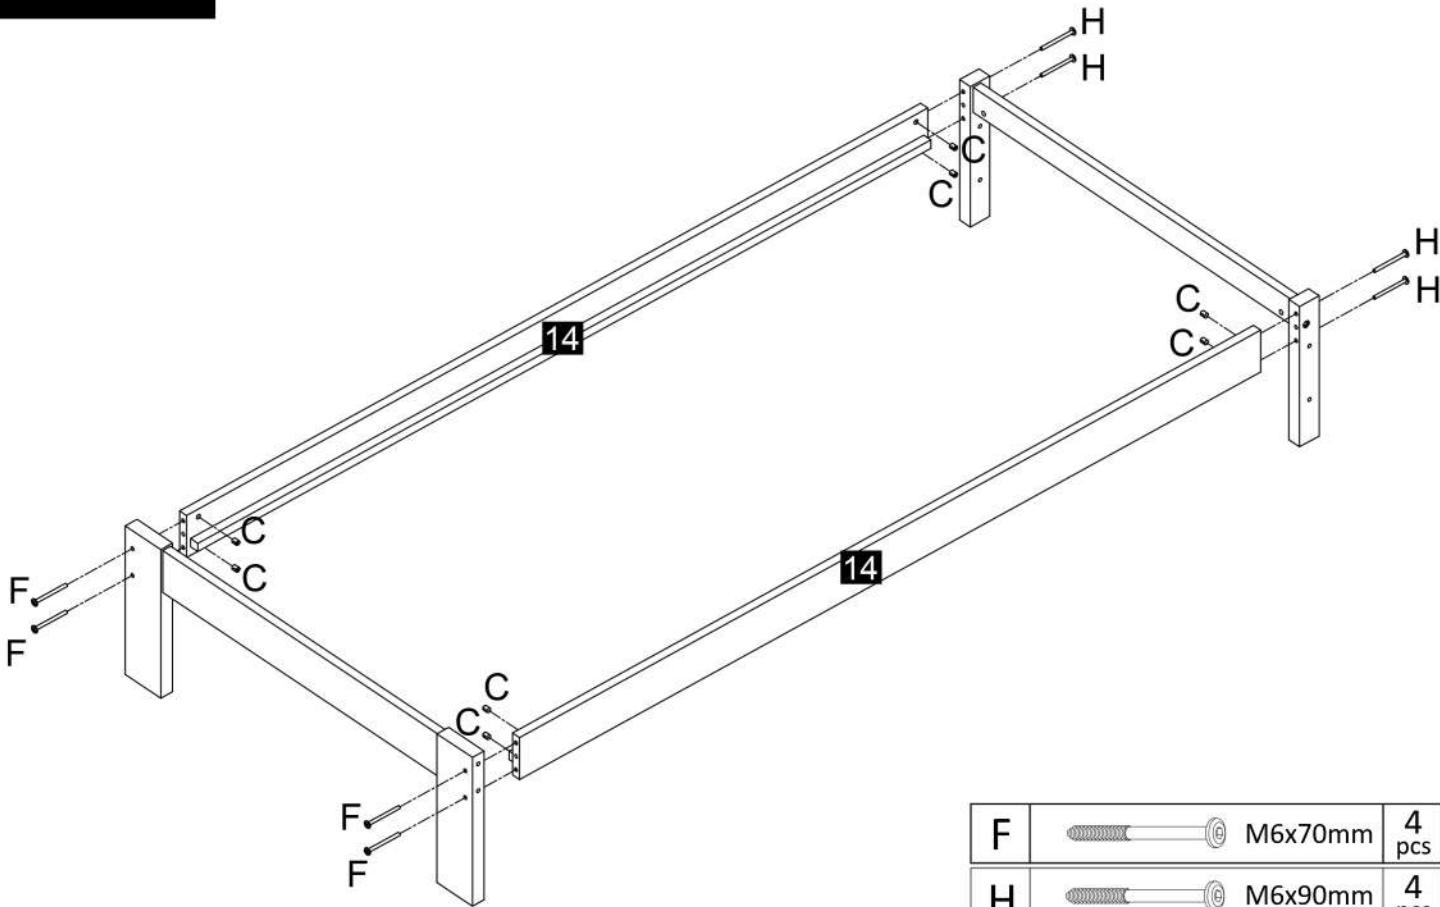

STEP 6




F		M6x70mm	4 pcs
H		M6x90mm	4 pcs
C			8 pcs

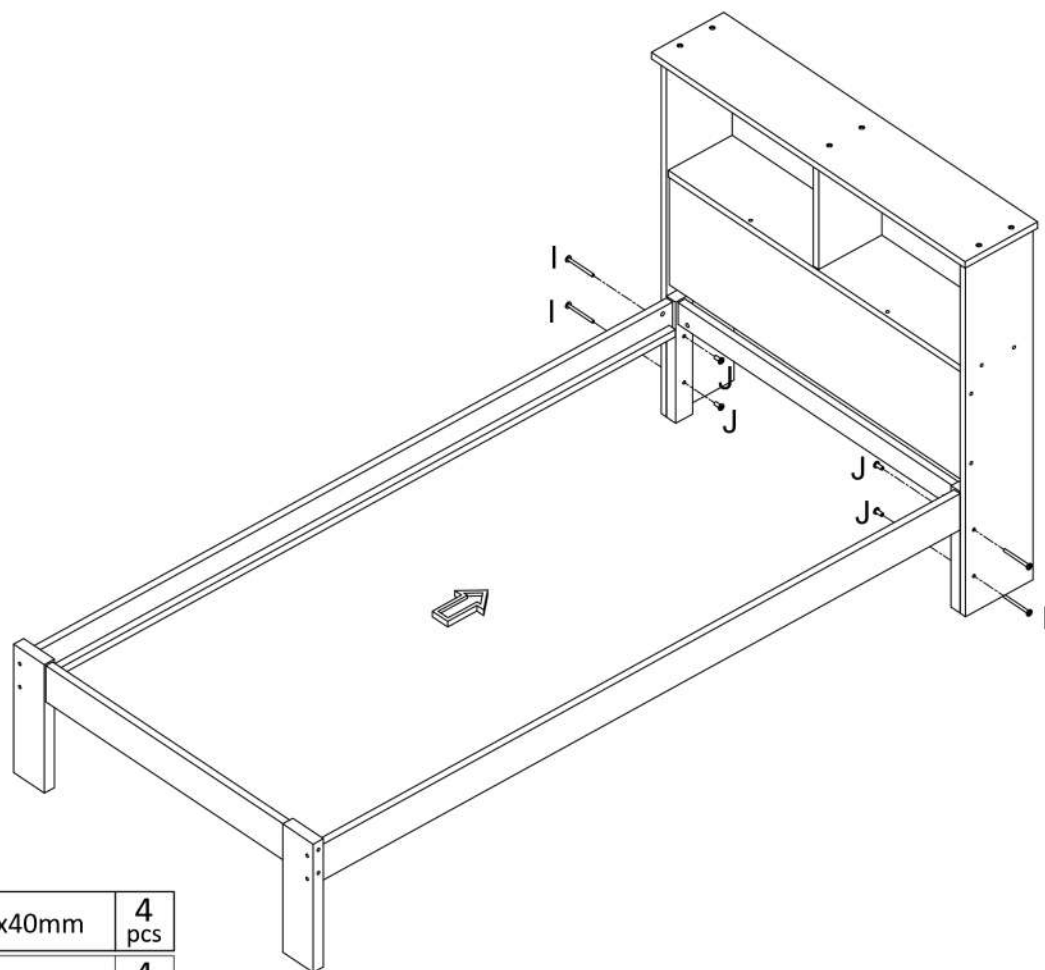STEP 7




I		M6x40mm	4 pcs
J		M6x20mm	4 pcs

STEP 8

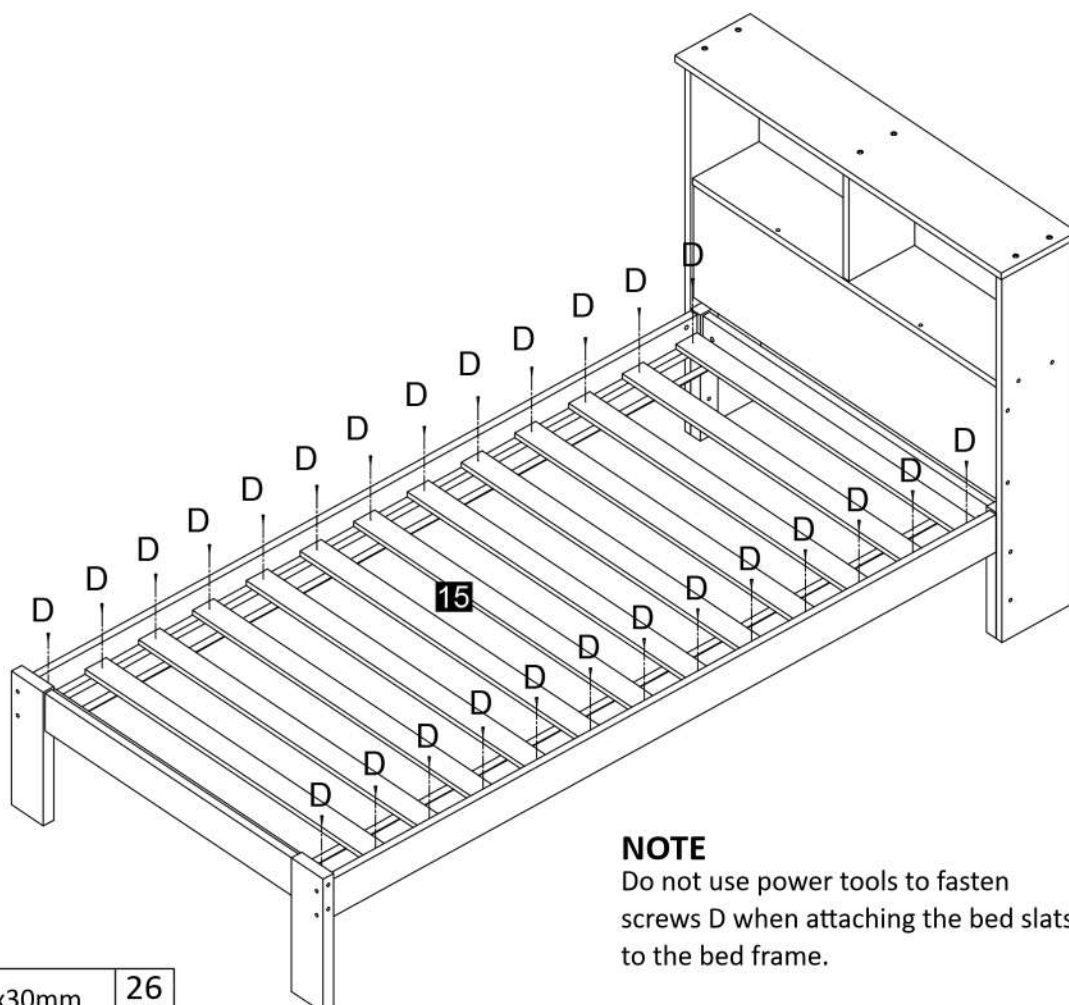

NOTE

Do not use power tools to fasten screws D when attaching the bed slats to the bed frame.

D		4x30mm	26 pcs
---	---	--------	--------

STEP 9

