



















# ASSEMBLY INSTRUCTIONS

Thank you for your purchase. Please follow the instructions below for correct assembly.

 A M3.5\*50 8PCS



 B M3.5\*35 40PCS

 C M3.0\*16 4PCS

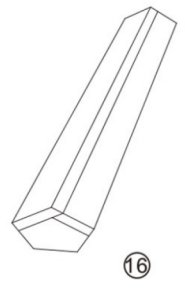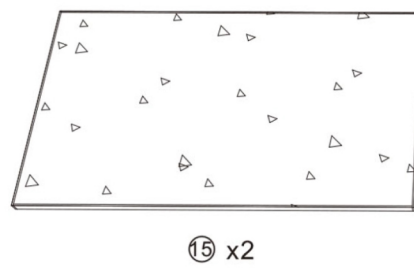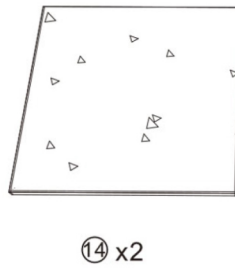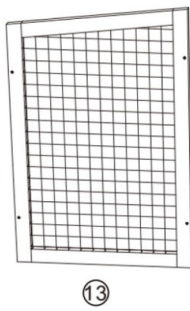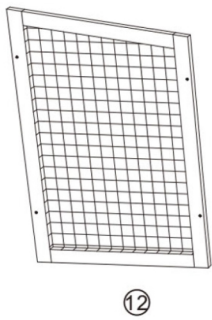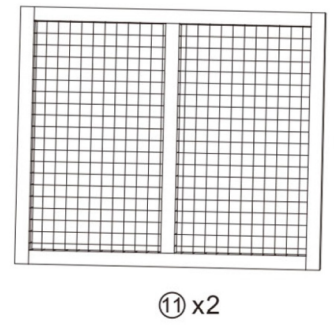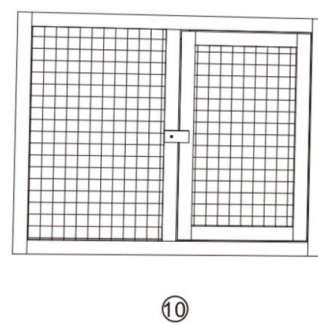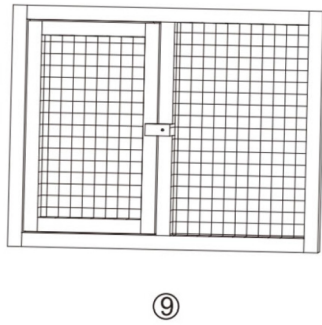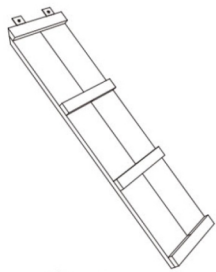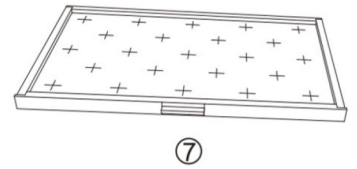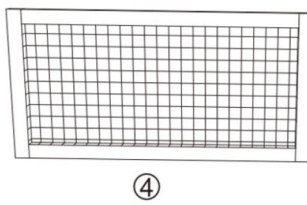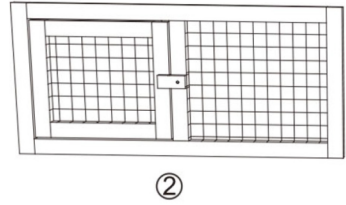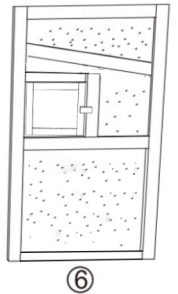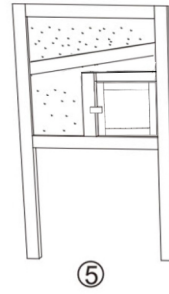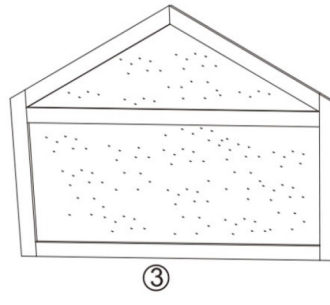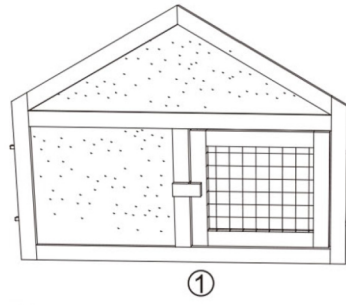


STEP 1


STEP 2

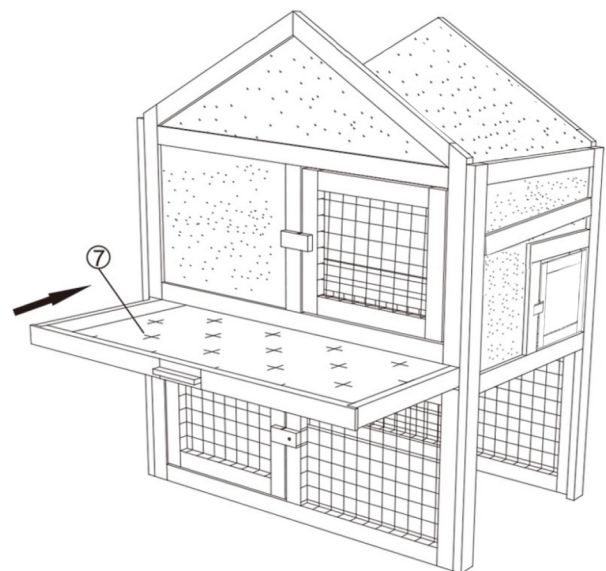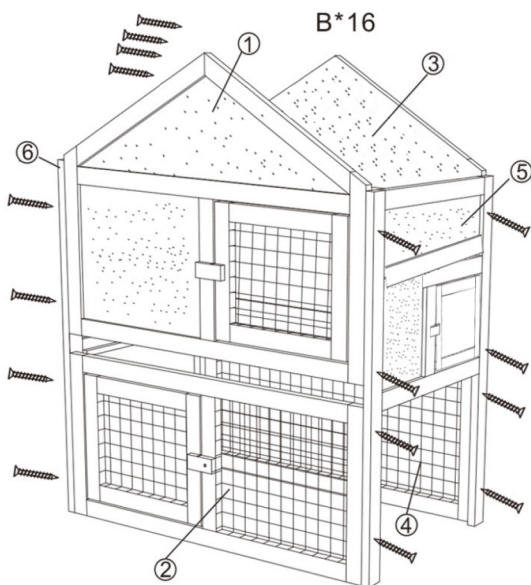


STEP 3

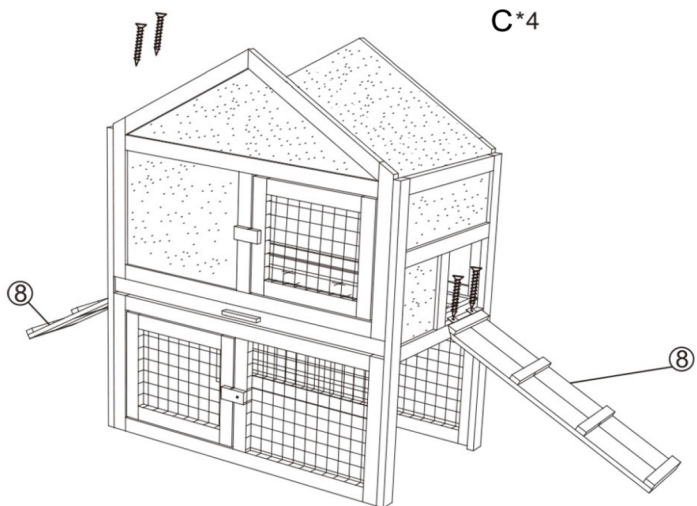


STEP 4

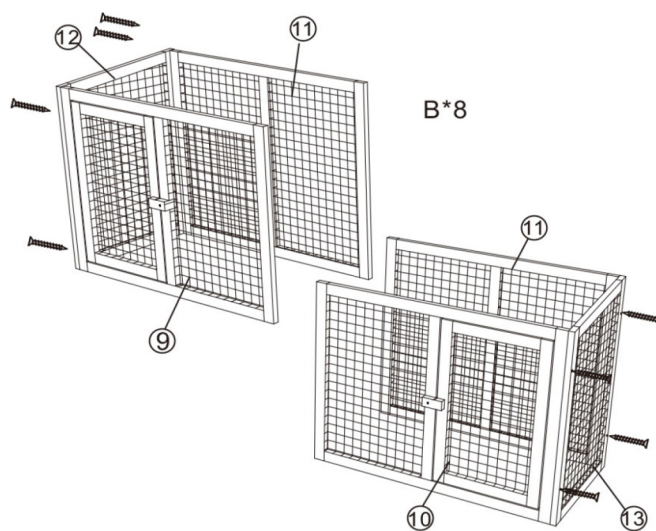


STEP 5

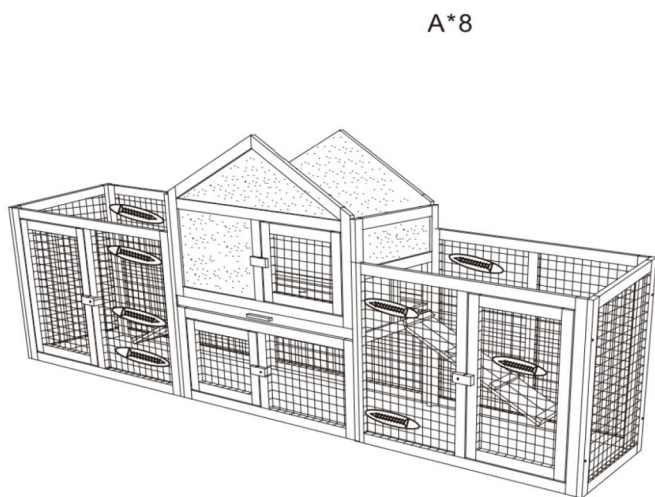


STEP 6

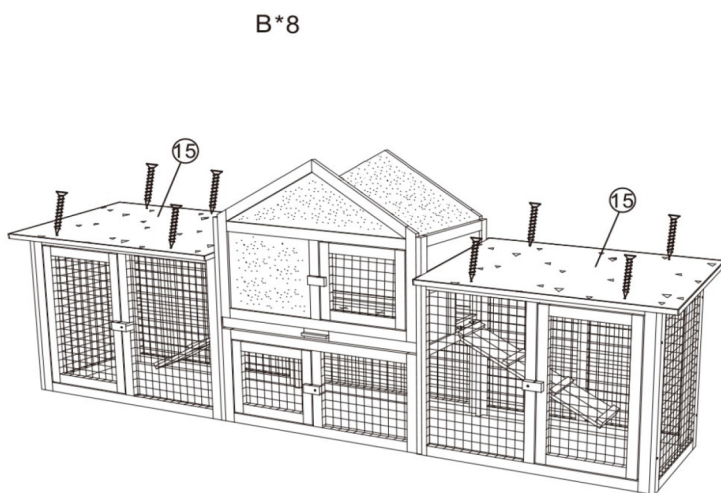

STEP 7

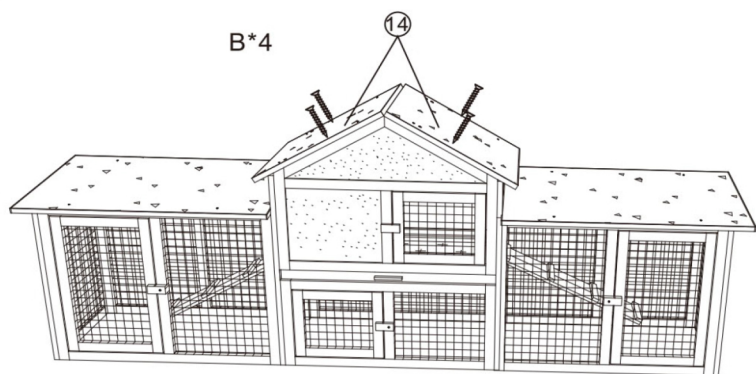

STEP 8

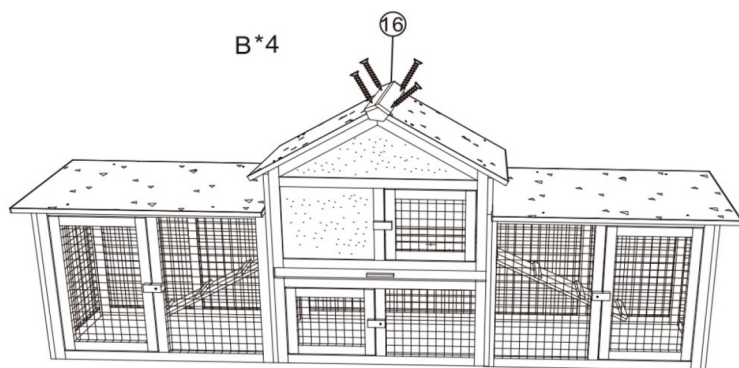

**Caution:**  
 Don't let the product fully expose under the Sun or in Rain. The lifespan will reduce under prolonged sunshine and raining.