





SIDEBORD

MODEL:SB-PFUN-CATI-BKWD

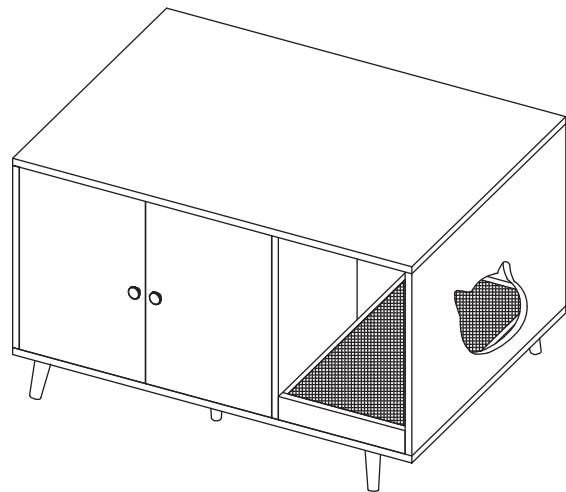

ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.




Two persons and
tools required for
assembly

HARDWARE


A	x12	B	x8	C	x14	D	x8	E	x8	F	x2
											
7x35mm		15x12mm		Ø6x30mm		M4x40mm				M4x30mm	
G	x26	H	x2	I	x2	J	x1	K	x4	L	x16
											
M4x14mm										M3.5x14mm	
M	x4	N	x1	O	x4	P	x4	Q	x2	R	x2
											
						12x10mm		M4x18mm			
S	x8	T	x1	U	x2	V	x4				
											
M3x14mm						M3x12mm					

PARTS

Wipe with dry cloths

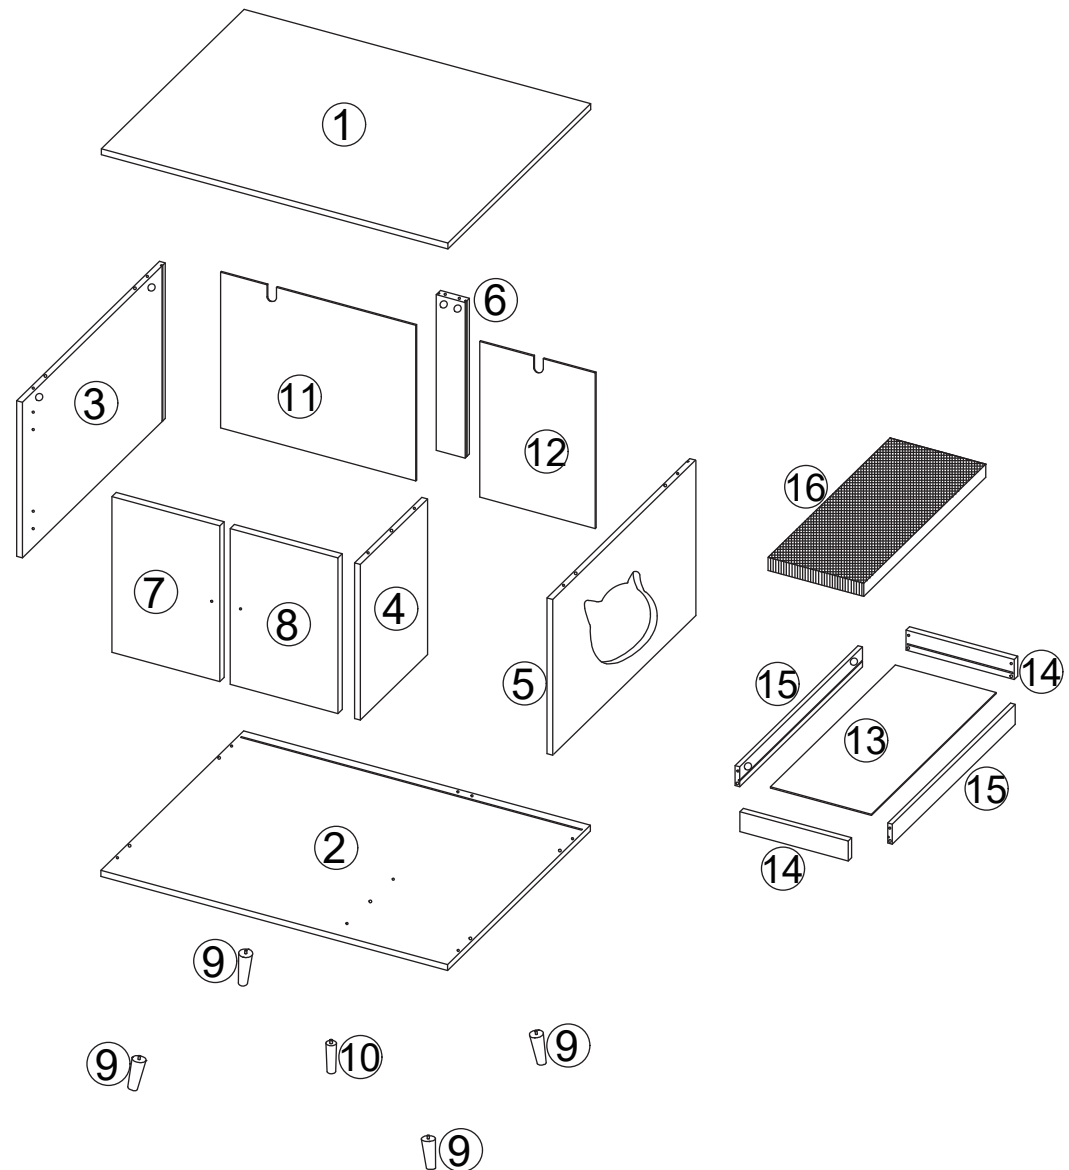


1

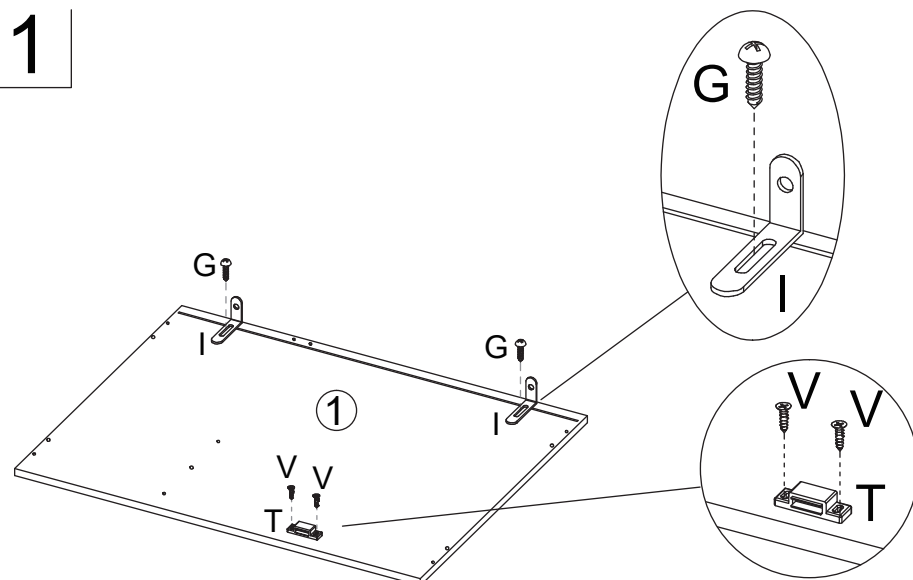


V	x2	T	x1	G	x2	I	x2
M3x14mm				M4x14mm			

3

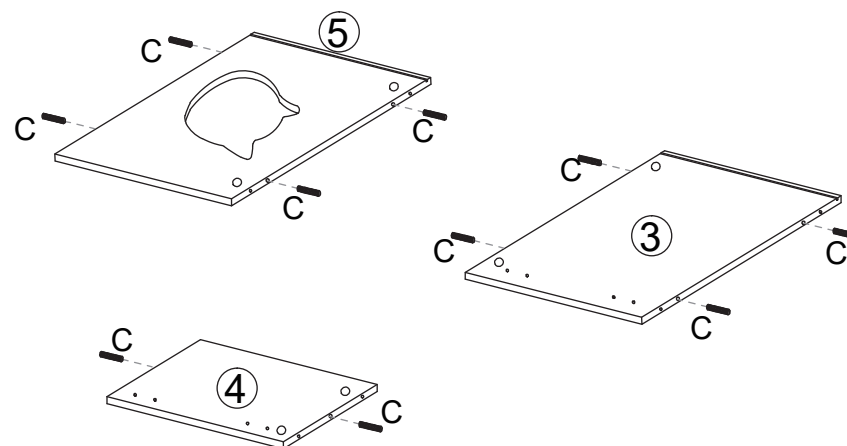


C	x10
Ø6x30mm	

2

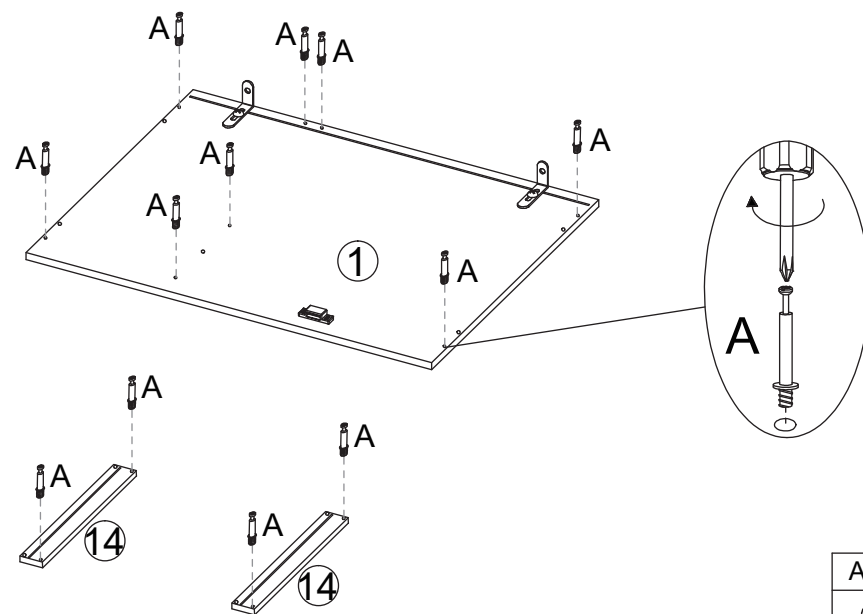


A	x12
7x35mm	



4

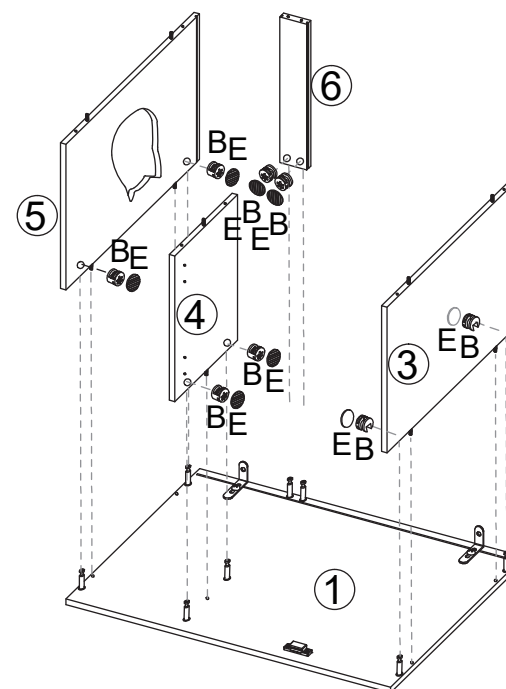


B	x8	E	x8
15x12mm			

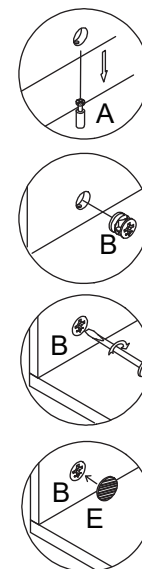

5

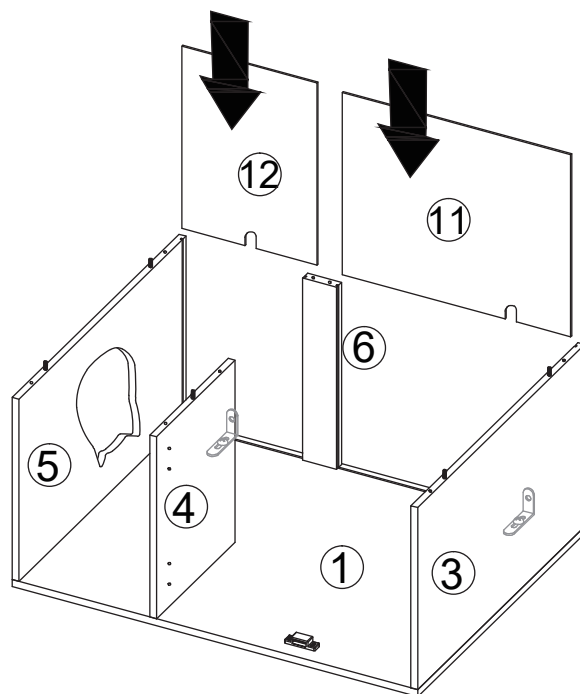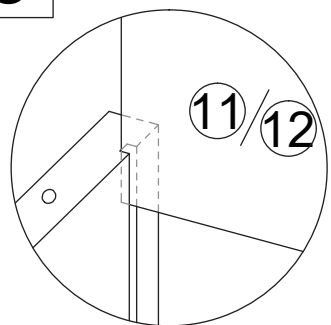


7

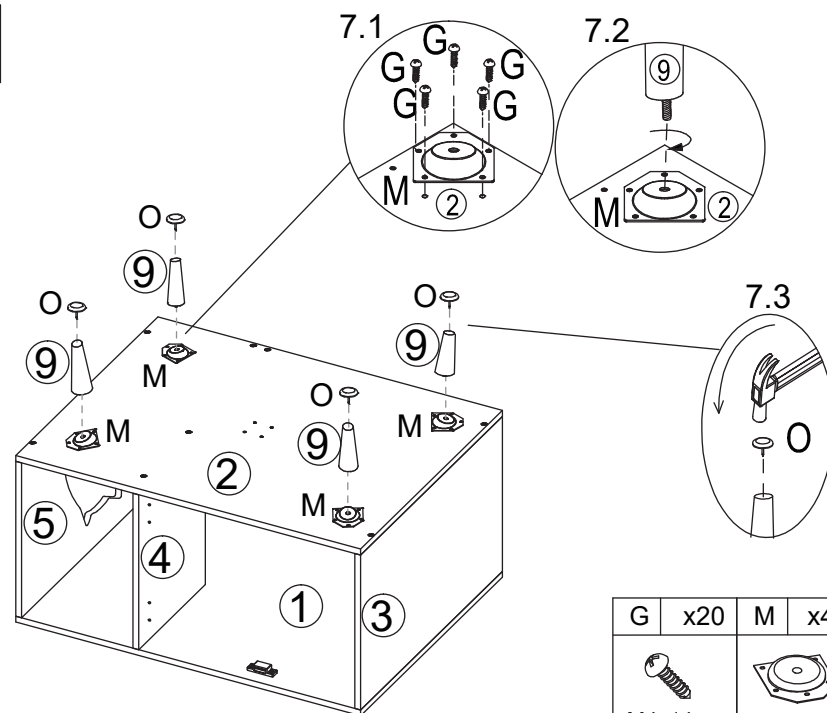


G	x20	M	x4	O	x4
M4x14mm					

6

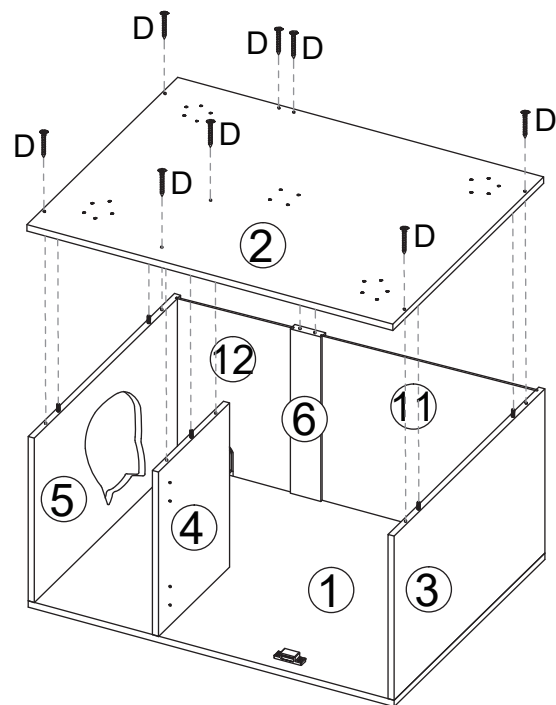



D	x8
M4x40mm	

8

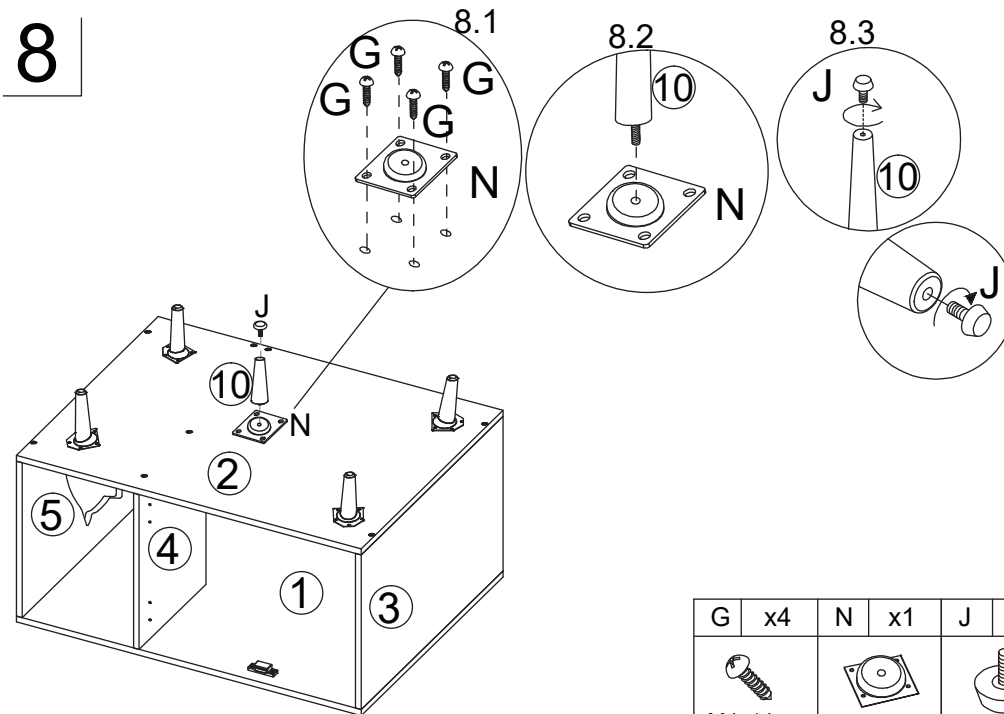


G	x4	N	x1	J	x1
M4x14mm					

9

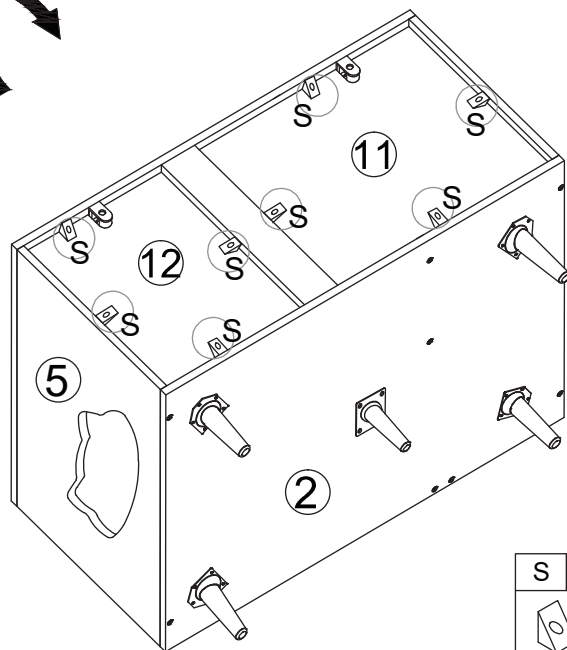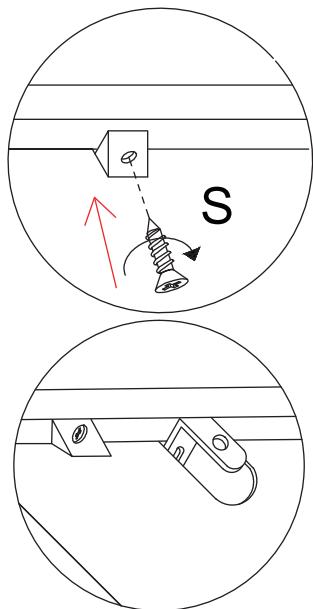





S	x8
	
M3x14mm	

10

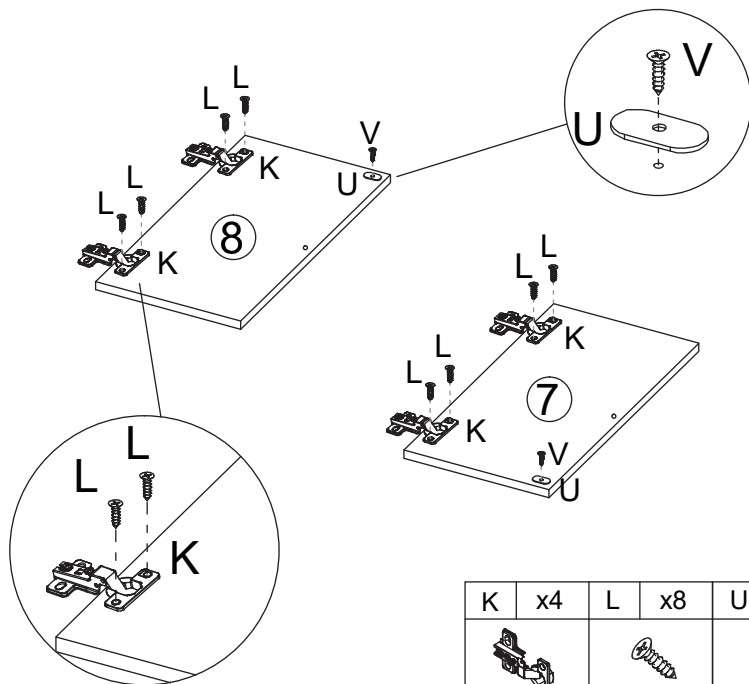



K	x4	L	x8	U	x2	V	x2
							
		M3.5x14mm				M3x12mm	

11

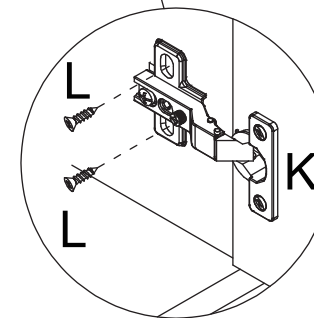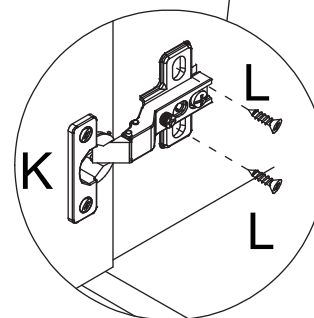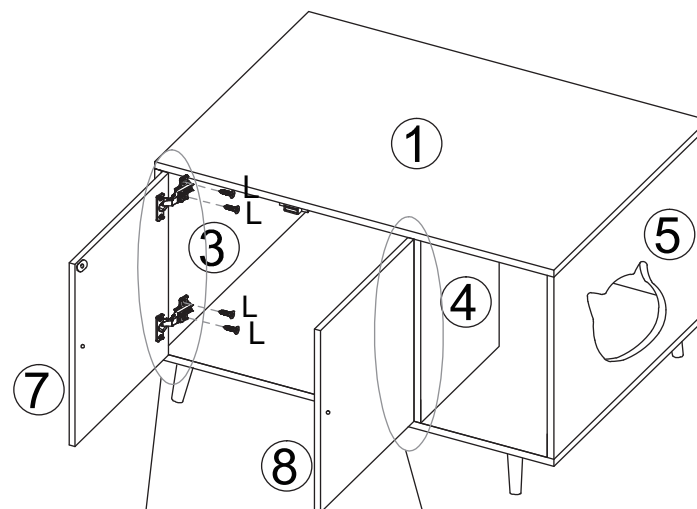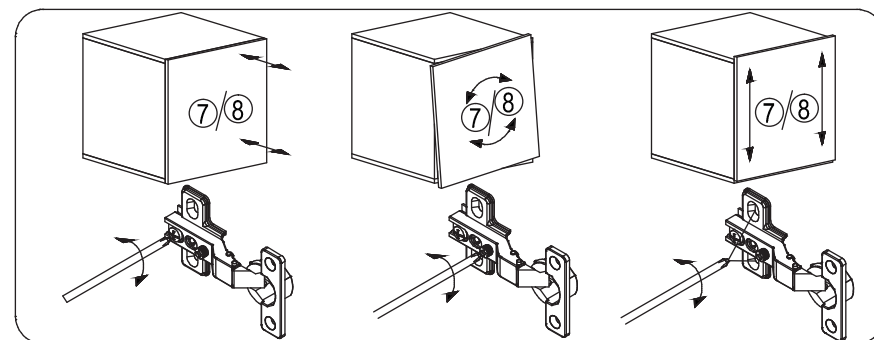





L	x8
	
M3.5x14mm	

12

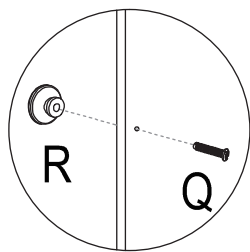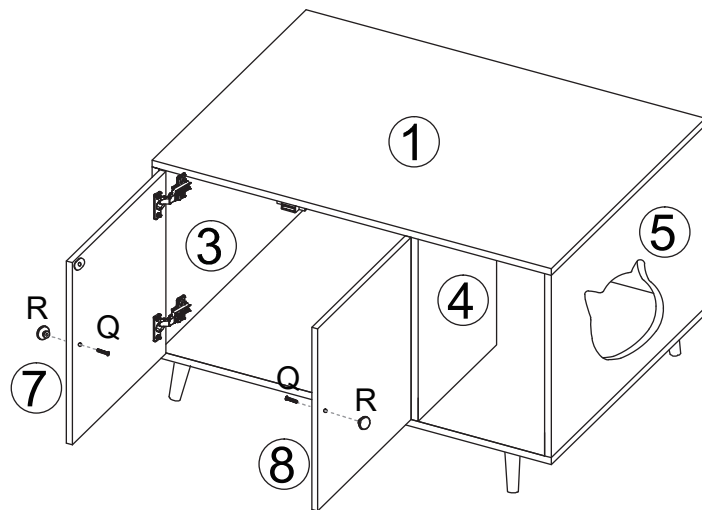



Q	x2	R	x2
M4x18mm			

14

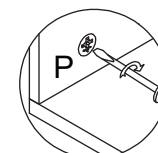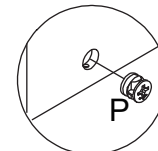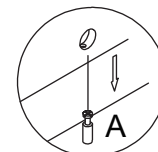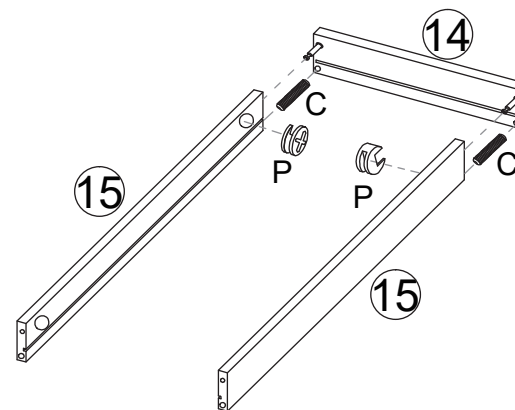


P	x2	C	x2
12x10mm		Ø6x30mm	

13

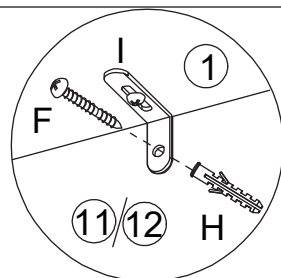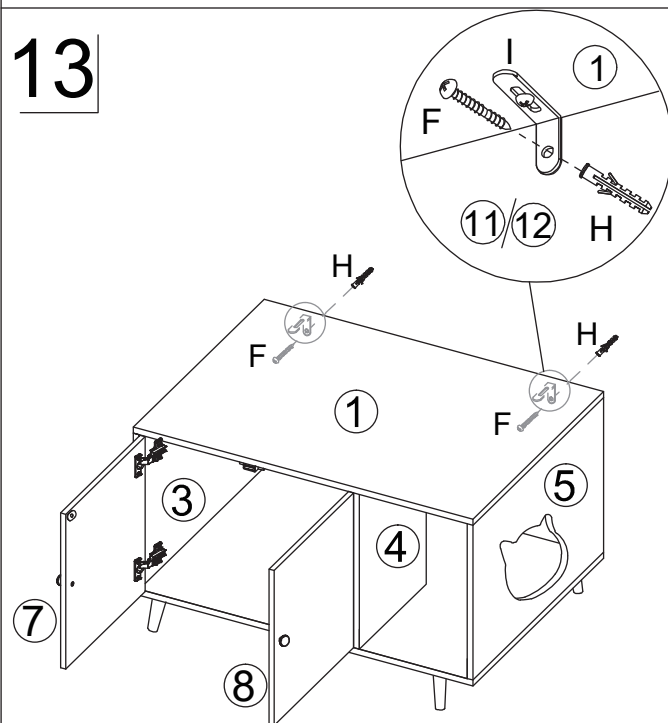


Pre-drilled hole at wall




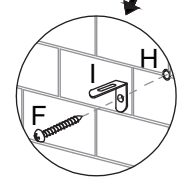


F	x2	H	x2
M4x30mm			

15

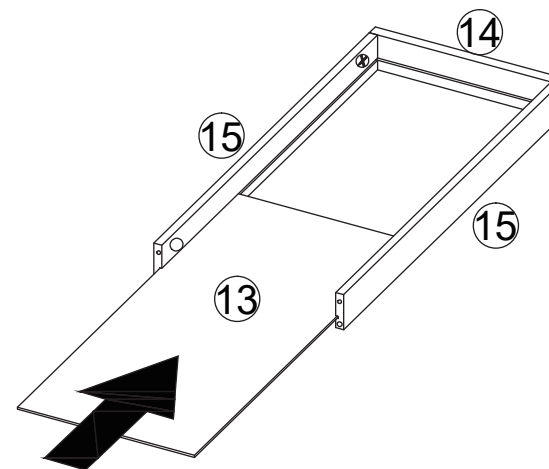


16

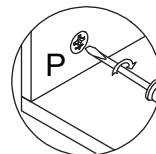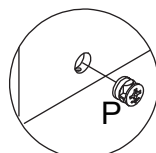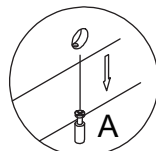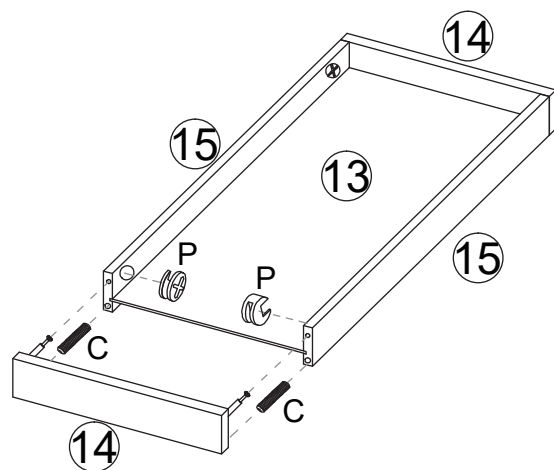

P	x2	C	x2
			
12x10mm		Ø6x30mm	

17

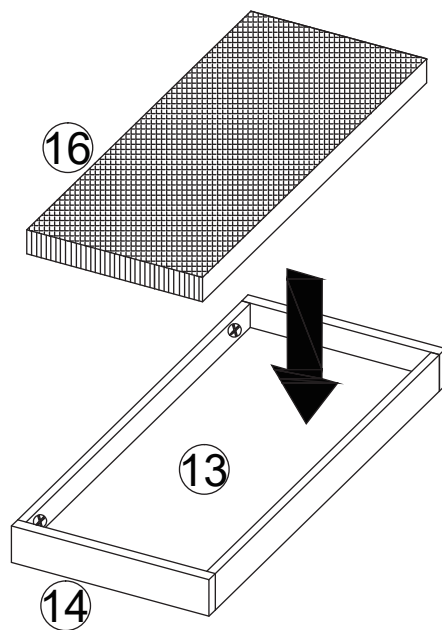

18

