



# Computer Desk

MODEL: DK-VJ-CONR-F9

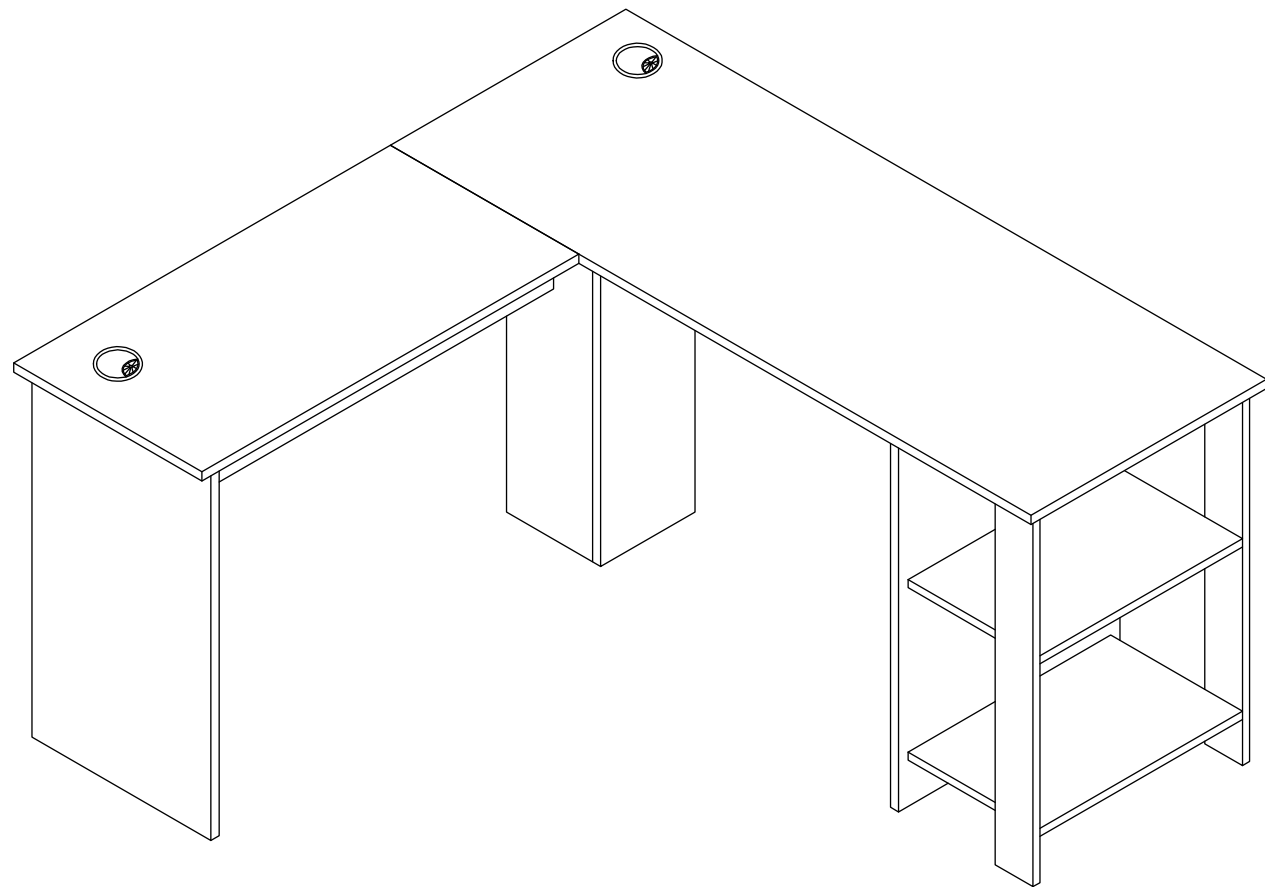


# PARTS

Wipe with dry cloths

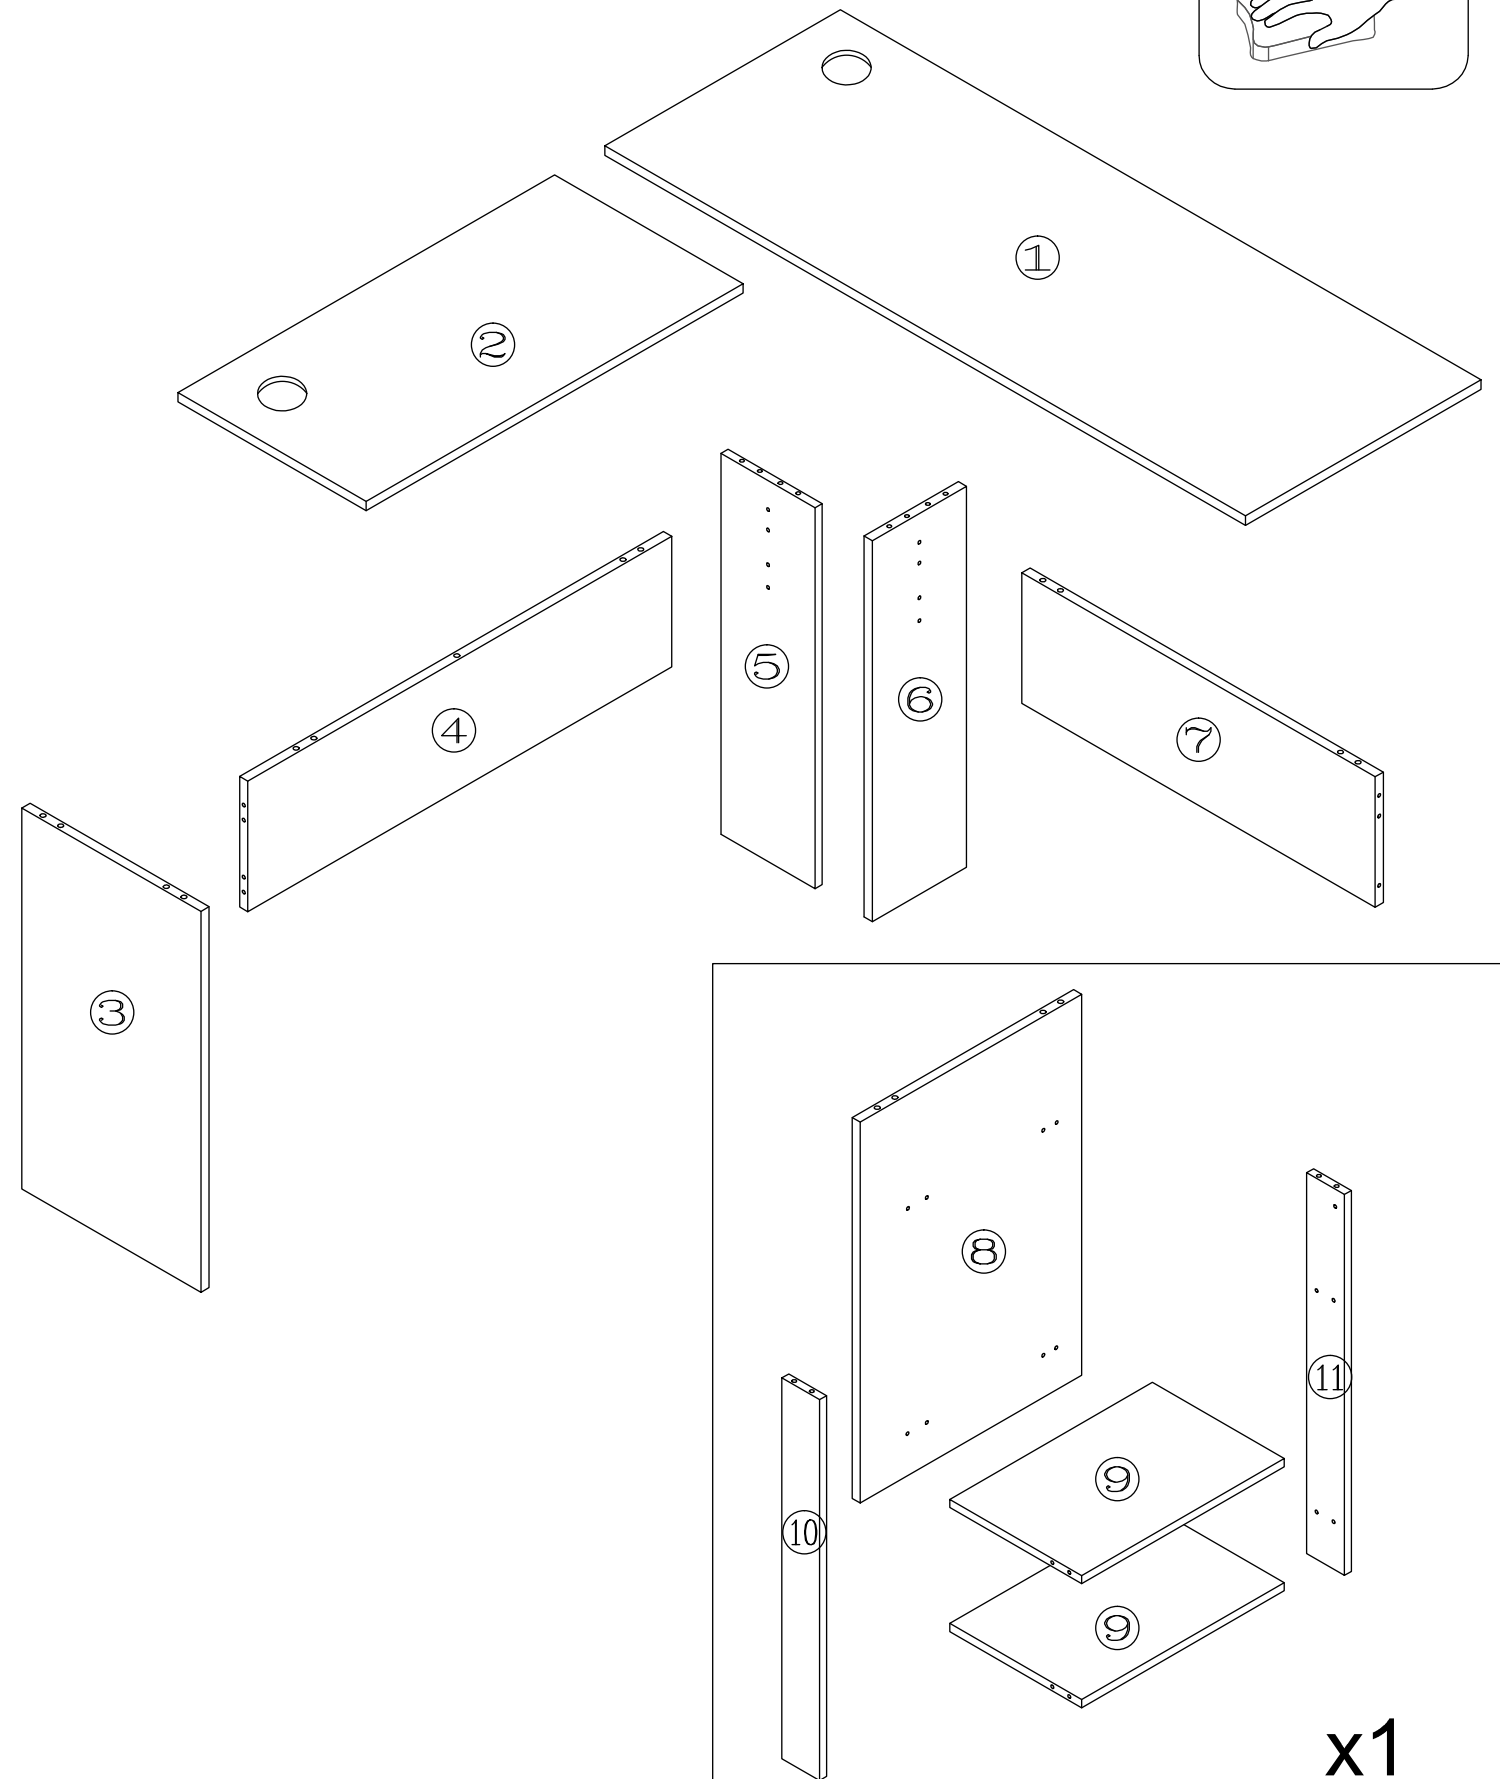

## ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.












Two persons and tools required for assembly

## HARDWARE






A	x34	B	x34	C	x33	D	x8	E	x2	F	x2
6x35mm		15x10mm		Ø6x30mm		M3x14mm					

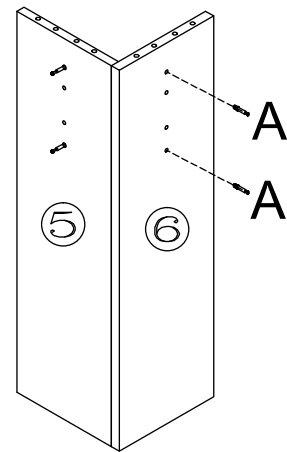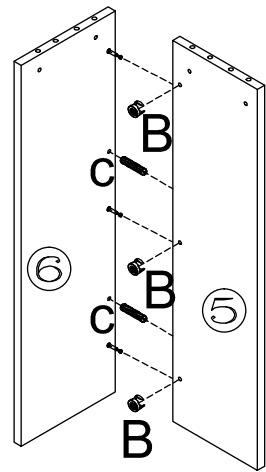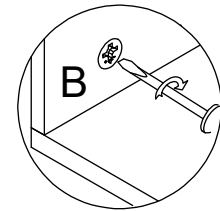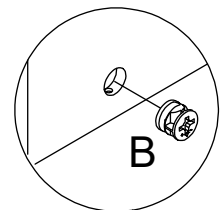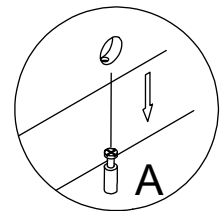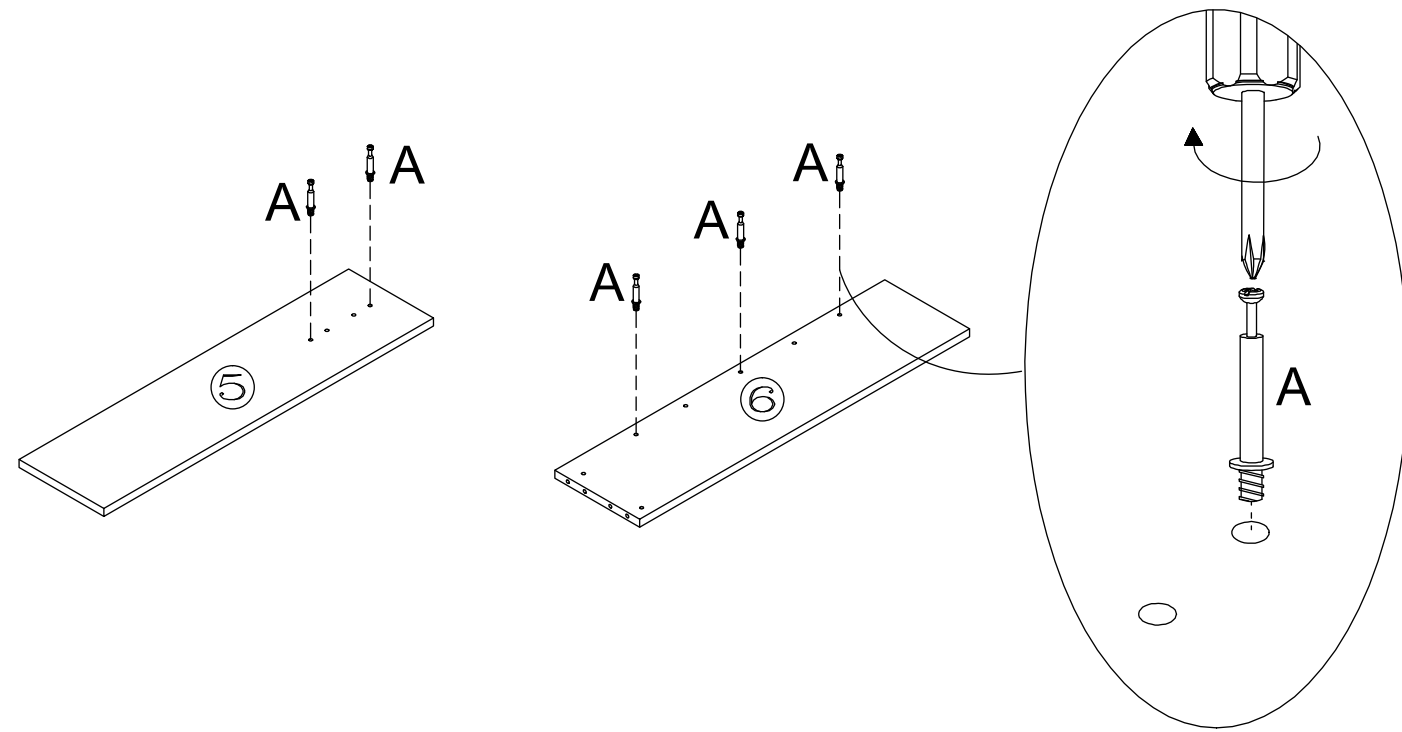


1







A	x7	B	x3	C	x2
					
6x35mm		15x10mm		Ø6x30mm	

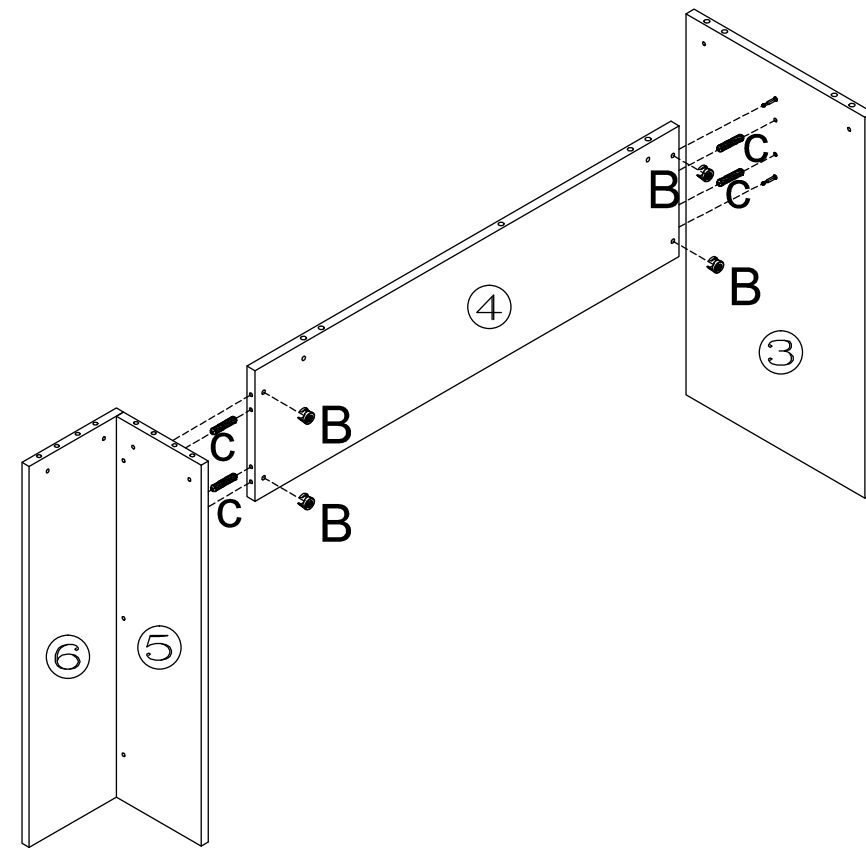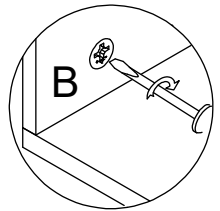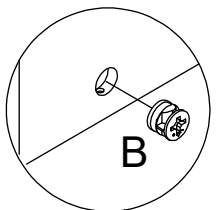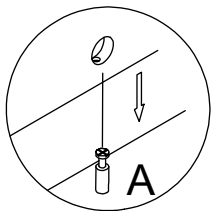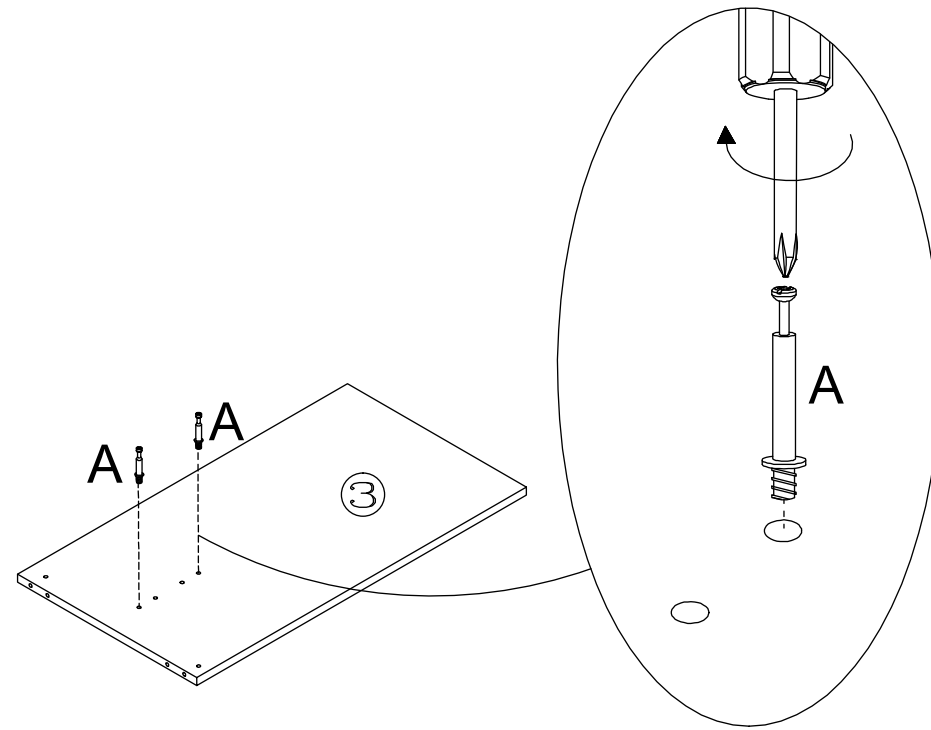


2






A	x2	B	x4	C	x4
					
6x35mm		15x10mm		Ø6x30mm	

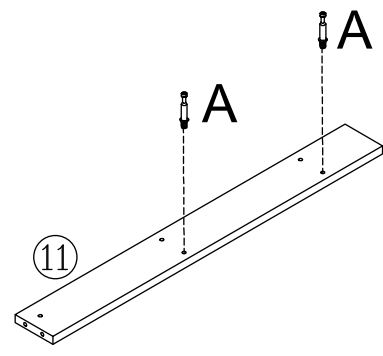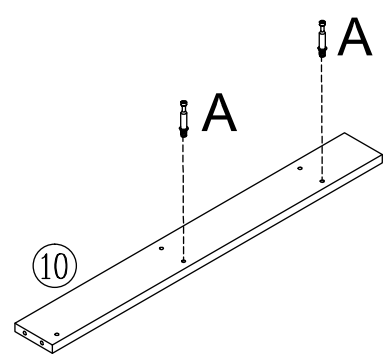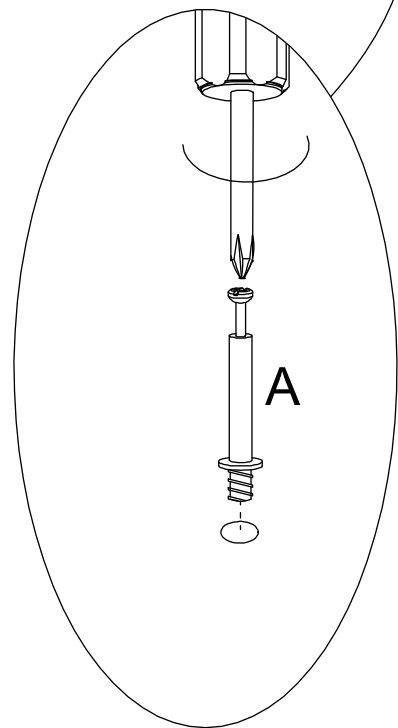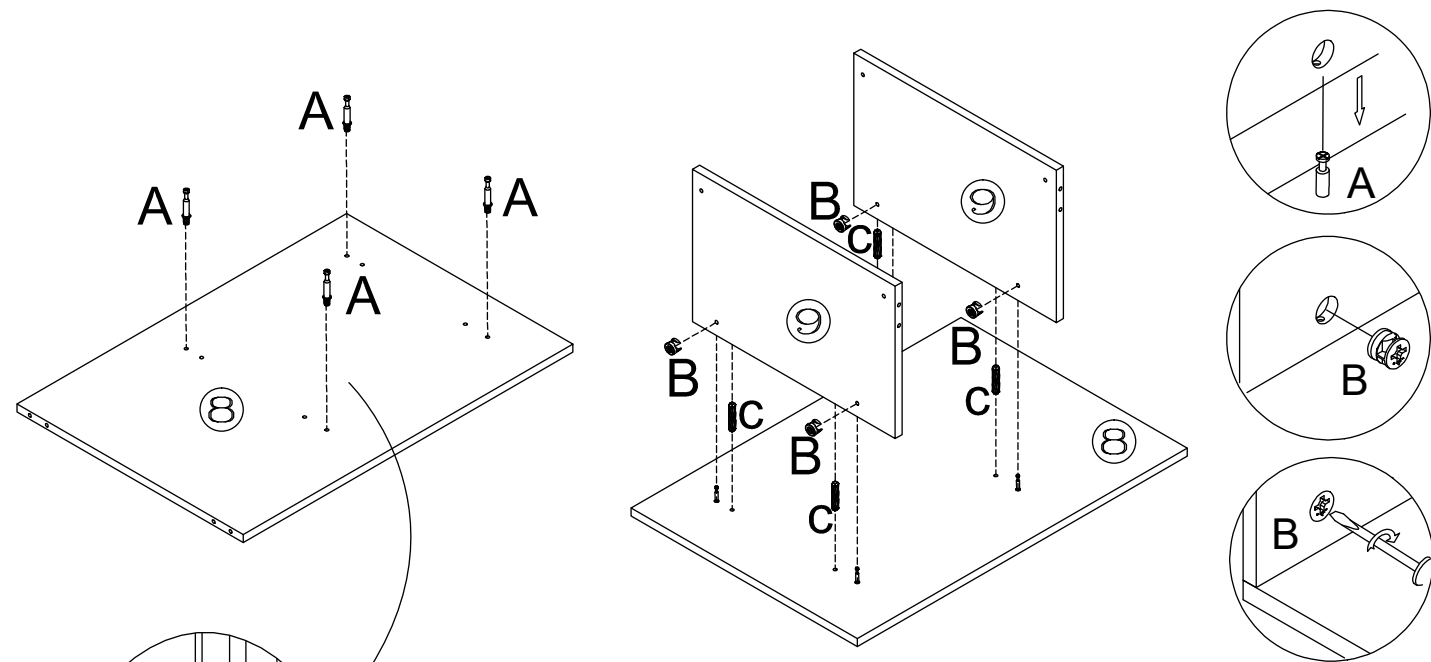


3







A	x8	B	x4	C	x4
					
6x35mm		15x10mm		Ø6x30mm	

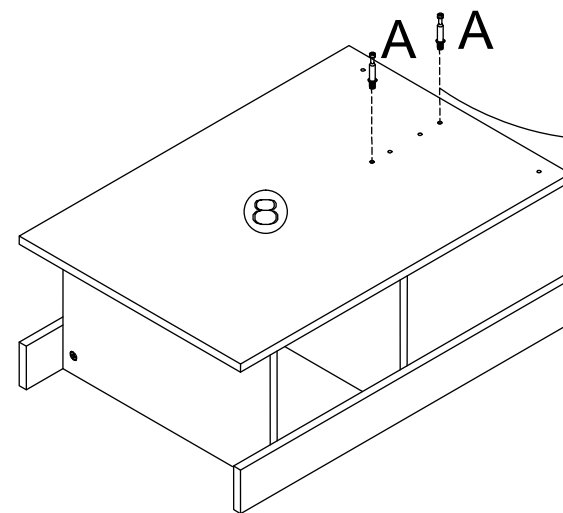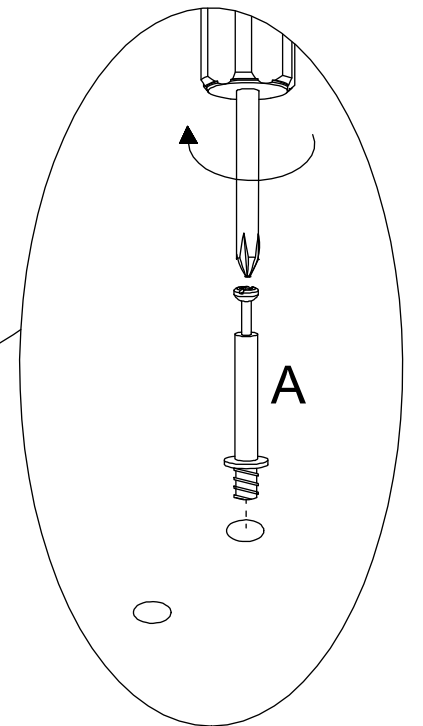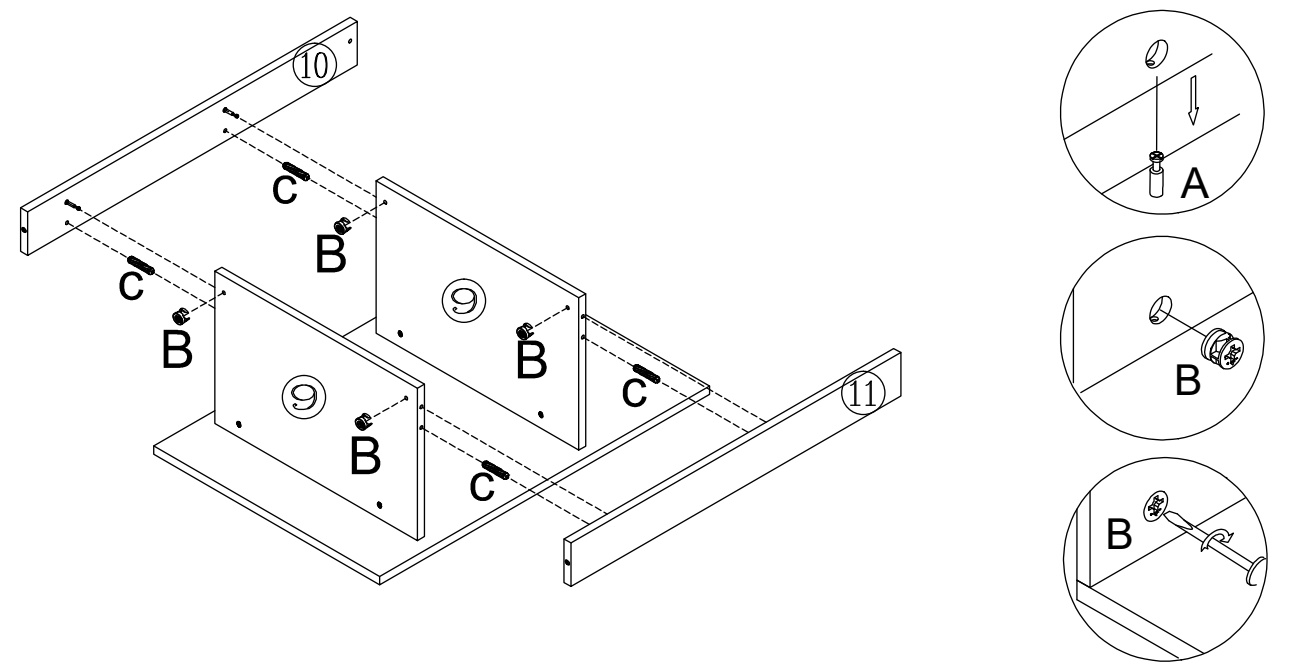

4





A	x2	B	x4	C	x4
					
6x35mm		15x10mm		Ø6x30mm	

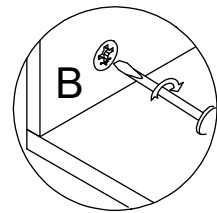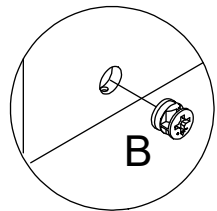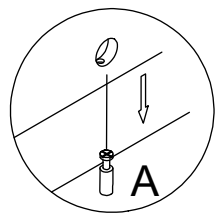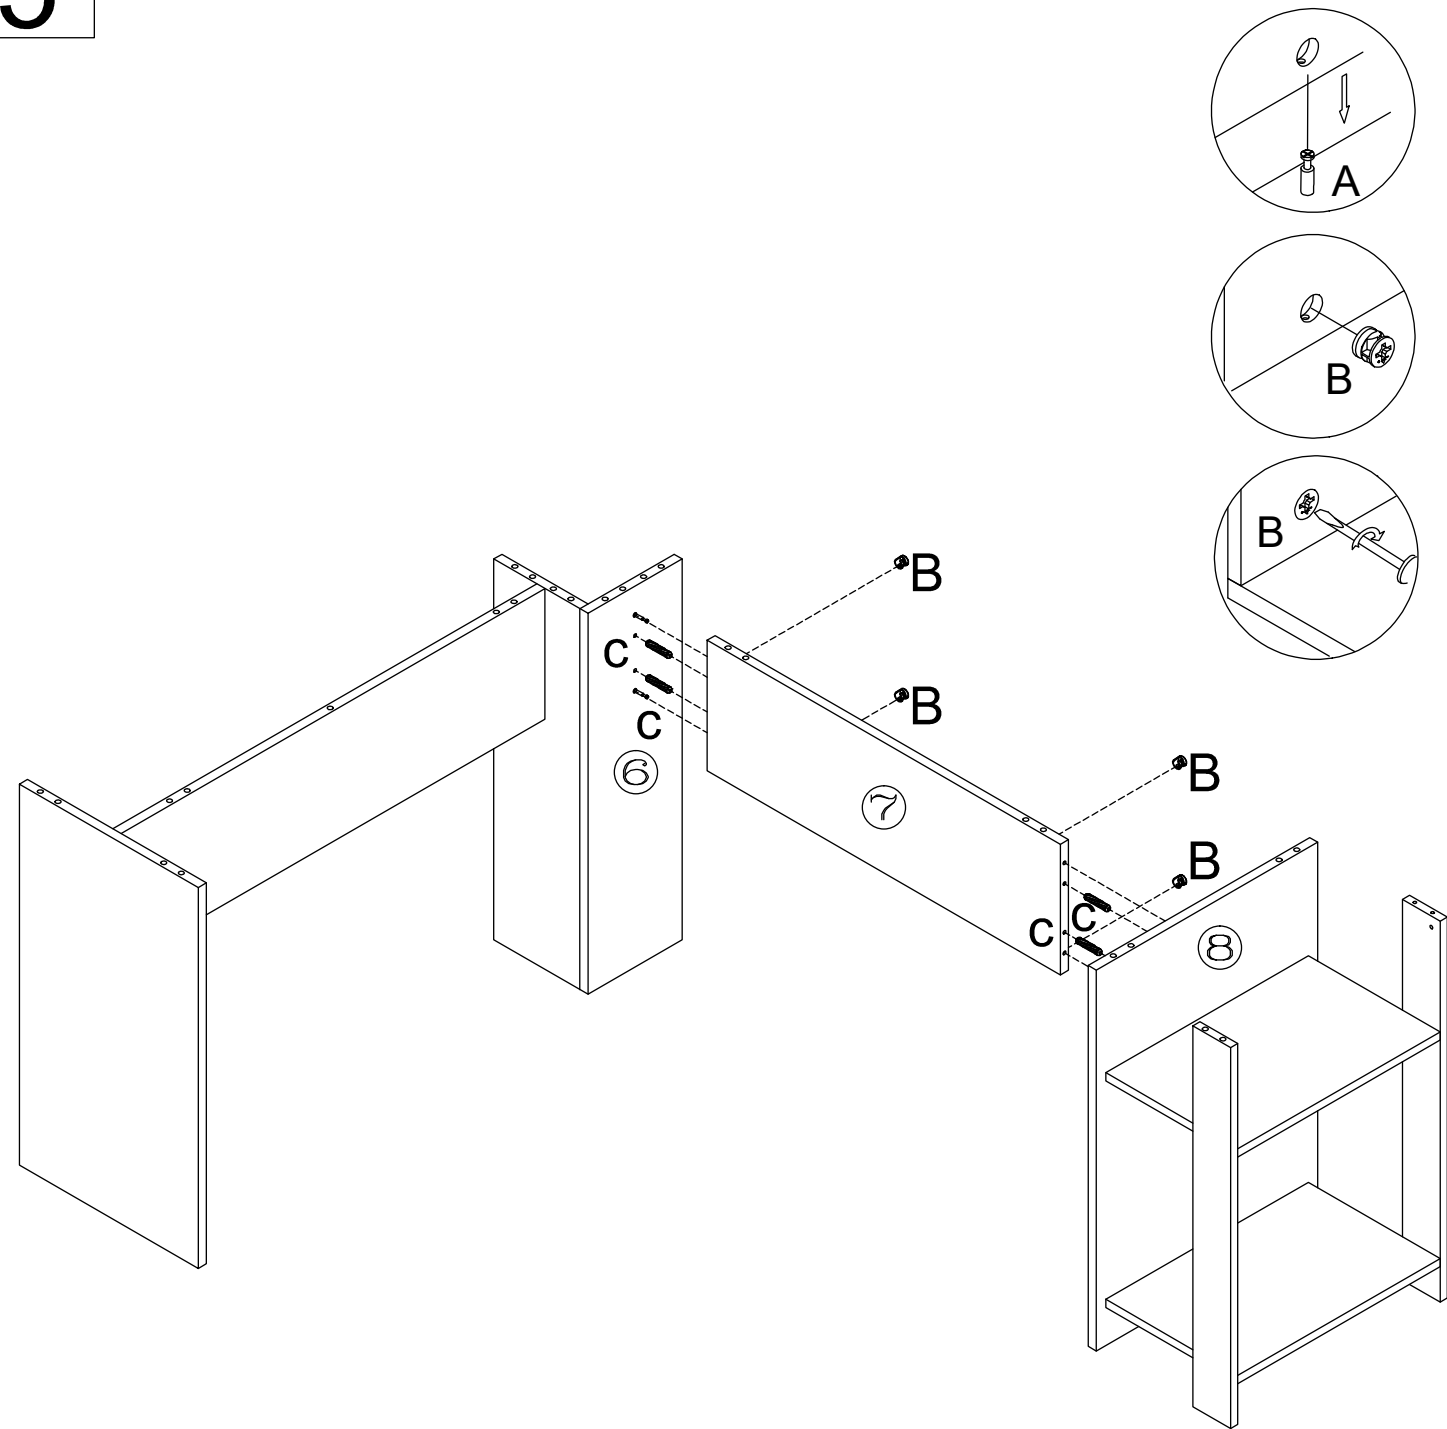


5





B	x4	C	x4
			
15x10mm		Ø6x30mm	

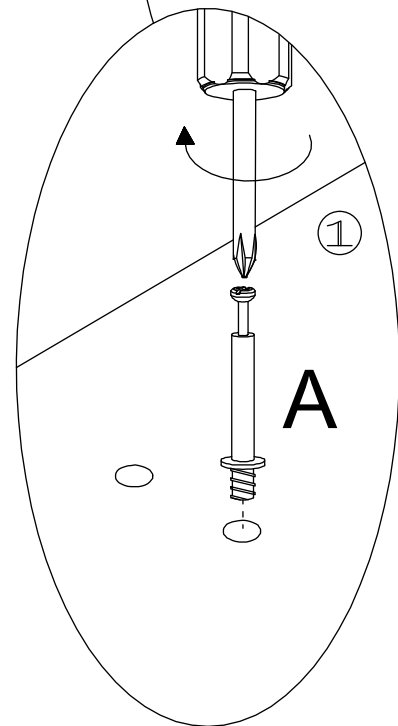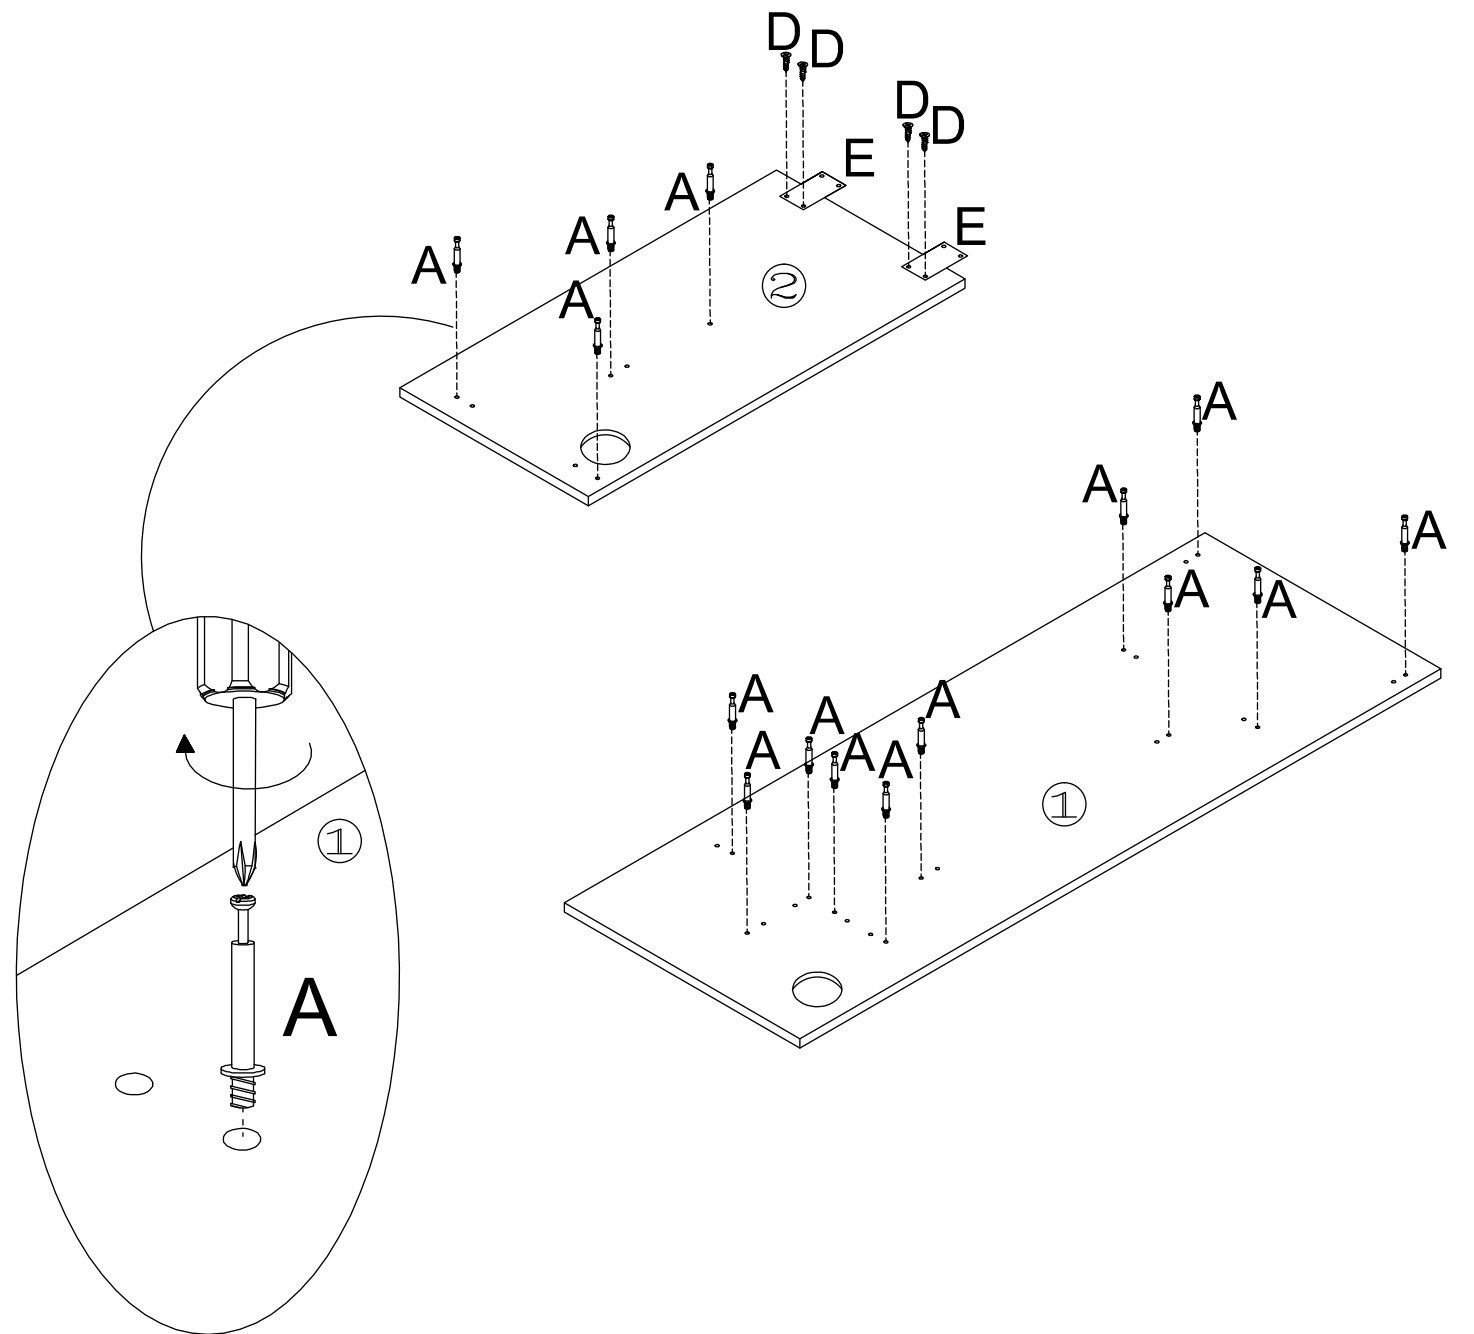6





A	x15	D	x4	E	x2
					
6x35mm		M3x14mm			

7

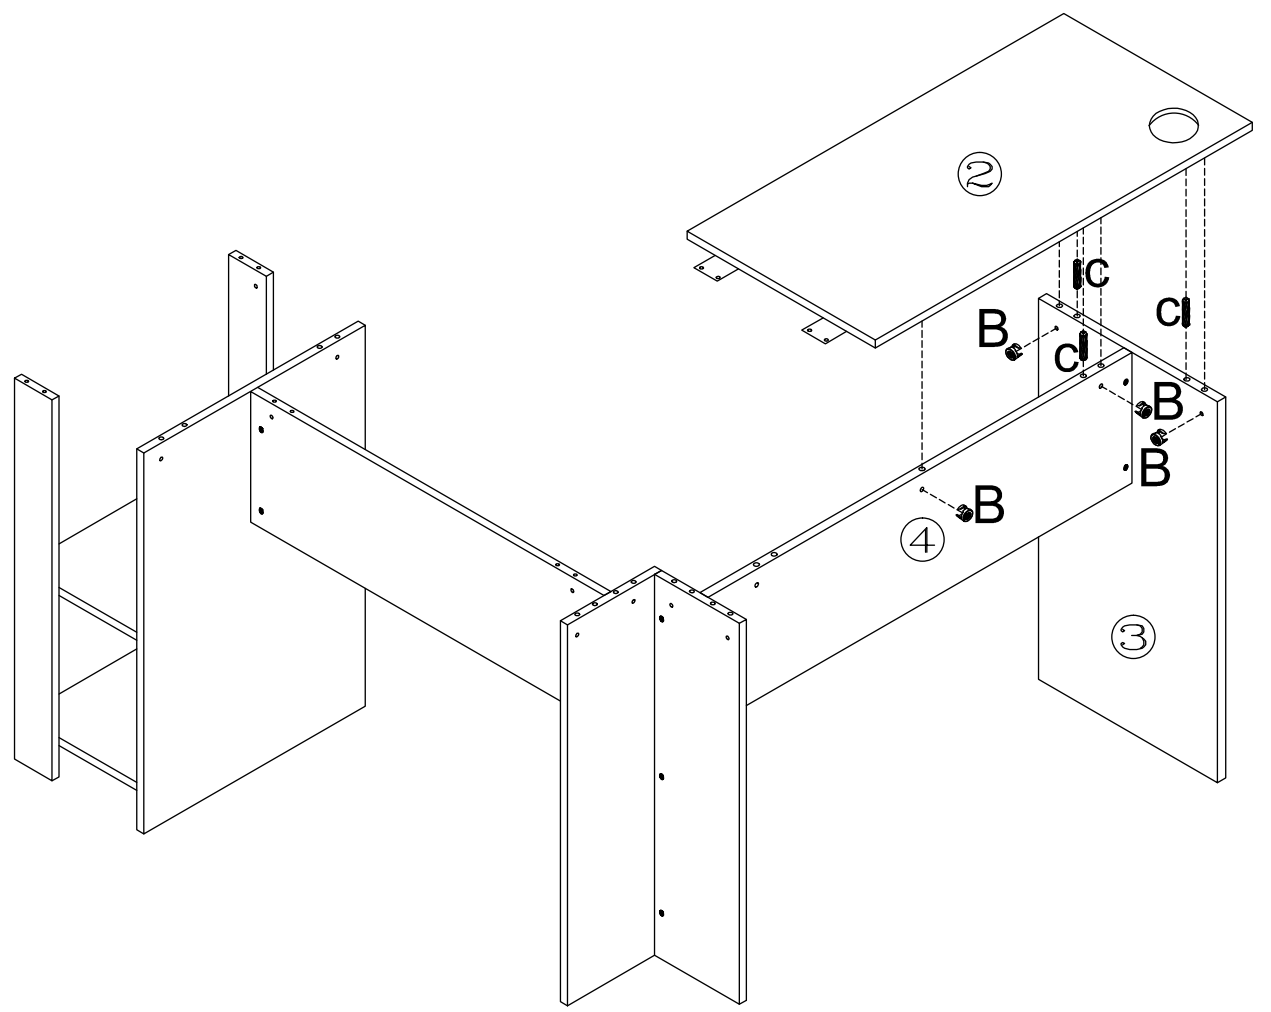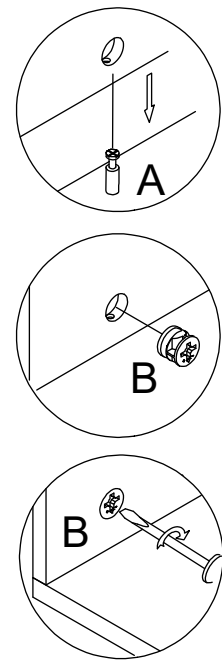

B	x4	C	x3
15x10mm		Ø6x30mm	

8

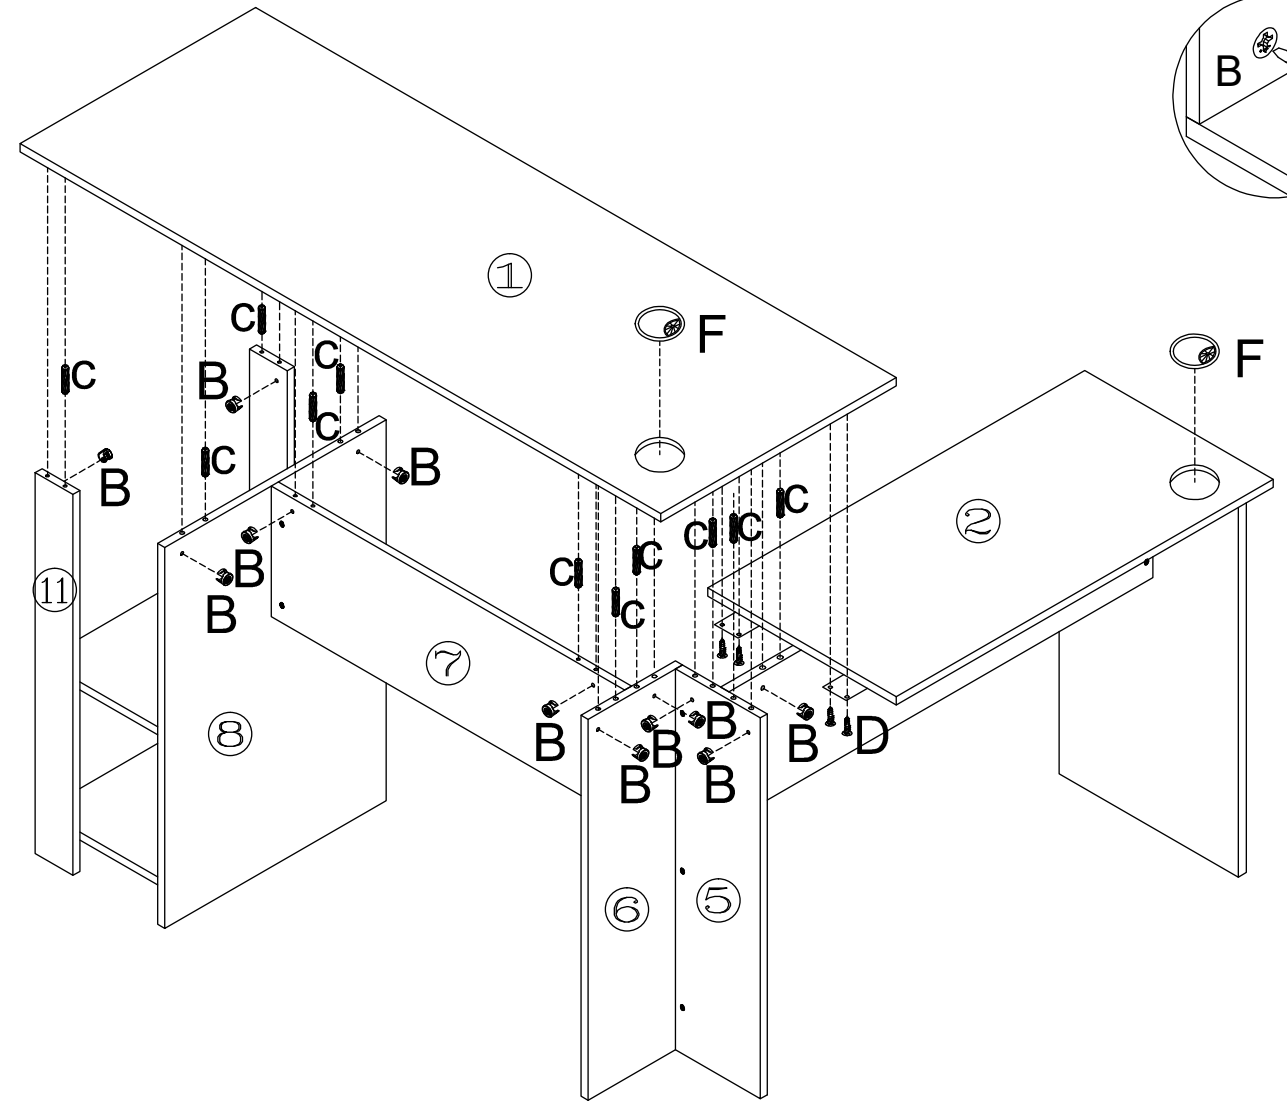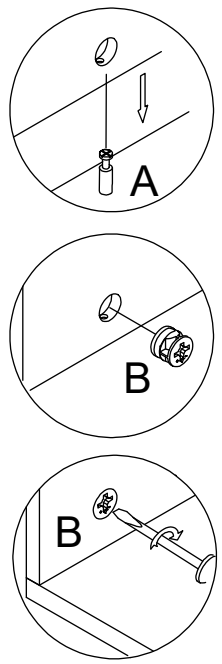

B	x11	C	x11	D	x4	F	x2
15x10mm		Ø6x30mm		M3x14mm			