


WOODEN BED FRAME

MODEL: BF- W-B-NINO-D- Q- K

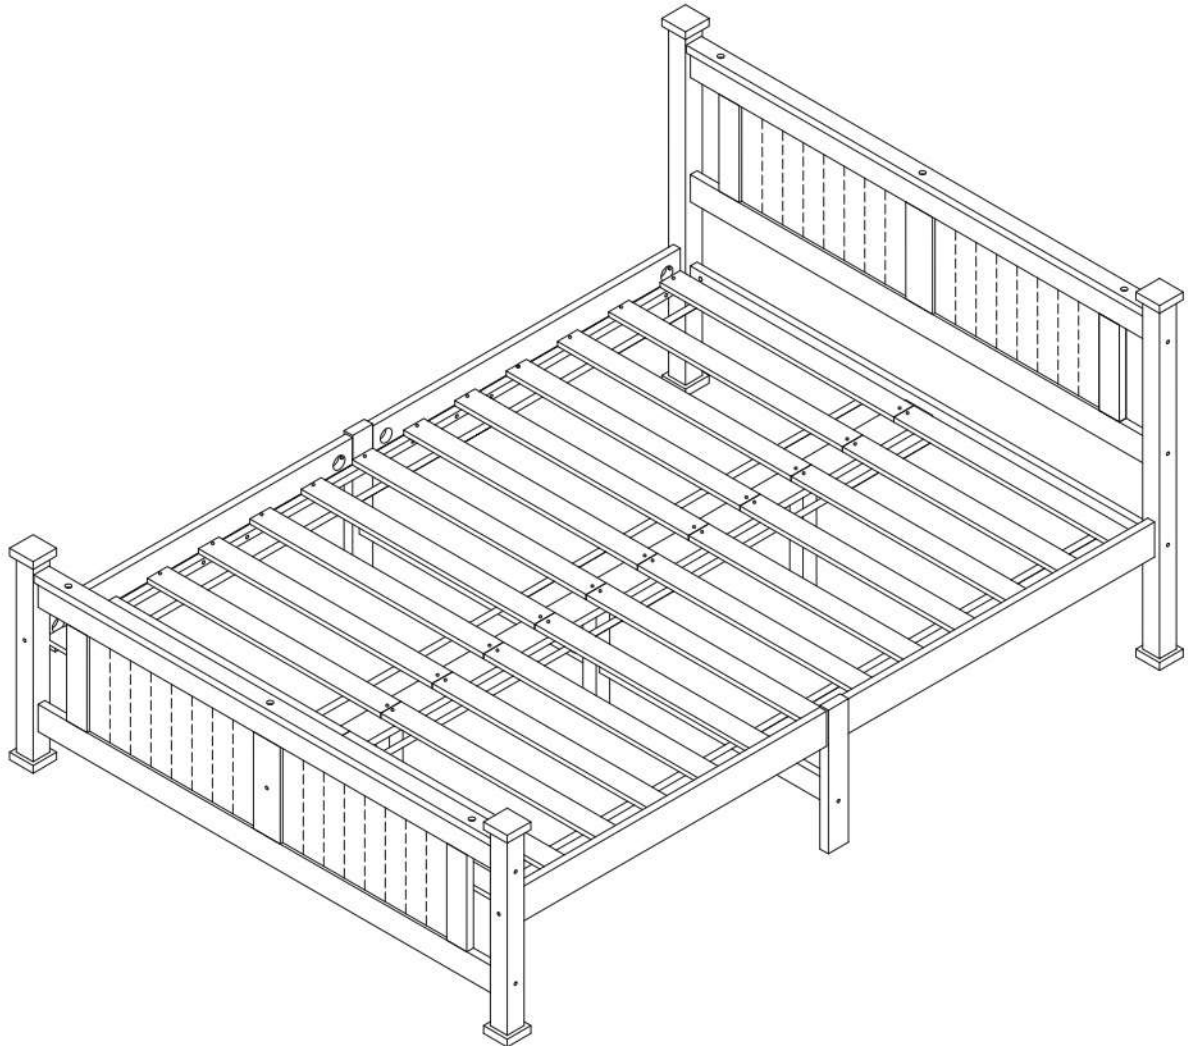

ASSEMBLY INSTRUCTIONS

Please read the instructions carefully before assembling and using the product

IMPORTANT NOTICE

When moving the bed, please lift off the ground with two people. DO NOT drag, push or pull the bed across the floor, as this can result in damage to the supporting leg.

ASSEMBLY CHECKLIST



Read through the instructions carefully before starting assembly.



Make sure that you have the required tools. Do not use power tools.



Identify and lay out all parts to familiarise yourself with them.




Do not fully tighten all screws until the step or process has been completed.





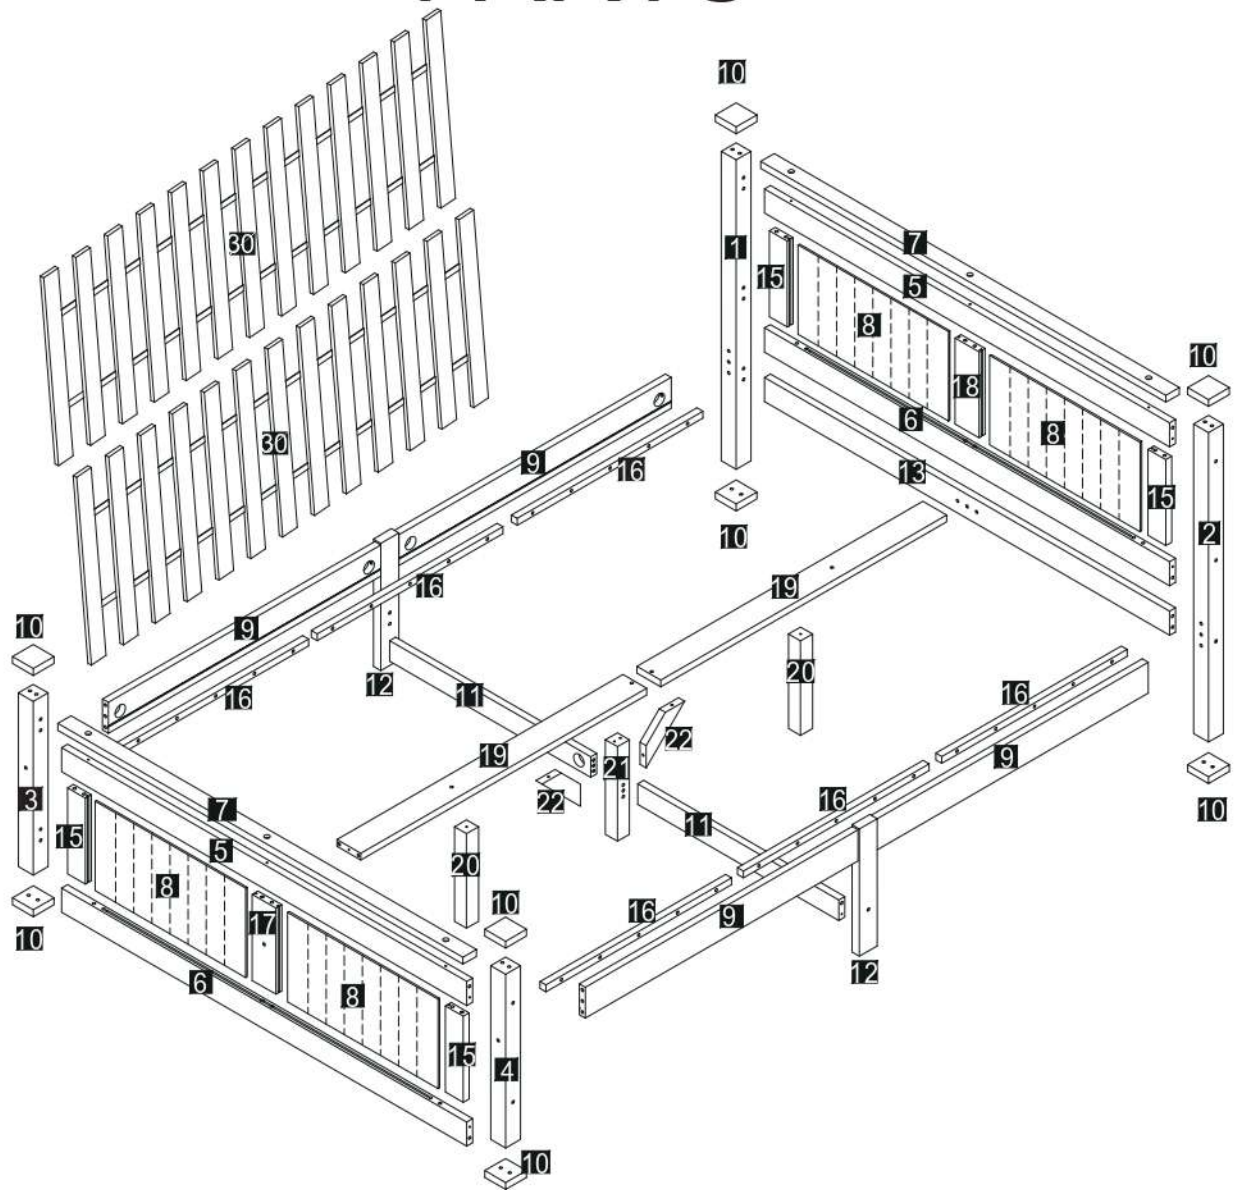

USEFUL INFORMATION








1. Never use power tools for assembly. They can damage the components or hardware if used incorrectly.
2. The most common mistakes made during assembly are using the wrong hardware or getting components from back to front.
3. Always assemble the product on a soft surface such as a carpet or cardboard to avoid scratching or damaging the surface of the product.

PARTS




HARDWARE

| | | | |
|---|-------------------------------------------------------------------------------------|----------|----|
| A |  | Φ6x90mm | 10 |
| B |  | Φ6x50mm | 8 |
| C |  | M6x140mm | 3 |
| D |  | Φ8x30mm | 76 |
| E |  | M6 | 10 |
| F |  | M6x90mm | 4 |


| | | | |
|---|--------------------------------------------------------------------------------------------------------------------------------------------|---------|----|
| G |  | Φ6x70mm | 4 |
| H |  | Φ4x30mm | 86 |
| J | hole stickers  | Φ20mm | 6 |
| K |  | 10mm | 2 |
| L |  | 4mm | 1 |
| M |  | Φ7x50mm | 4 |
| N | Warning: Keep the glue out of the reach of children!  | | 1 |

ASSEMBLY STEPS

STEP:1

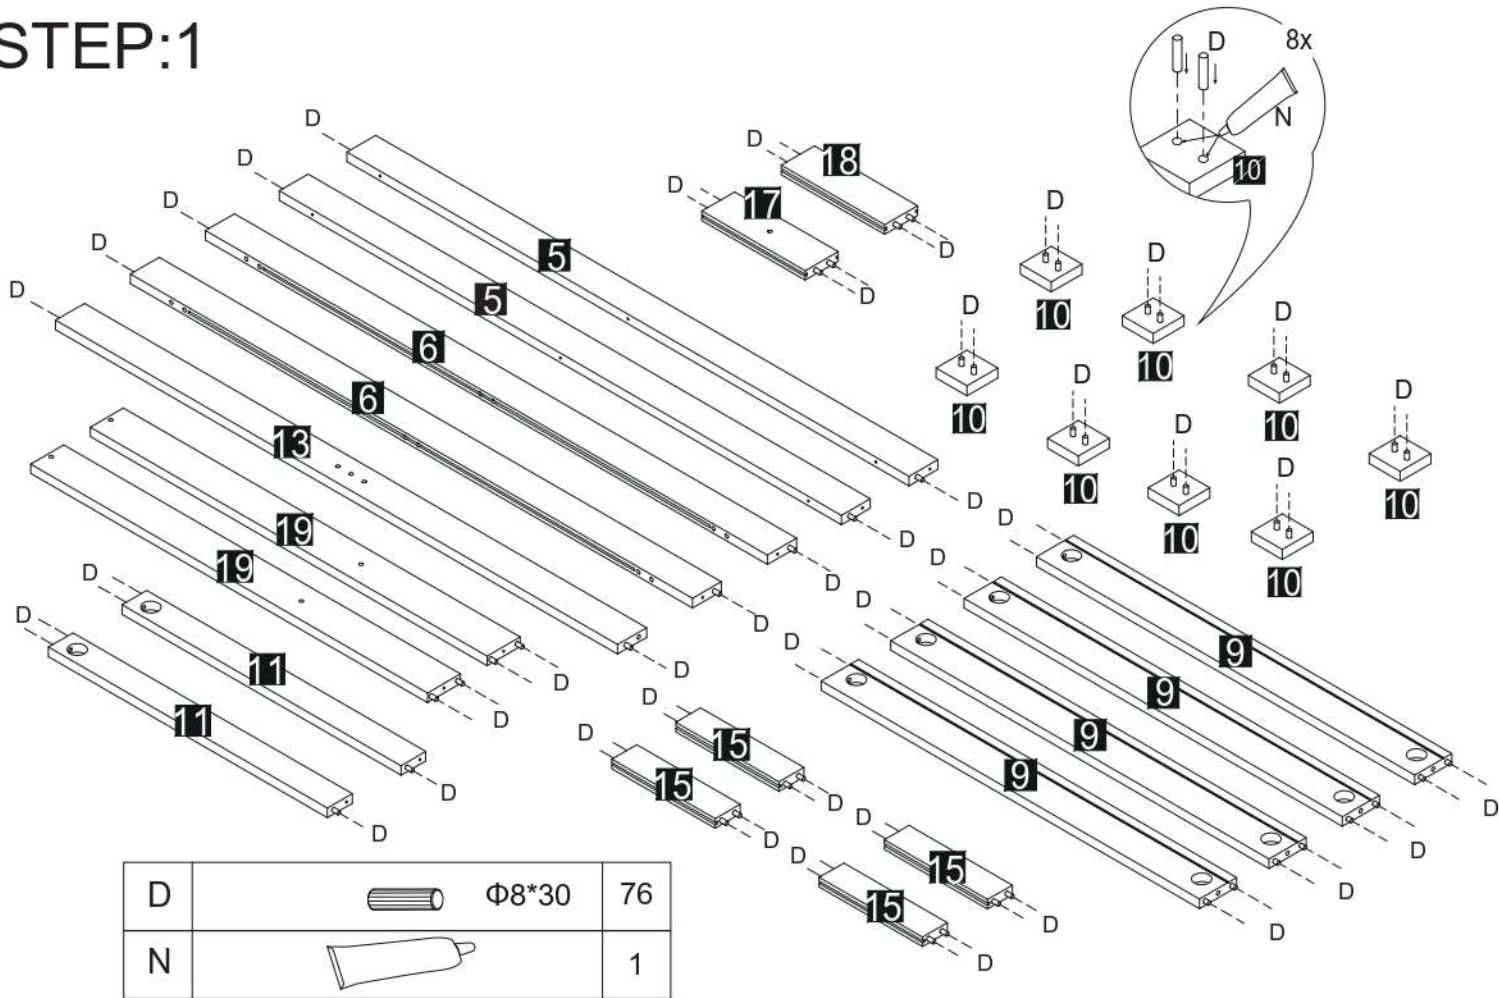

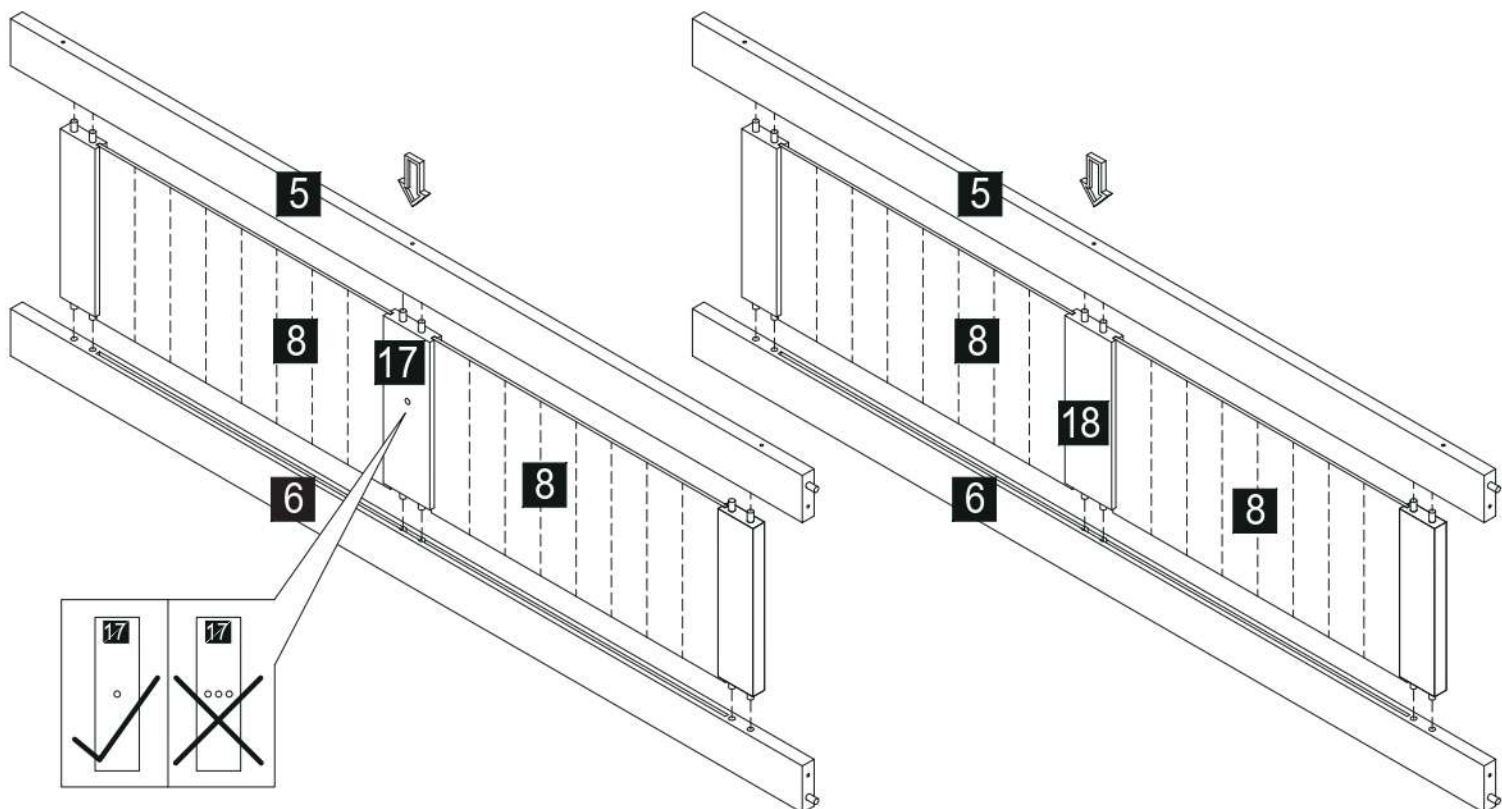


STEP:2




ASSEMBLY STEPS


STEP:3

| | | | |
|---|-----------------------------------------------------------------------------------|-------|----|
| A |  | Φ6*90 | 10 |
| B |  | Φ6*50 | 6 |

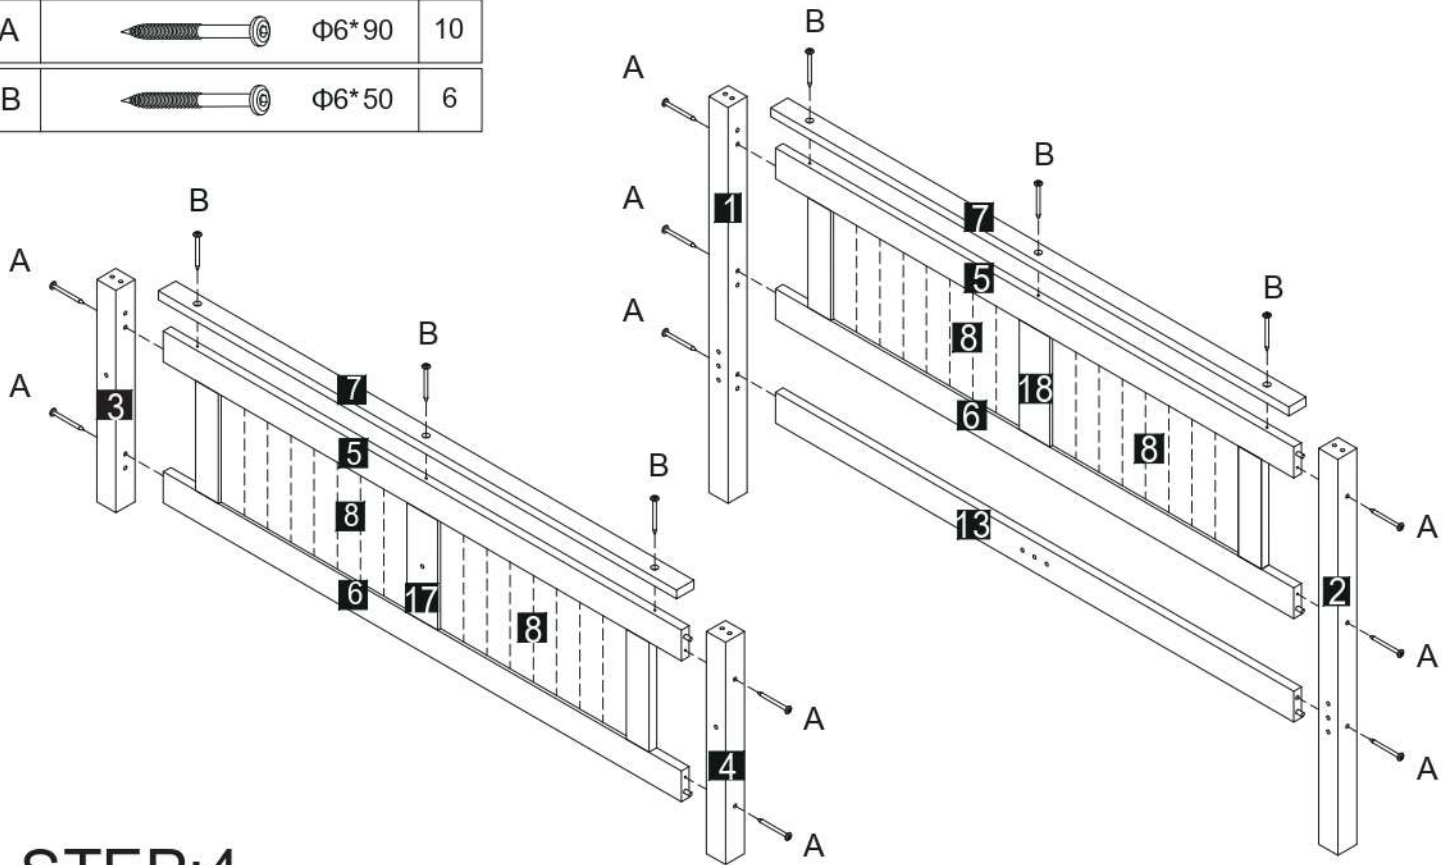



STEP:4

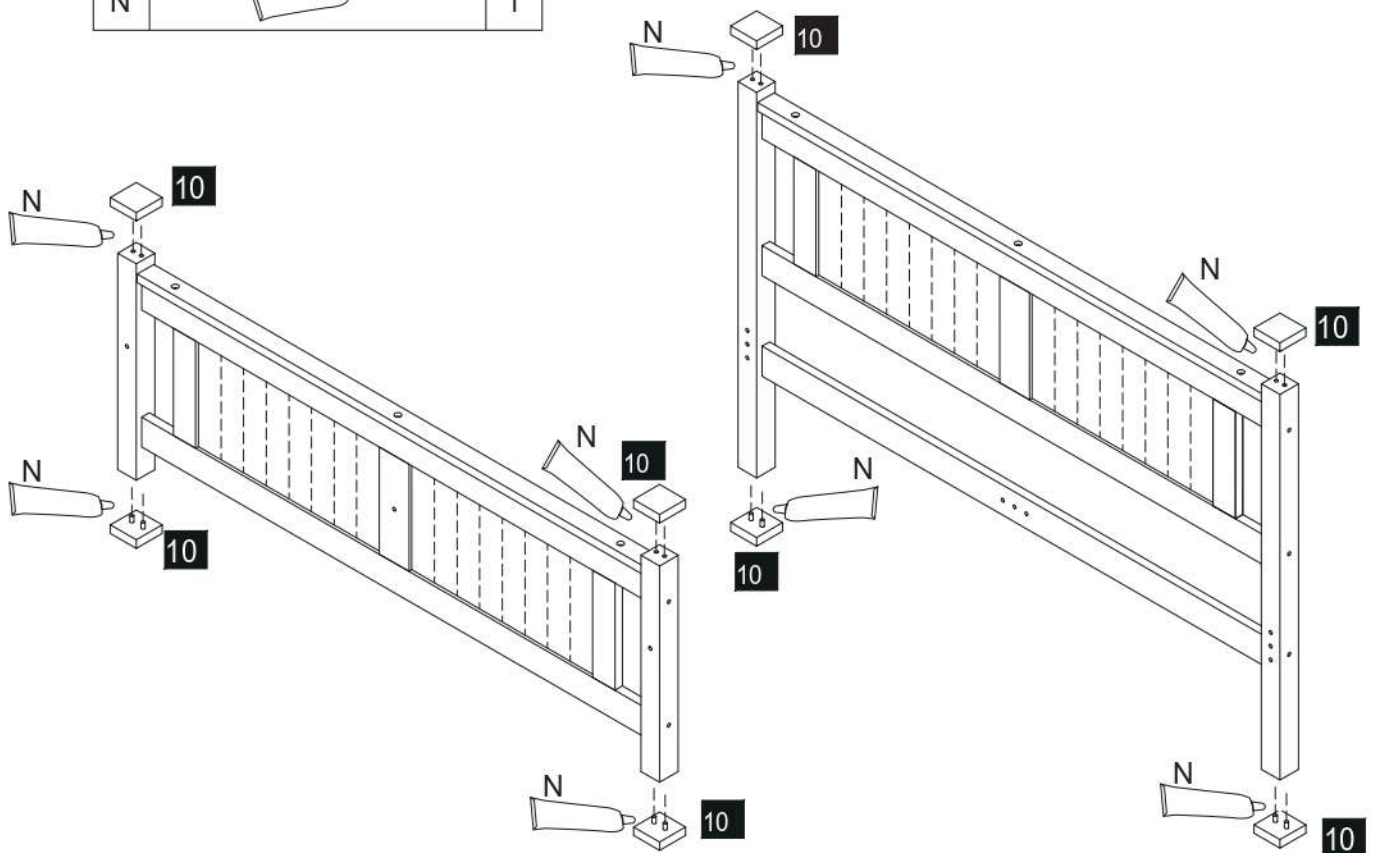


| | | |
|---|-------------------------------------------------------------------------------------|---|
| N |  | 1 |
|---|-------------------------------------------------------------------------------------|---|





ASSEMBLY STEPS

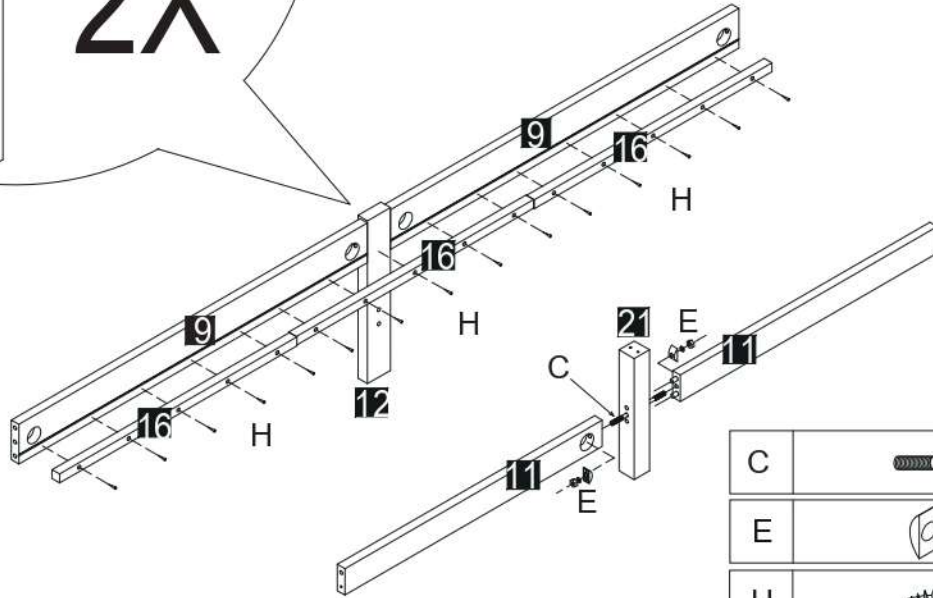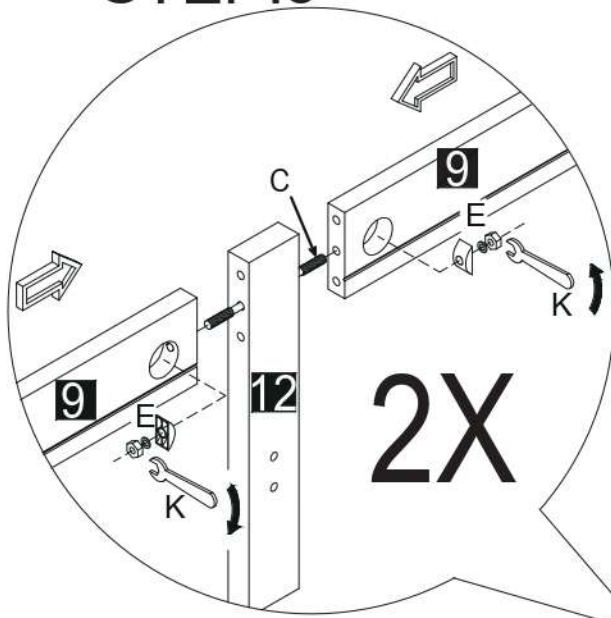




STEP:5

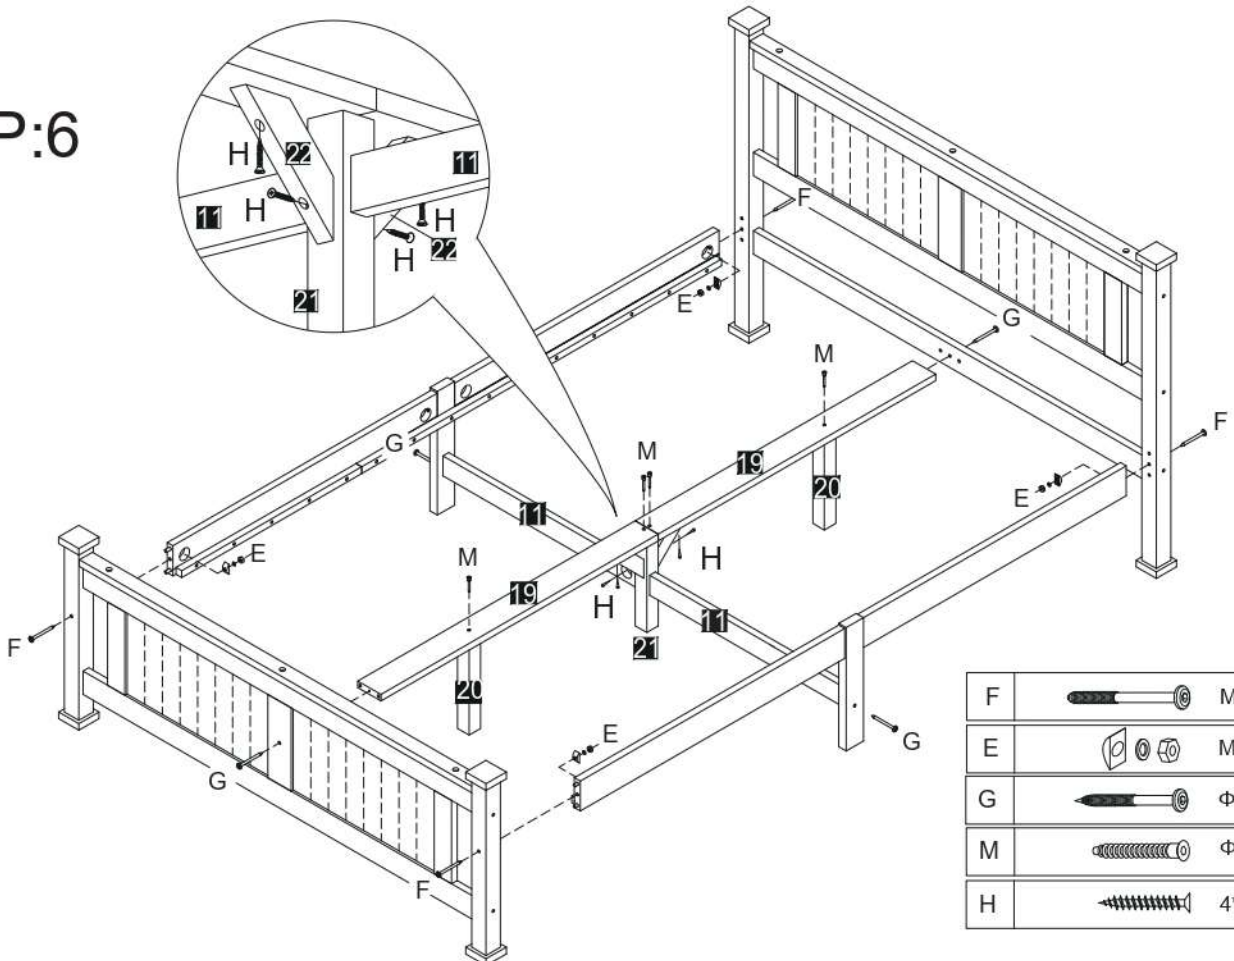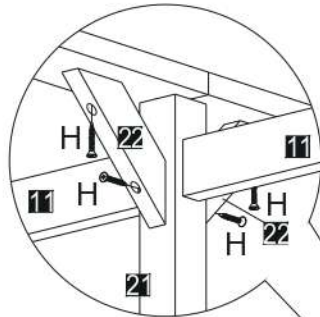

| | | | |
|---|---------------------------------------------------------------------------------------|--------|----|
| C |  | M6*140 | 3 |
| E |  | M6 | 6 |
| H |  | 4*30 | 30 |


STEP:6



| | | | |
|---|---------------------------------------------------------------------------------------|-------|---|
| F |  | M6*90 | 4 |
| E |  | M6 | 4 |
| G |  | Φ6*70 | 4 |
| M |  | Φ7*50 | 4 |
| H |  | 4*30 | 4 |

ASSEMBLY STEPS

STEP:7

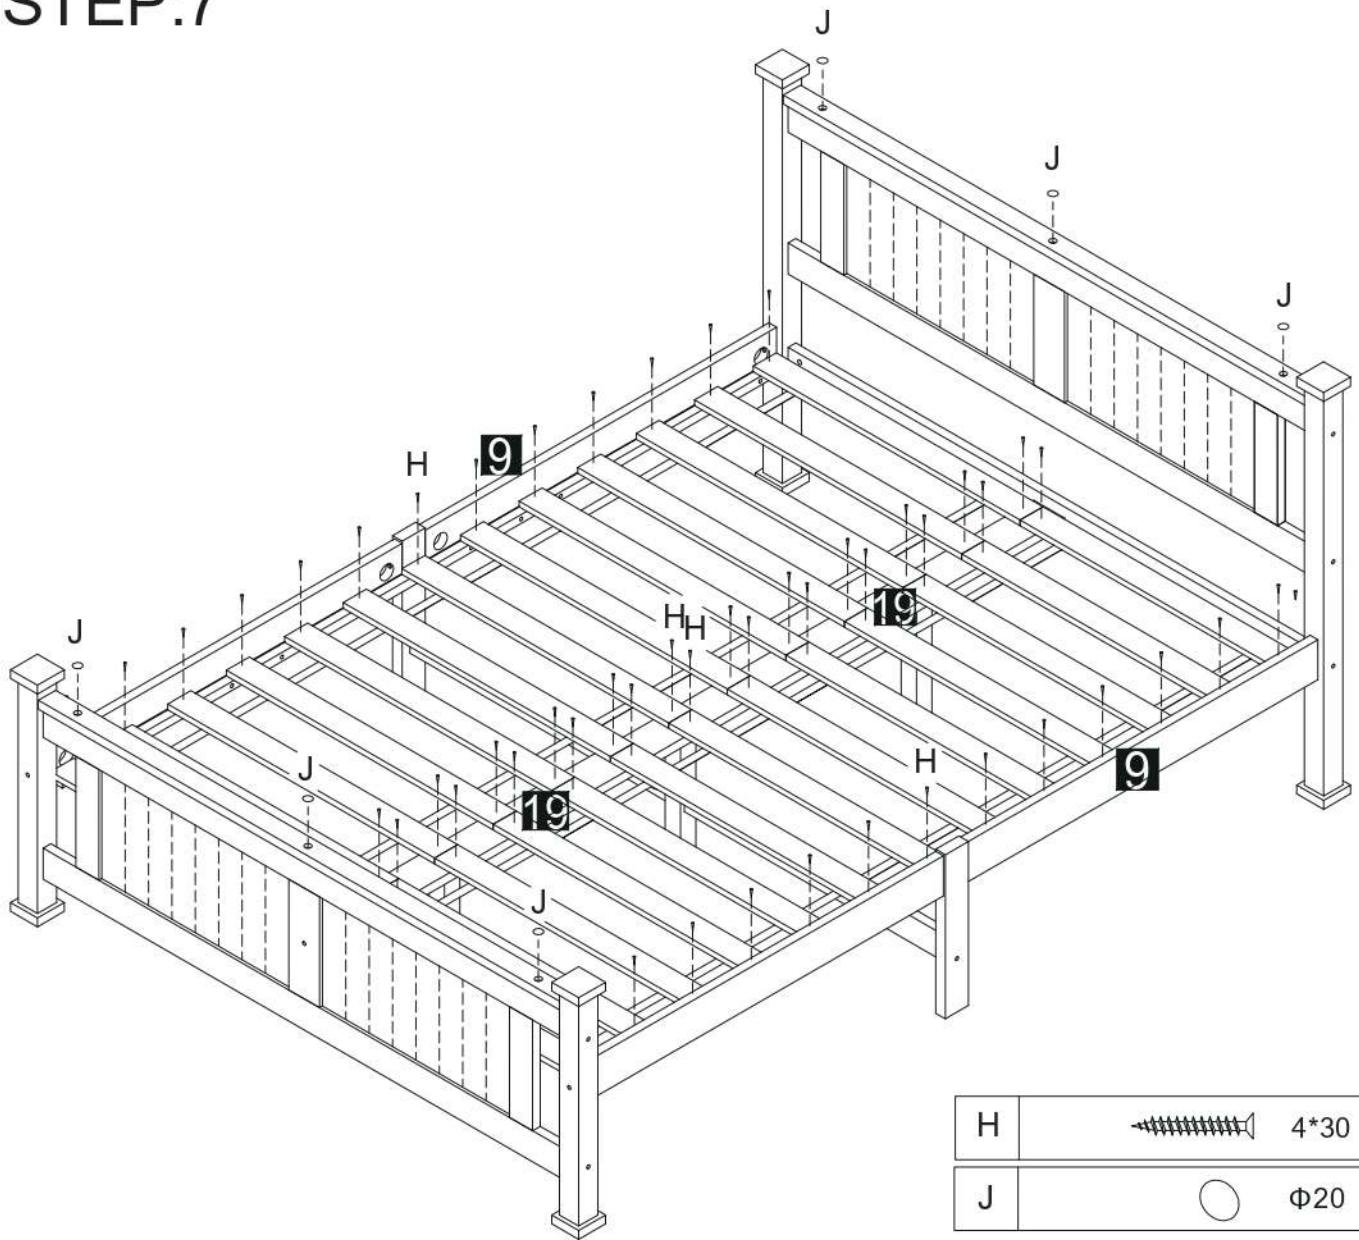

Note:1
Do Not use power tools!
Tighten all screw H to fix all bed slats

Note 2:
Please fix screw H at part 11 side rails first ,
make sure all slats end attach to side rail 11.
Next to fix other screws H at part 29 and 19 central rails.