


WARDROBE

MODEL:WA-MEXI-CD6-WH/WD/BK

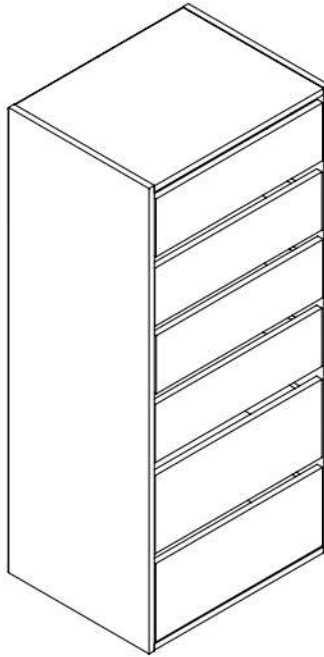
















ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.






Two persons and tools required for assembly

HARDWARE



A	x16	B	x16	C	x16	D	x40	E	x16	F	x24	G	x12
													
7x35mm		12x10mm		Ø6x30mm		M4x40mm				M3.5x12mm			
H	x36	I	x12	J	x2	K	x4	L	x18	M	x2	N	x2
													
M3x12mm		M4x11mm										M4x30mm	
O	x2												
													
M4x14mm													

PARTS




Wipe with dry cloths

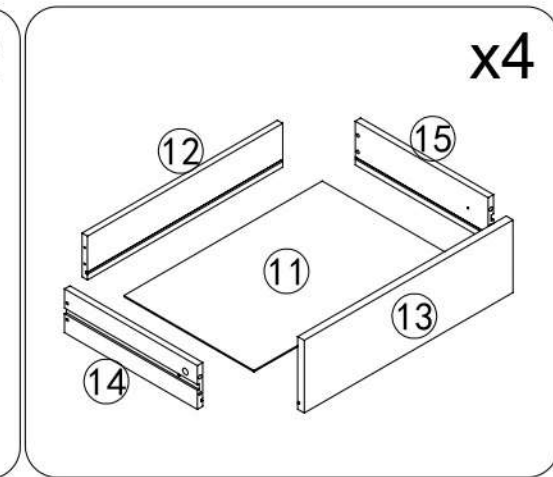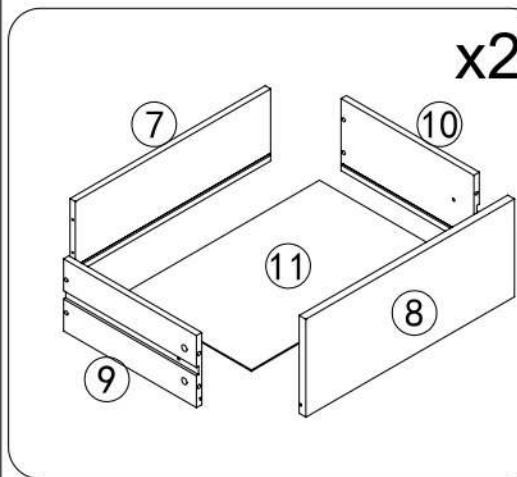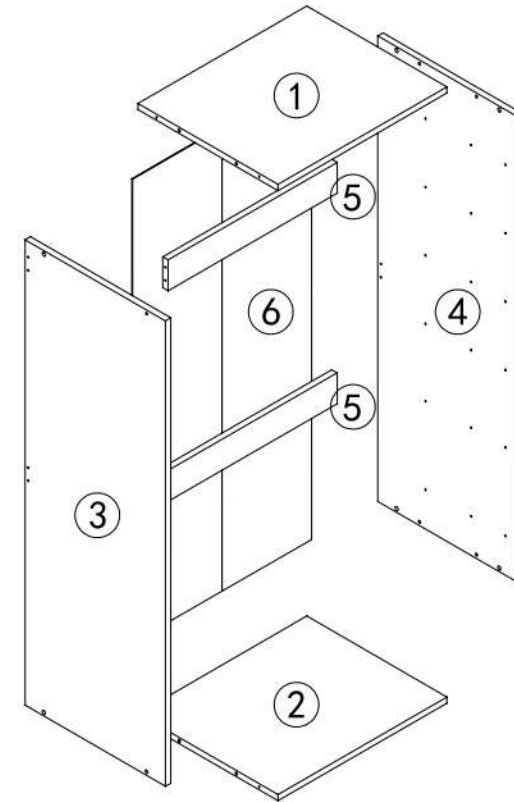




1

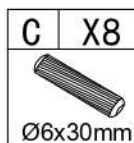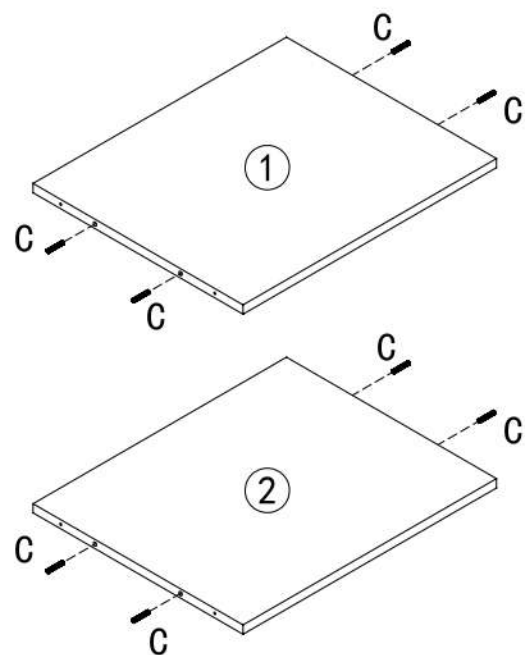


3

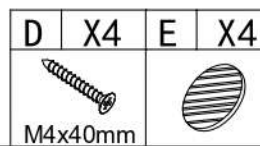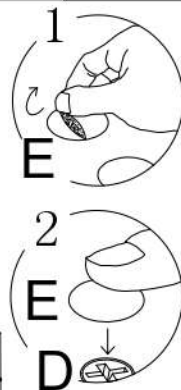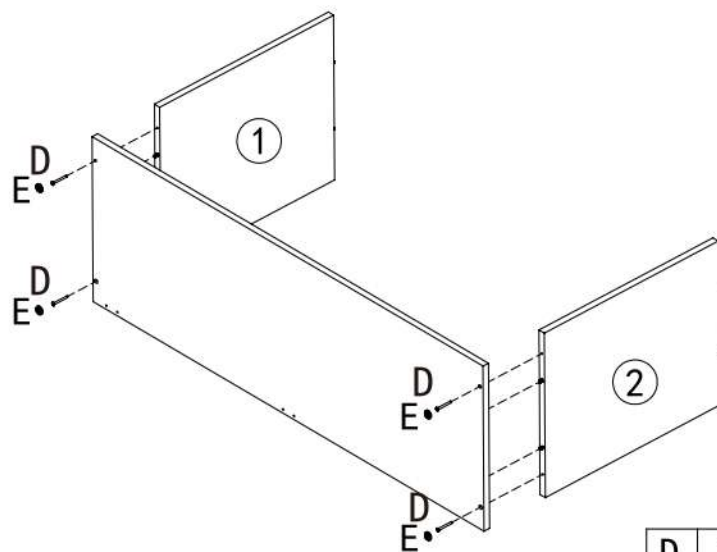

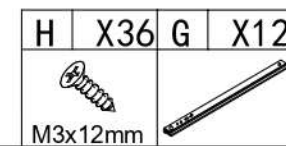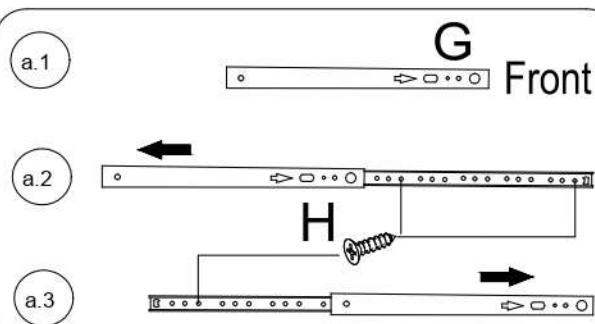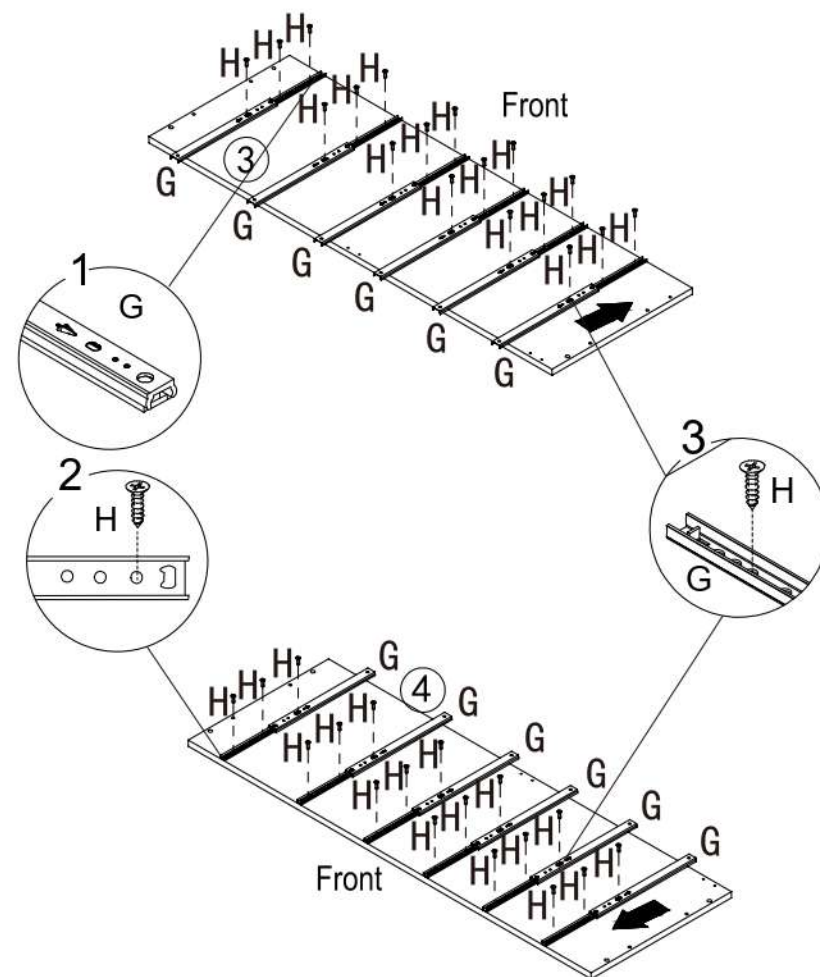


2

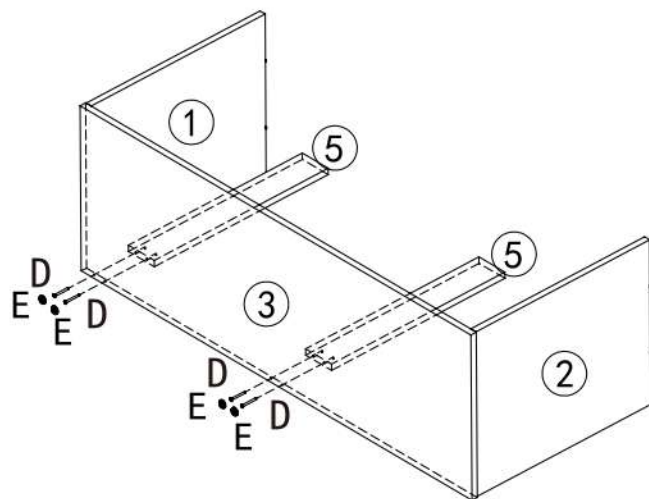


4



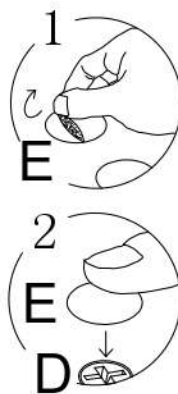


D	X4	E	X4
			
M4x40mm			

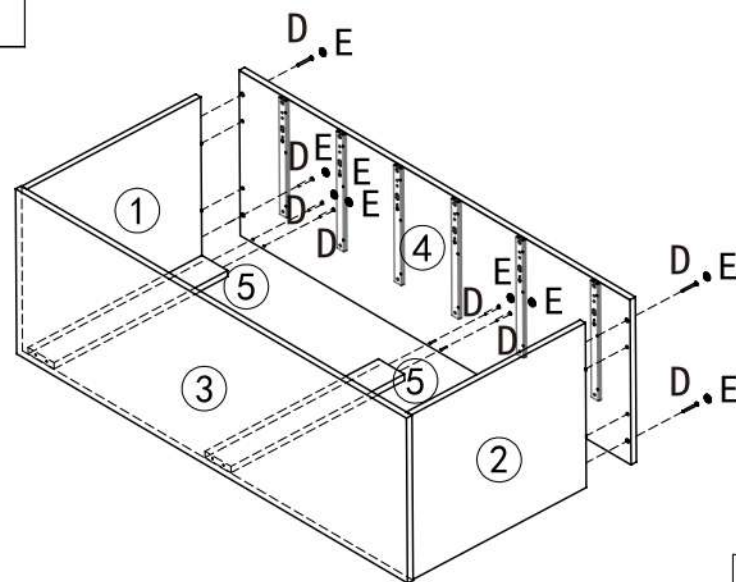

5





D	X8	E	X8
			
M4x40mm			

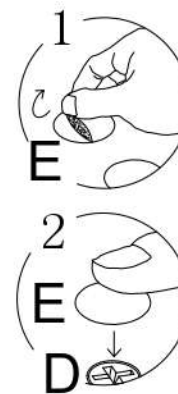

6

Ensure the diagonal of section A is equal to the section B.

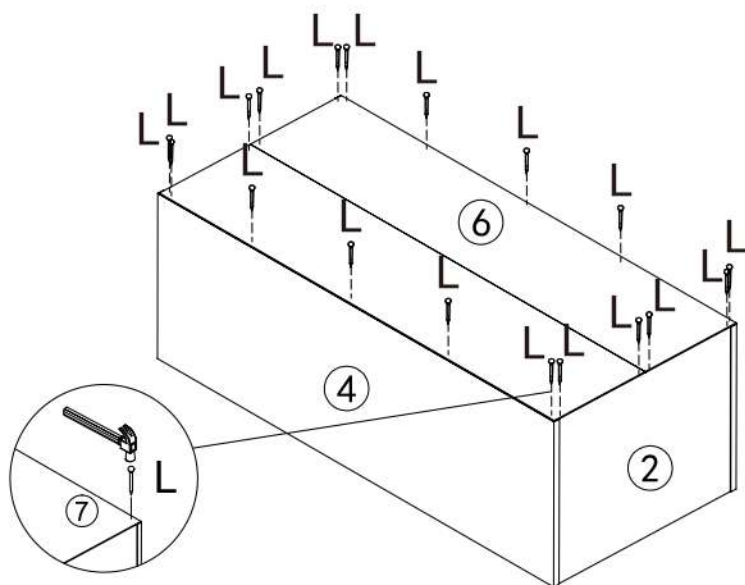




rear panels

L	X18
---	-----




7

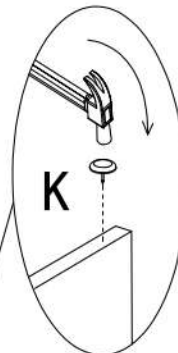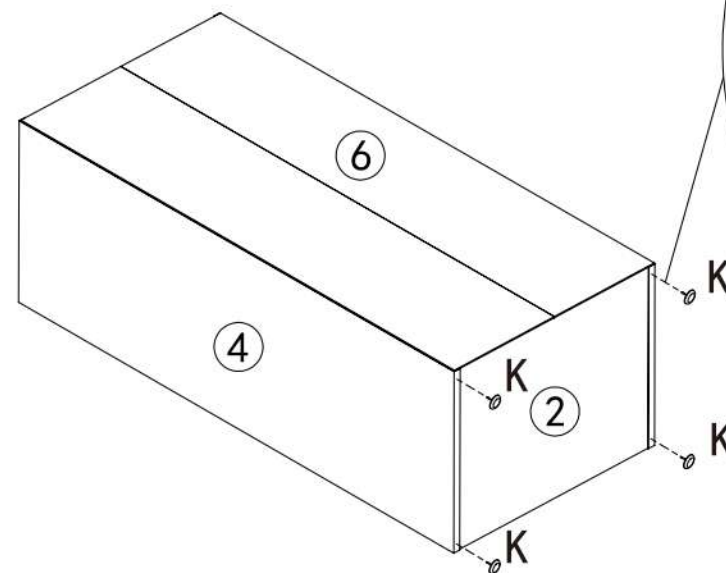

K	X4
	


8

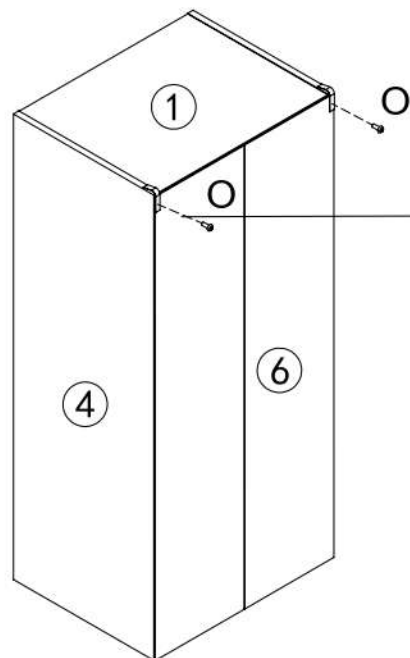

M	X2	O	X2
M4x14mm			

Pre-drilled hole at wall





9

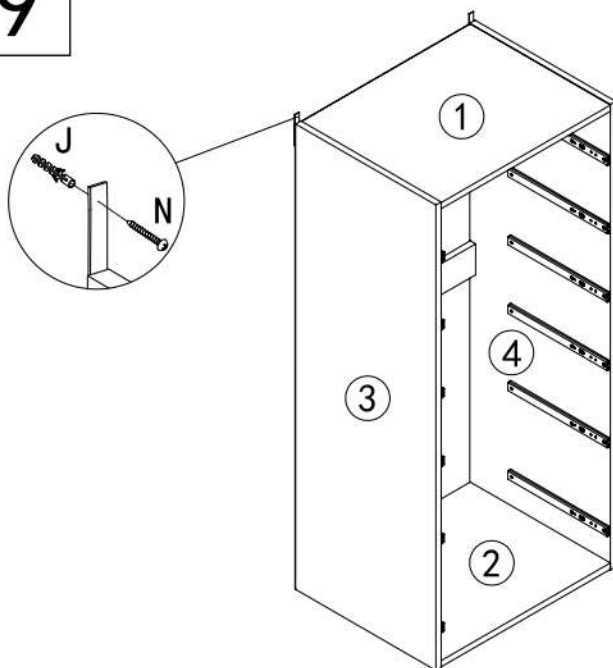

J	X2	N	X2
M4x30mm			




10

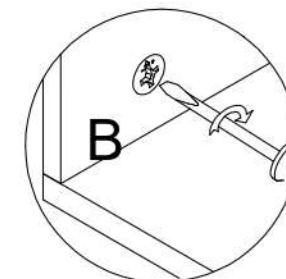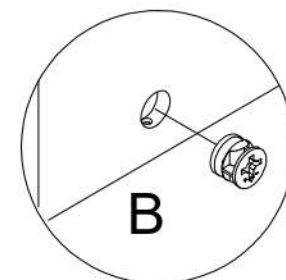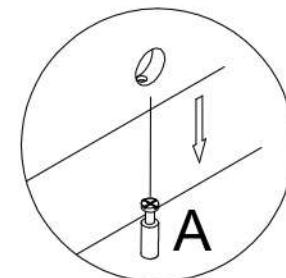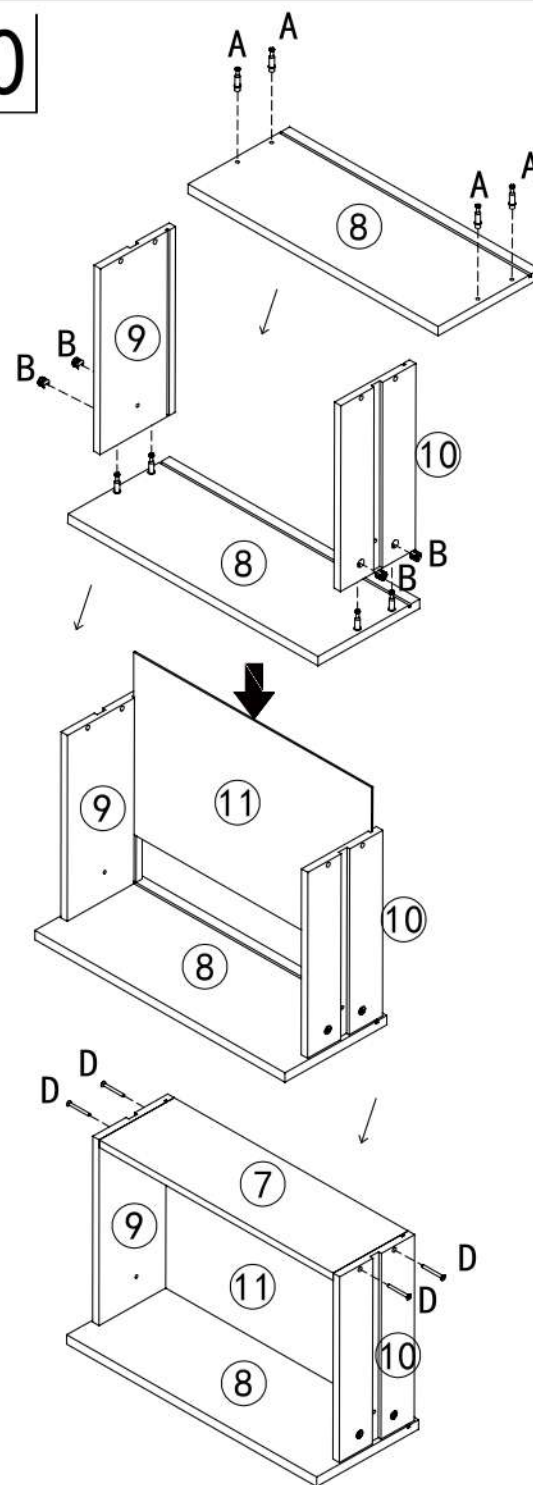





x2

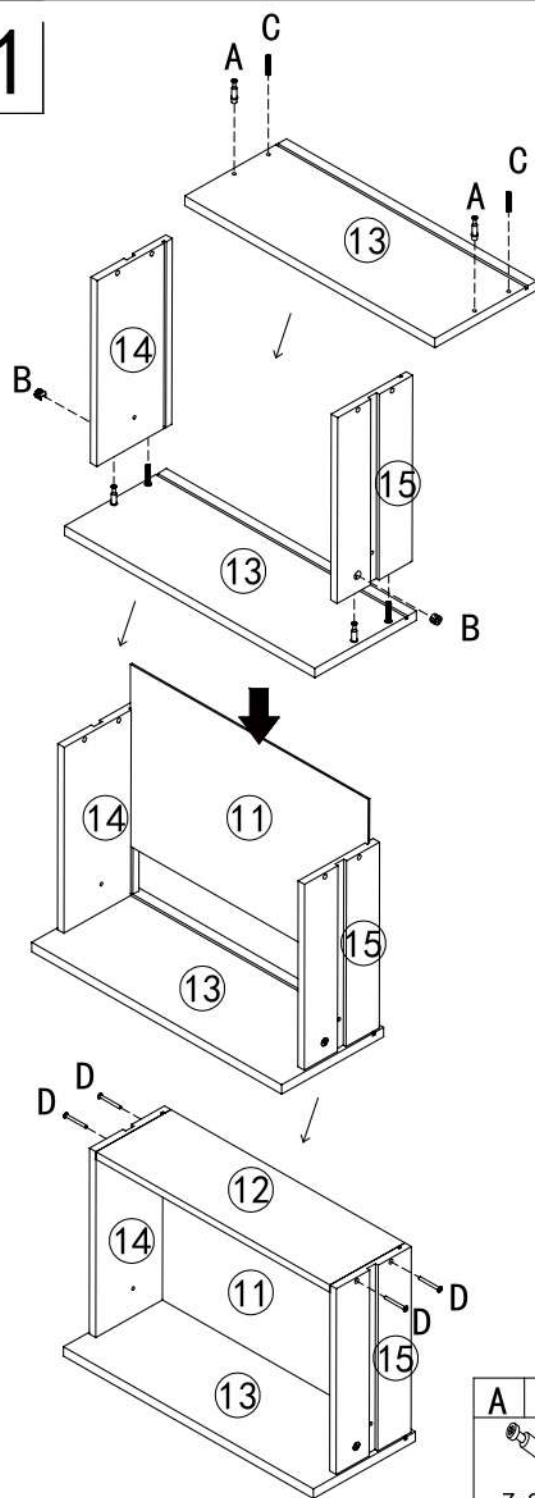
A	X8	B	X8	D	X8
7x35mm		12x10mm		M4x40mm	

11




A	X8	B	X8	C	X8	D	X16
							
7x35mm		12x10mm		Ø6x30mm		M4x40mm	


12

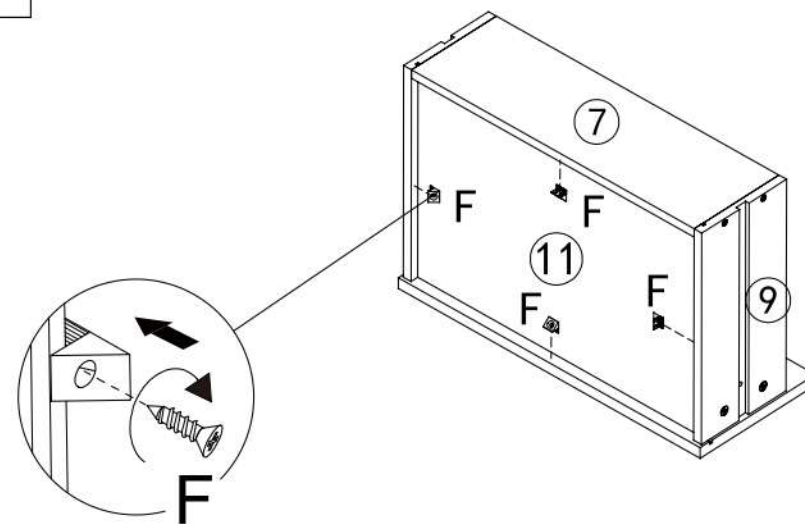


x2

F	X8
	
M3.5x12mm	



13

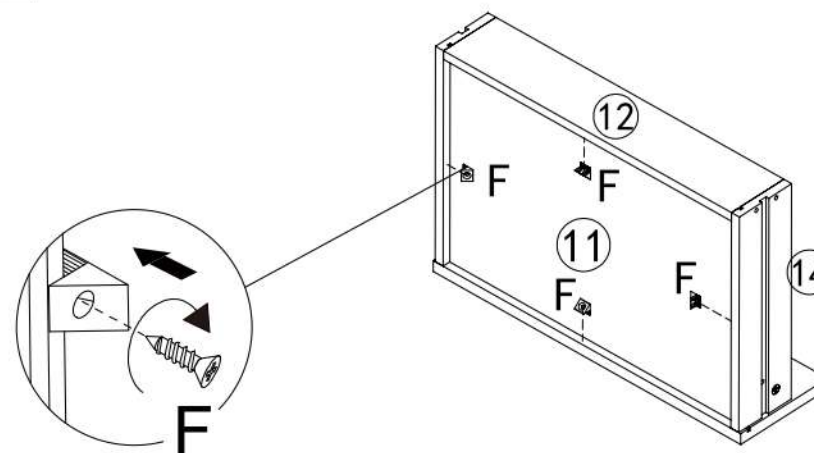

x4

F	X16
	
M3.5x12mm	

14

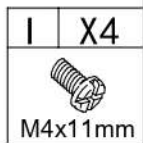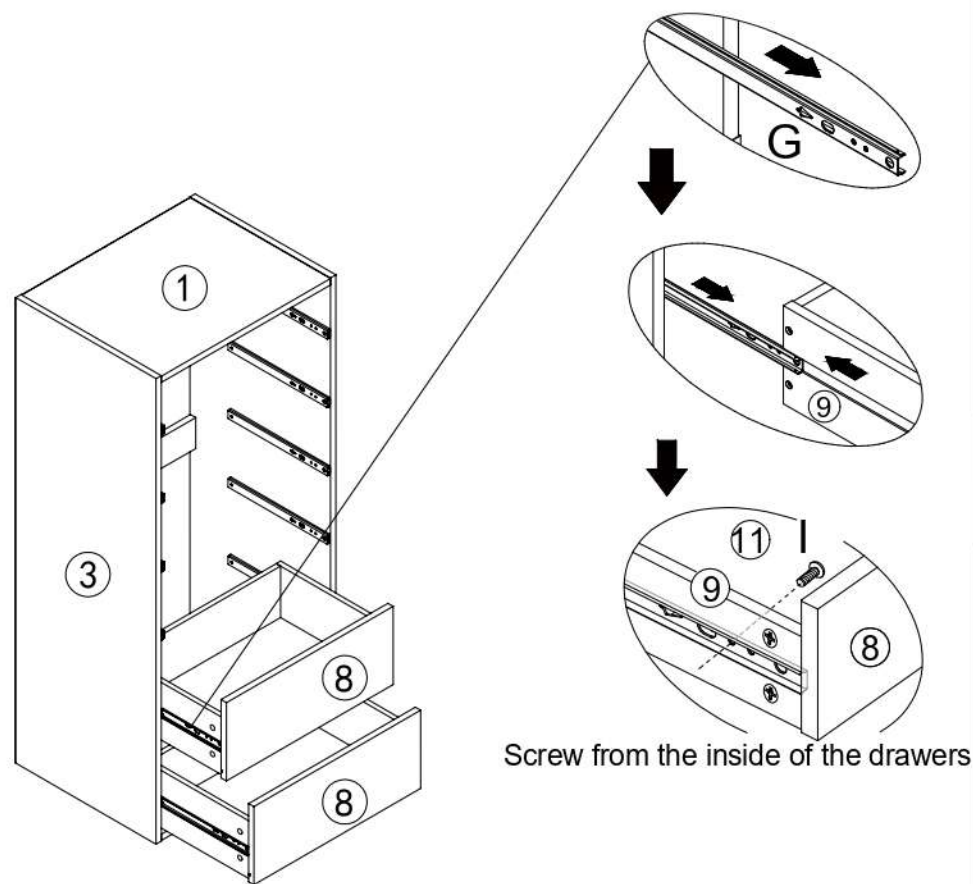

15

