


BED FRAME

MODEL:BF-BOSI-Q-WD

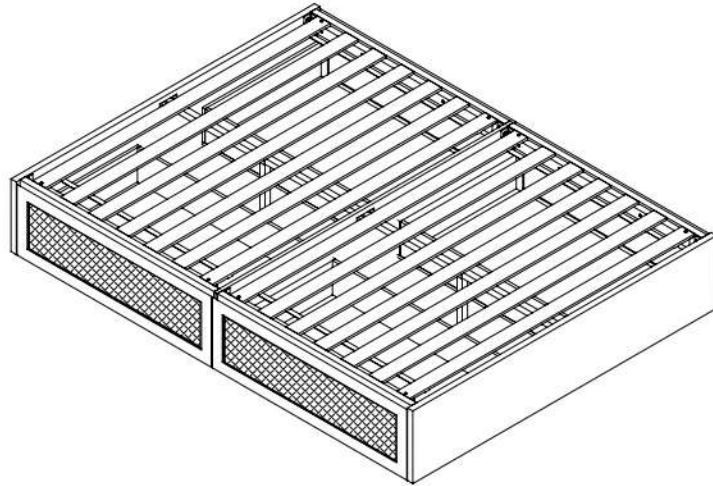

ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.






Two persons and tools required for assembly

HARDWARE


A	x8	B	x4	C	x4	D	x1	E	x16	F	x76	G	x16
M8x20mm	M8x50mm		M5	12x10mm	M4x40mm	7x35mm							
H	x28	I	x40	J	x32	K	x16	L	x4	M	x4	N	x12
Ø6x30mm	M4x20mm	M4x12mm											
O	x48	P	x8	Q	x1	R	x2	S	x8	T	x9		
M3x12mm	M4x30mm		M8x40mm	M4x14mm	15mm								

PARTS


Wipe with dry cloths

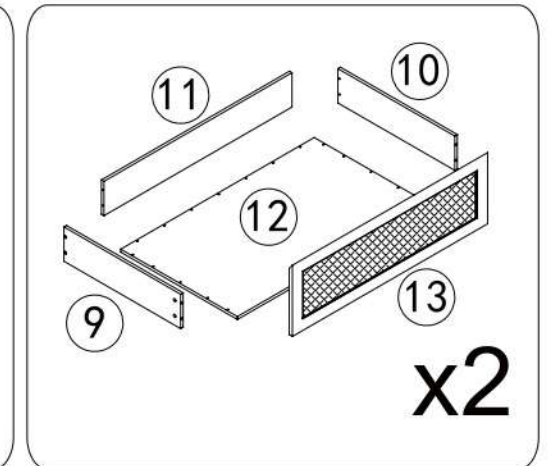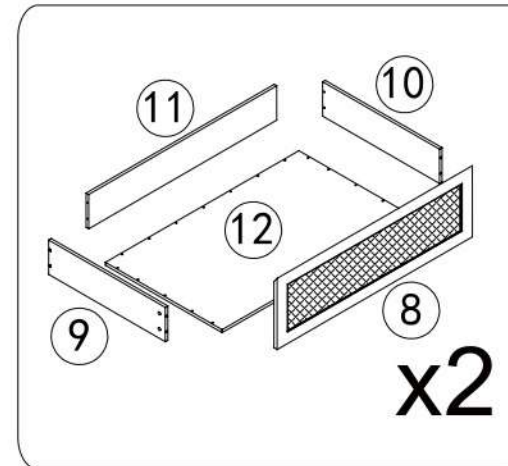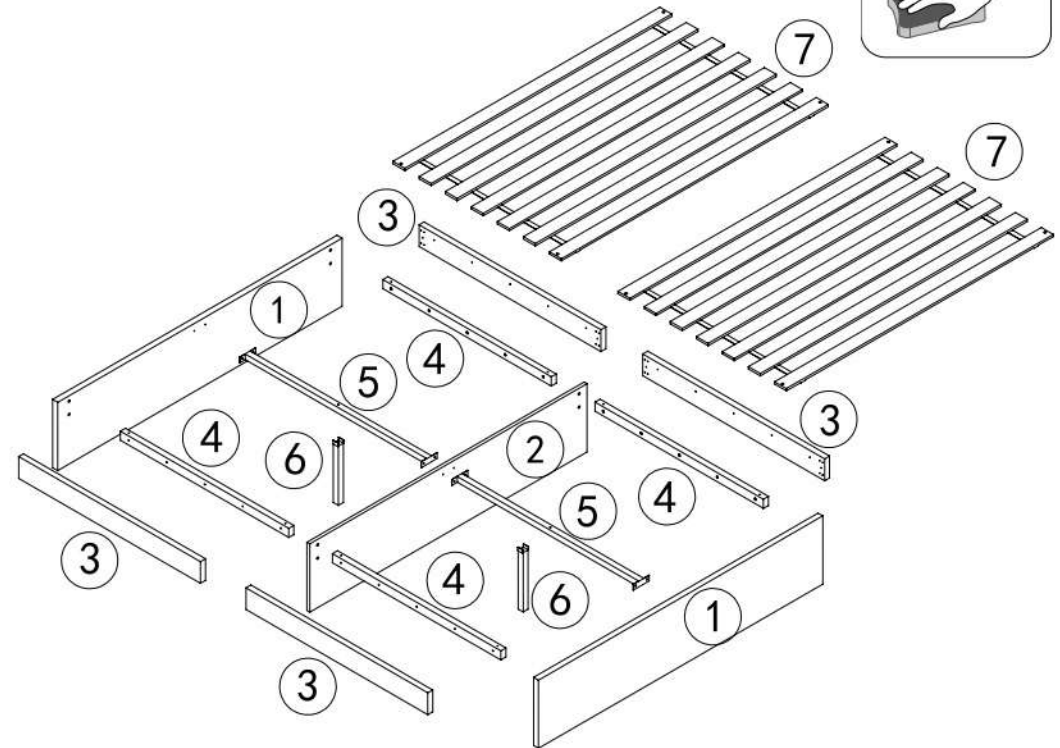


1

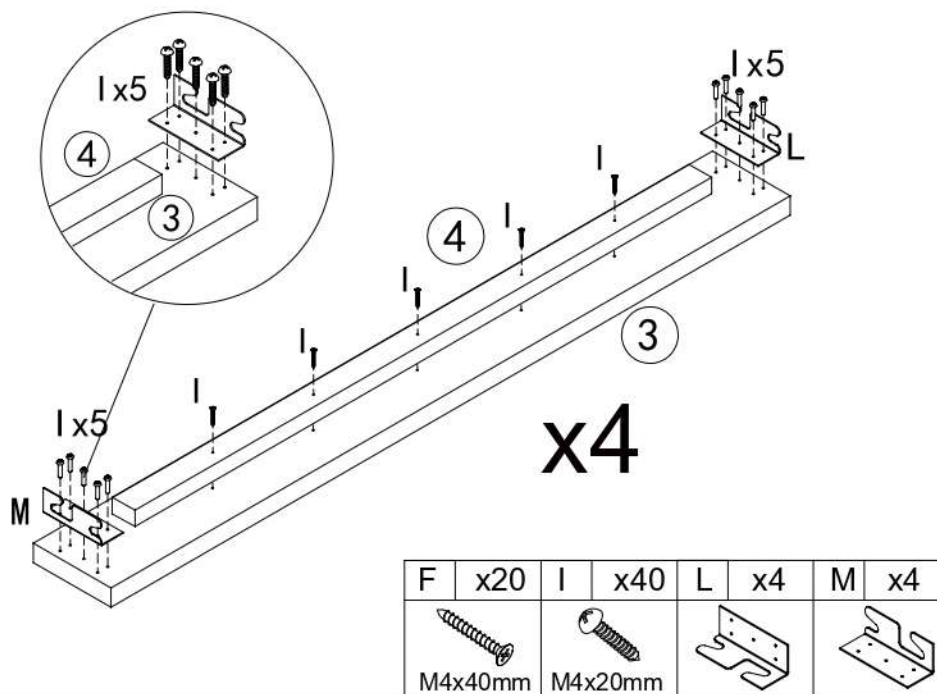


3

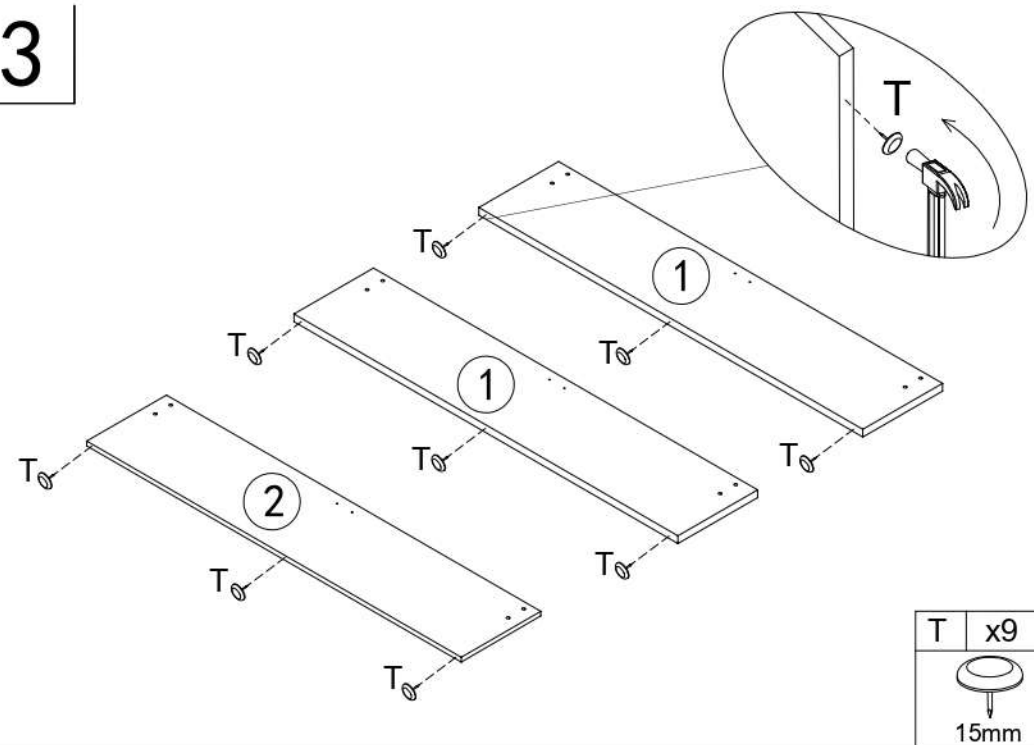


2

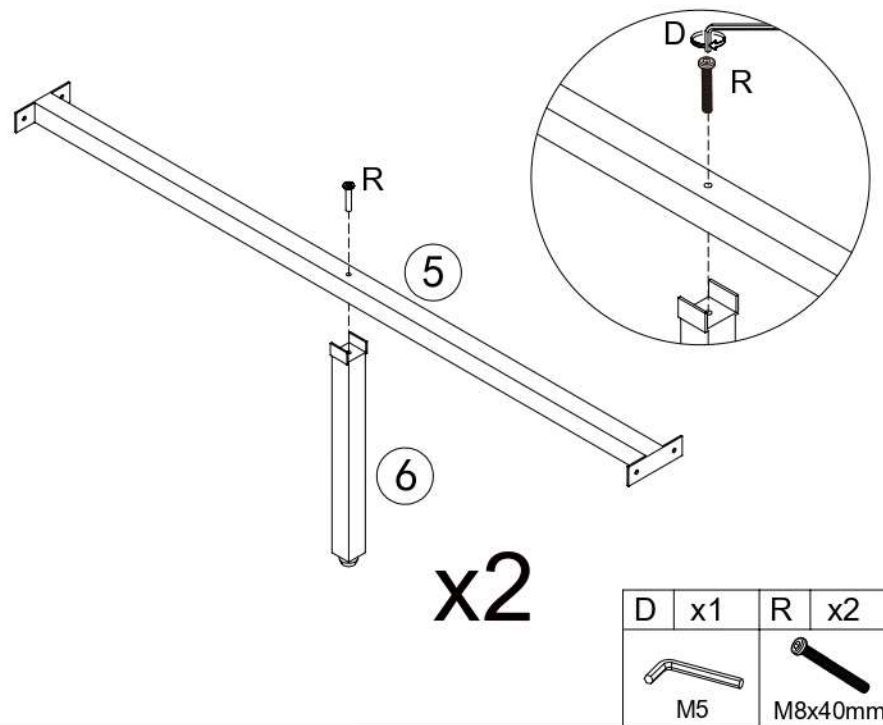

4

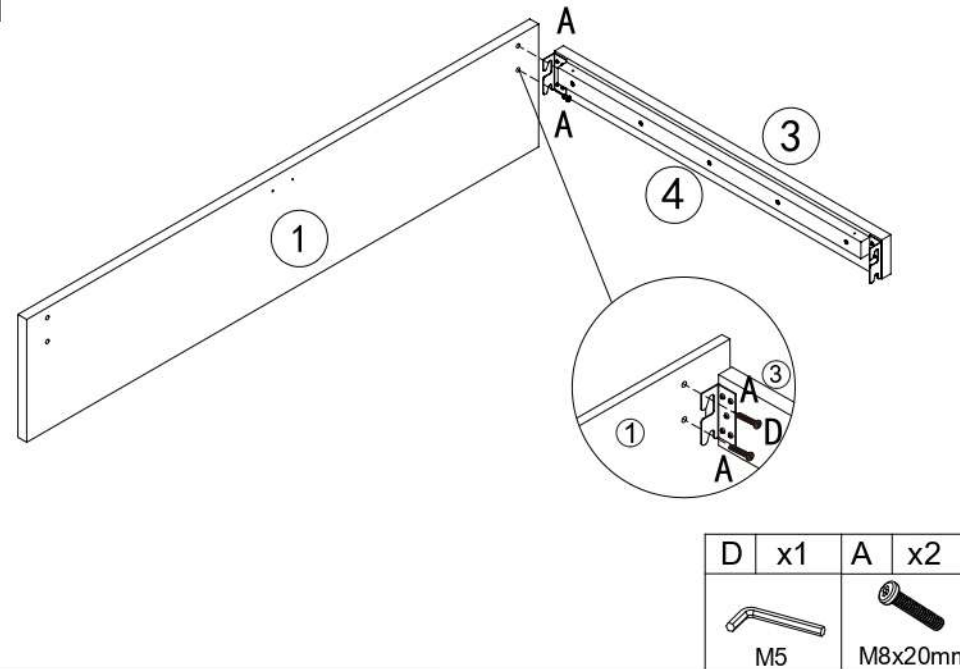


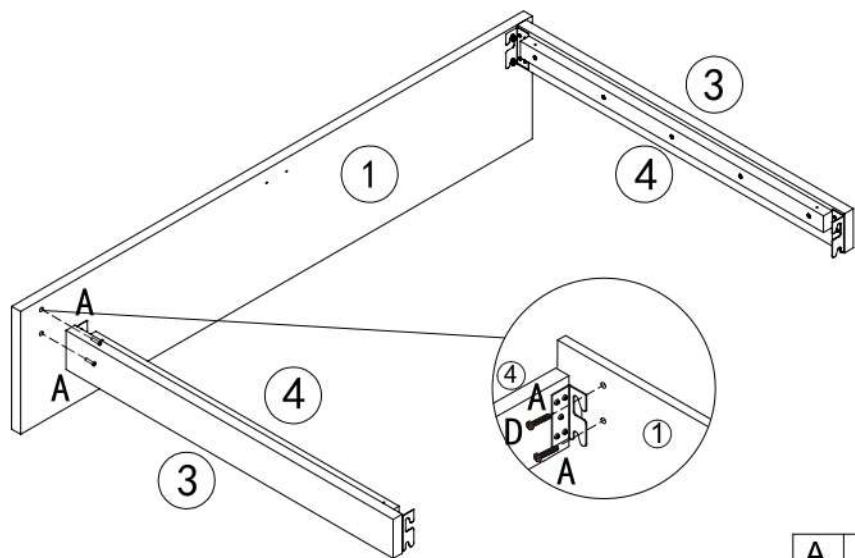

5




A	x2
	
M8x20mm	

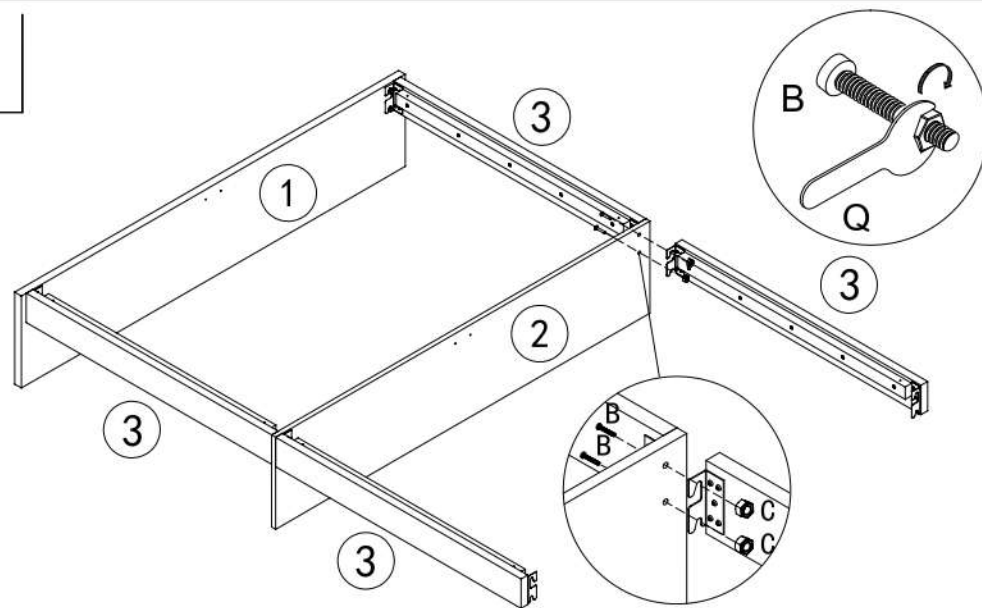


7




B	x2	C	x2
			
M8x50mm			

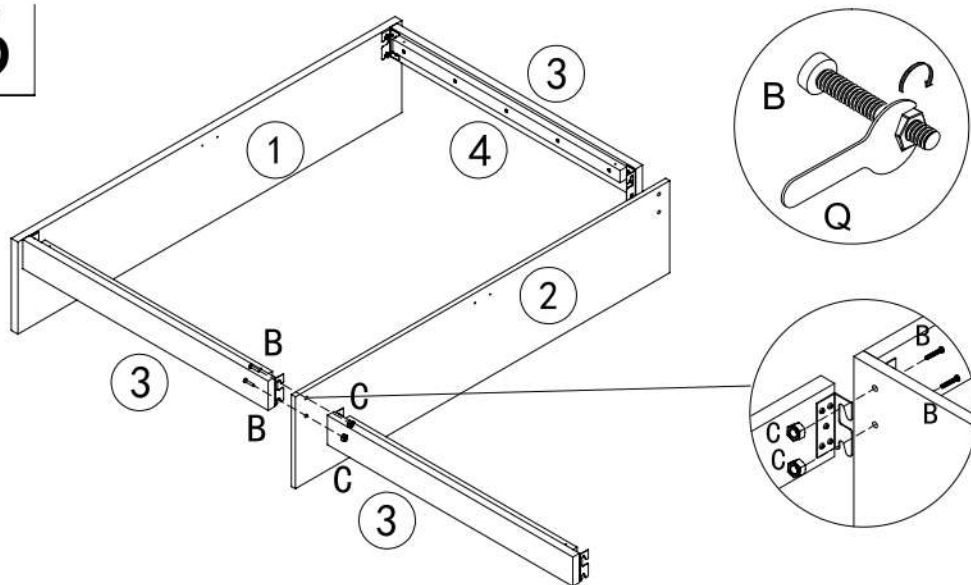6




Q	x1	B	x2	C	x2
					
		M8x50mm			

8

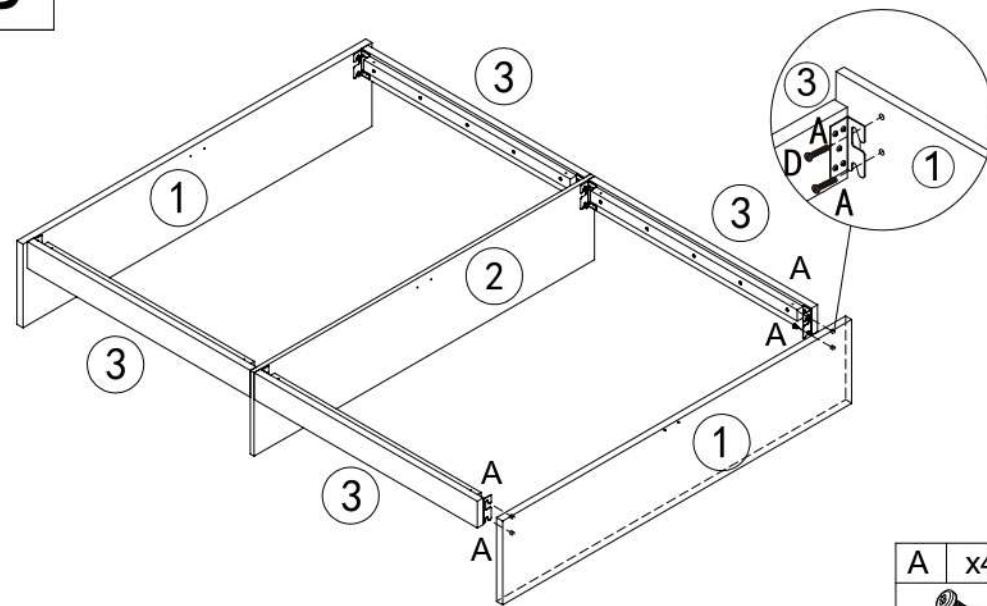






A	x4
	
M8x20mm	

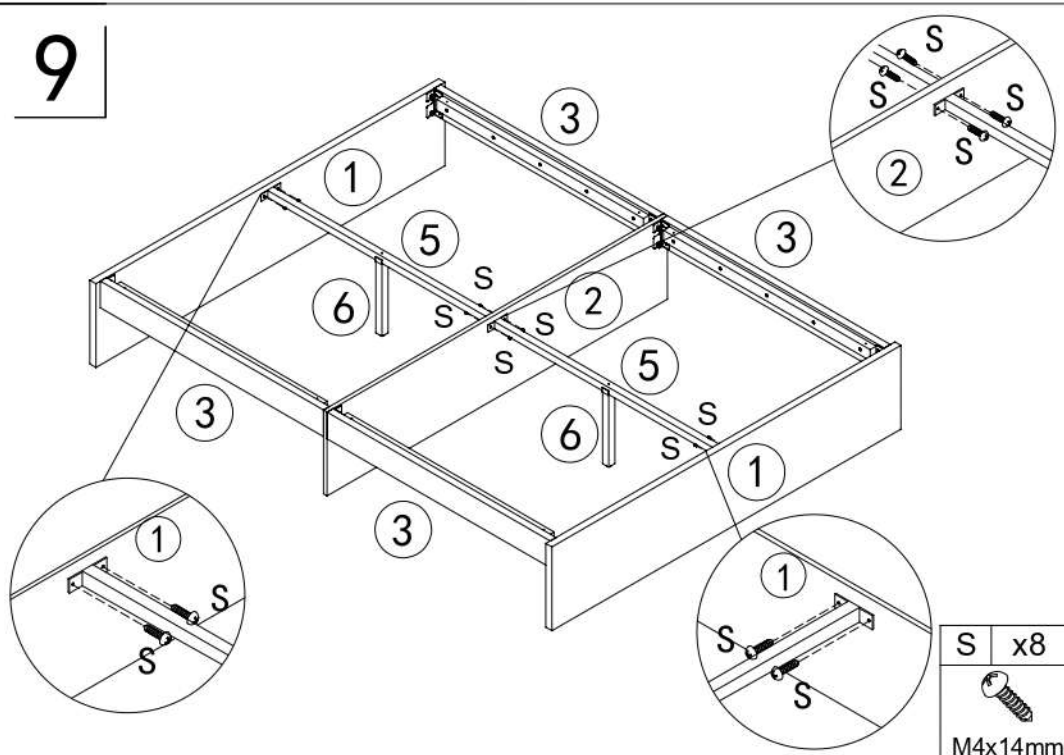9




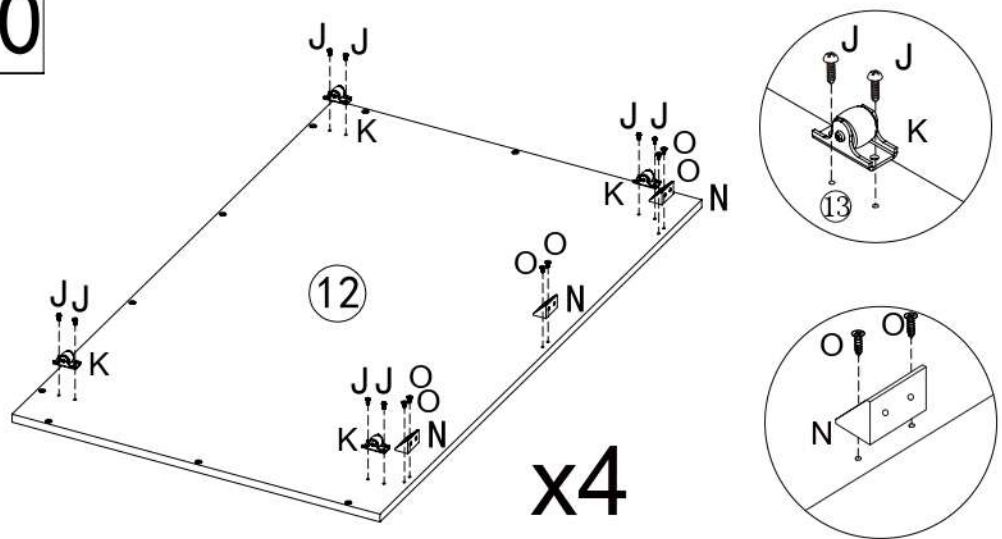




10

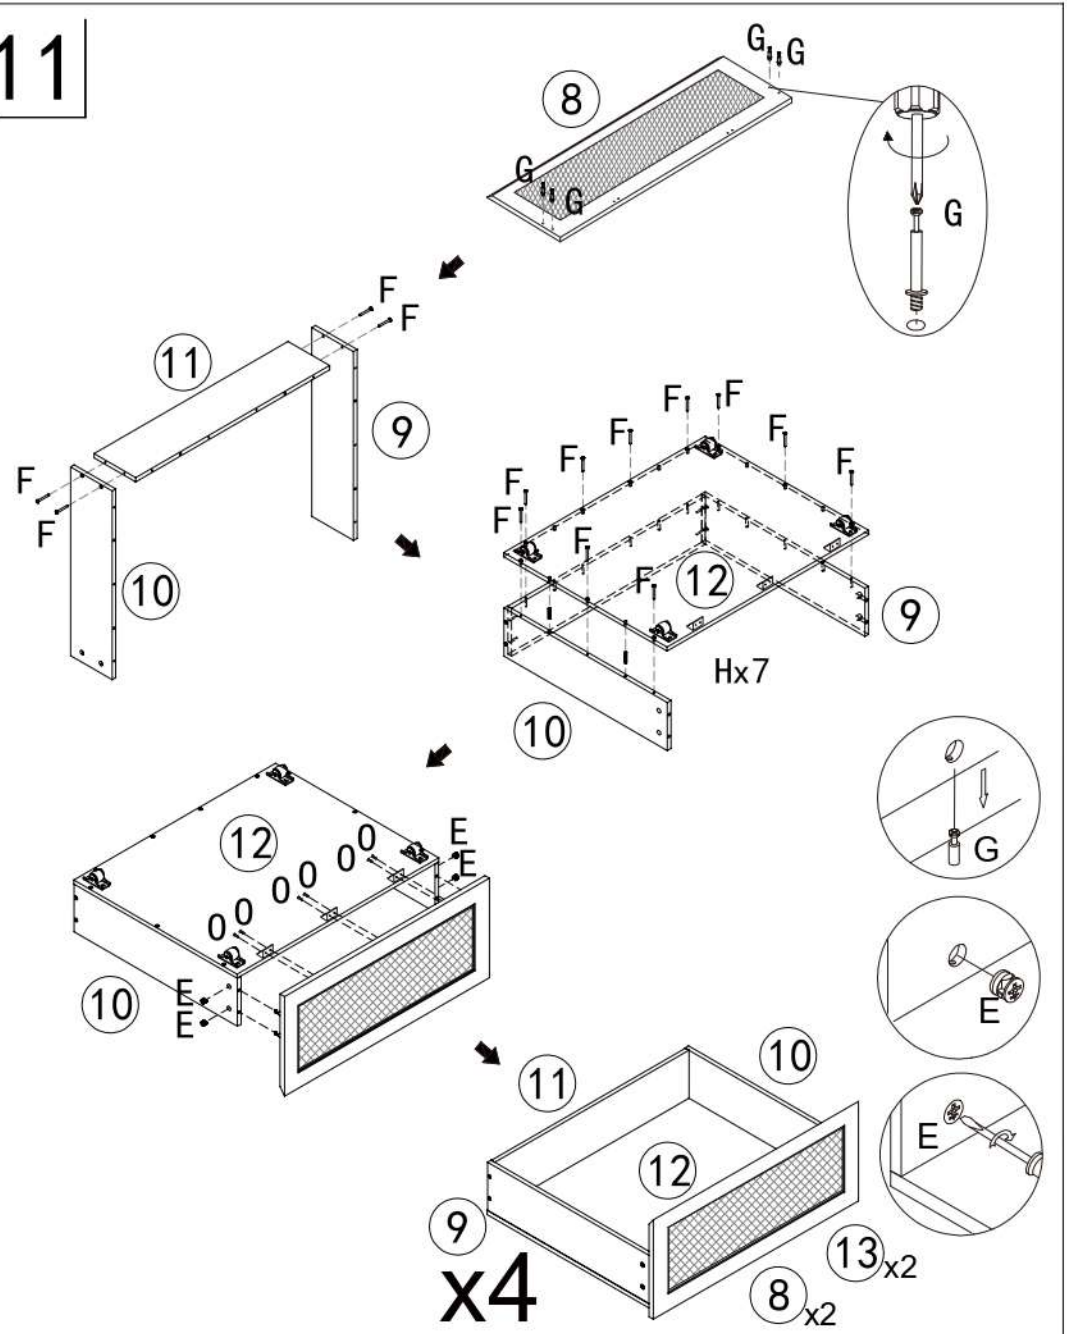


K	x16	N	x12	O	x24	J	x32
							
				M3x12mm	M4x12mm		

11




H	x28	O	x24	E	x16	F	x56	G	x16
									
Ø6x30mm		M3x12mm		12x10mm		M4x40mm		7x35mm	


12

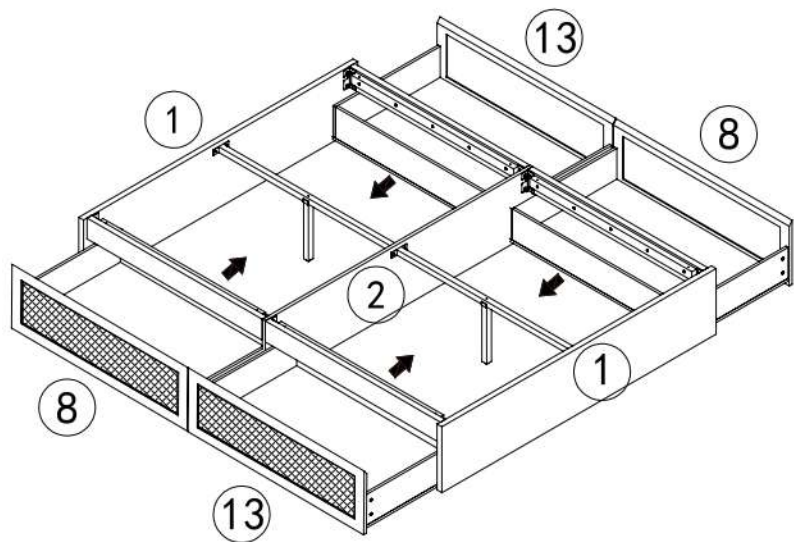


14

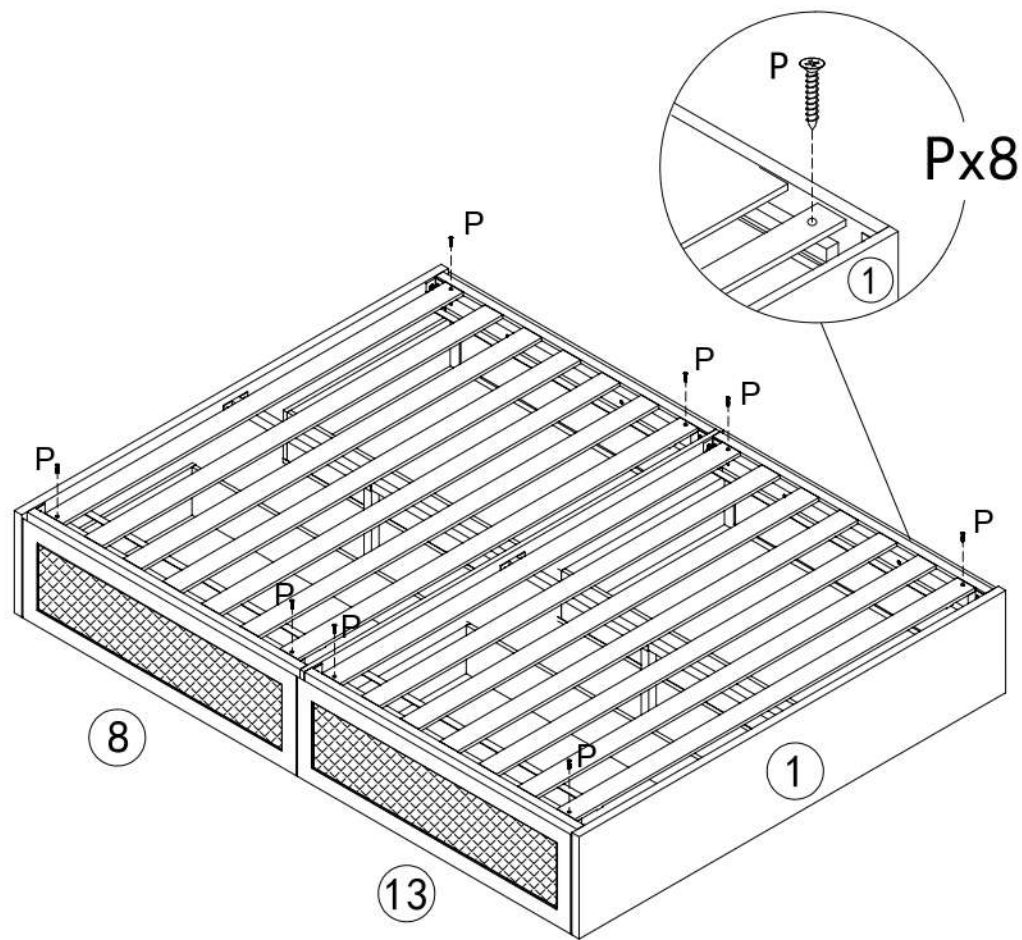

13

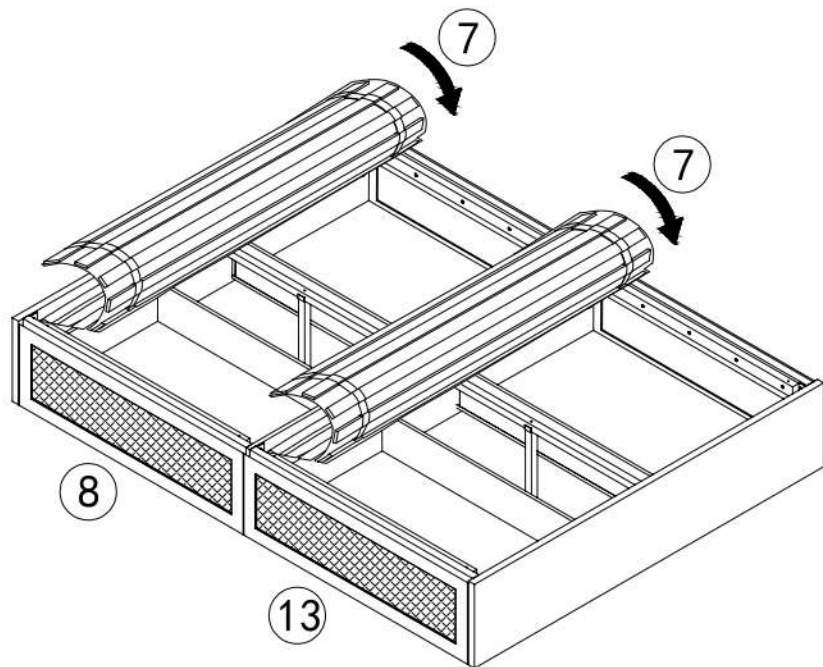

P	x8
	
M4x30mm	