


CHEST OF DRAWS

MODEL:COD-PUTI-6D-WH

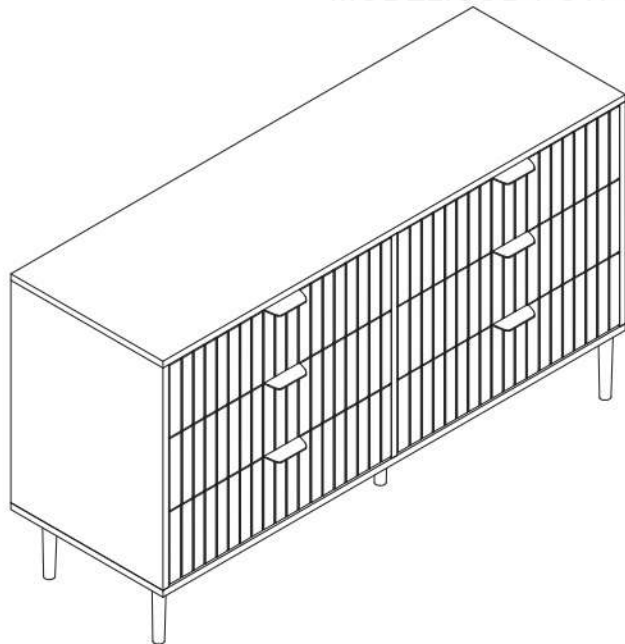

ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.




Two persons and
tools required for
assembly

HARDWARE


A	x36	B	x12	C	x12	D	x44	E	x12	F	x2
7x35mm		15x12mm		Ø6x30mm		M4x40mm		M4x11mm		M4x30mm	
G	x2	H	x48	I	x4	J	x12	K	x12	L	x2
M4x14mm		M3x12mm				M3x14mm					
M	x2	N	x6	O	x22	P	x24	Q	x4	R	x1
						12x10mm					

PARTS


Wipe with dry cloths

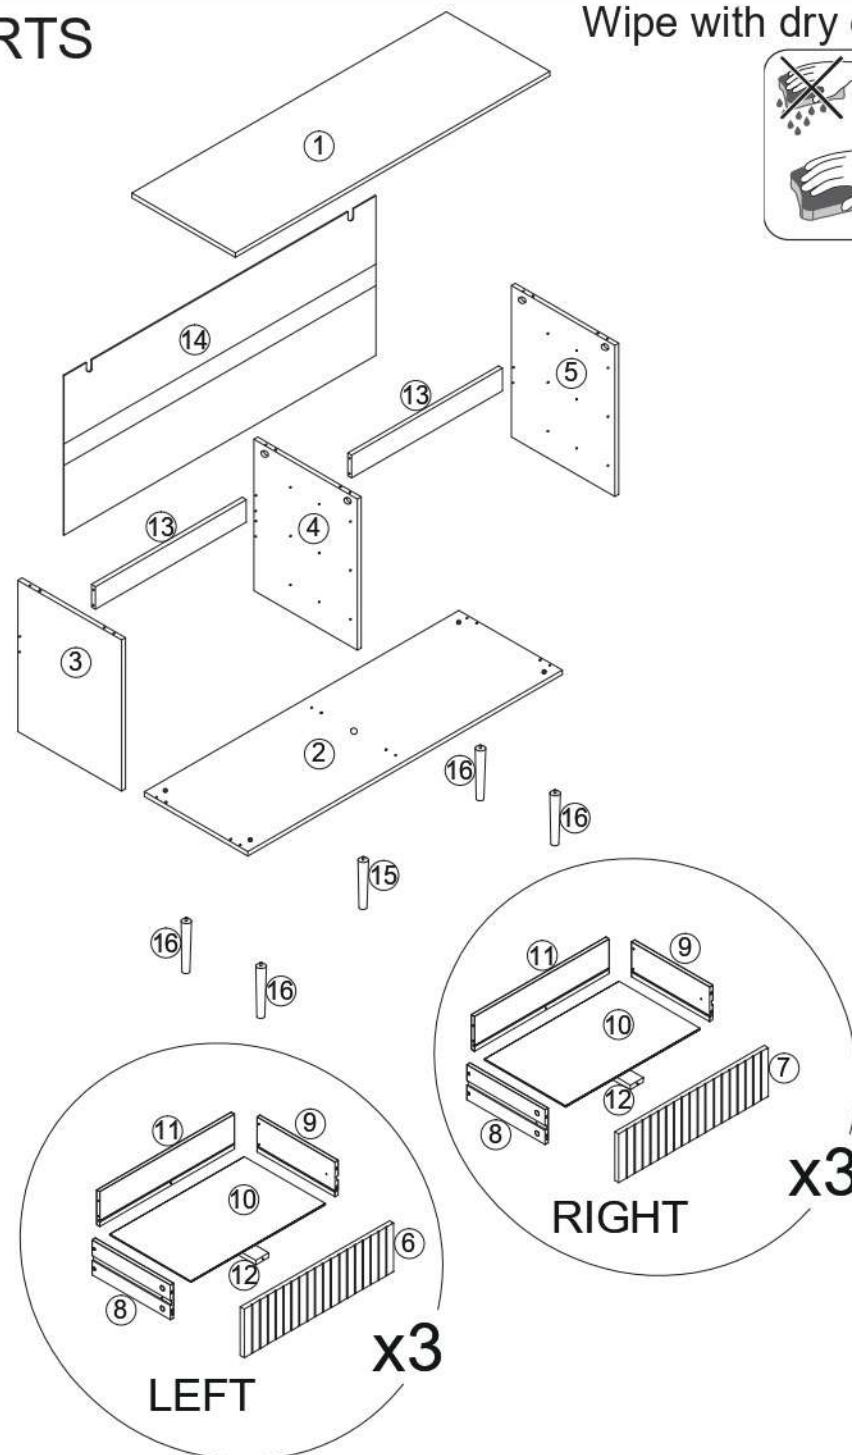

1

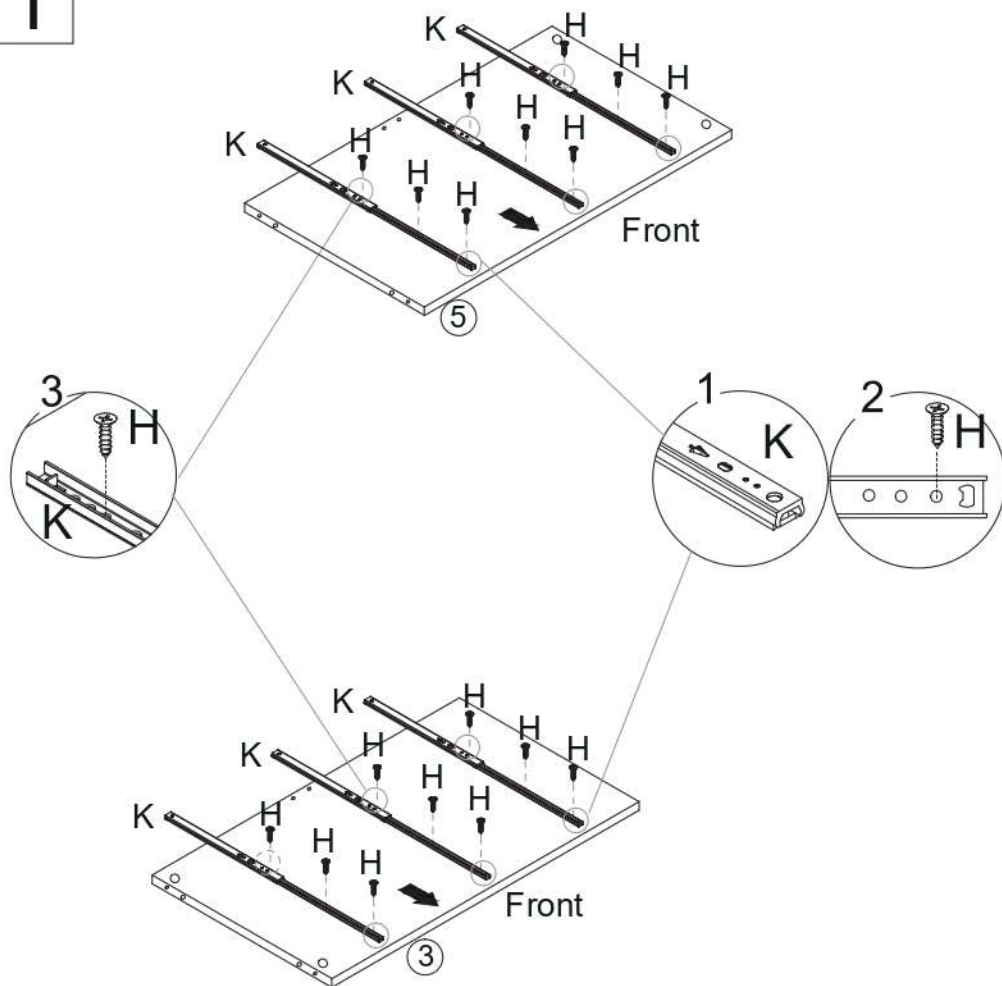


2

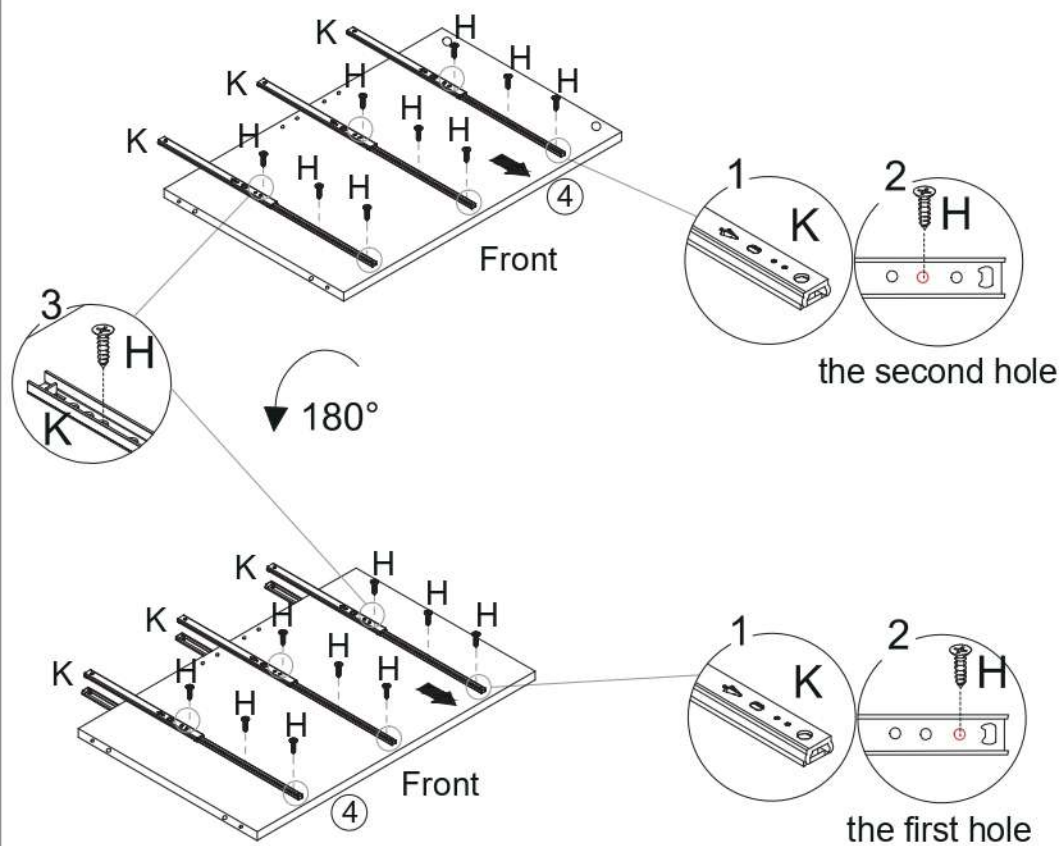

a.1



a.2

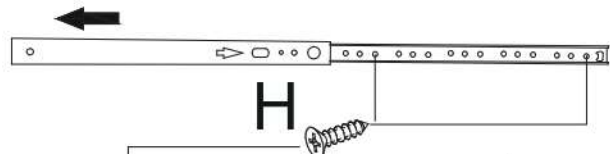

a.3




K	x6	H	x18
M3x12mm			

a.1



a.2

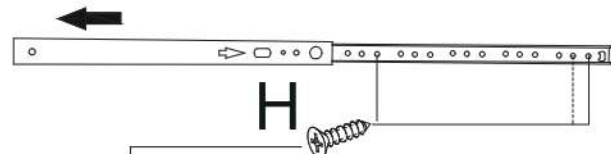




a.3




K	x6	H	x18
M3x12mm			

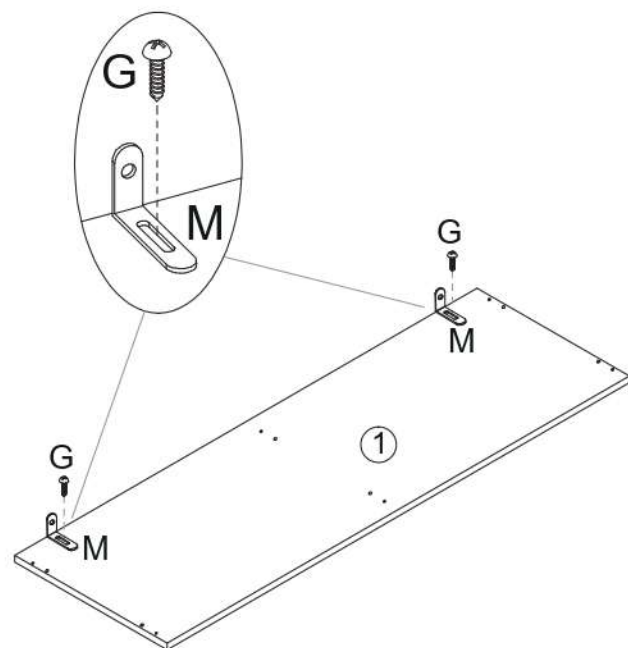
3




M	x2	G	x2
			
		M4x14mm	

5

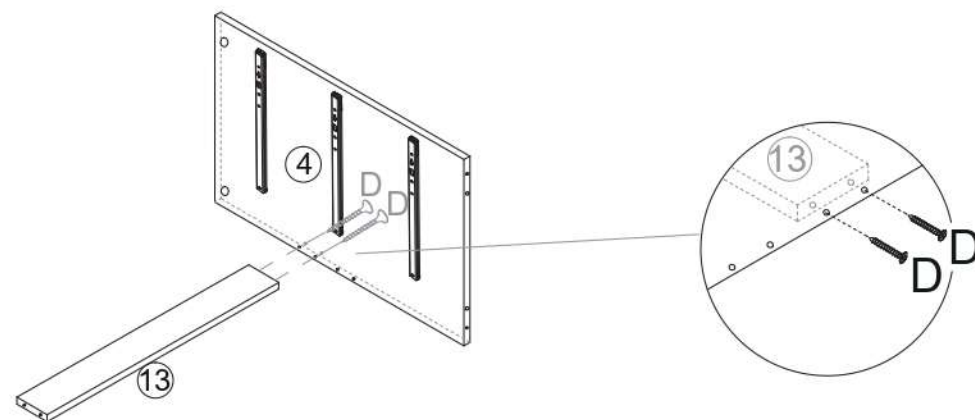


D	x2
	
M4x40mm	


4

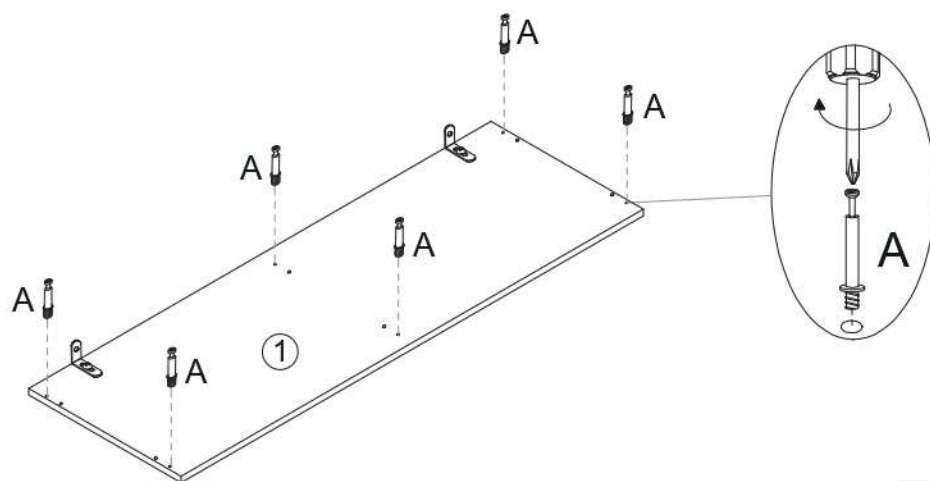


A	x6
	
7x35mm	

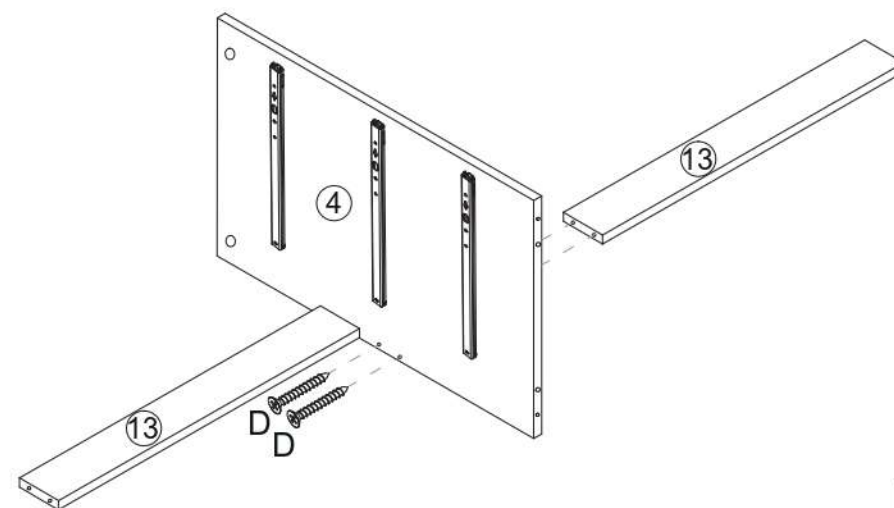

6




D	x2
	
M4x40mm	

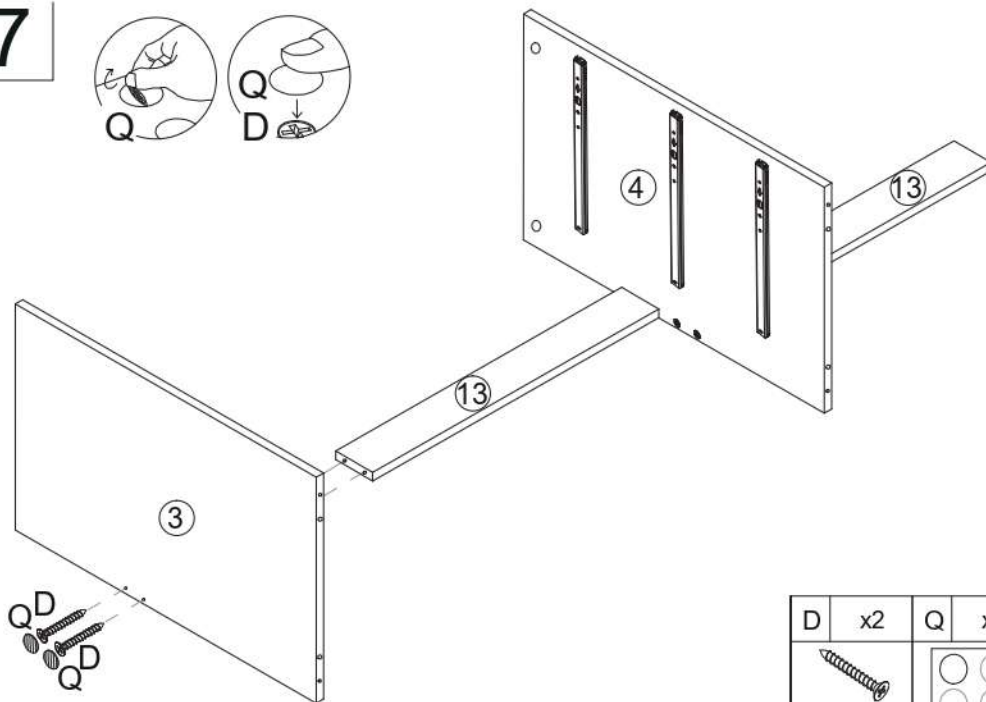7




D	x2	Q	x2
			
M4x40mm			

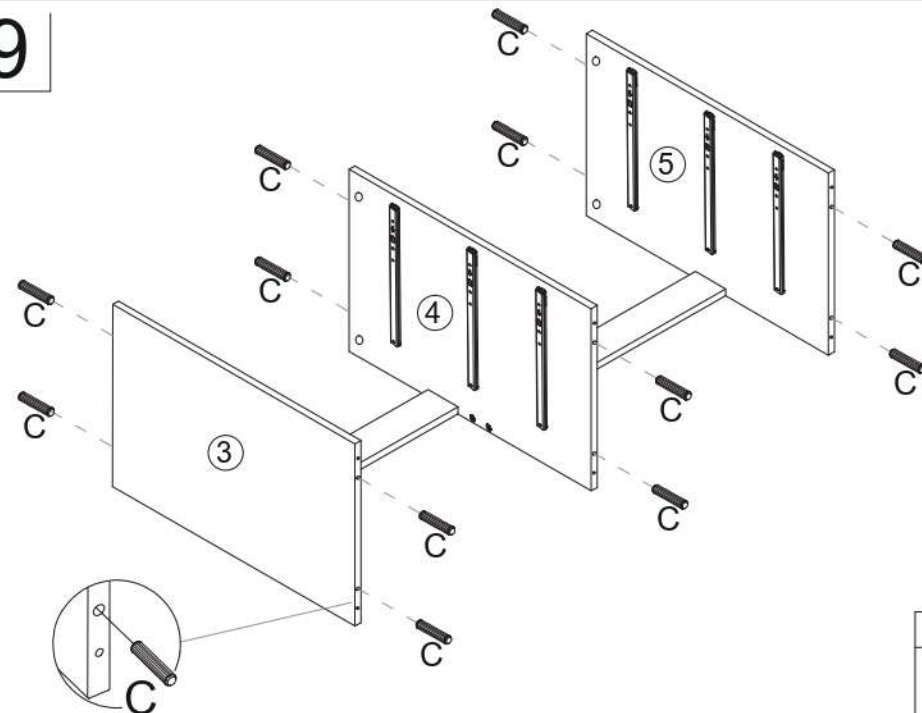

9







C	x12
	
Ø6x30mm	

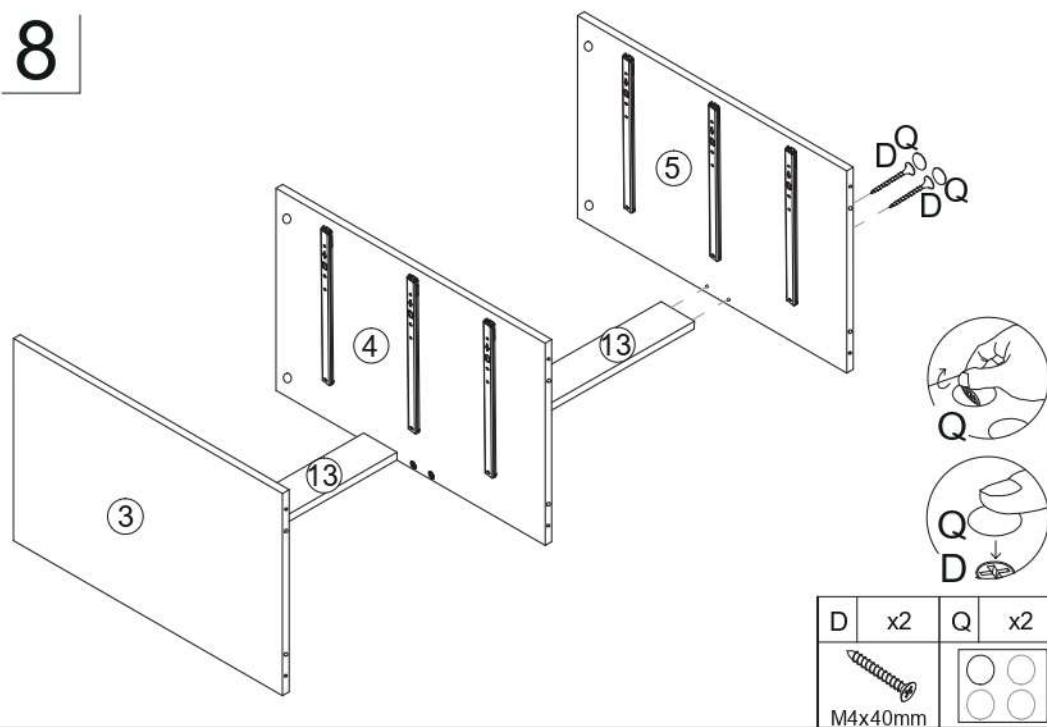
8




D	x2	Q	x2
			
M4x40mm			

10

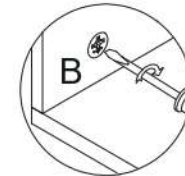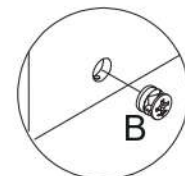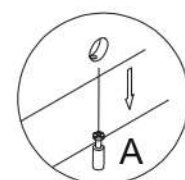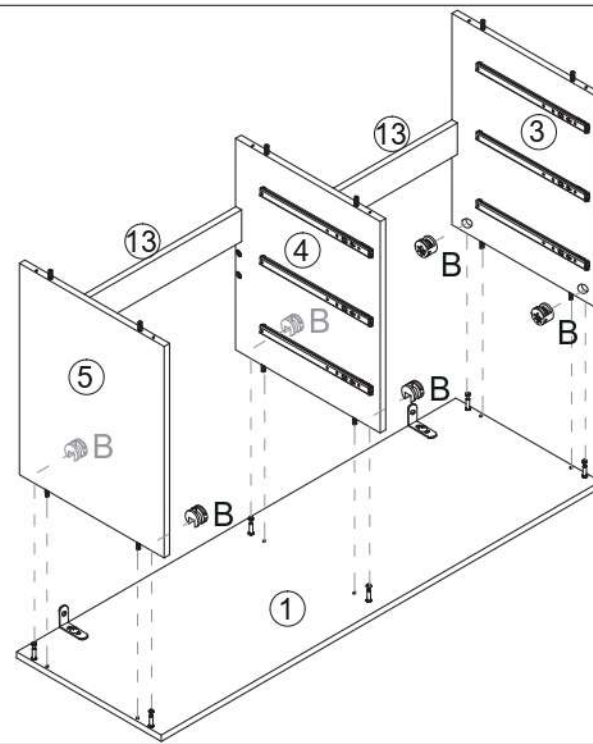


B	x6
	
15x12mm	

11

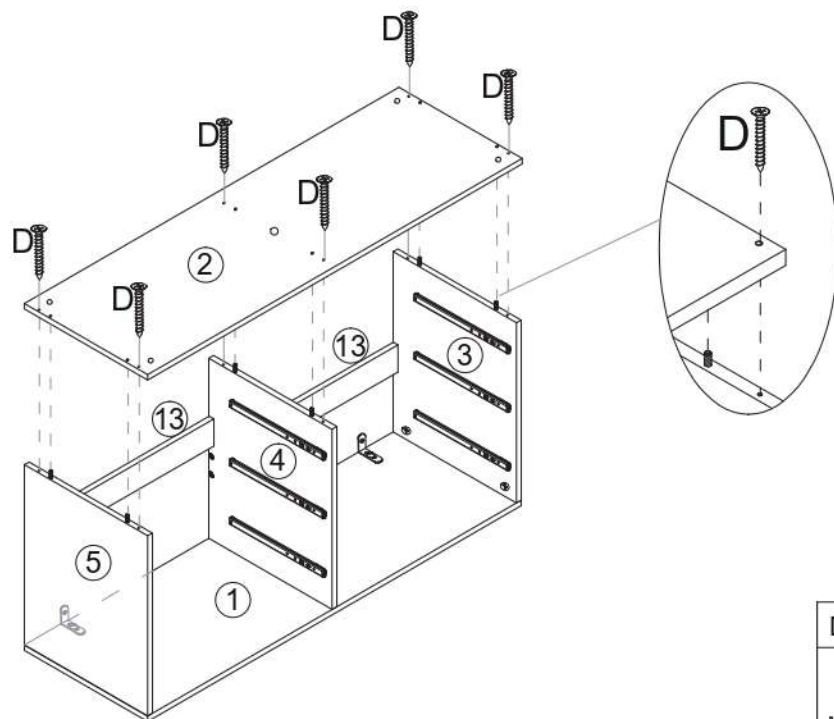


D	x6
	
M4x40mm	


13

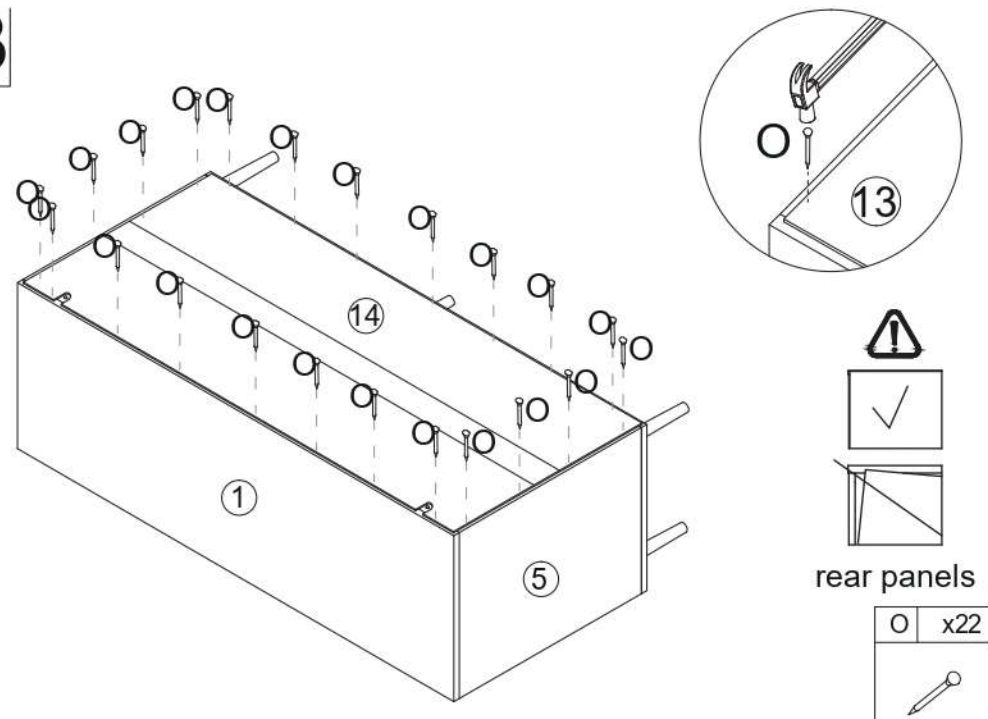



rear panels


O	x22
	

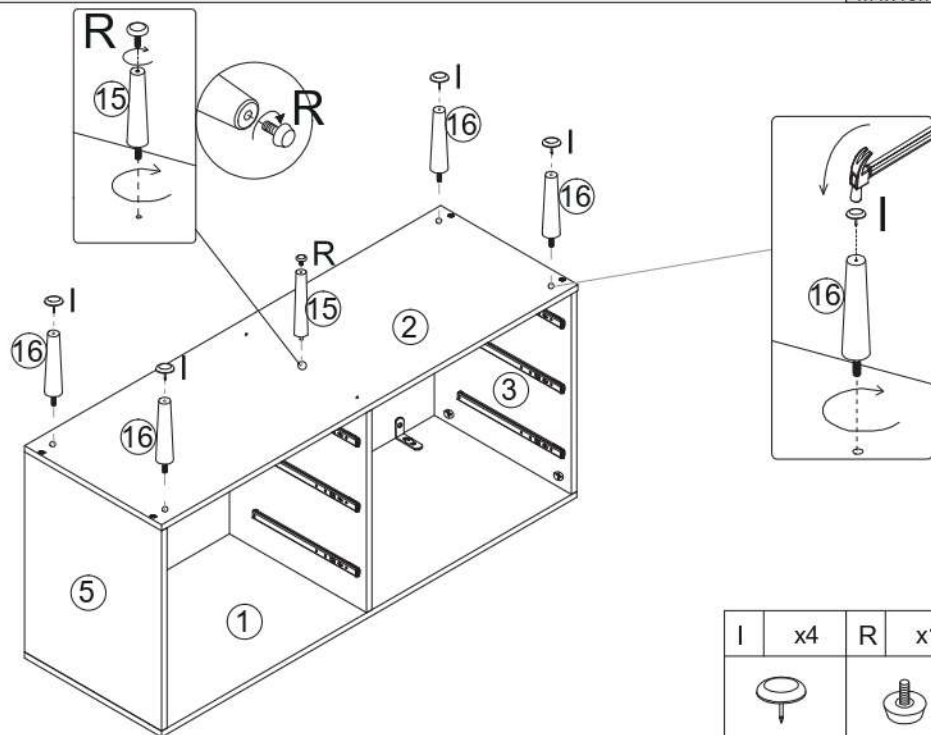12





I	x4	R	x1
			

14

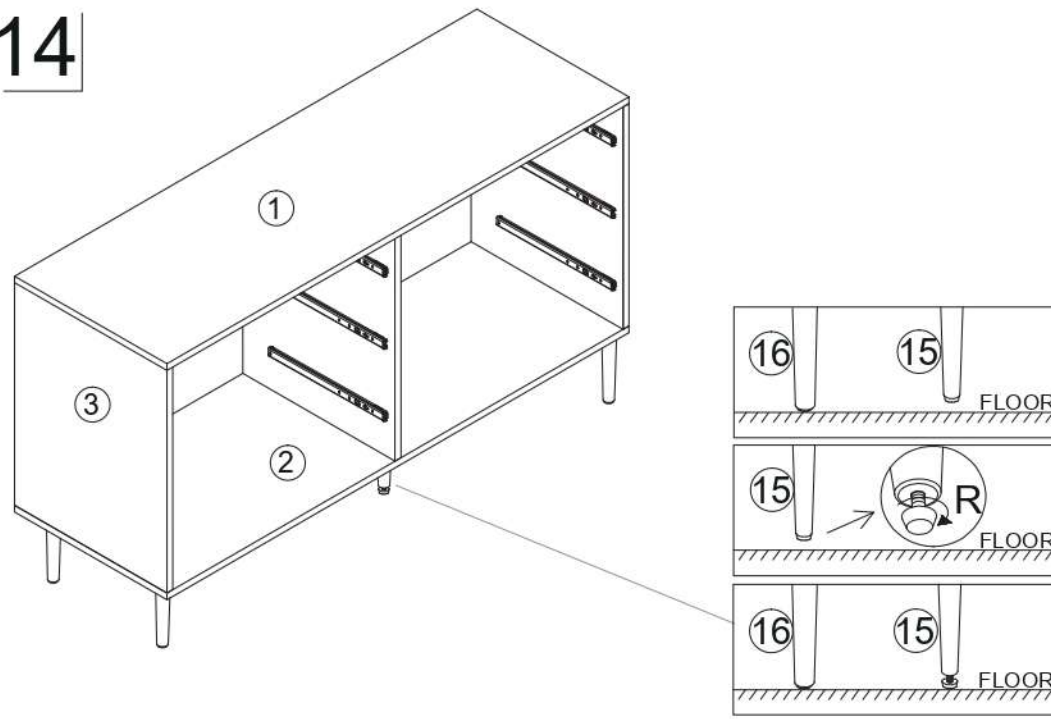


15

Pre-drill hole in wall

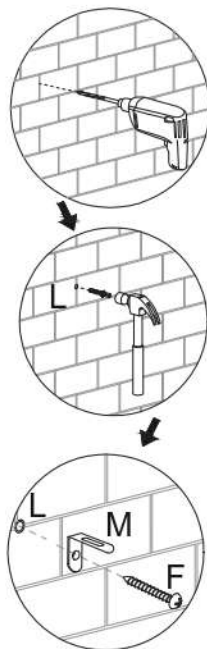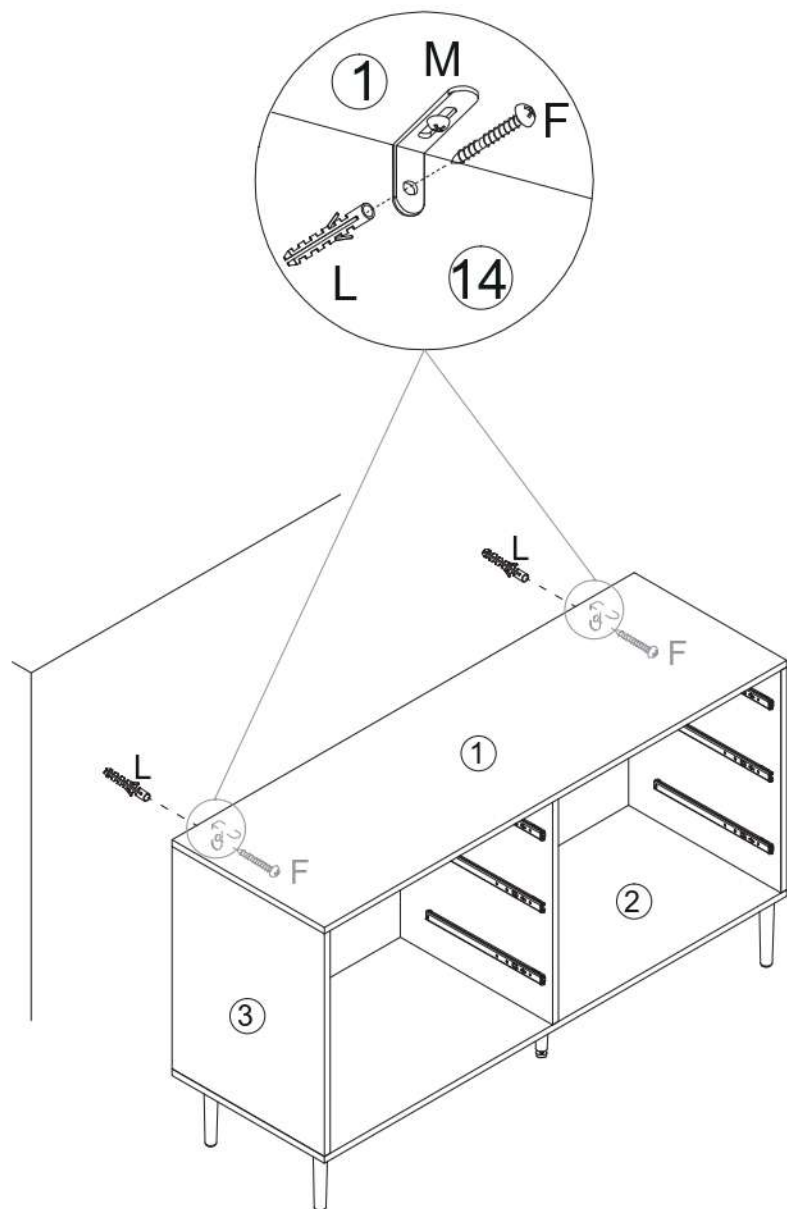

L	x2	F	x2
		M4x30mm	



16

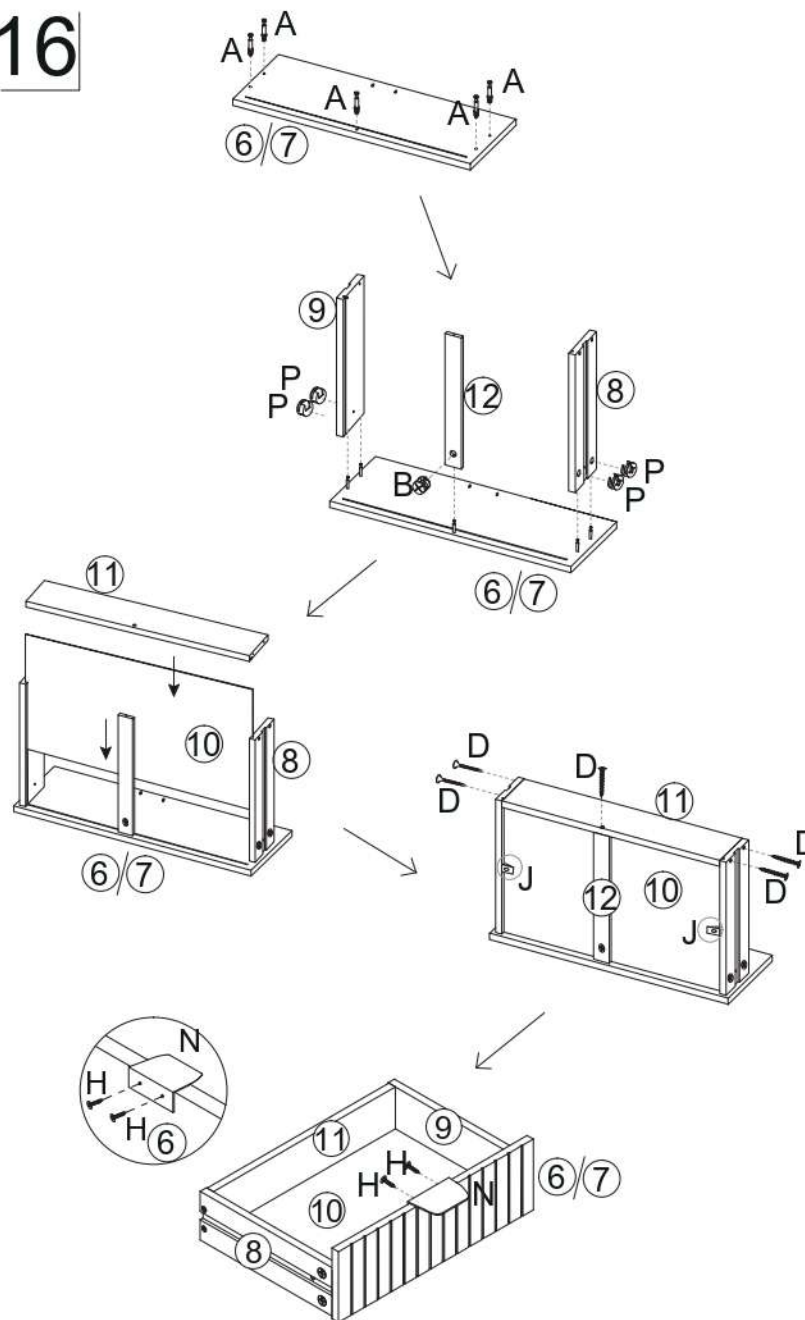

x6

A	x30	B	x6	D	x30	P	x24	N	x6	H	x12	J	x12
7x35mm		15x12mm		M4x40mm		12x10mm				M3x12mm		M3x14mm	

17 Insert the LEFT drawers into the corresponding compartments as shown.

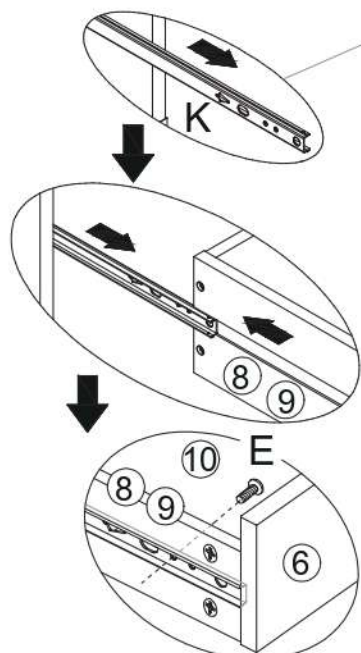
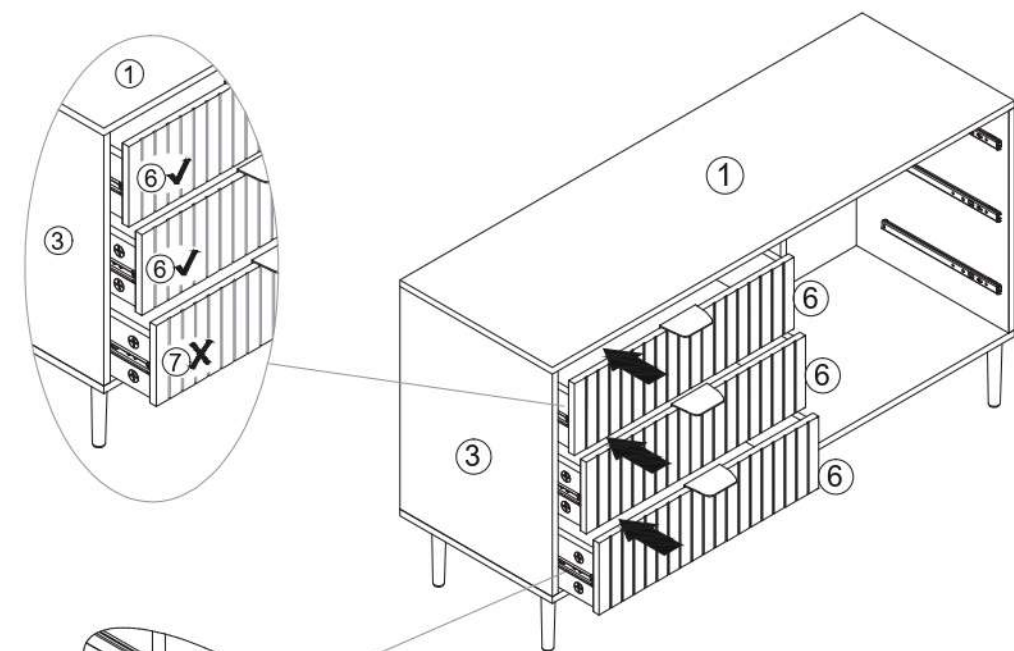


Screw from the inside of the drawers

6 x3



18 Insert the RIGHT drawers into the corresponding compartments as shown.

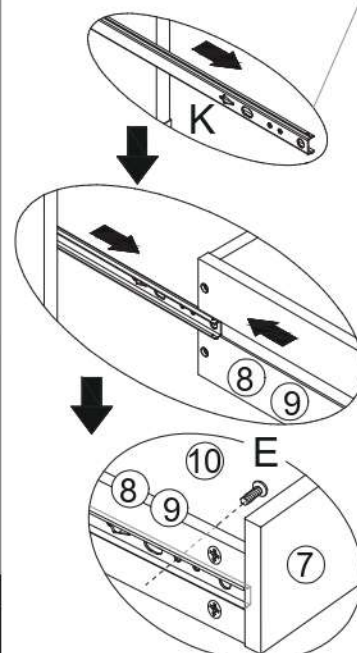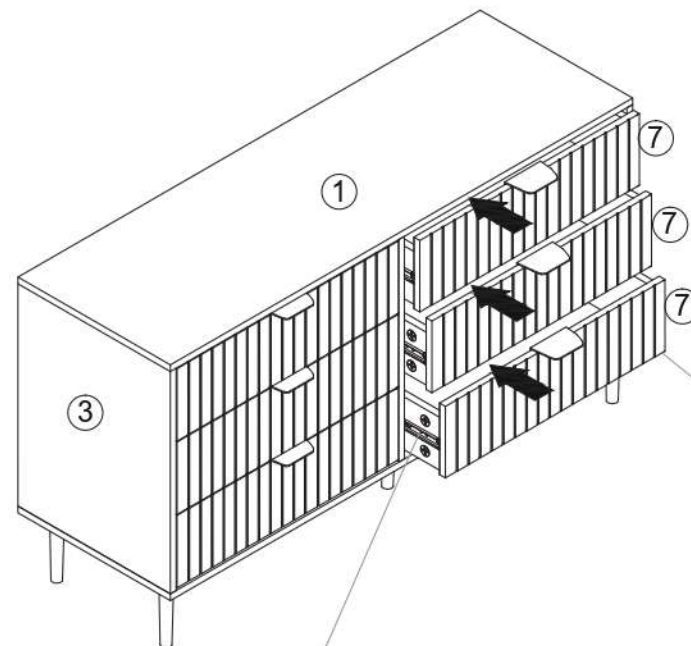

Screw from the inside of the drawers

7 x3

