


ASSEMBLY DIAGRAM

POLO BED


BF-B-POLO-KS/BF-B-POLO-D/BF-B-POLO-Q

IMPORTANT NOTE:



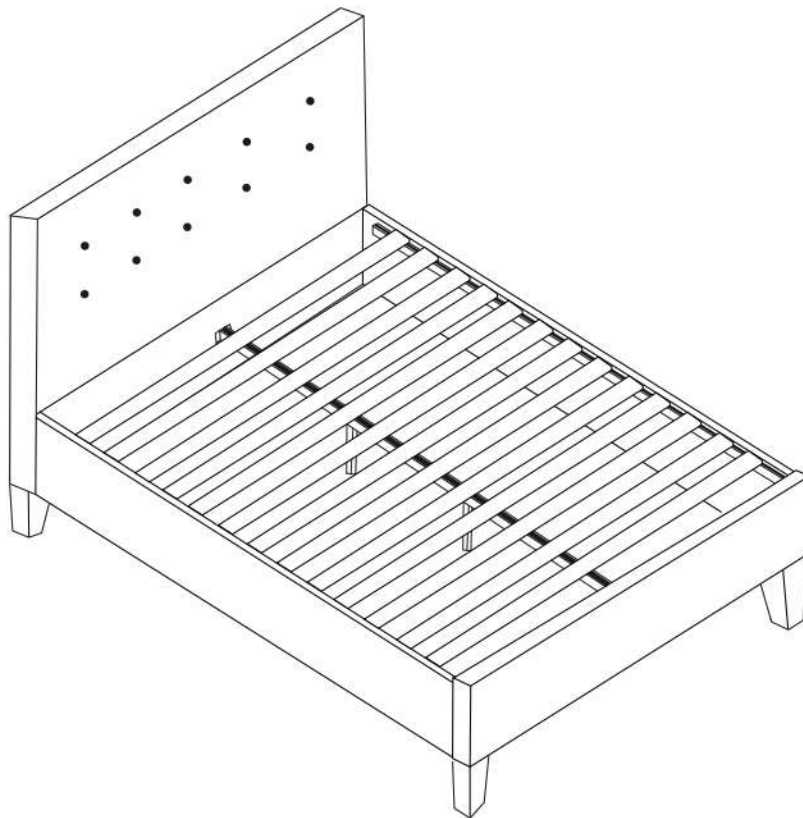



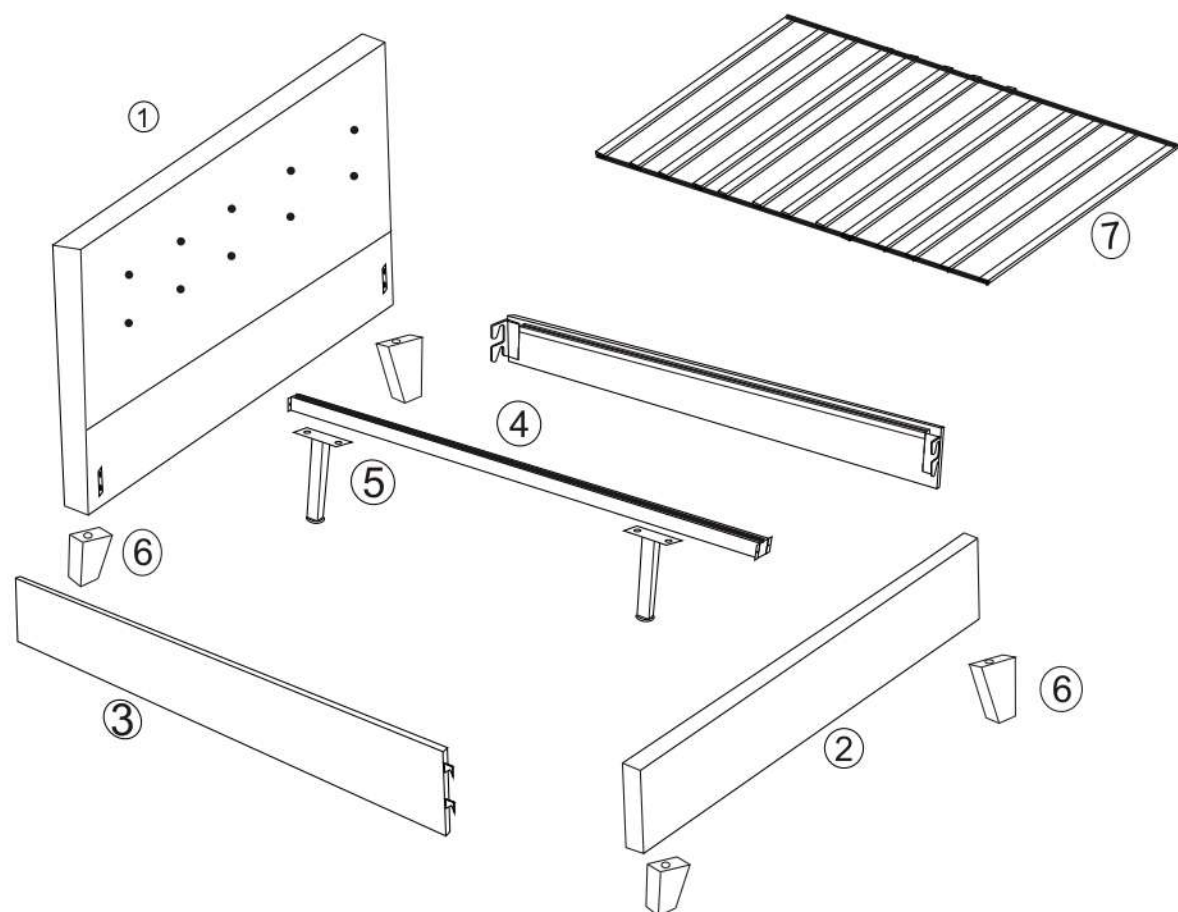


- * PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- * DO NOT TIGHTEN ALL SCREWS UNTIL THE BED IS FULLY SET-UP.



Parts







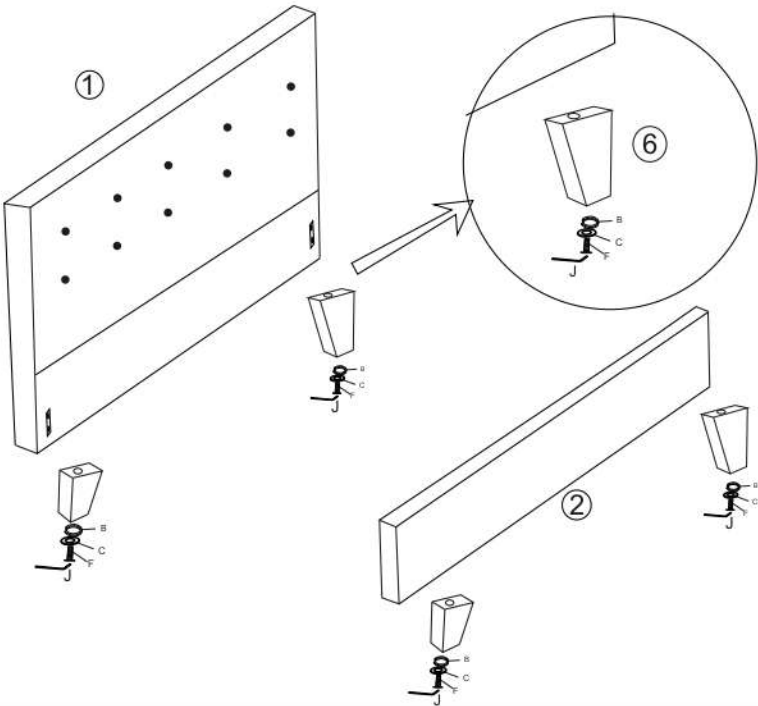
Fittings

A  Bolts (M8x30mm) 12pcs	B  Spring Washer 12pcs	C  Flat Washer 12pcs	E  Bolts (M8x40mm) 4pcs	F  Bolts (M8x100mm) 4pcs
H  Nuts 4pcs	I  Spanner 1pc	J  M6 Allen Key 1pc	G  Screw (4.0x35mm) 6pcs	

Please refer to the instruction words before installing it.





Step 1


(F) 	(J) 	(B) 	(C) 
Bolts (M8x 100mm) 4pcs	M6 Allen Key 1pc	Spring Washer 4pcs	Flat Washer 4pcs



Attach the legs (6) to the headboard (1) and footboard (2) using hardware parts F,B,C and "M6 allen key (J) .



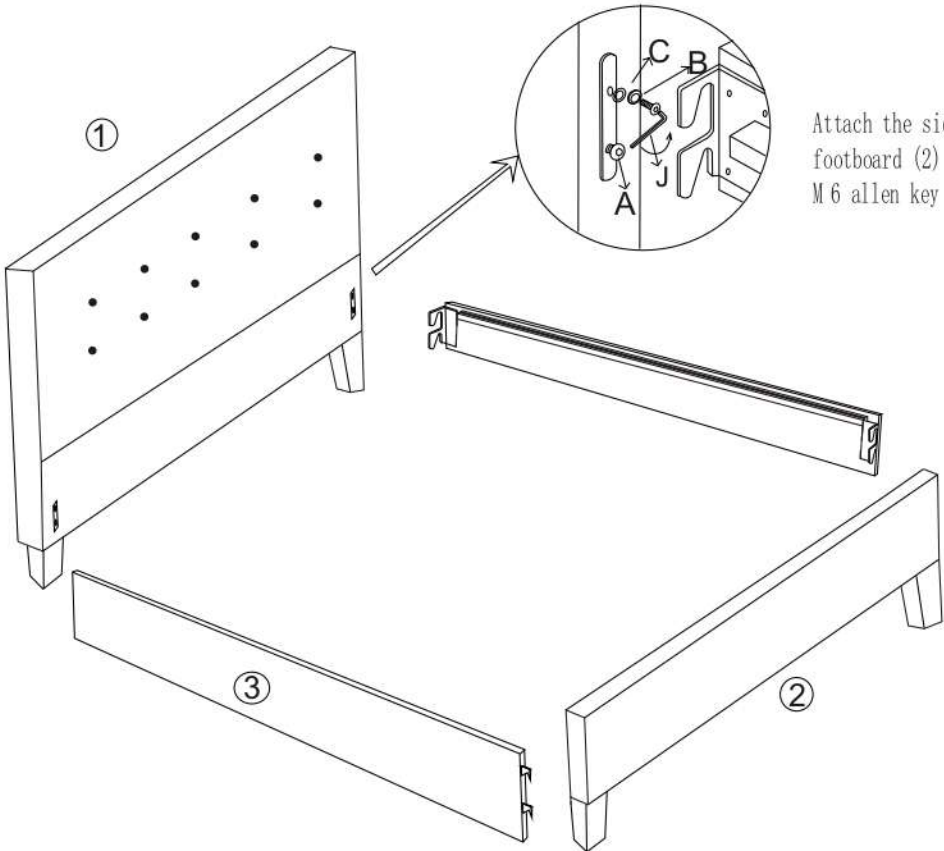


Step 2

(A) 	(B) 	(C) 	(J) 
Bolts (M8x30mm) 8 pcs	Spring Washer 8pcs	Flat Washer 8pcs	M6 Allen Key 1pc




Attach the side rails(3) to the headboard (1) and footboard (2) using hardware parts A. B. C and M 6 allen key (J) .

Step 3

A 	E 	H 	I 	J 
Bolts (M8x30mm) > 4 pcs	Bolts (M8x40mm) > 4 pcs	Nuts 4 pcs	Spanner 1 pc	M6 Allen Key 1 pc


Attach the centre support bar(4) to the headboard (1) and footboard (2) using hardware parts A, J.
 Attach the support legs(5) to the centre support bar(4) using hardware parts E, H, J and F.

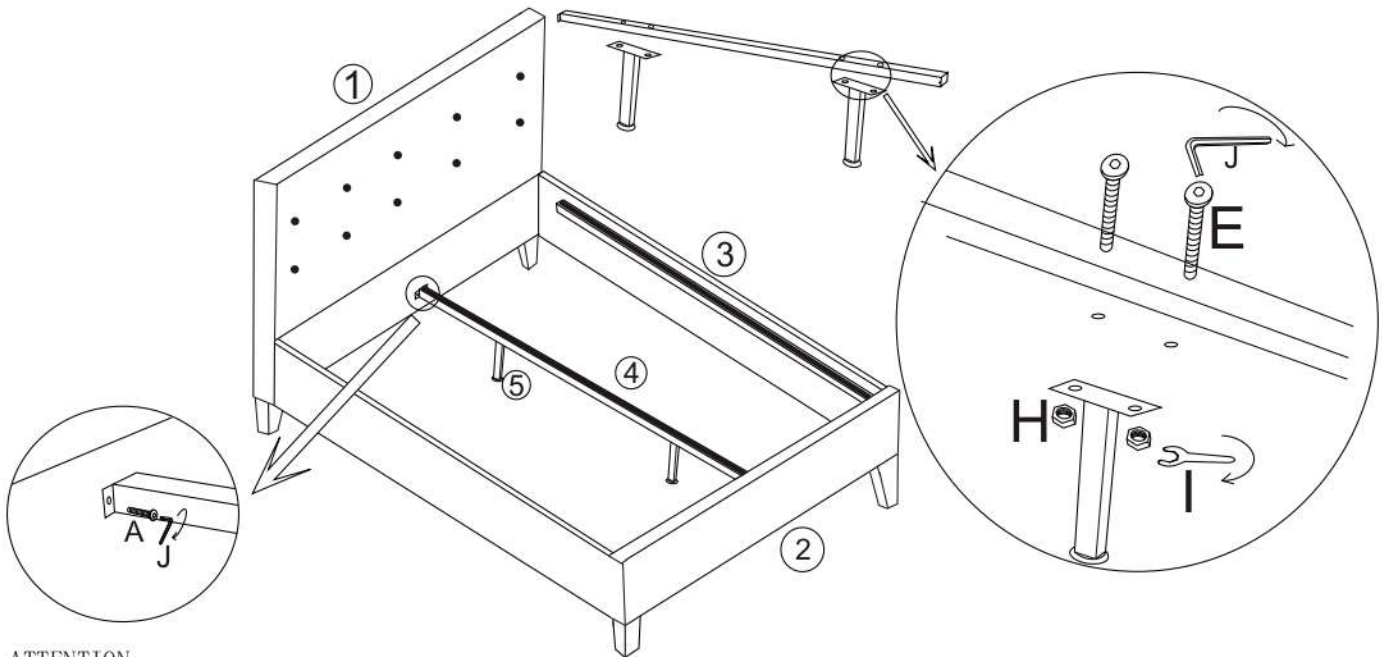


ATTENTION

When attached to central support bar, the support legs will be about 5mm off the floor. This is not a flaw. When weight is placed on the bed frame, the supports will consequently come into contact with the floor.

Step 4

G 
Screw (4.0x35mm) 6 pcs

Attach the slat (7) to the side rail (3) with screw (G) as shown.

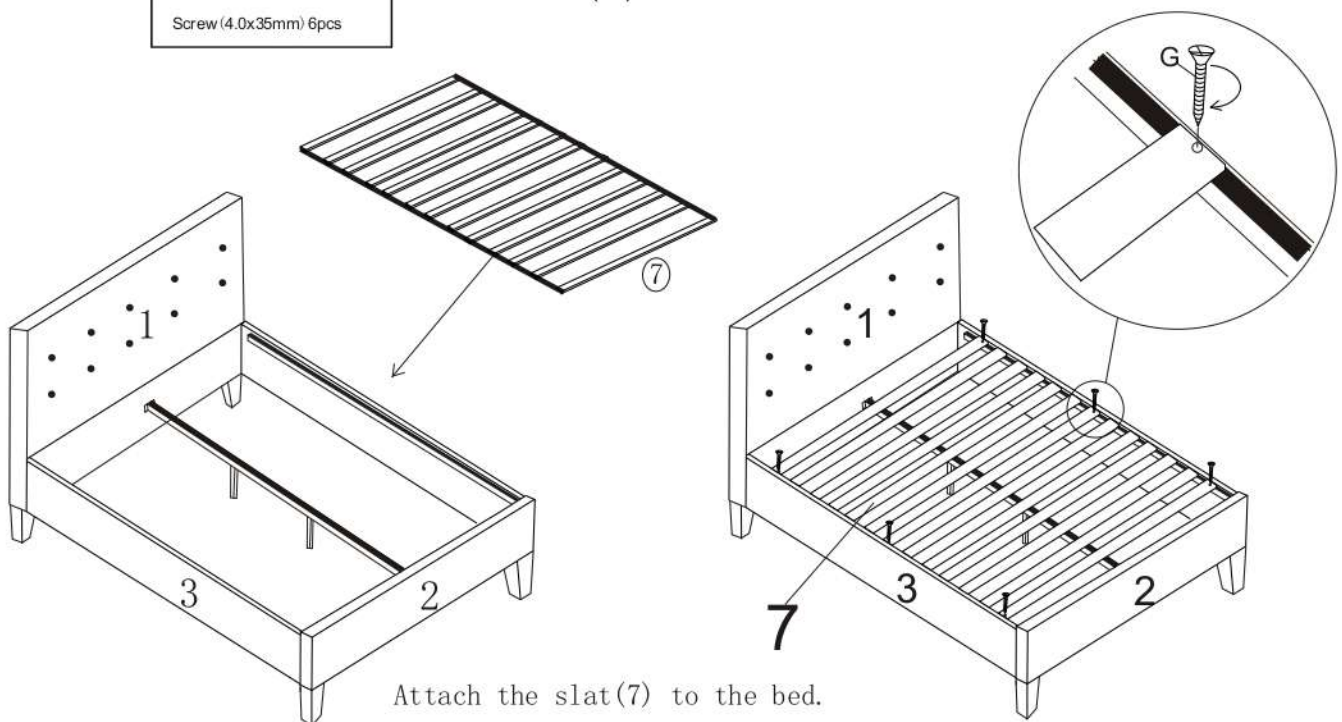

Attach the slat(7) to the bed.