
BEDSIDE TABLE

MODEL:BT-PUTI-WH

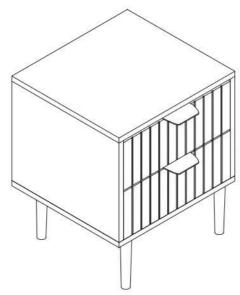

ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.



Two persons and tools required for assembly

HARDWARE

HANDWANE										375	
Α	x8	В	x4	С	x12	D	x12	Е	x4	F	x1
2						MINIMA				And And Andrews	
7x35mm		15x12mm		Ø6x30mm		M4x40mm		M4x11mm		M4x30mm	
G	x1	Н	x1	1	x4	J	x8	K	x4	L	x16
Own								N. Contraction of the Contractio		Bazza M3x12mm	
M4x14mm				<u> </u>		M3x14mm			•	M3X	12mm
M	x1	N	x2	0	x11	P	x4				
				1		(E)					

12x10mm

PARTS

