


# SIDEBOARD

MODEL:SB-HAMP-D5-WH

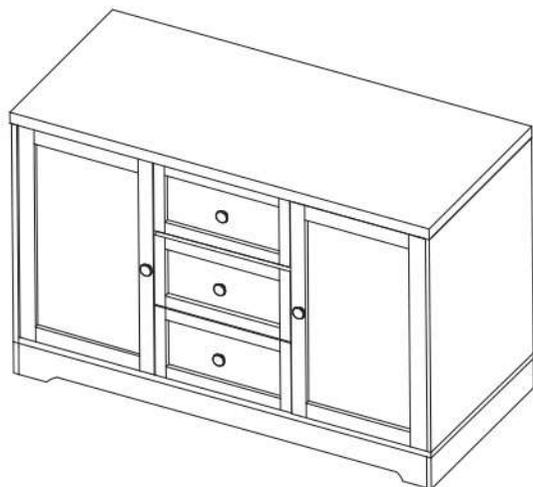

## ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.




Two persons and tools required for assembly

### HARDWARE


A	x24	B	x4	C	x16	D	X34	E	x18	F	x10
7x35mm		Ø6x50mm		Ø6x30mm		M4x40mm		M3x12mm			
G	x6	H	x12	I	x2	J	x2	K	x2	L	x5
12x10mm		M4x14mm									
M	x3	N	x9	O	x2	P	x8	Q	x2	R	x4
M6		M4x10mm		M4x18mm				M4x30mm			
S	x24	T	x5	U	x12	V	x16				
M3x14mm		15x12mm		M3.5x14mm							

## PARTS

Wipe with dry cloths

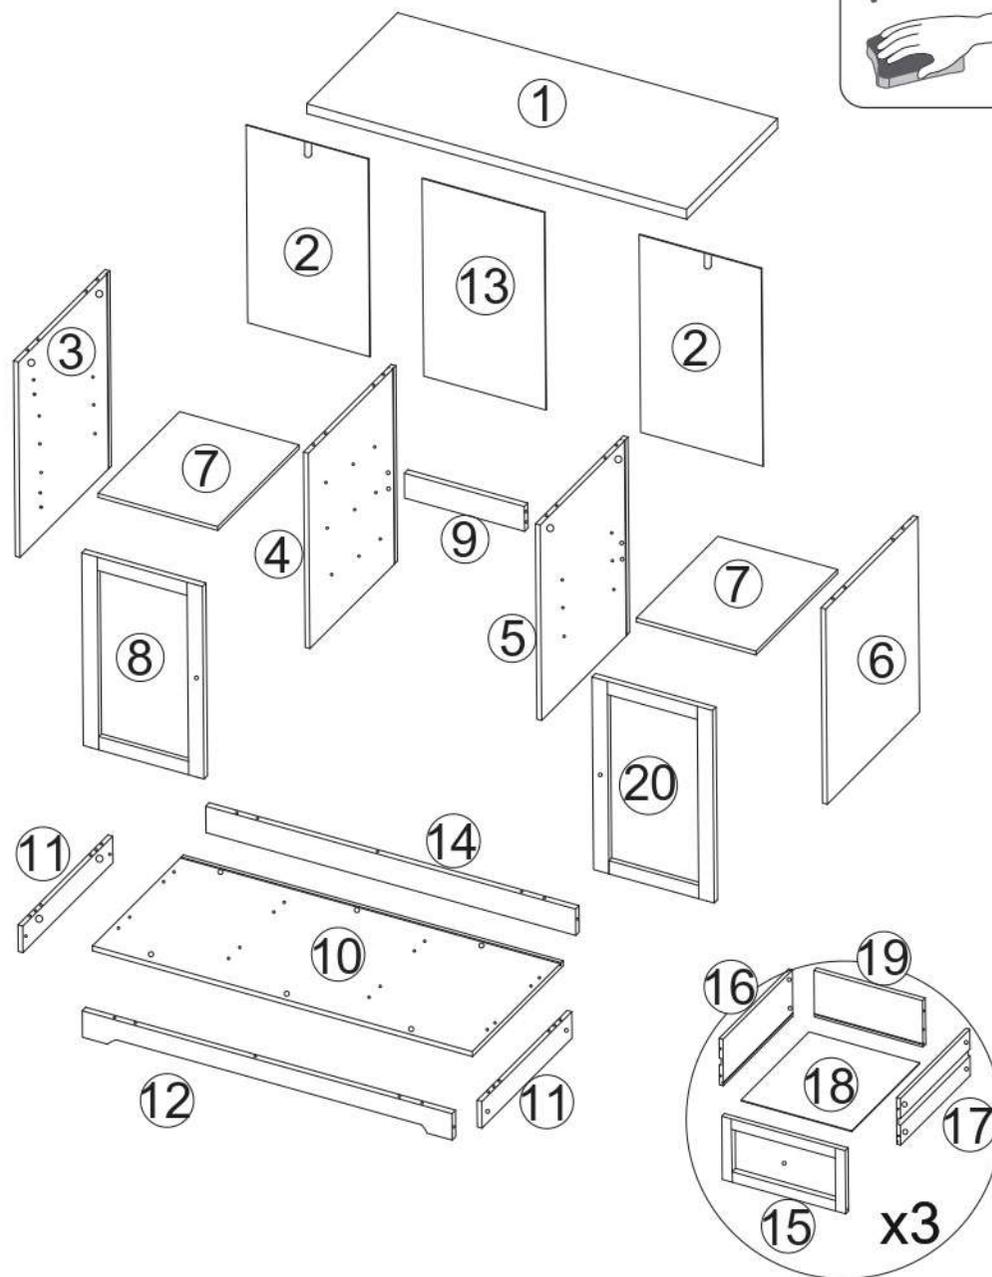


1

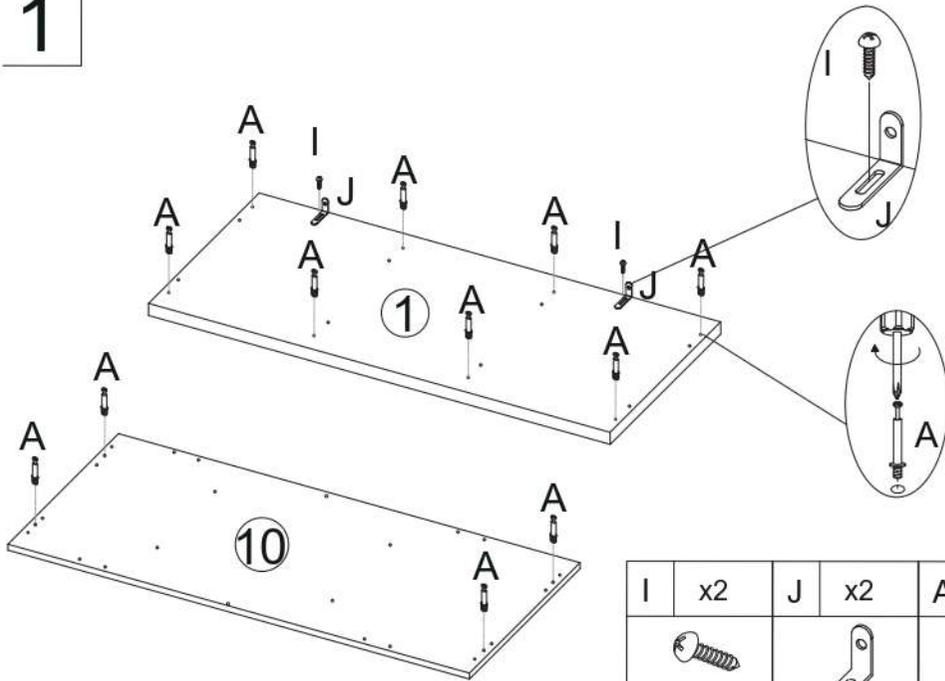



I	x2	J	x2	A	x12
					
M4x14mm				7x35mm	

2

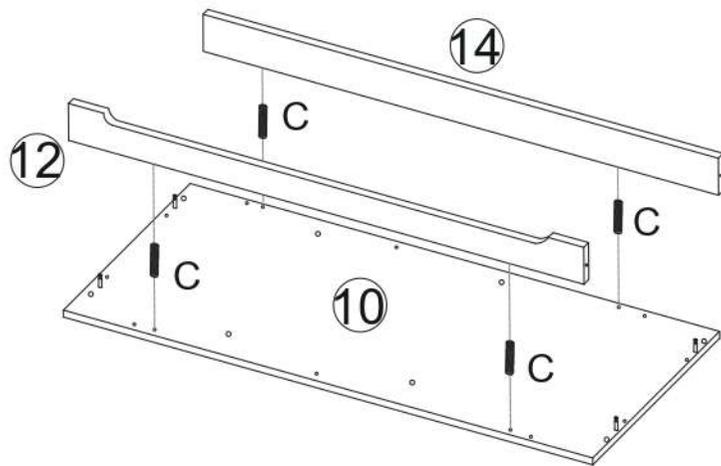


C	x4
	
Ø6x30mm	

3

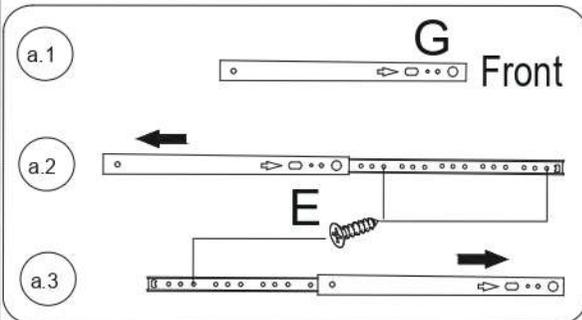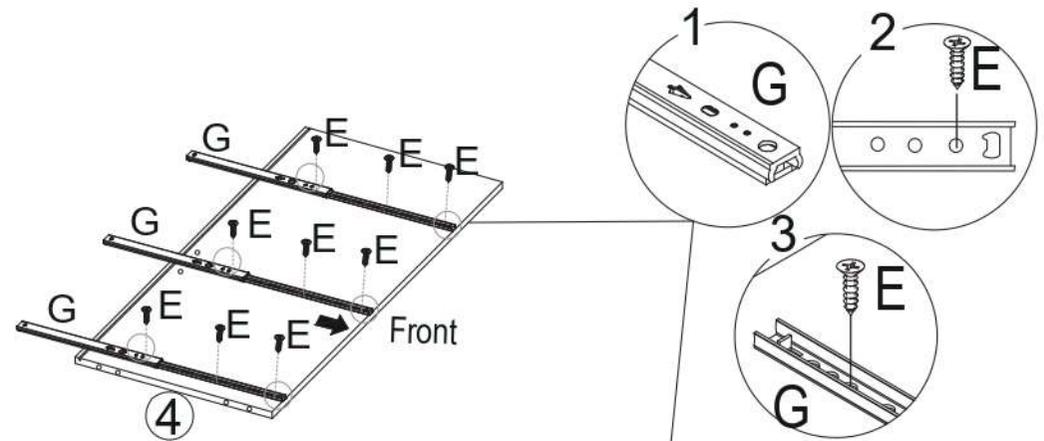


E	x18	G	x6
			
M3x12mm			

4

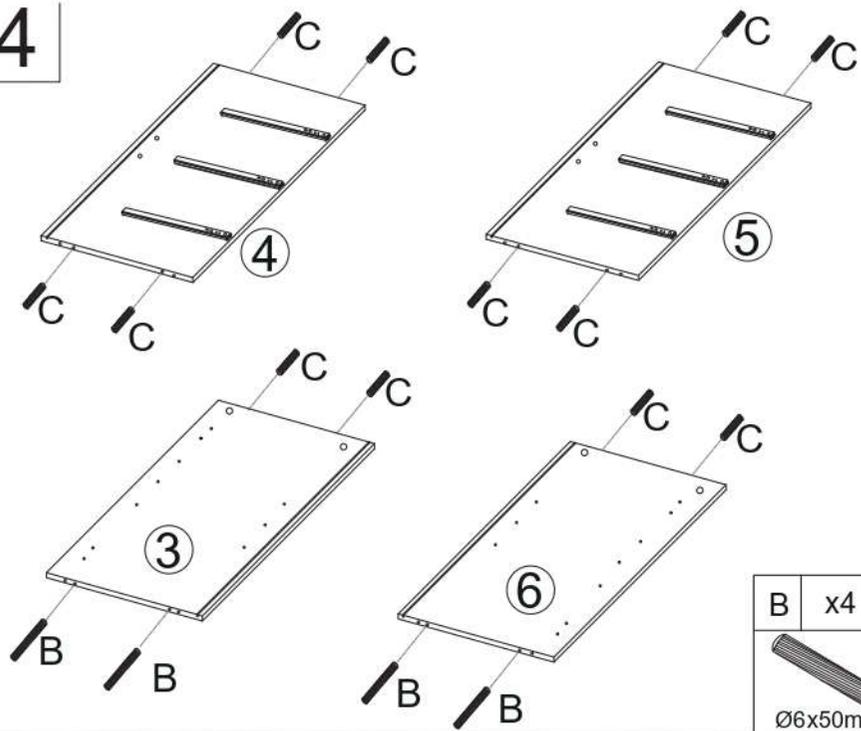


B	x4	C	x12
			
Ø6x50mm		Ø6x30mm	

6

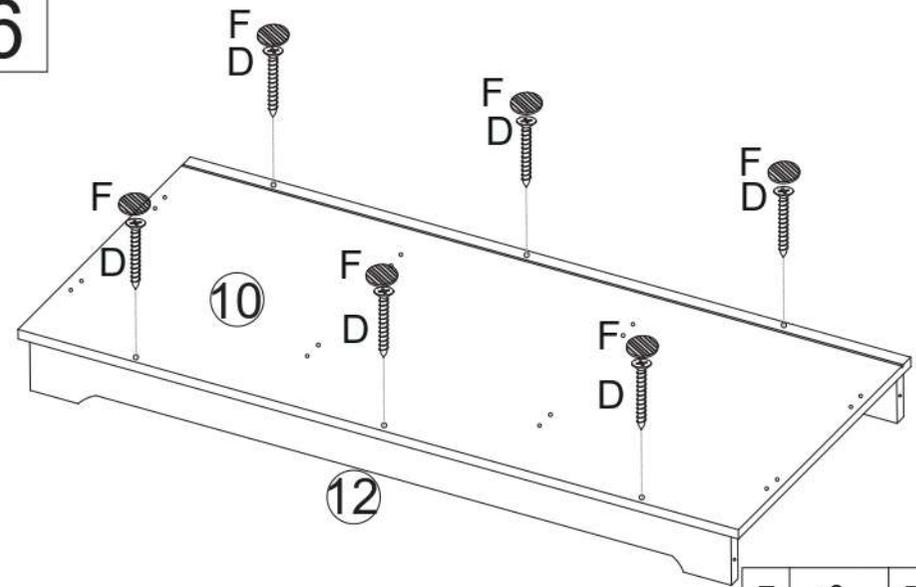


F	x6	D	x6
			
M4x40mm		M4x40mm	

5

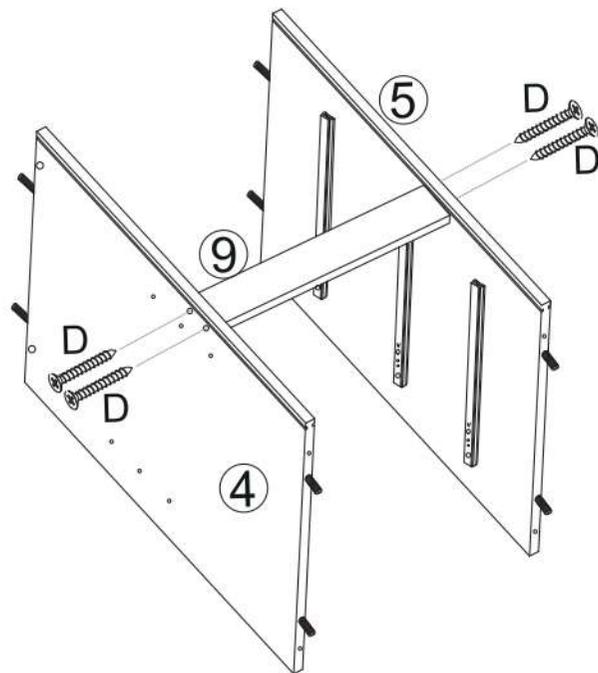


D	x4
	
M4x40mm	

7

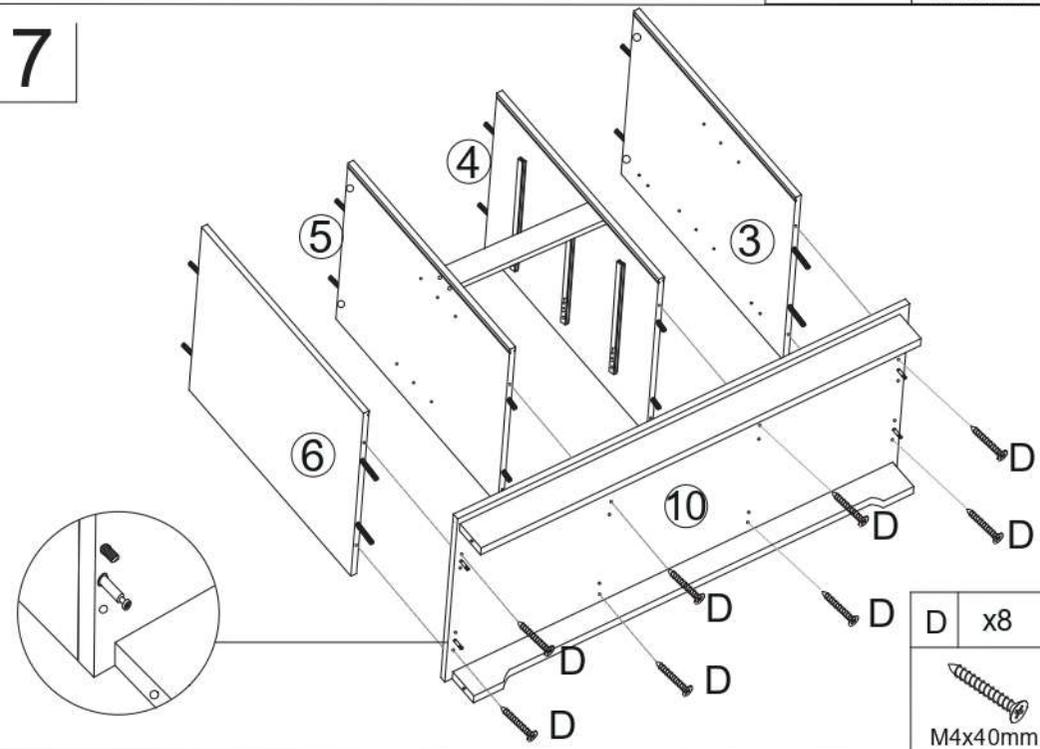


D	x8
	
M4x40mm	


8

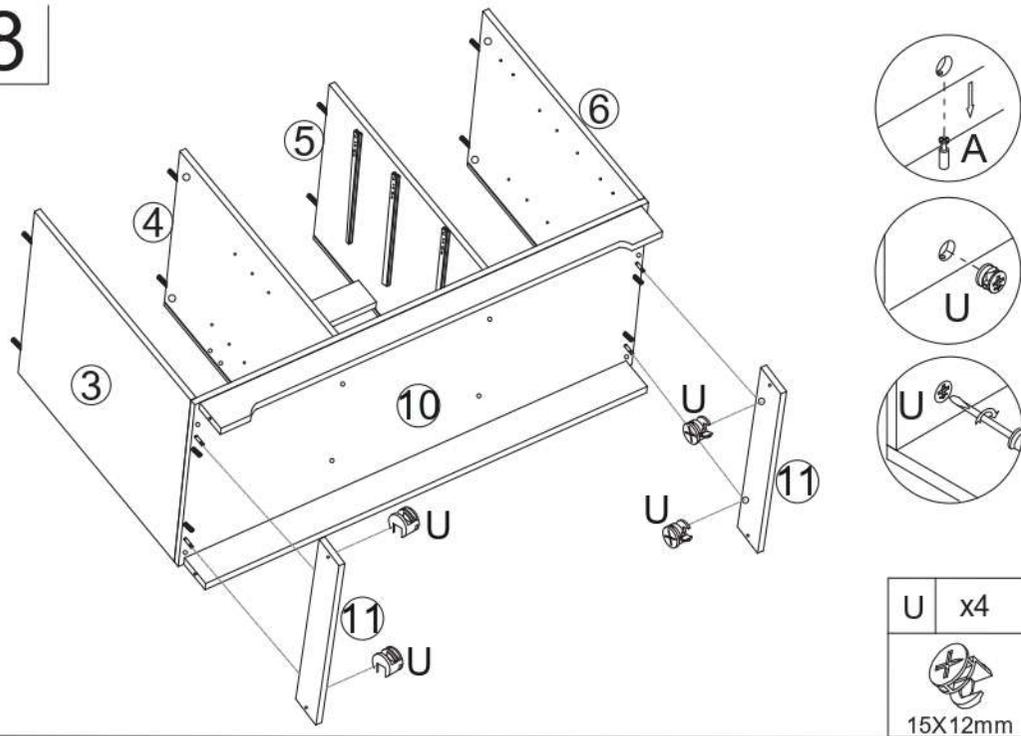


10

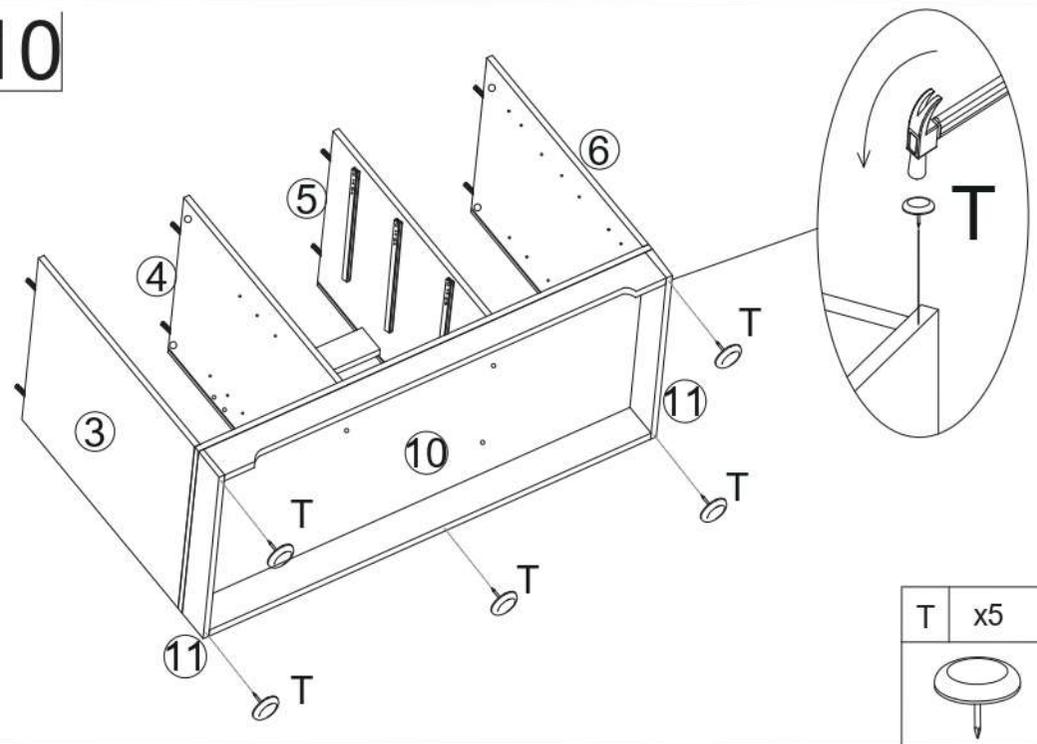



9

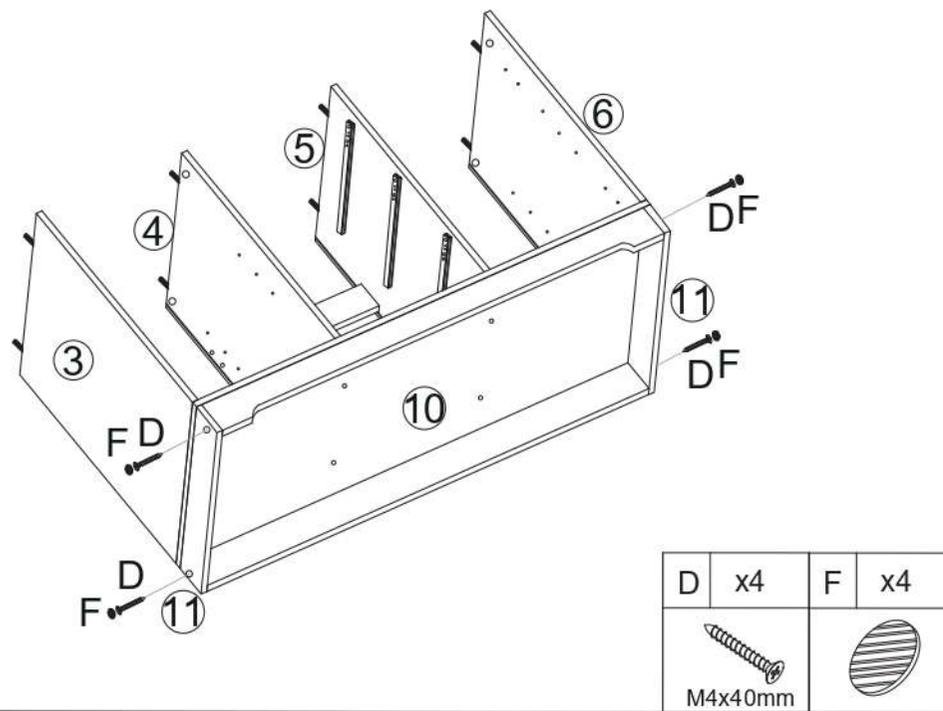


11

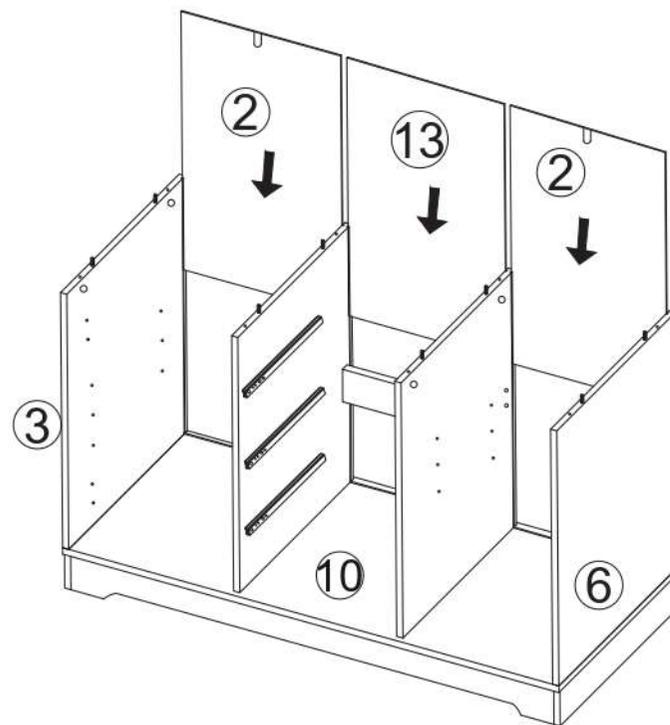

# 12

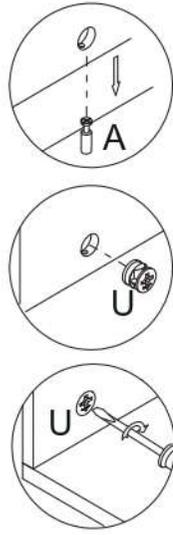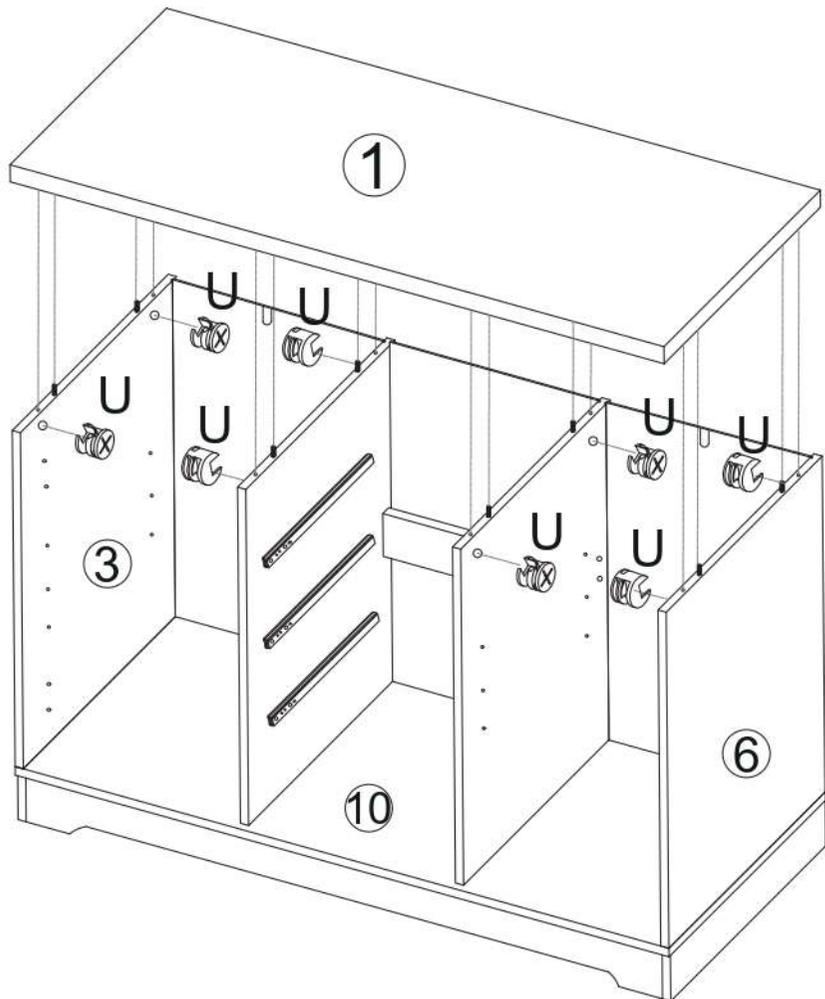

# 13

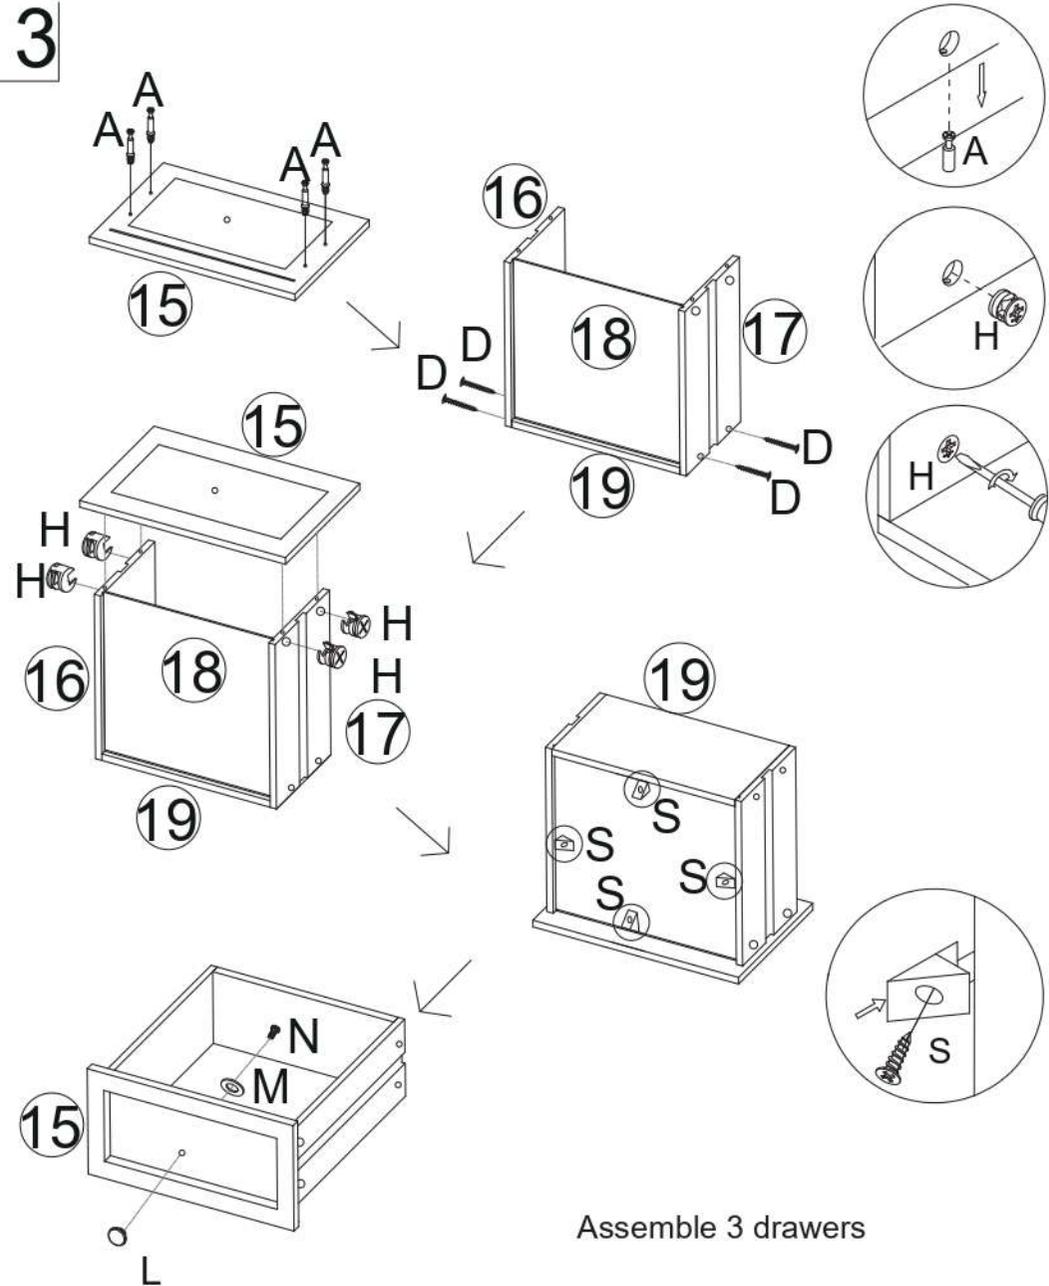


Assemble 3 drawers

U	x8
	15X12mm

S	x12	N	x3	M	x3	L	x3	A	x12	H	x12	D	x12
	M3x14mm		M4x10mm		M6				7x35mm		12X10mm		M4x40mm

14

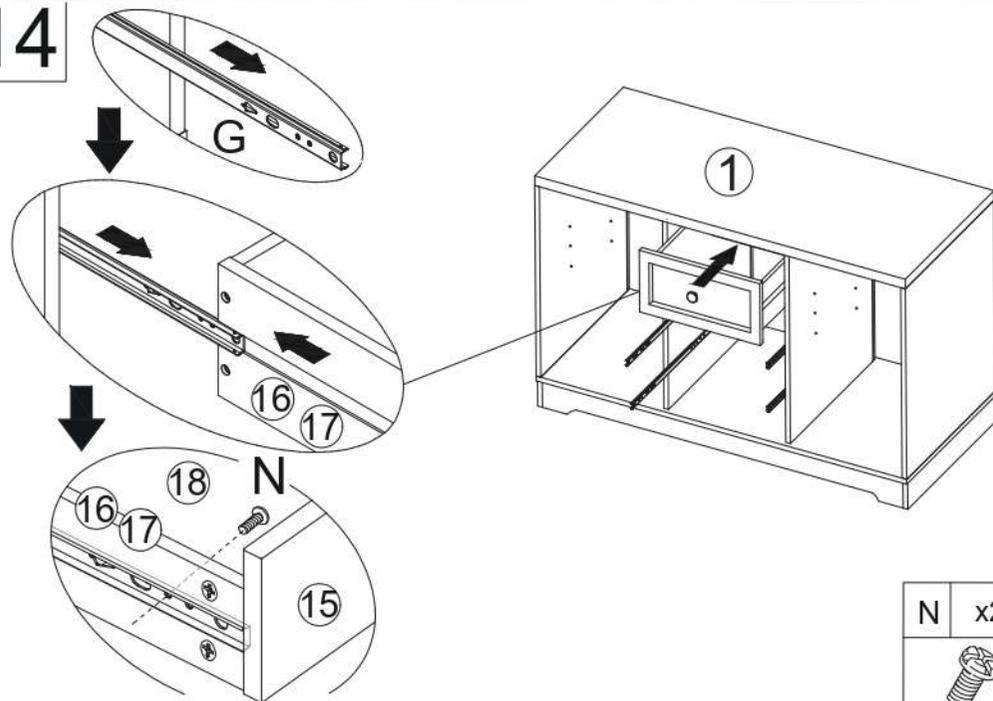


N x2



M4x10mm

Screw from the inside of the drawers

16

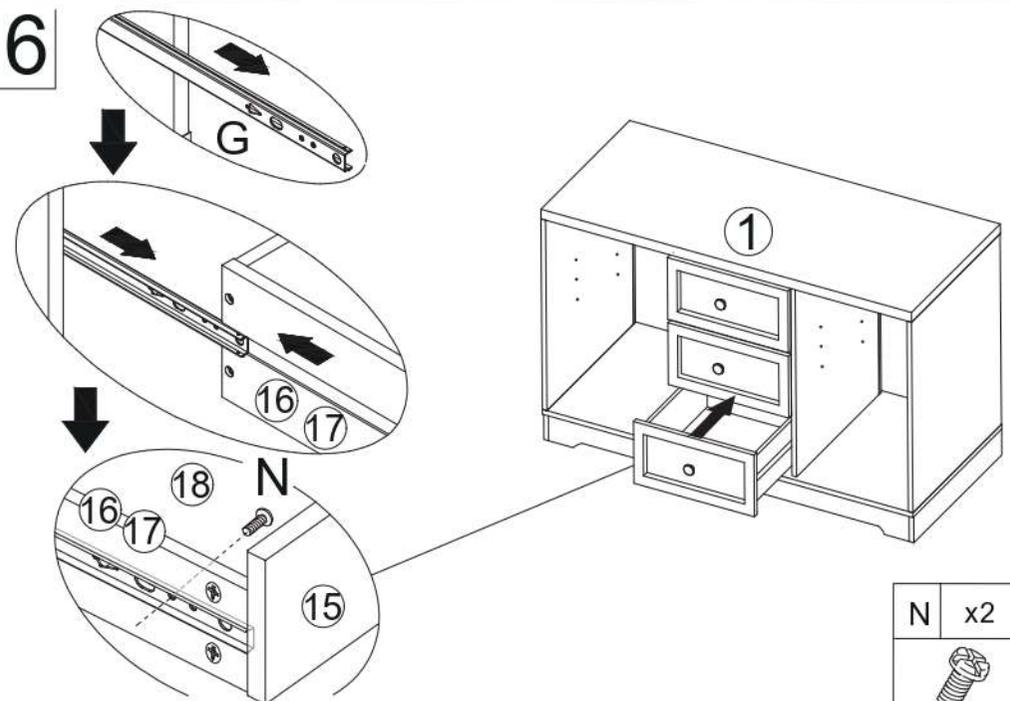


N x2



M4x10mm

Screw from the inside of the drawers

15

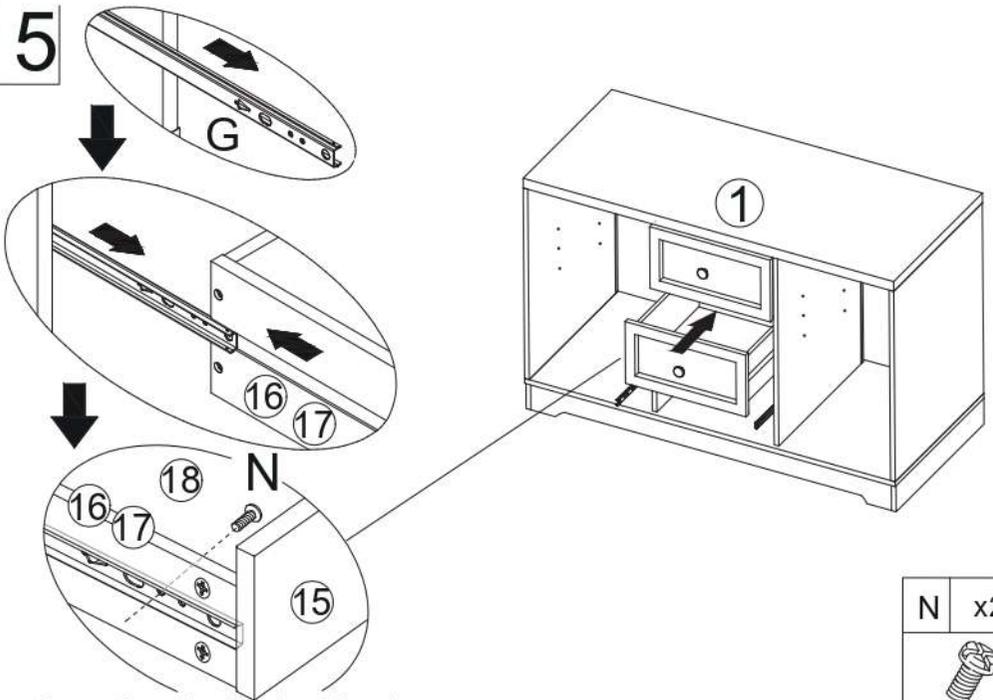


N x2



M4x10mm

Screw from the inside of the drawers

17

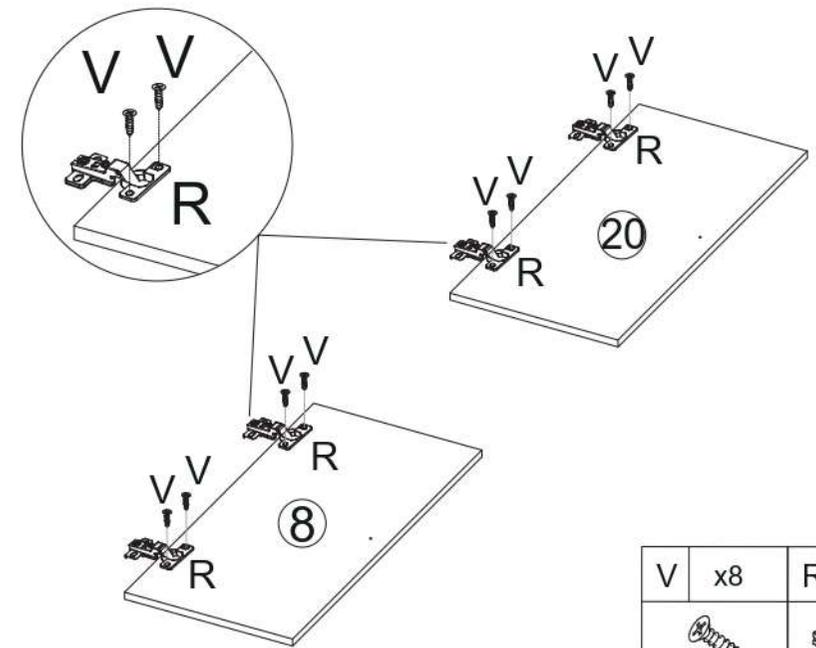

V x8







M3.5x14mm

R x4





18

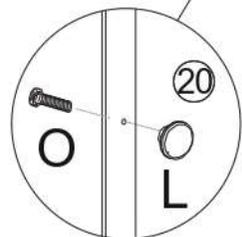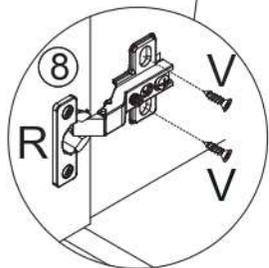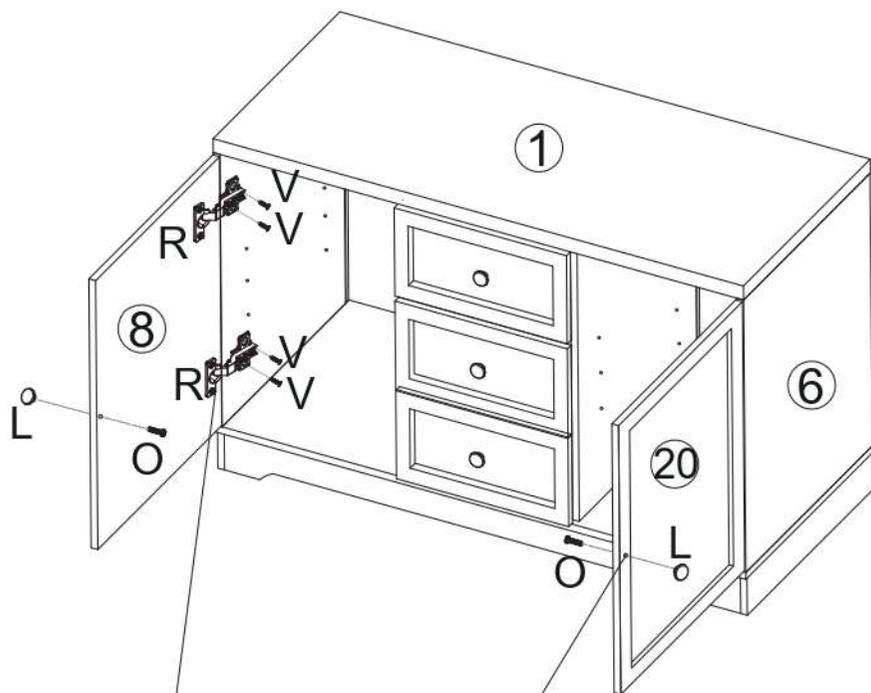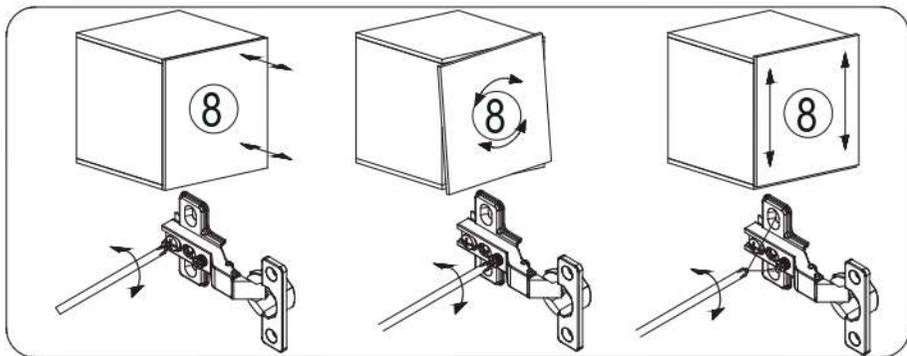



L	x2	V	x8	O	x2
		M3.5x14mm		M4x18mm	

19

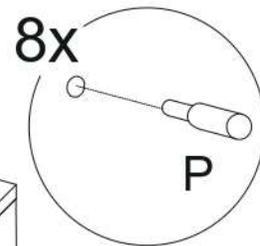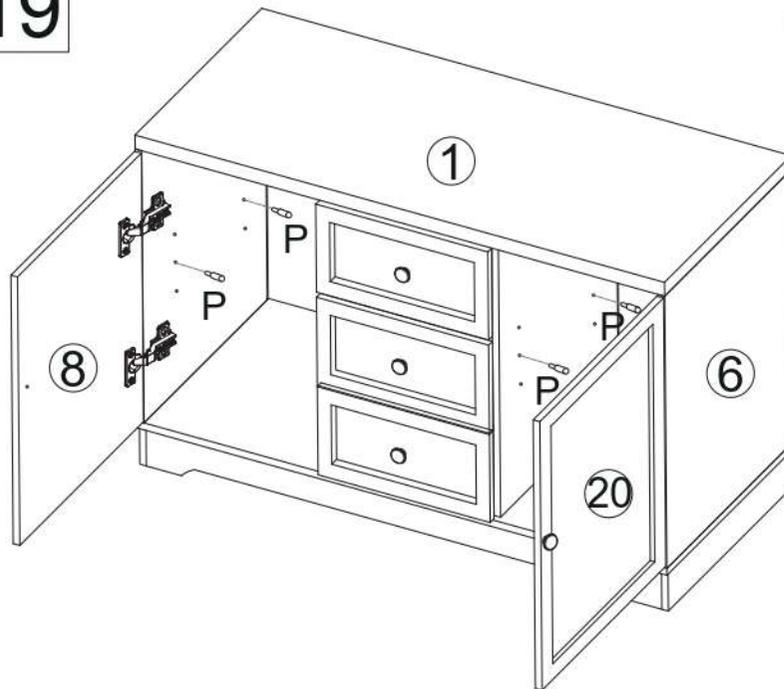


P	x8

20

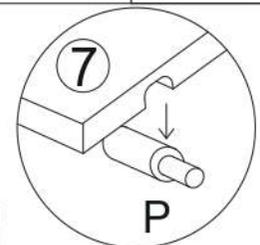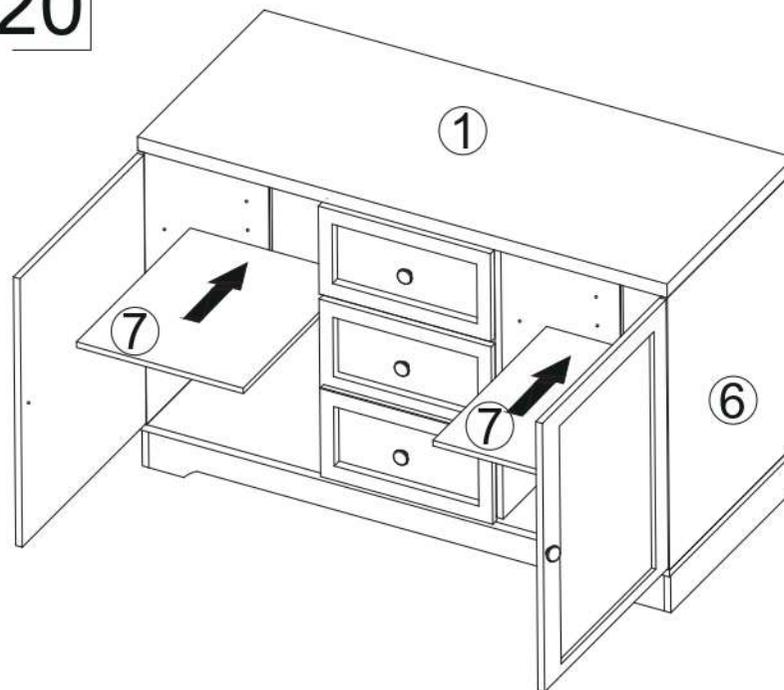


# 21

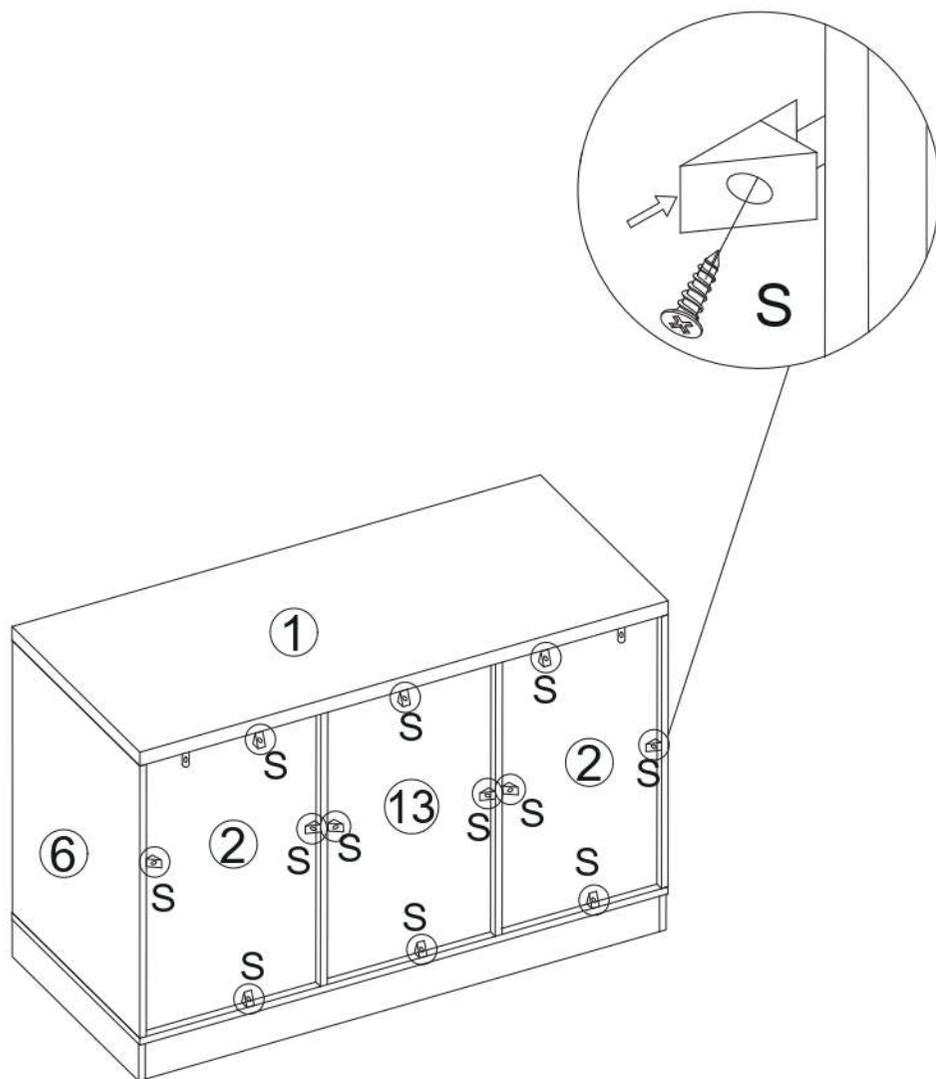

S	x12	Q	x2	K	x2
					
M3x14mm		M4x30mm			

# 22

Pre-drill hole in wall

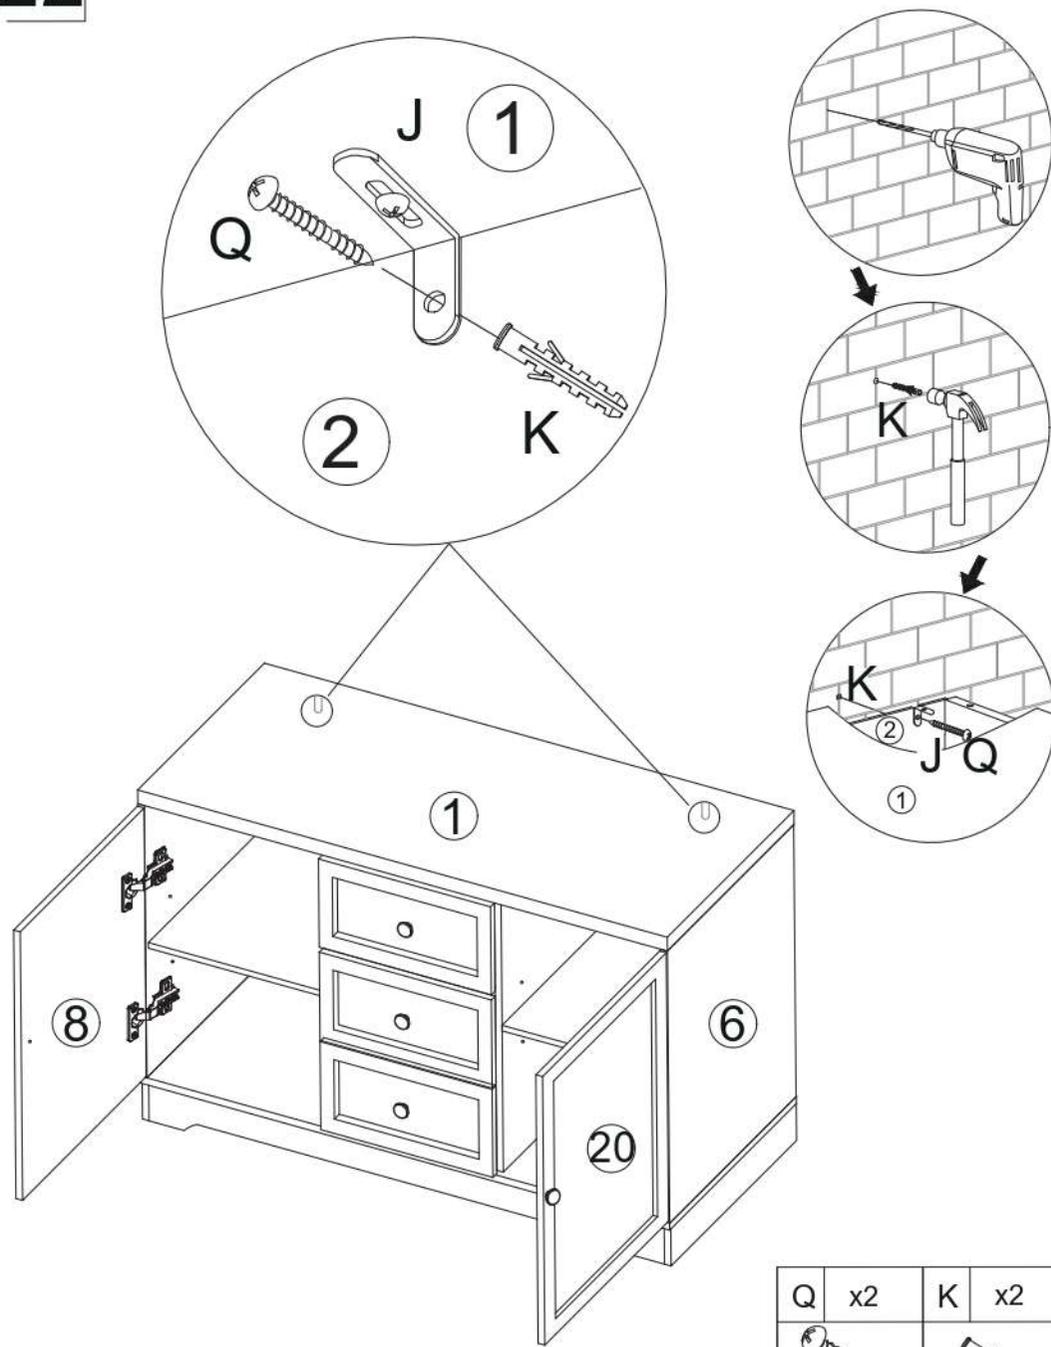

Q	x2	K	x2
			
M4x30mm			