


CHEST OF DRAWERS

MODEL:COD-PURI-6D-WHWD/WH/BK

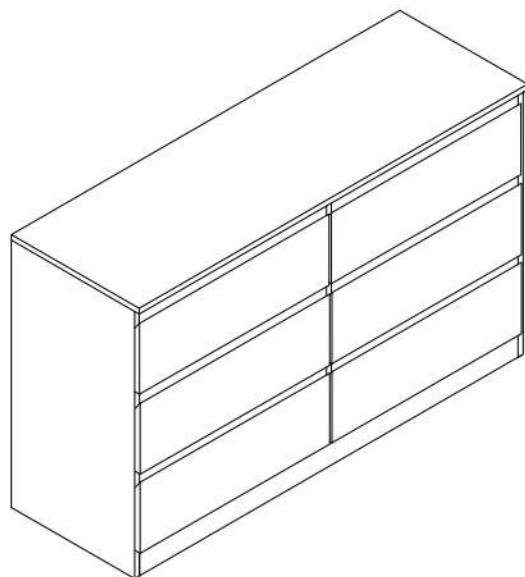

ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.




Two persons and
tools required for
assembly

HARDWARE



A	x38	B	x14	C	x18	D	x46	E	x12	F	x2
7x35mm		15x12mm		Ø6x30mm		M4x40mm					
G	x6	H	x36	I	x2	J	x26	K	x12	L	x12
		M3x12mm		M4x30mm						M3x14mm	
M	x12	N	x6	O	x2	P	x24	Q	x4	R	x2
M4x11mm		Ø6x50mm				12x10mm				M4x14mm	

PARTS

Wipe with dry cloths

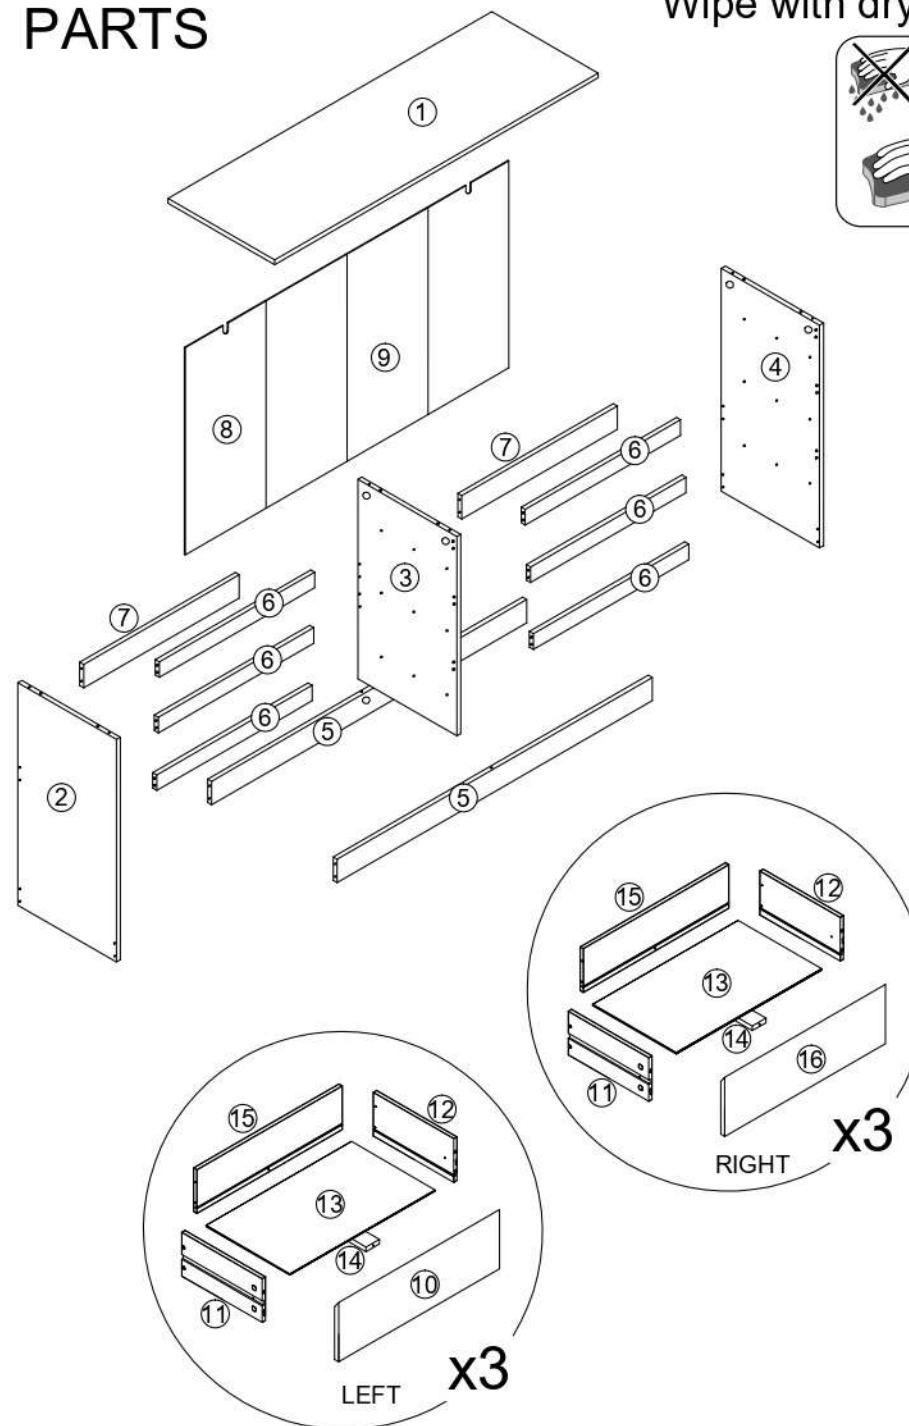


1

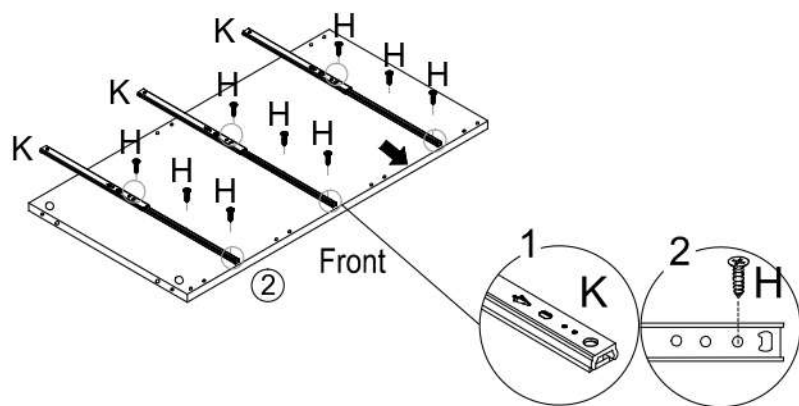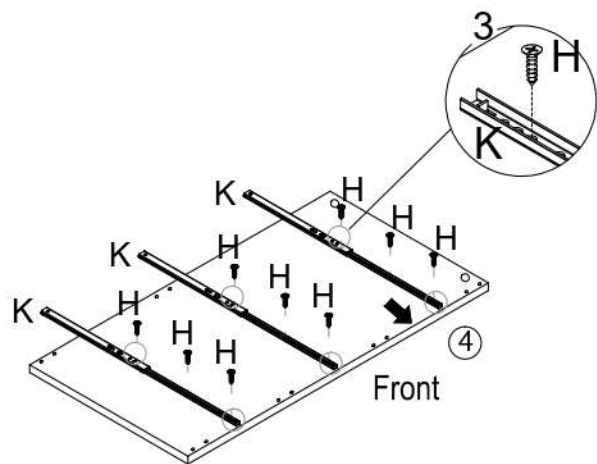

a.1



a.2

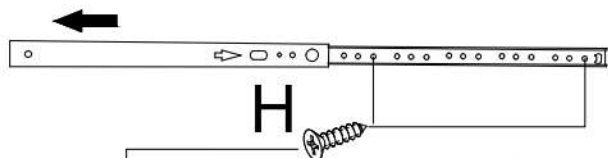


a.3




K	x6	H	x18
M3x12mm			

2

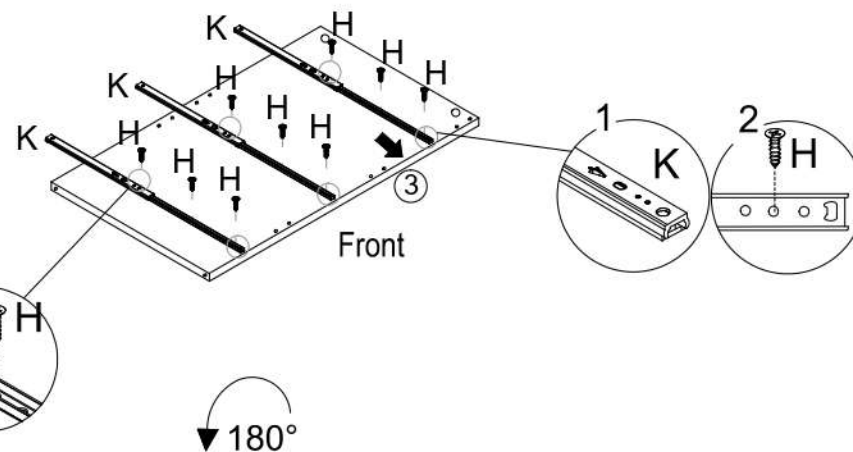


180°

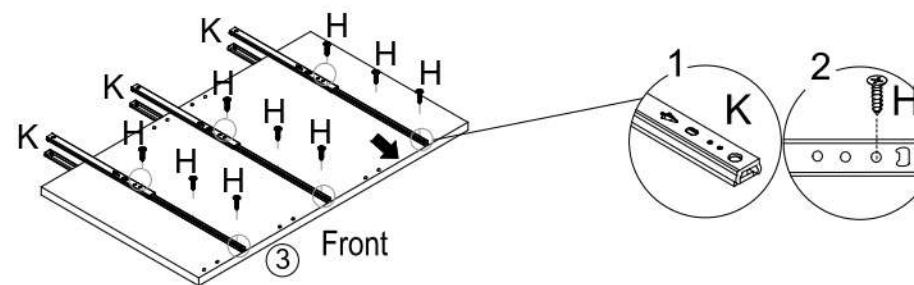

a.1



a.2

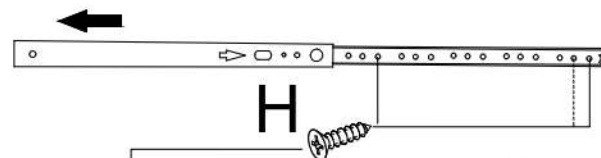


a.3







K	x6	H	x18
M3x12mm			

3

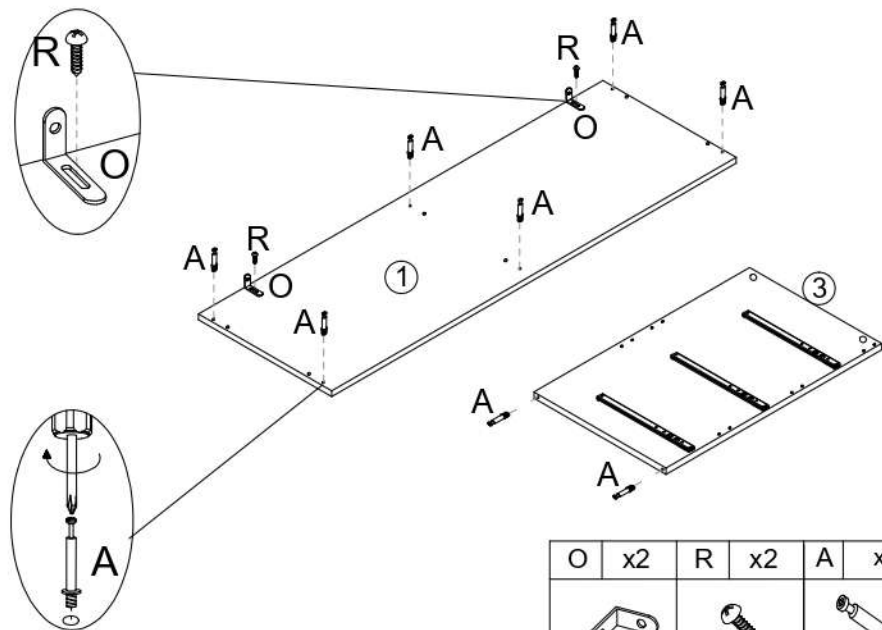


O	x2	R	x2	A	x8
		M4x14mm		7x35mm	

5

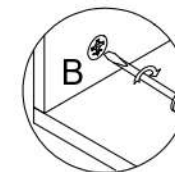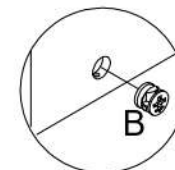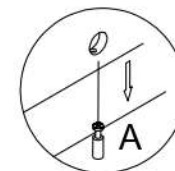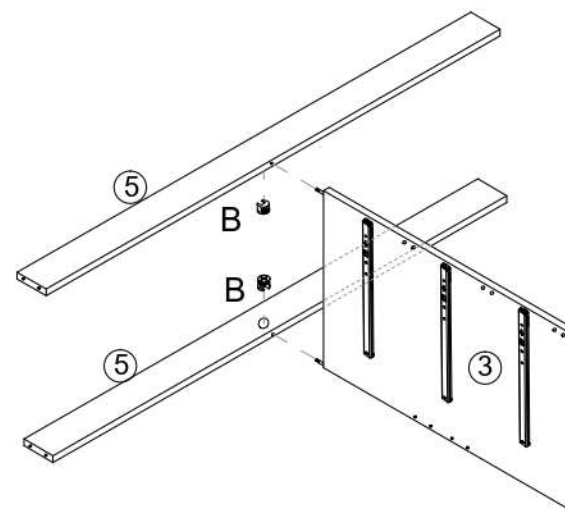


B	x2
15x12mm	

4

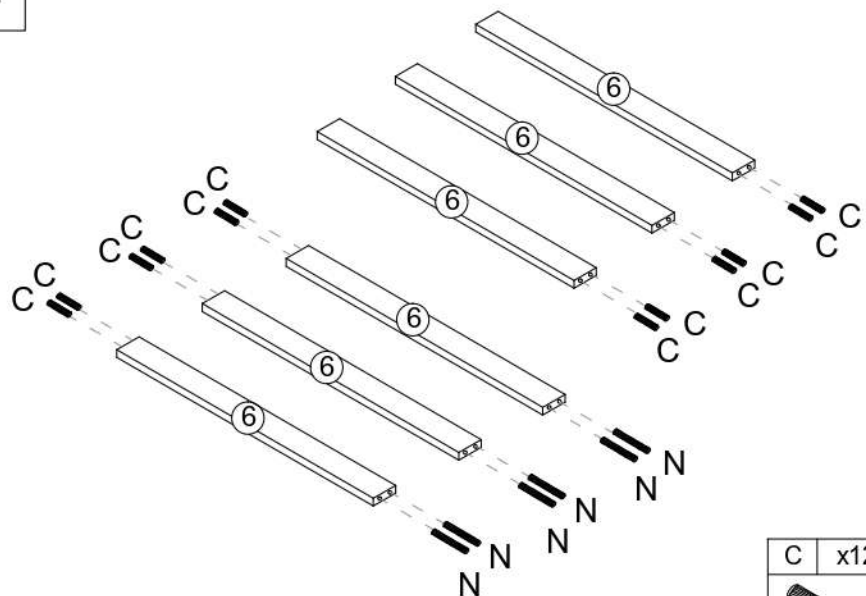


C	x12	N	x6
Ø6x30mm		Ø6x50mm	

6

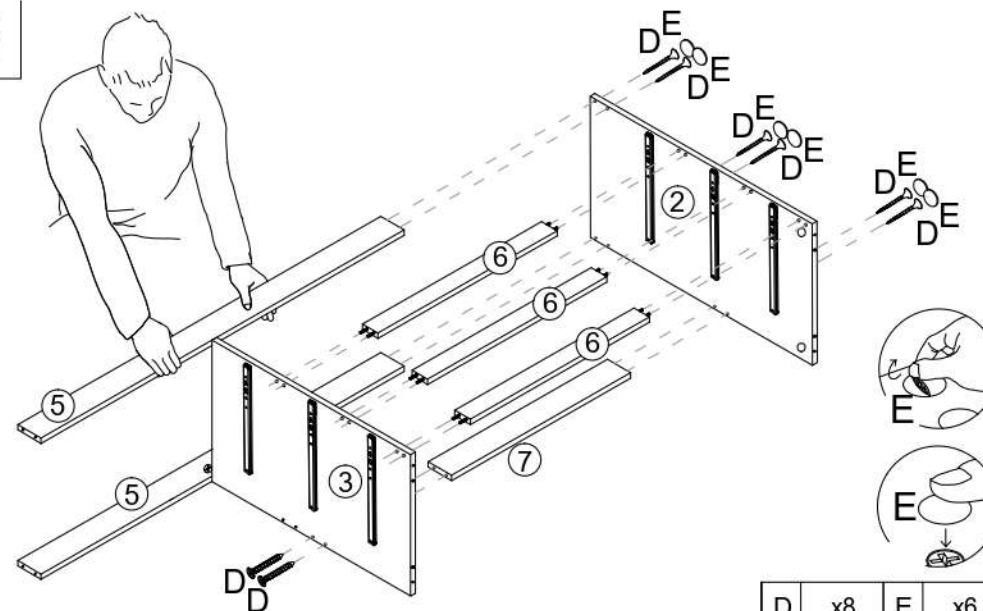


D	x8	E	x6
M4x40mm			


7

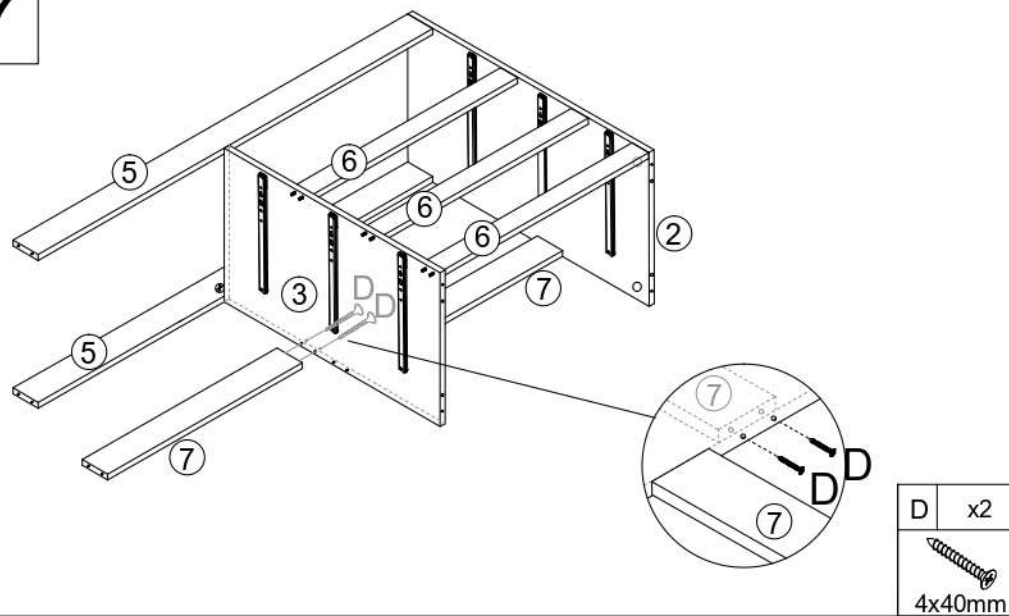


8

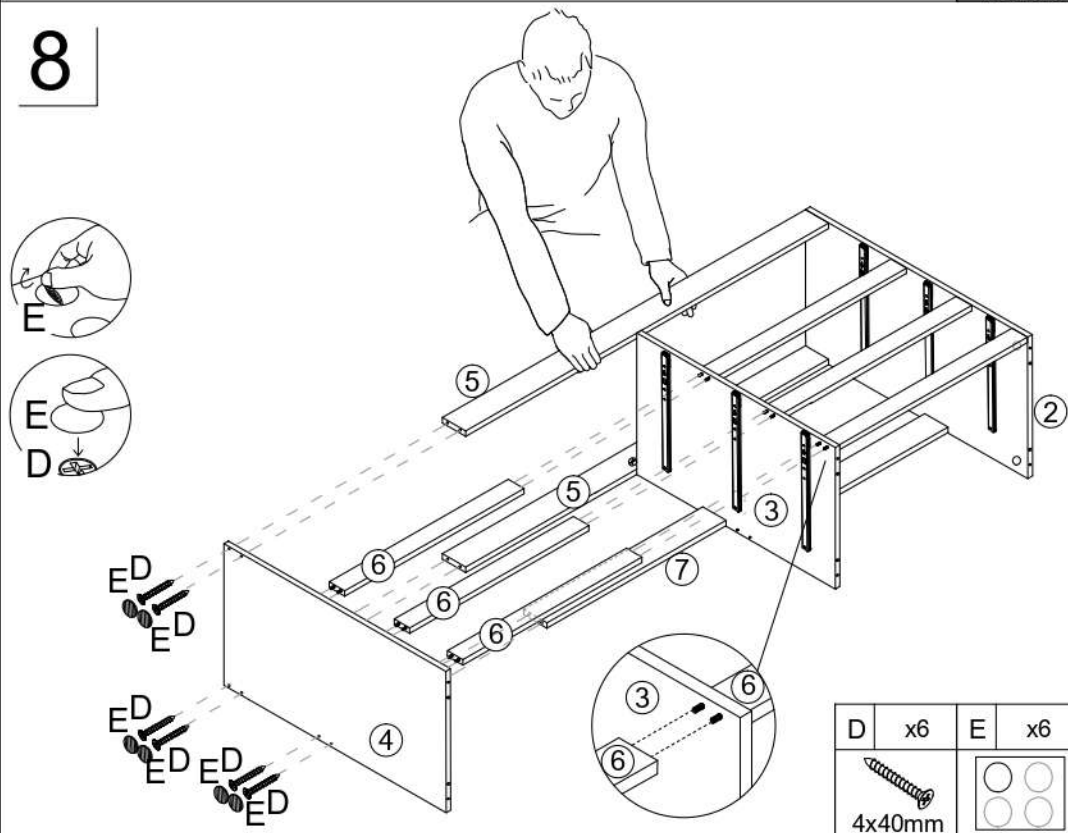


9

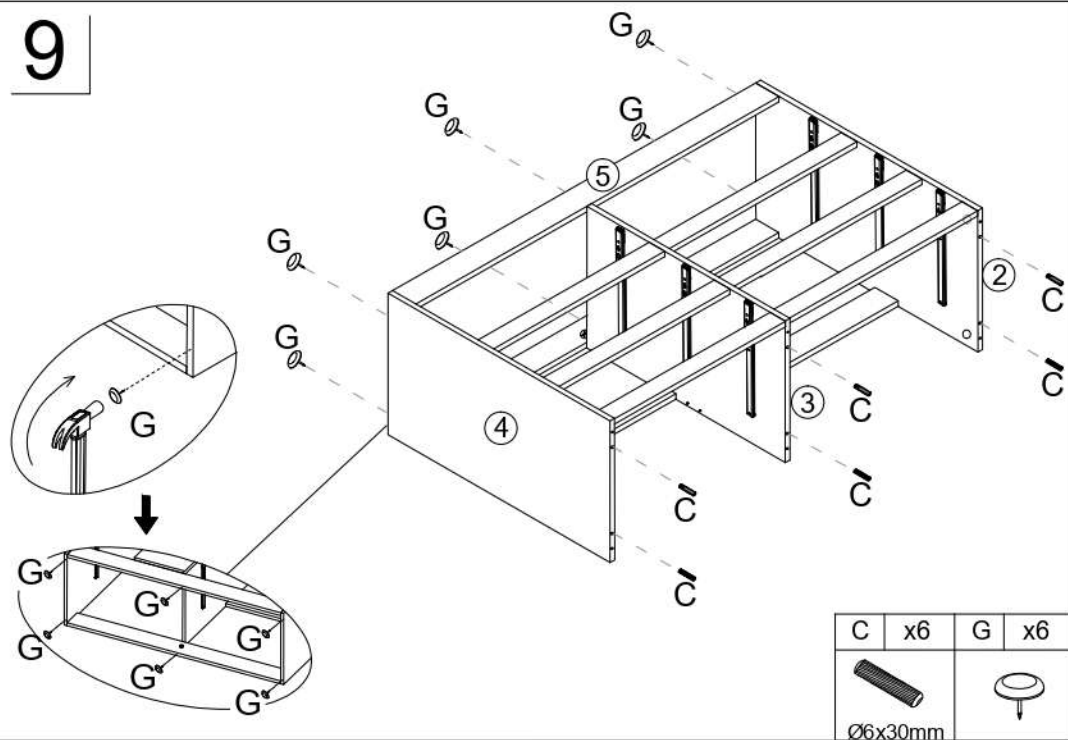


10

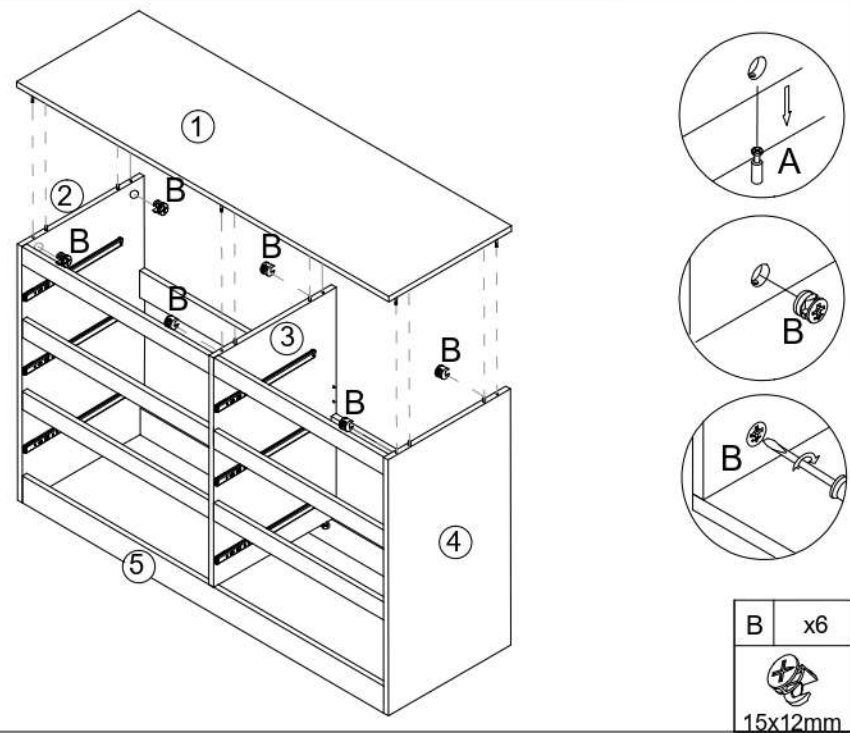


11

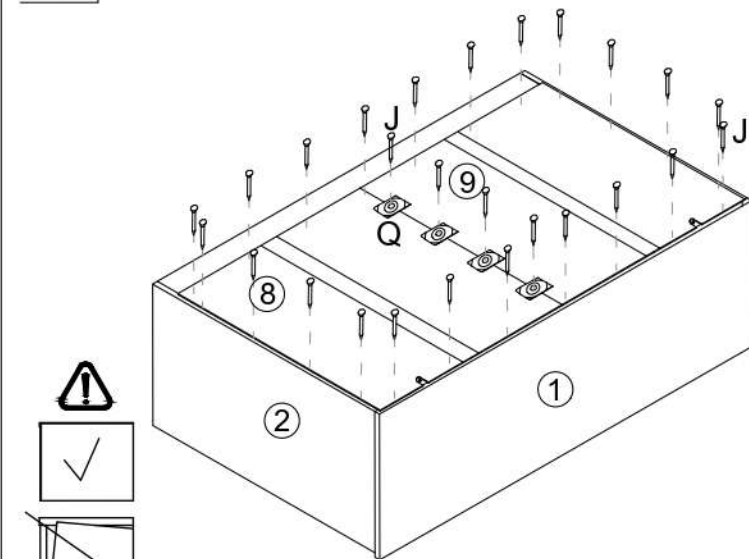

rear panels

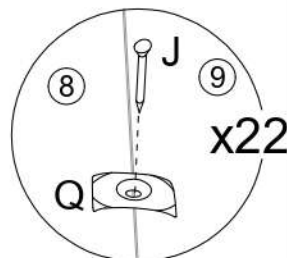


x22

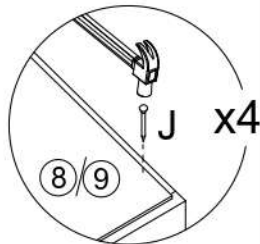



x4

Q	x4	J	x26

12

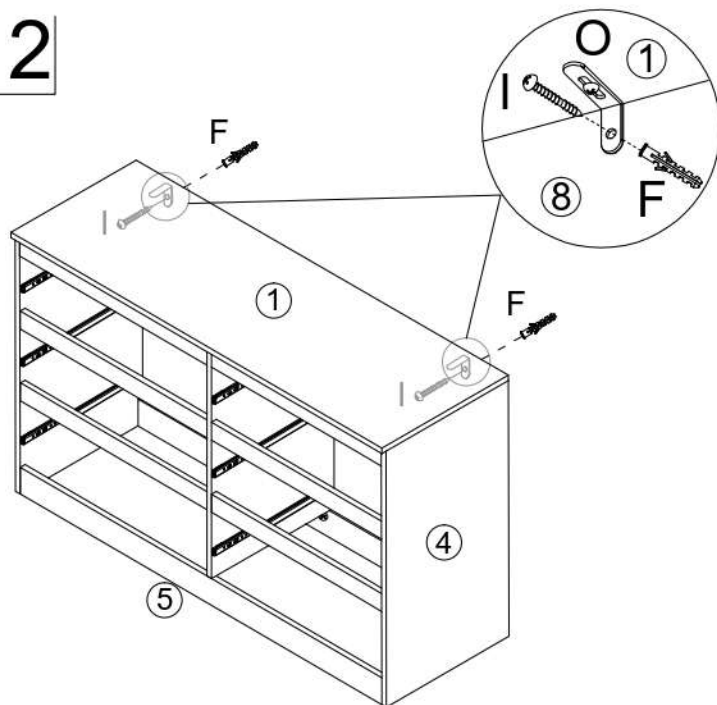





Pre-drill hole in wall

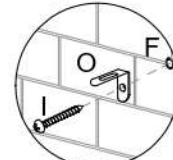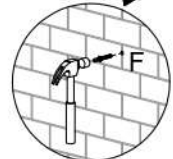

F	x2	I	x2

M4x30mm

13

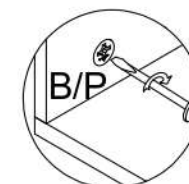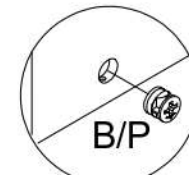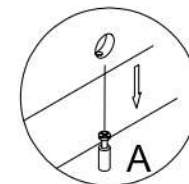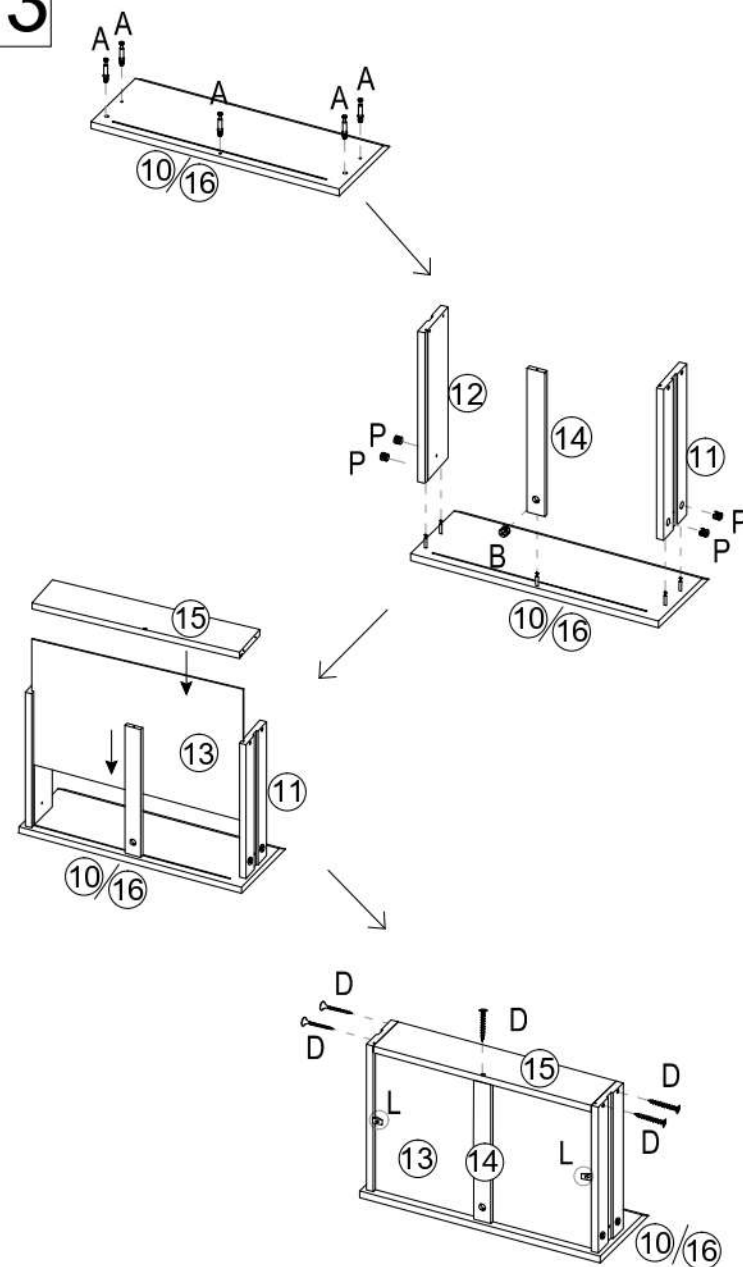


x6

B	x6	P	x24	A	x30	D	x30	L	x12
15x12mm		12x10mm		7x35mm		M4x40mm		M3x14mm	

14

Insert the LEFT drawers into the corresponding compartments as shown.

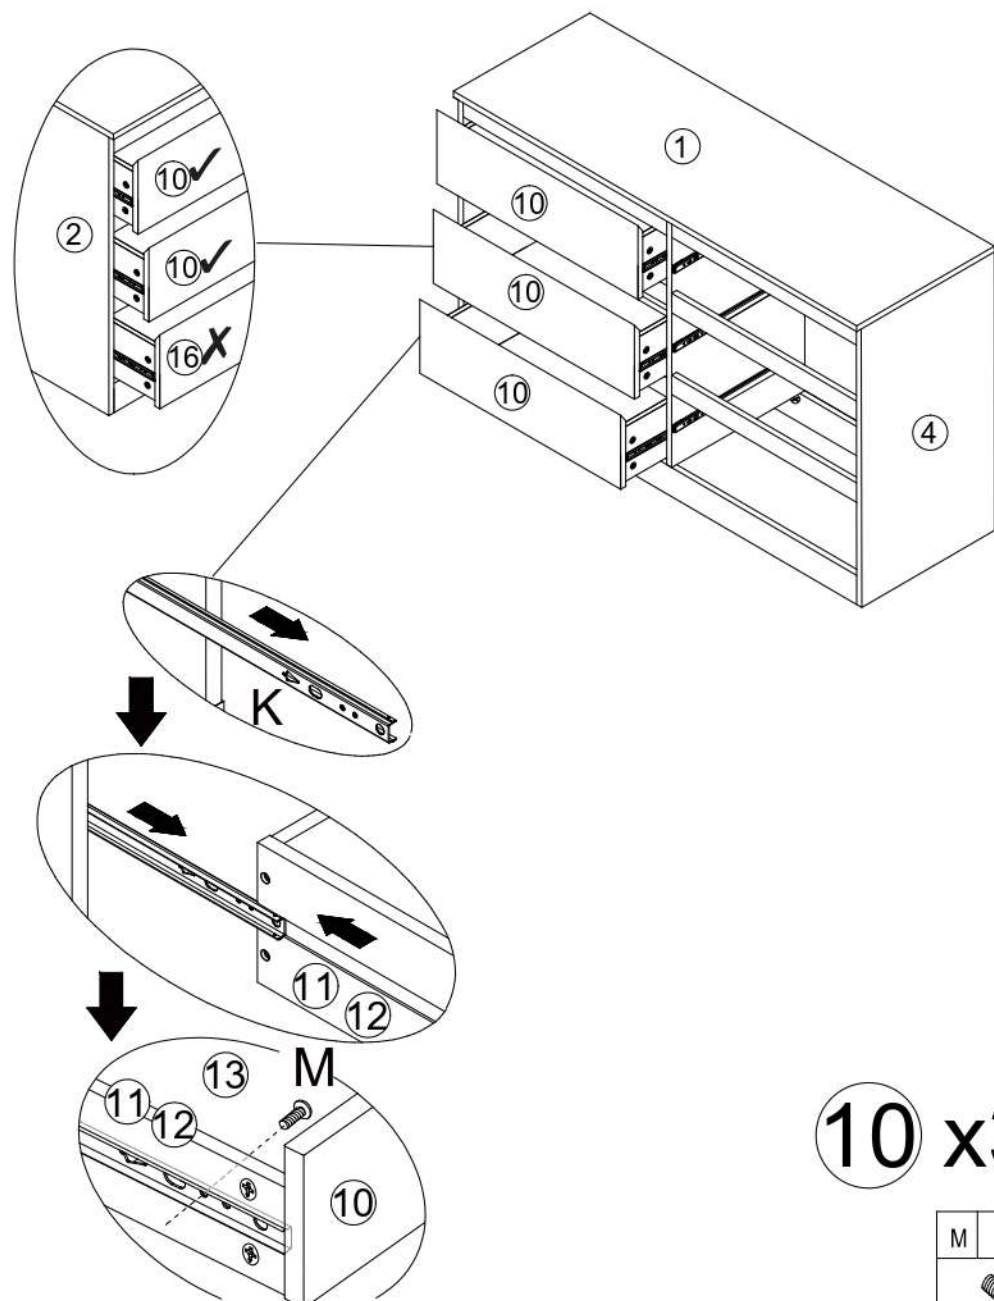


10 x3



Screw from the inside of the drawers

15

Insert the RIGHT drawers into the corresponding compartments as shown.

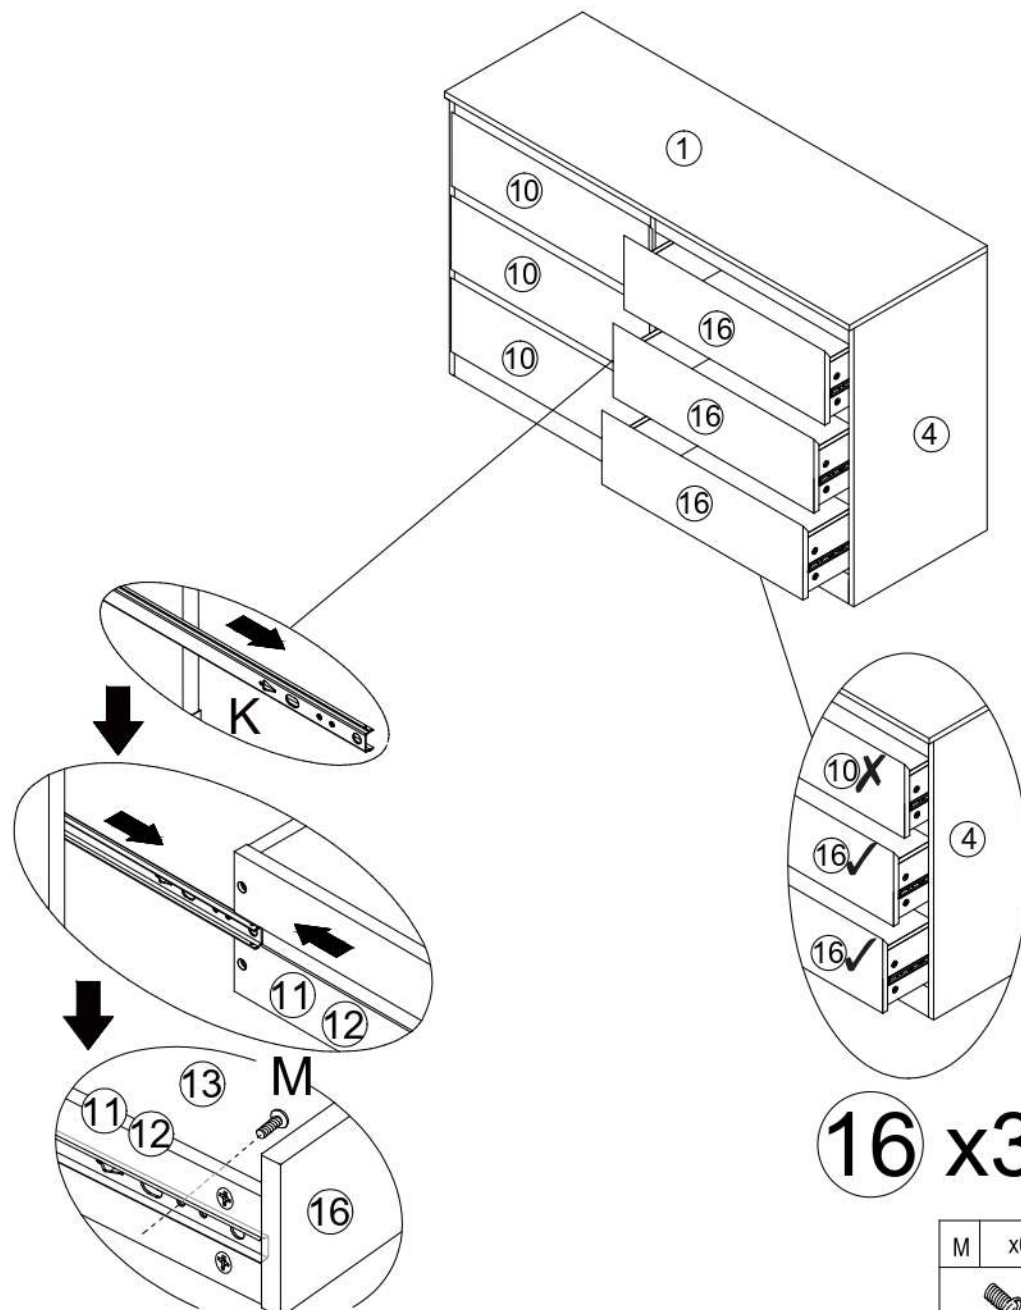

16 x3



Screw from the inside of the drawers