


WOODEN BAR SET

MODEL: BS-RONI-SET3-WHWD

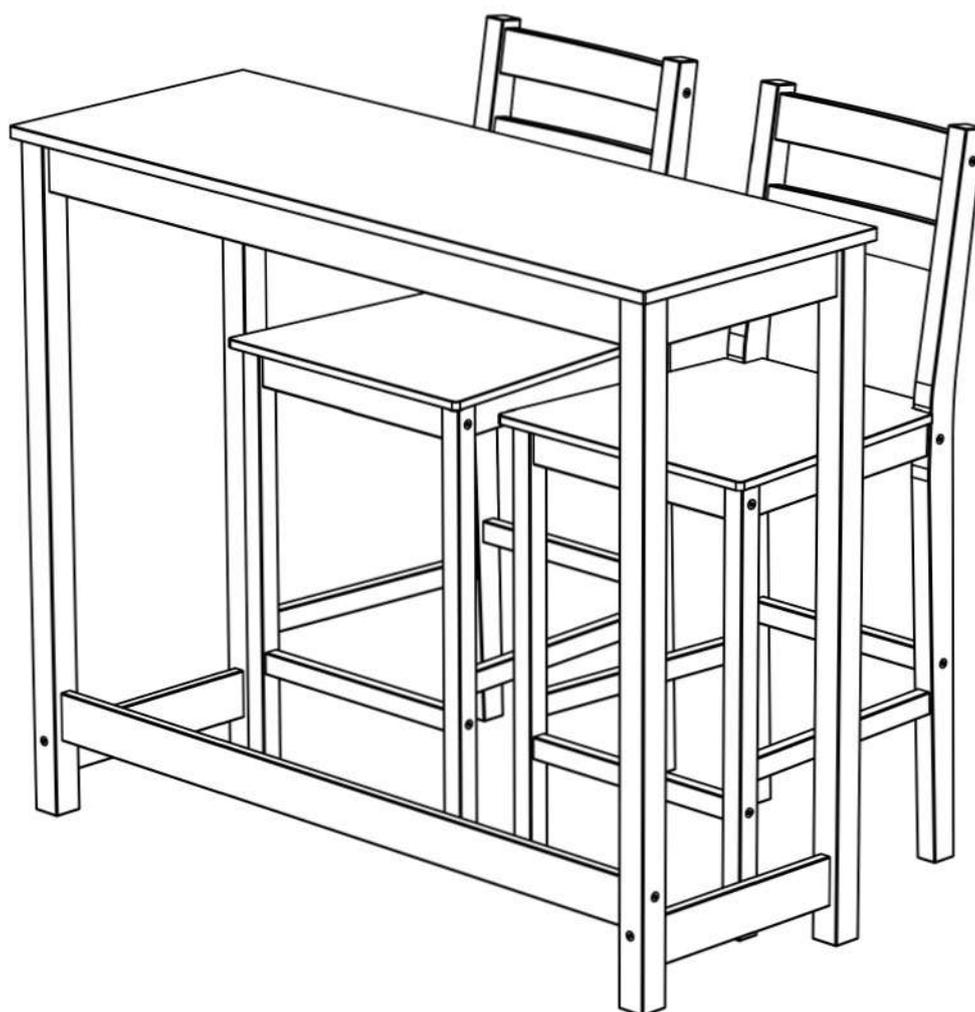

ASSEMBLY INSTRUCTIONS

Please read these instructions carefully before assembling
and using the product.

ASSEMBLY CHECKLIST



Read through the instructions carefully before starting assembly.



Make sure that you have the required tools. Do not use power tools.



Identify and lay out all parts to familiarise yourself with them.




Do not fully tighten all screws until the step or process has been completed.










USEFUL INFORMATION

1. Never use power tools for assembly. They can damage the components or hardware if used incorrectly.
2. The most common mistakes made during assembly are using the wrong hardware or getting components from back to front.
3. Always assemble the product on a soft surface such as a carpet or cardboard to avoid scratching or damaging the surface of the product.

BAR TABLE


PARTS AND HARDWARE

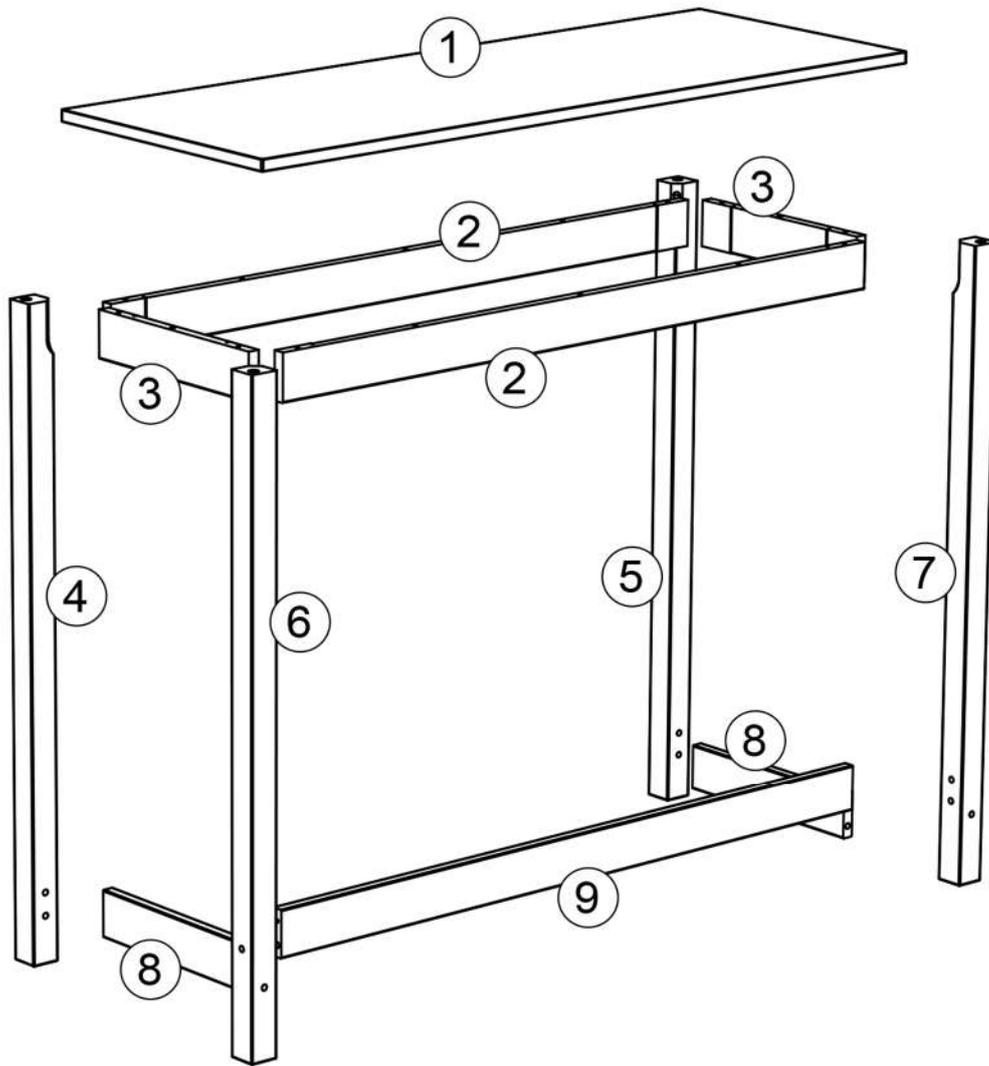

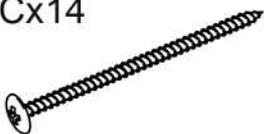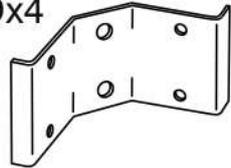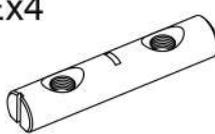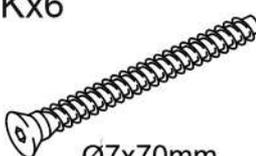
<p>Ax8</p>  <p>Ø8x30mm</p>	<p>Bx16</p>  <p>Ø4x16mm</p>	<p>Cx14</p>  <p>Ø5x50mm</p>	<p>Dx4</p> 
<p>Ex4</p> 	<p>Fx8</p>  <p>M8x57mm</p>	<p>Gx8</p> 	<p>Hx8</p> 
<p>Jx1</p> 	<p>Kx6</p>  <p>Ø7x70mm</p>	<p>Lx1</p> 	<p>Ox4</p>  <p>30mmx30mm</p>

ASSEMBLY STEPS

1

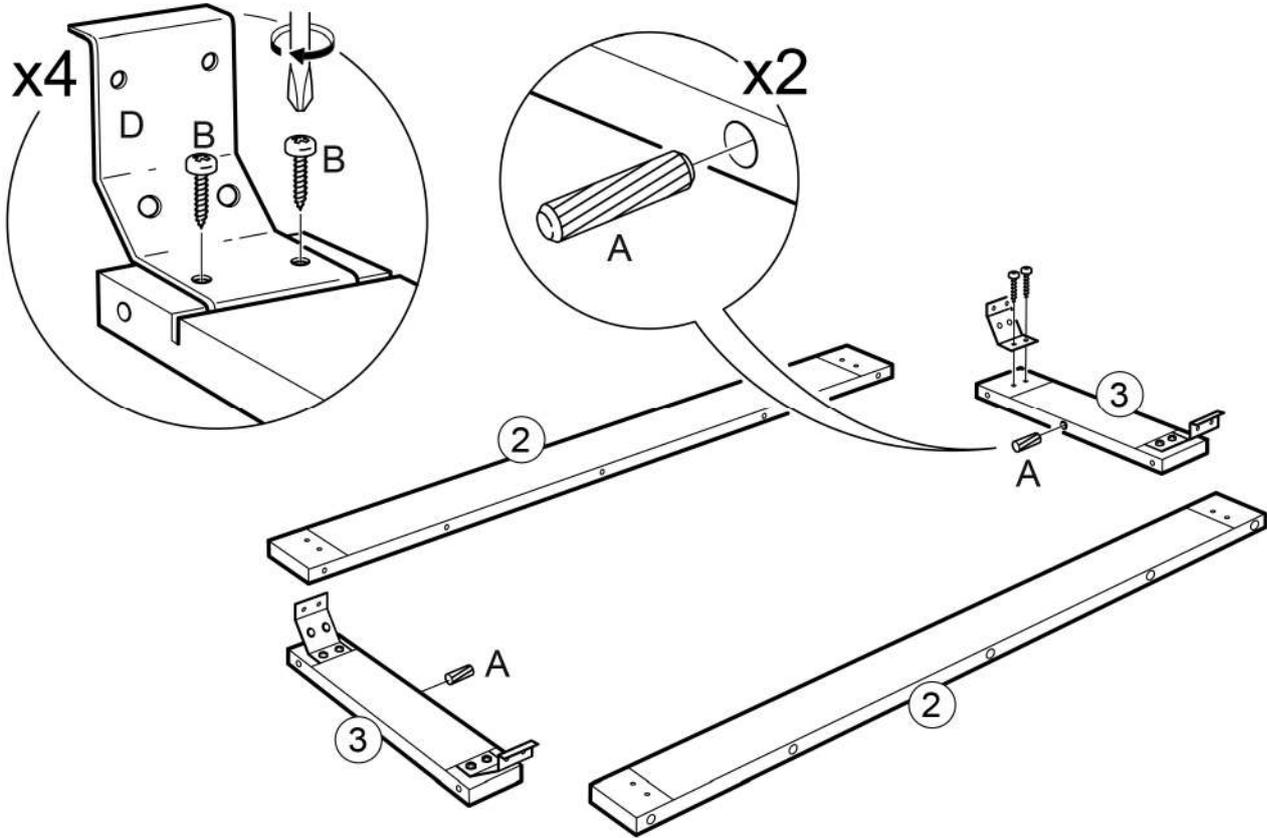

Ax2




Ø8x30mm

Bx8







Ø4x16mm

Dx4

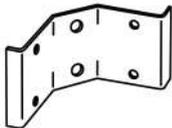

2

Ensure that Part 2 is in the correct facing

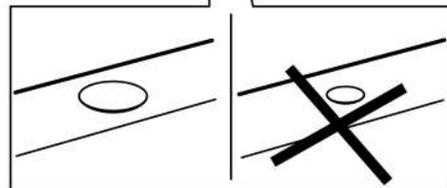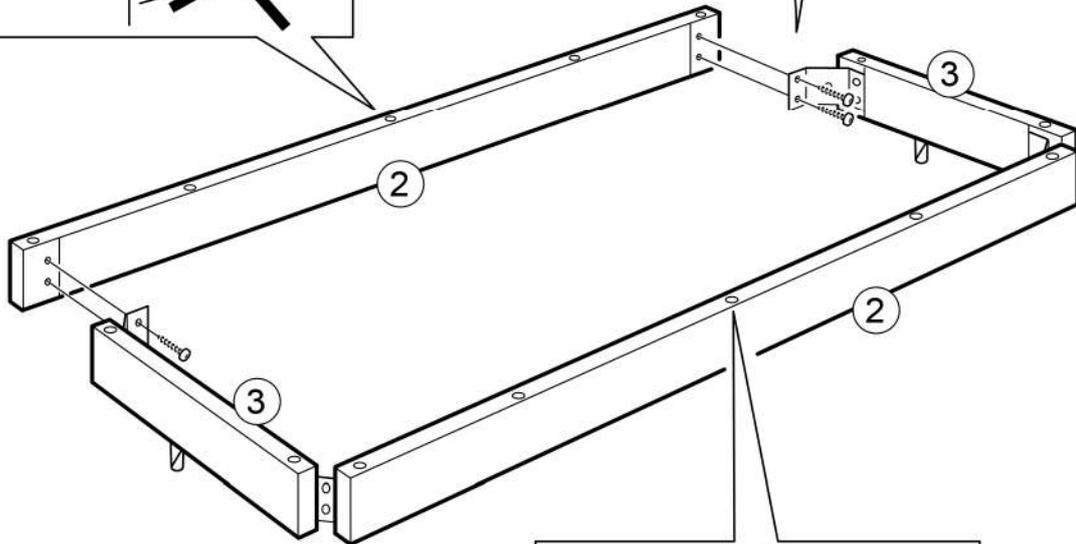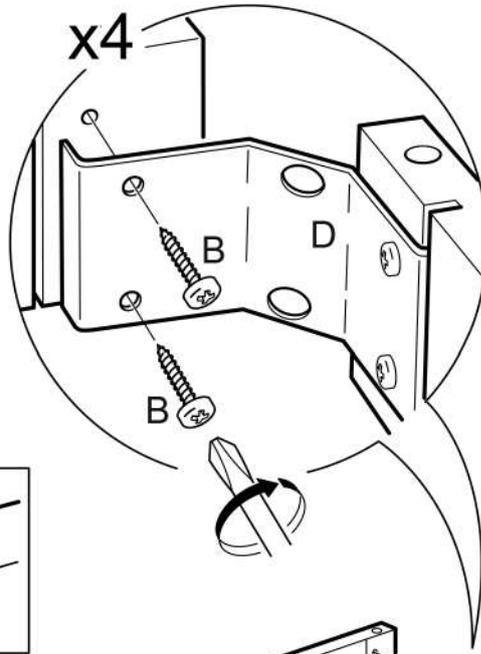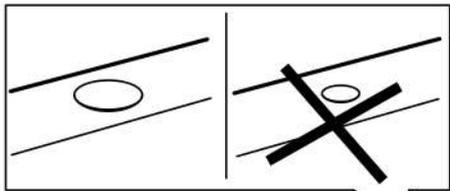


Ensure that Part 2 is in the correct facing

Bx8



Ø4x16mm

3

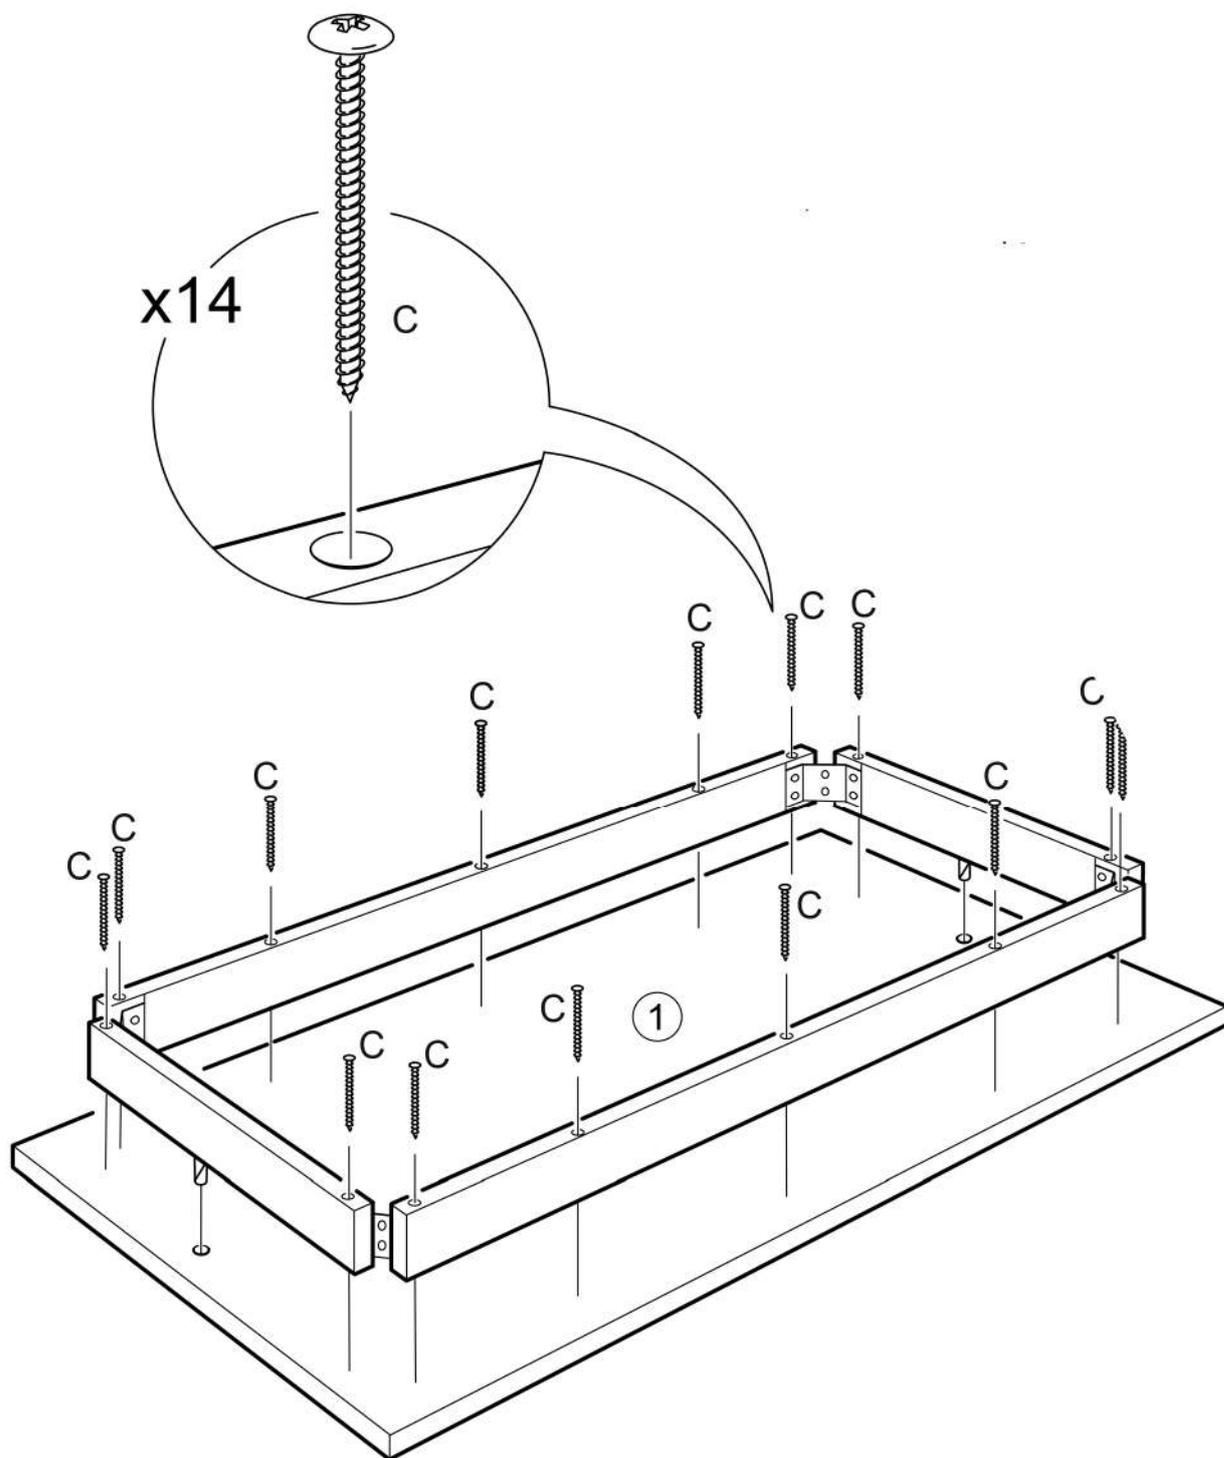


Cx14




Ø5x50mm

4

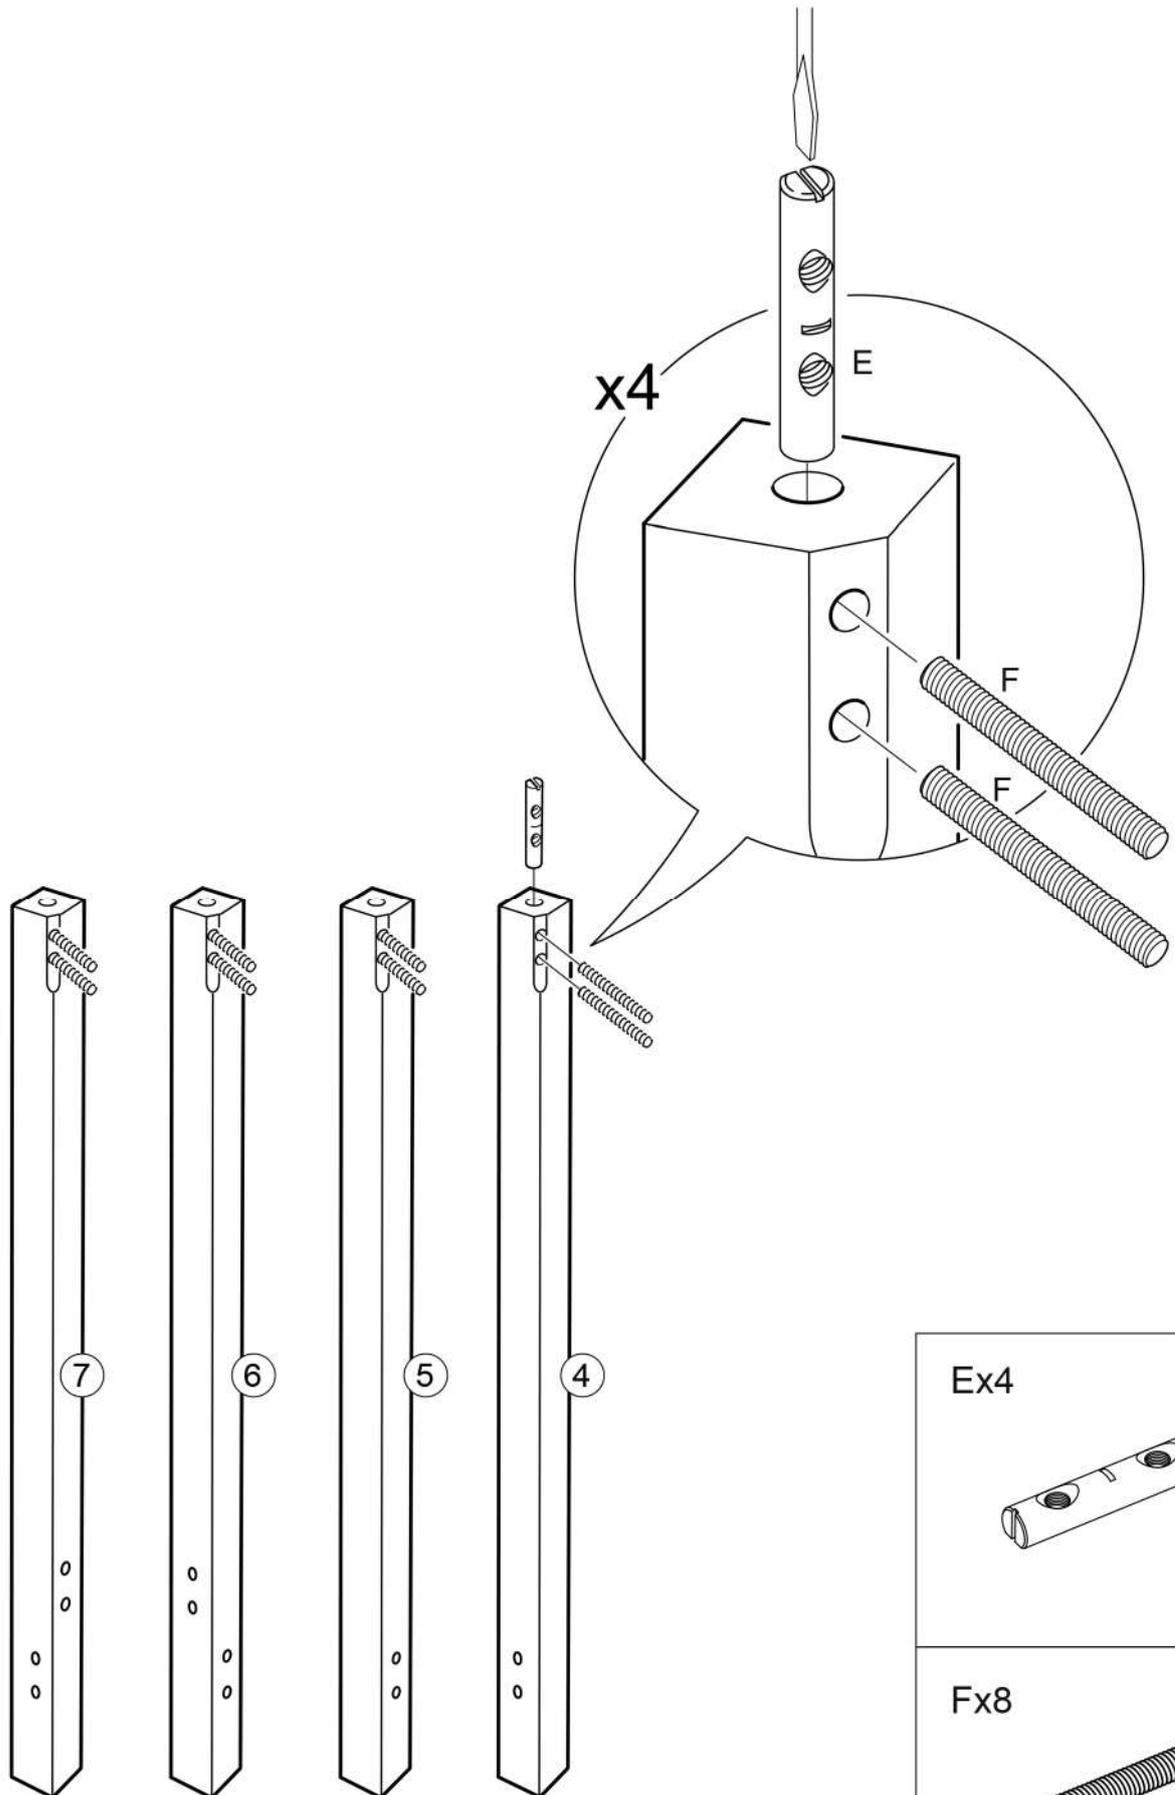

Ex4






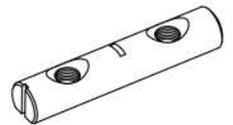


Fx8









M8x57mm



5

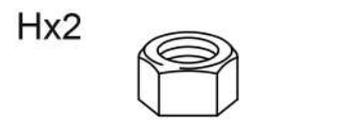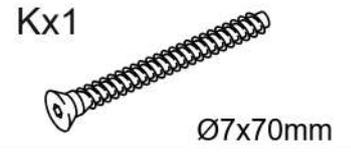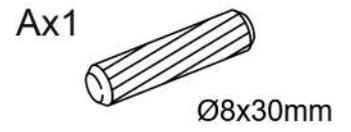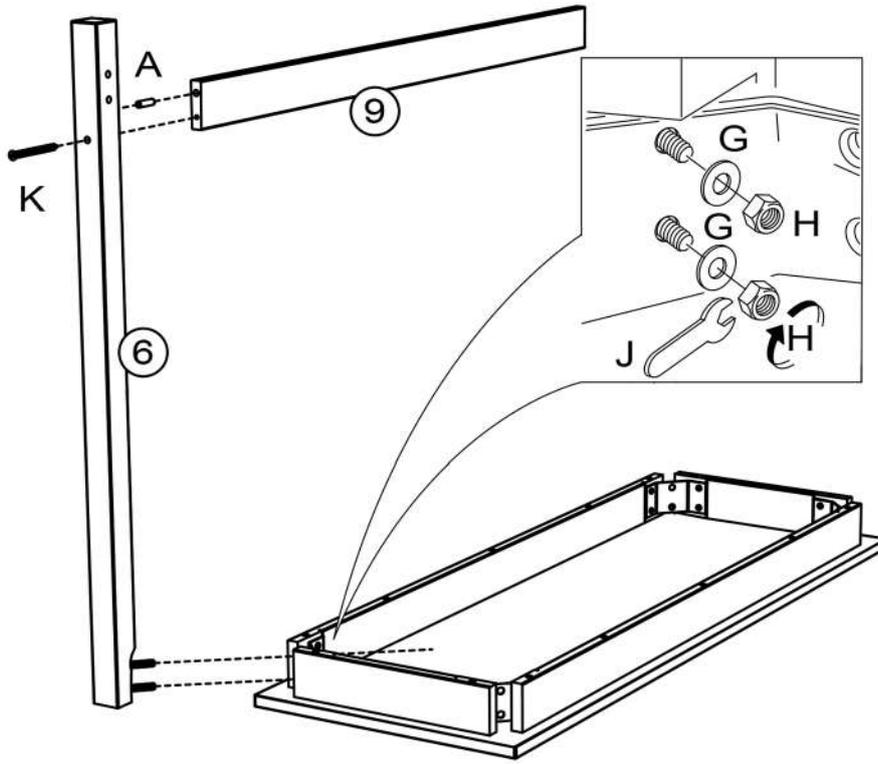







6

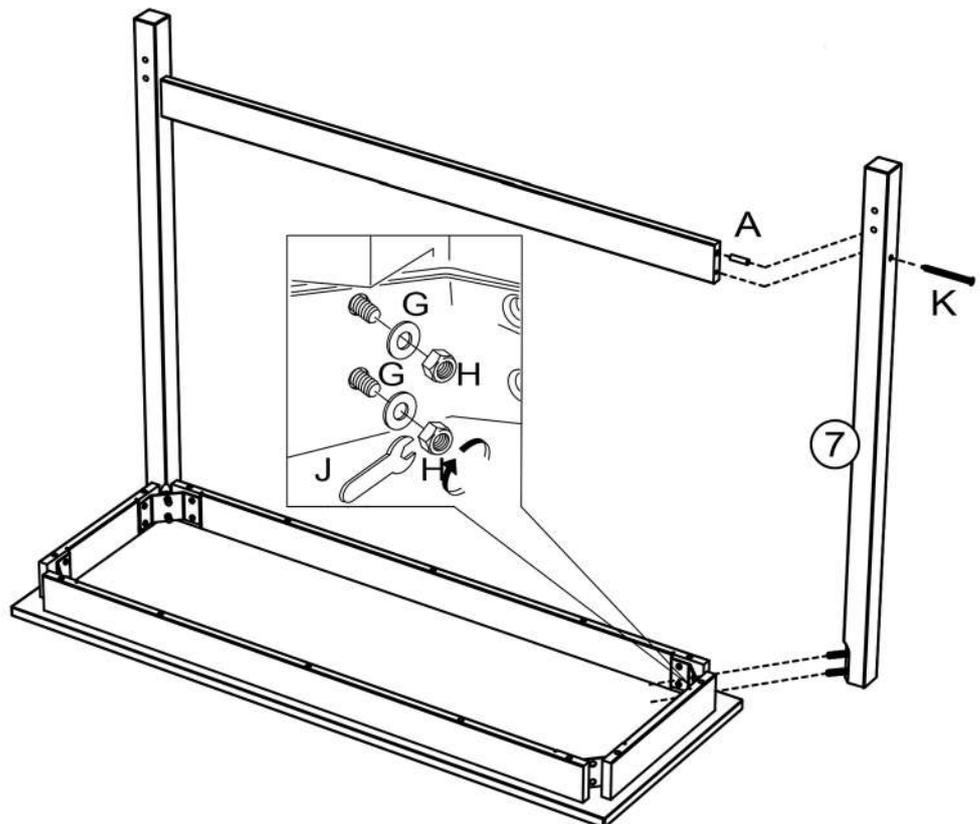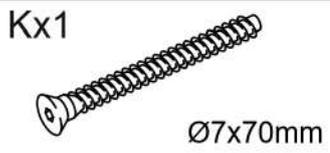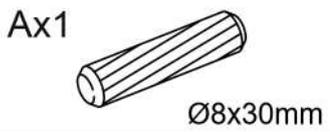

7

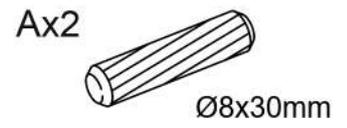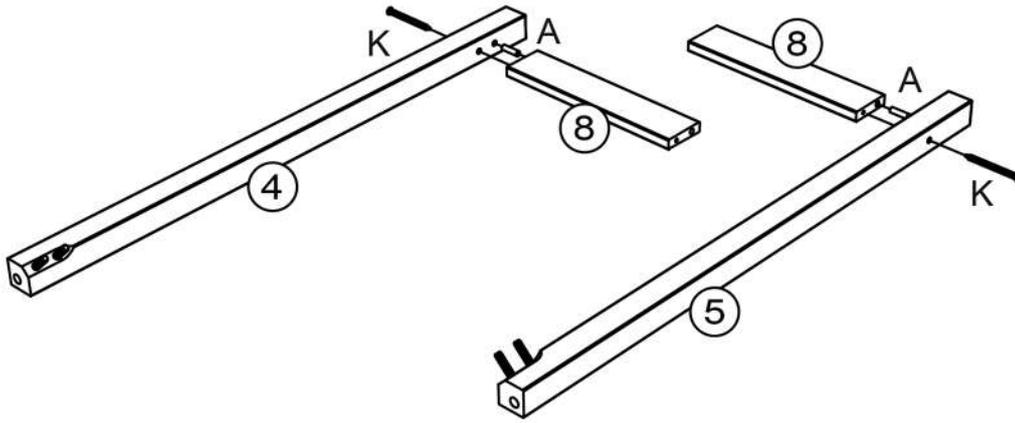


8

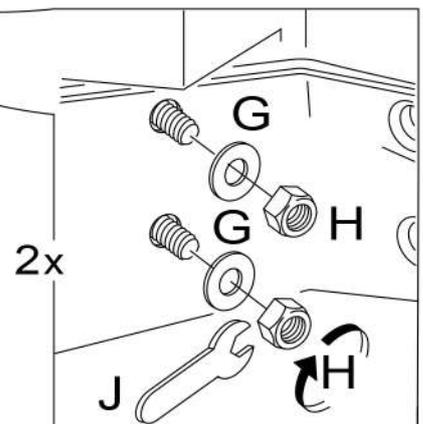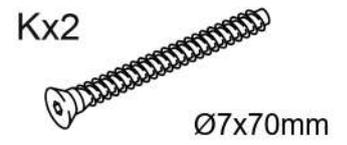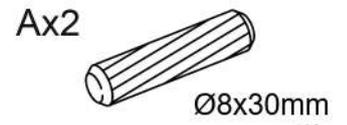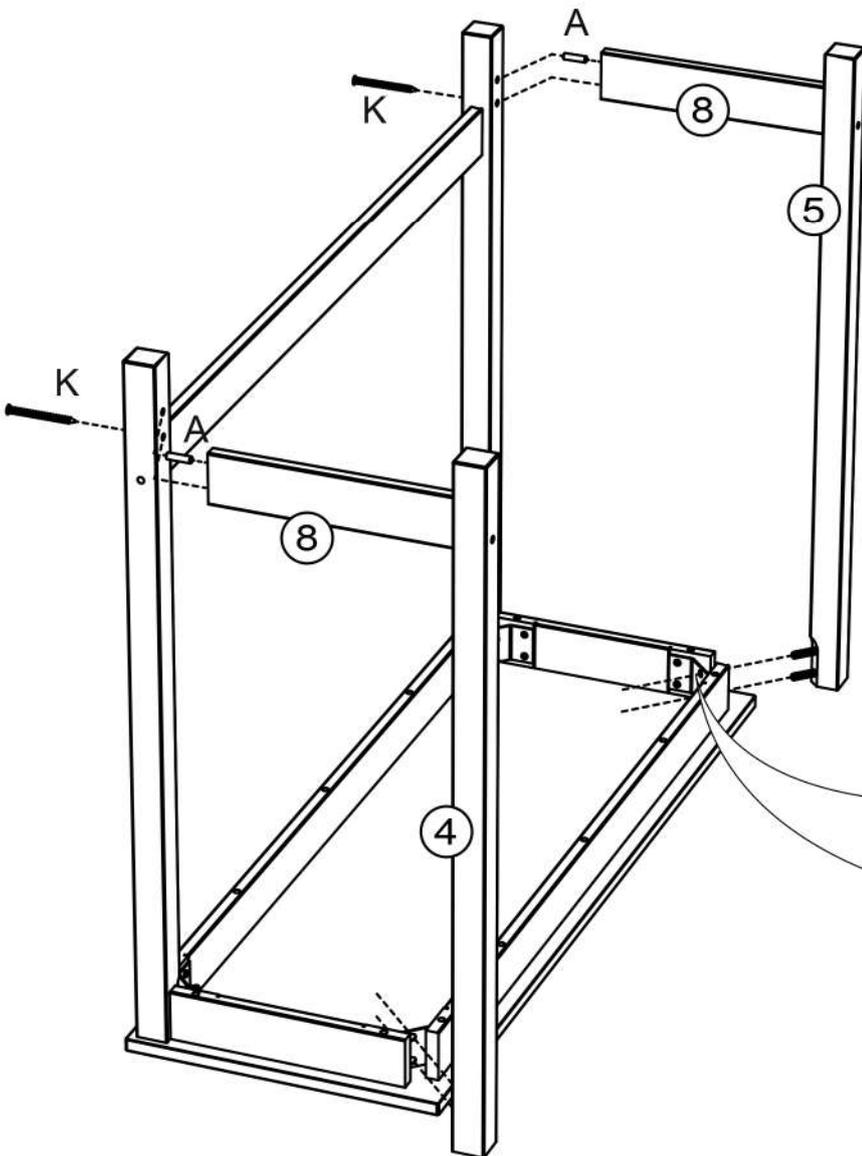

BAR STOOL


PARTS AND HARDWARE

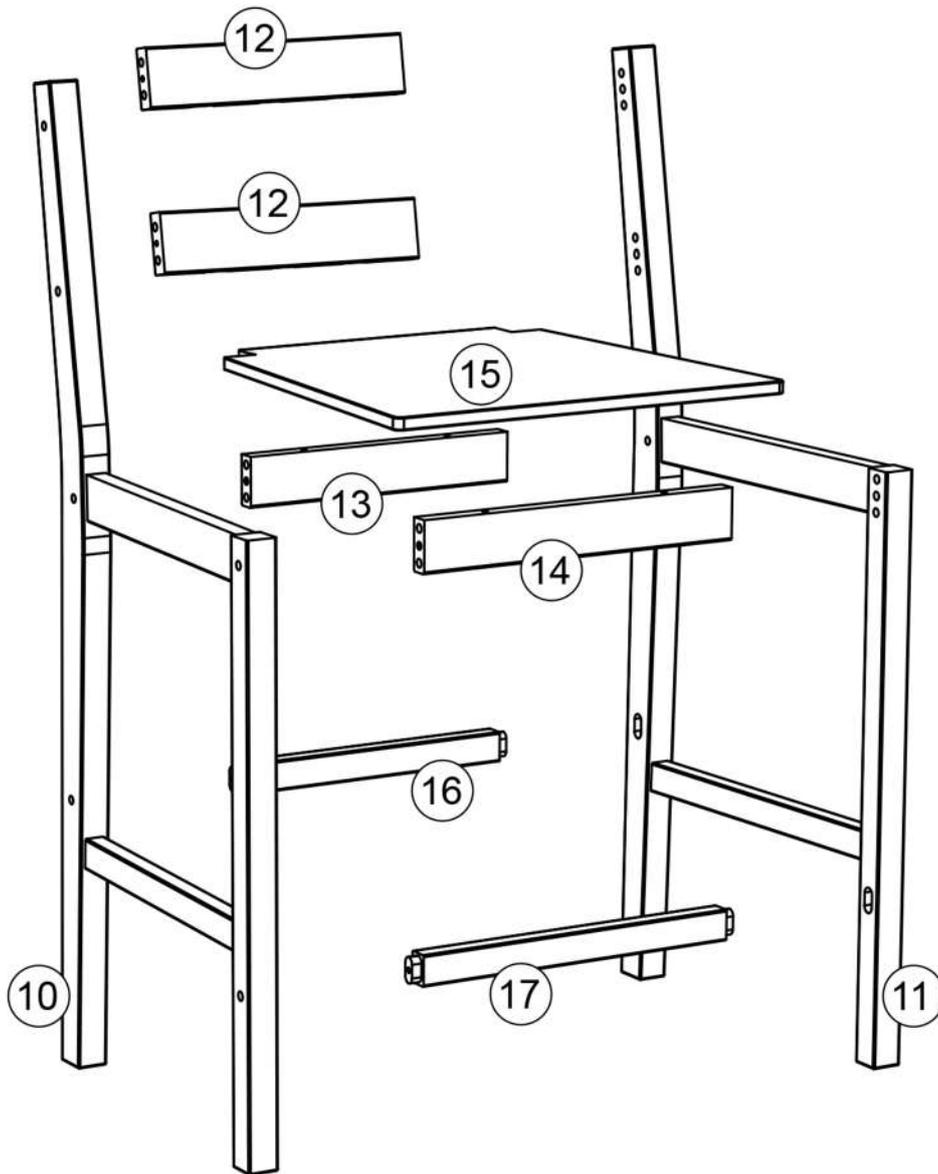


Ax32  Ø8x30mm	Lx1 	Mx20  Ø7x60mm	Nx8  Ø4x50mm	Px8  20mmx20mm
--	--	--	--	---

ASSEMBLY STEPS

1

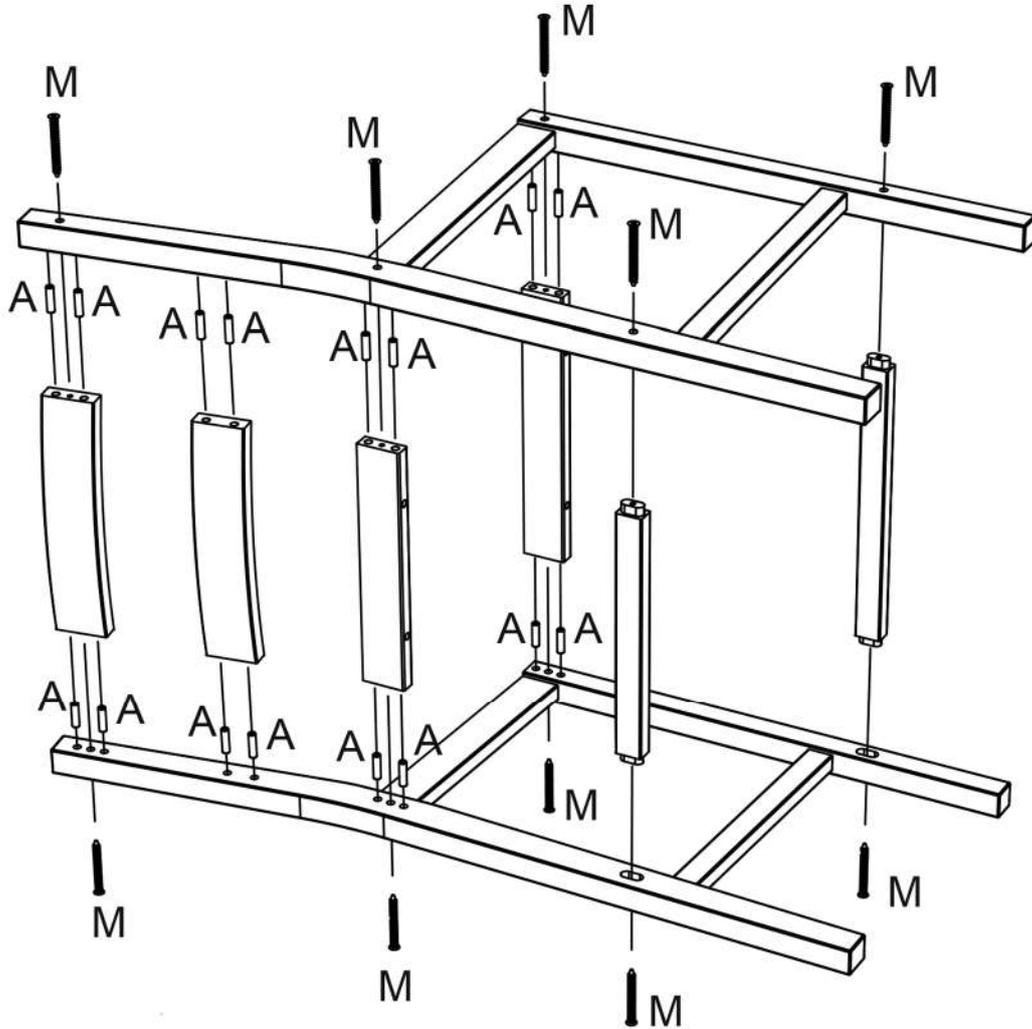

Ax32



Ø8x30mm

Mx20



Ø7x60mm

Lx1




x2

Assemble
2 sets

2

x2

Assemble
2 sets

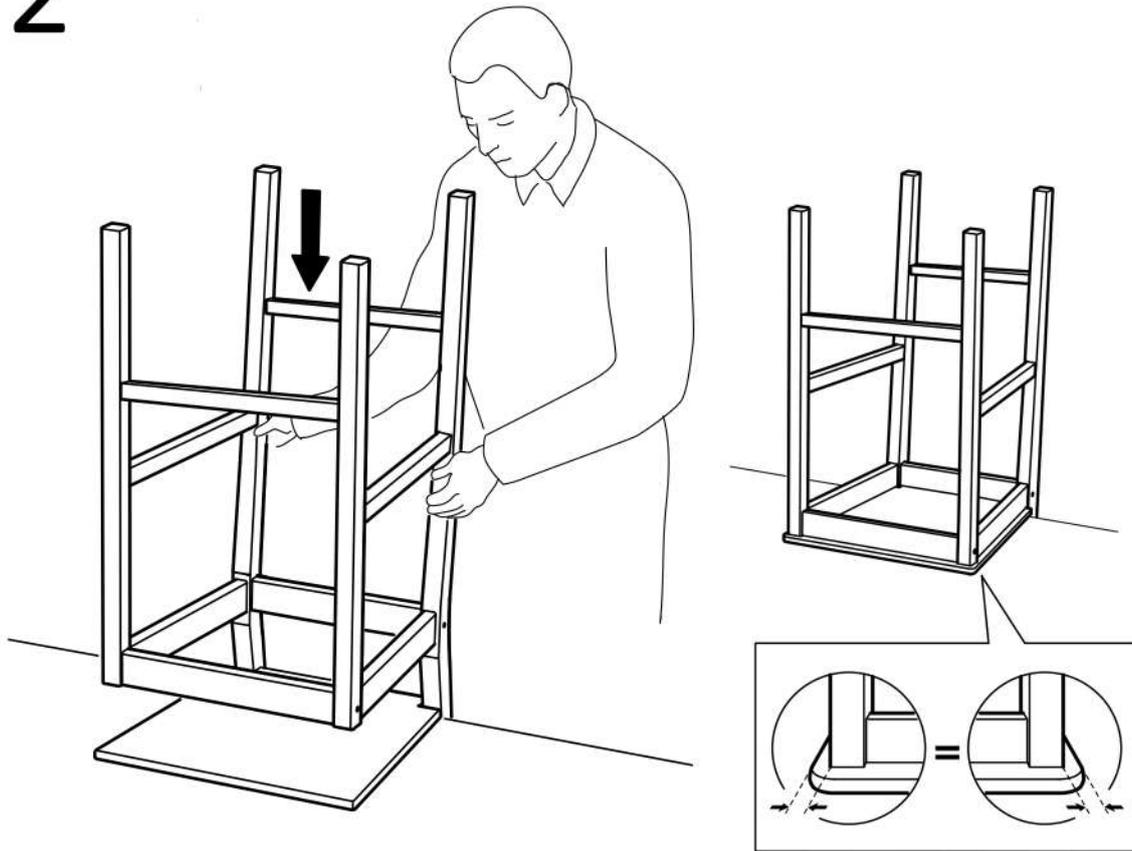


Leave 8mm to 10mm of space from the edge

3

x2

Assemble
2 sets

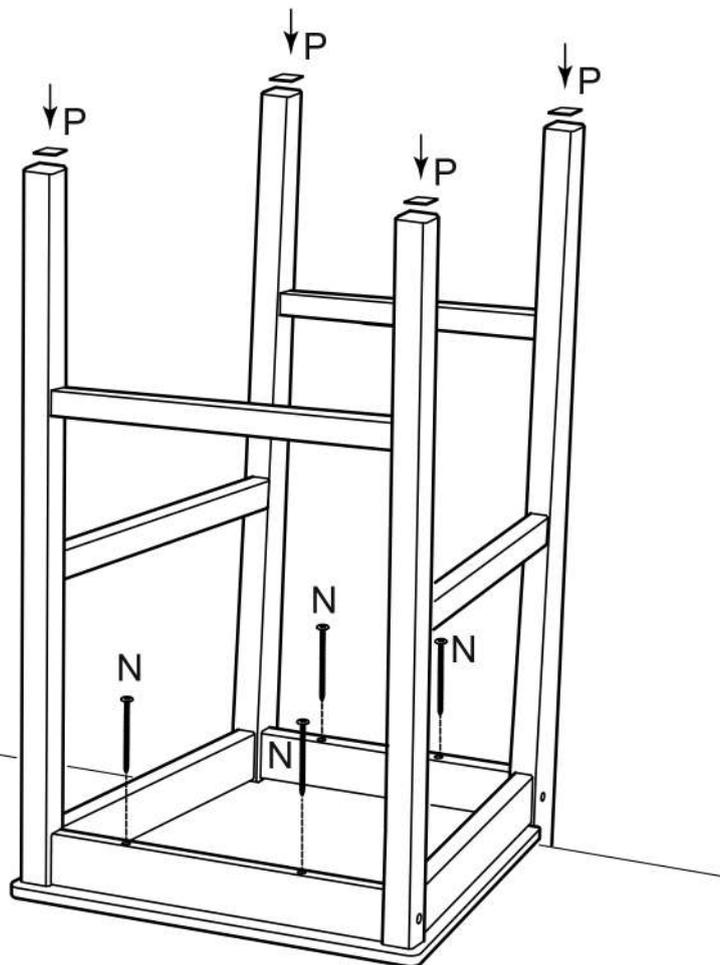

Nx8



Ø4x50mm

Px8



20mmx20mm

3-PC WOODEN BAR SET

