





BED FRAME

MODEL:BF-MEXI-Q-WH/WD

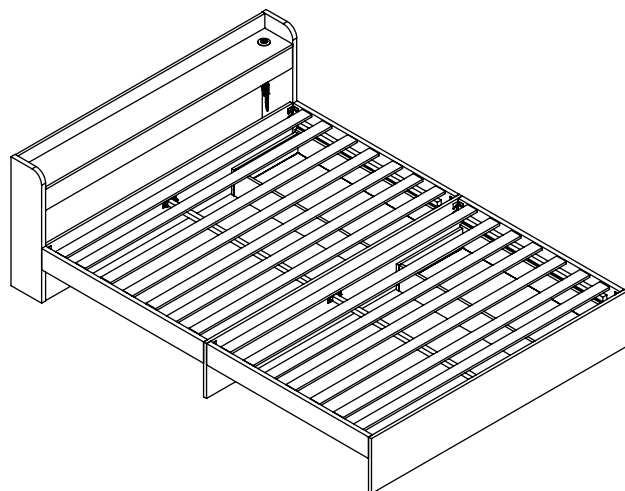


ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.



Two persons and
tools required for
assembly



HARDWARE

A	x4	B	x8	C	x8	D	x1	E	x1	F	x8	G	x13
													
M8x15mm		M8x40mm		8mm		5mm		14mm		M5x60mm		7x35mm	
H	x13	I	x41	J	x36	K	x40	L	x16	M	x8	N	x4
													
15x12mm		M4x40mm		Ø6x30mm		M4x20mm		M4x14mm					
O	x2	P	x4	Q	x4	R	x3	S	x8	T1	x1	T2	x1
													
						M3x12mm		M4x30mm					
U	x8	V	x4	W	x2	X	x1	Y	x1	Z	x2		
													
20mm		M6x12mm		M6x30mm		4mm		10mm		6mm			

PARTS




Wipe only with
a dry cloth

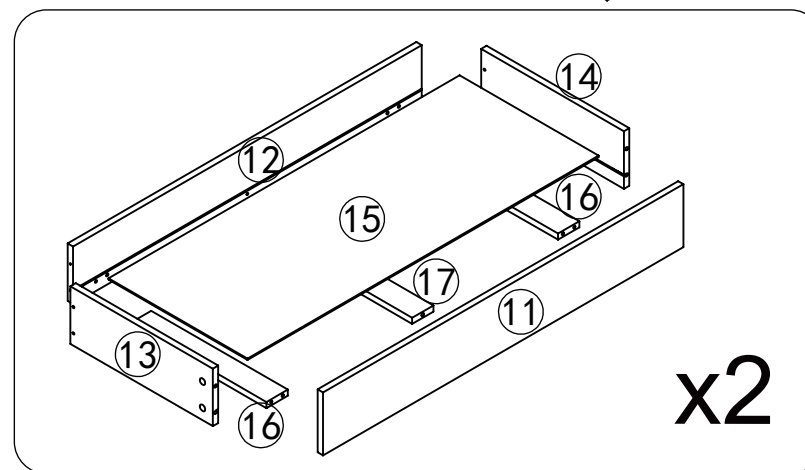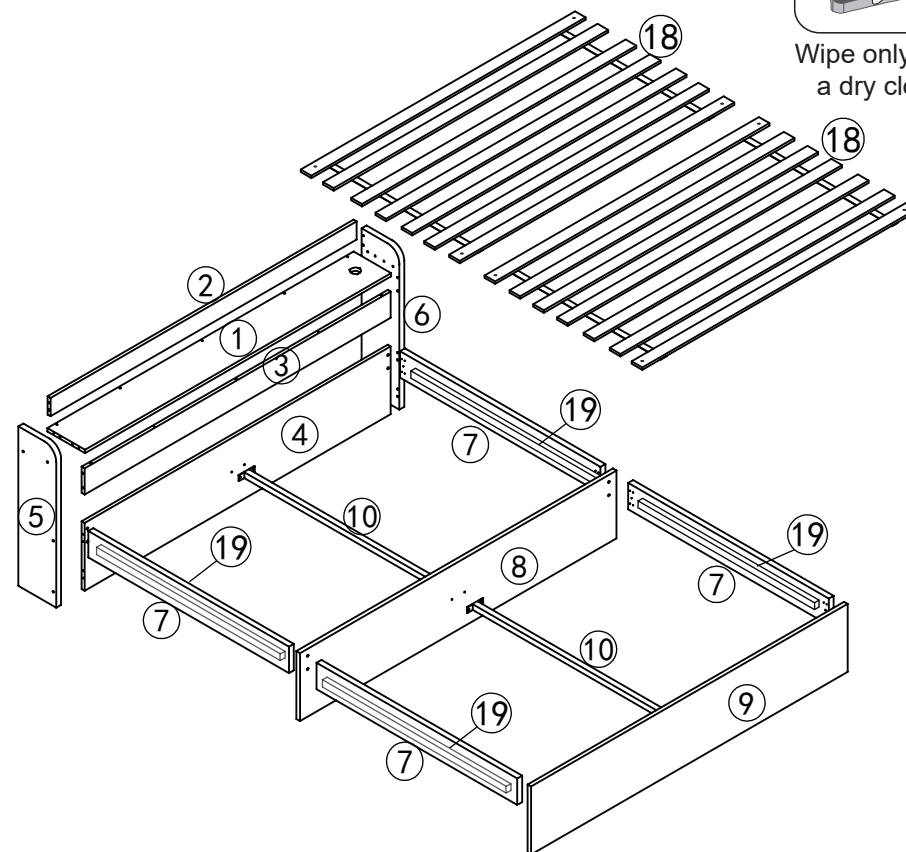

x2

1

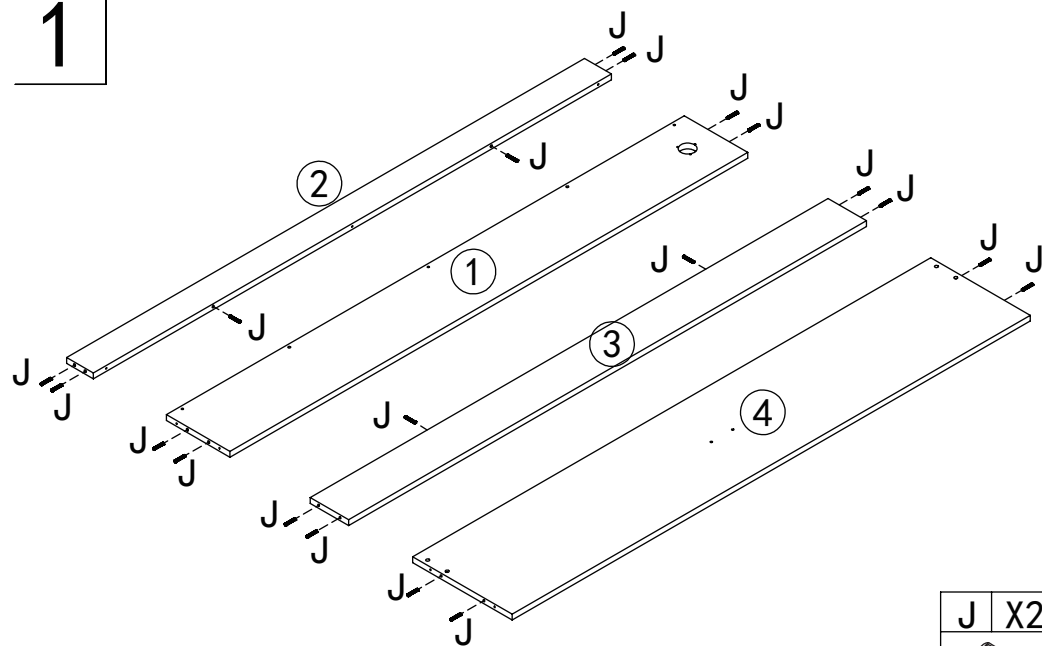


J X20



Ø6x30mm

2

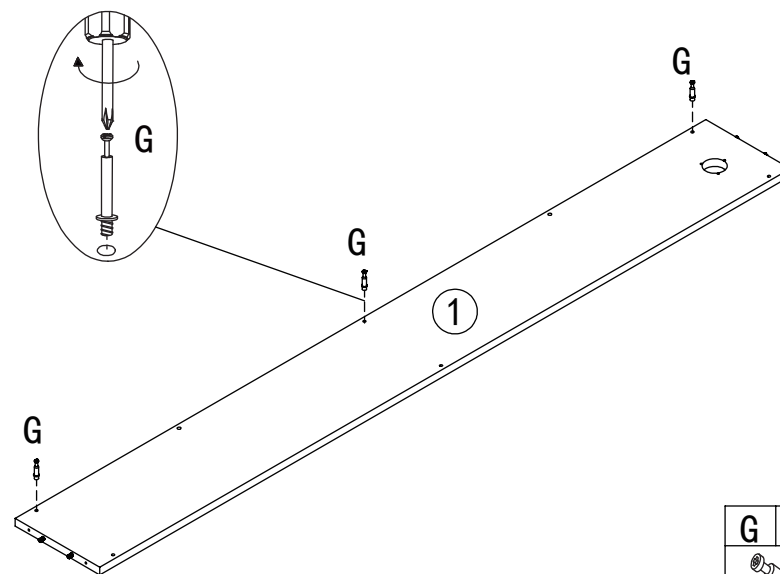


G X3



7x35mm

3

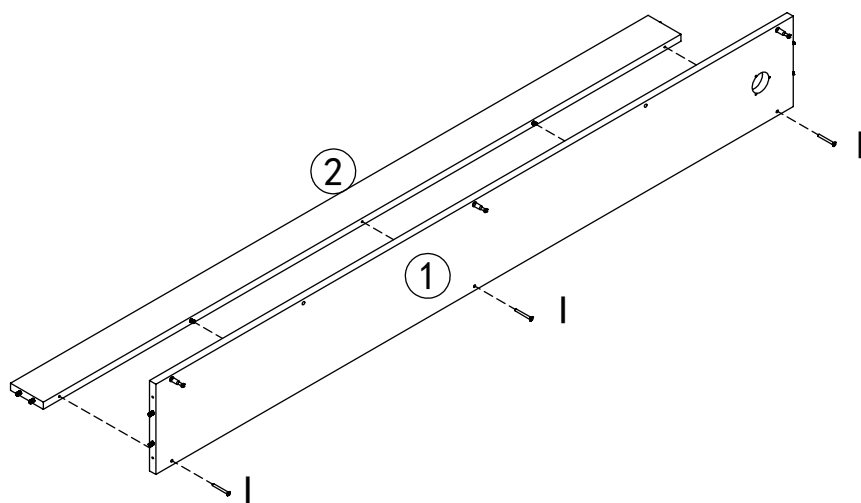


I X3



M4x40mm




4

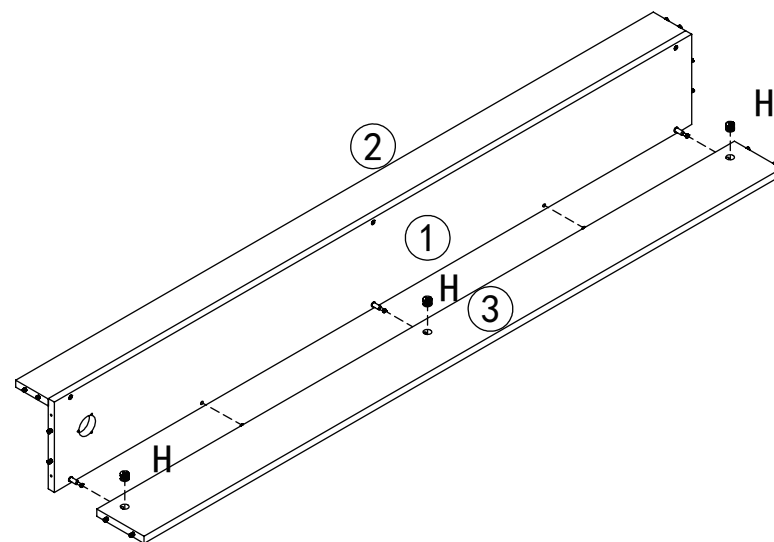


H X3



15x12mm

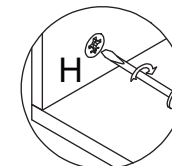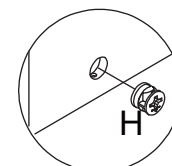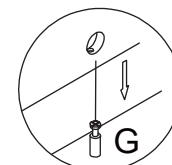


5

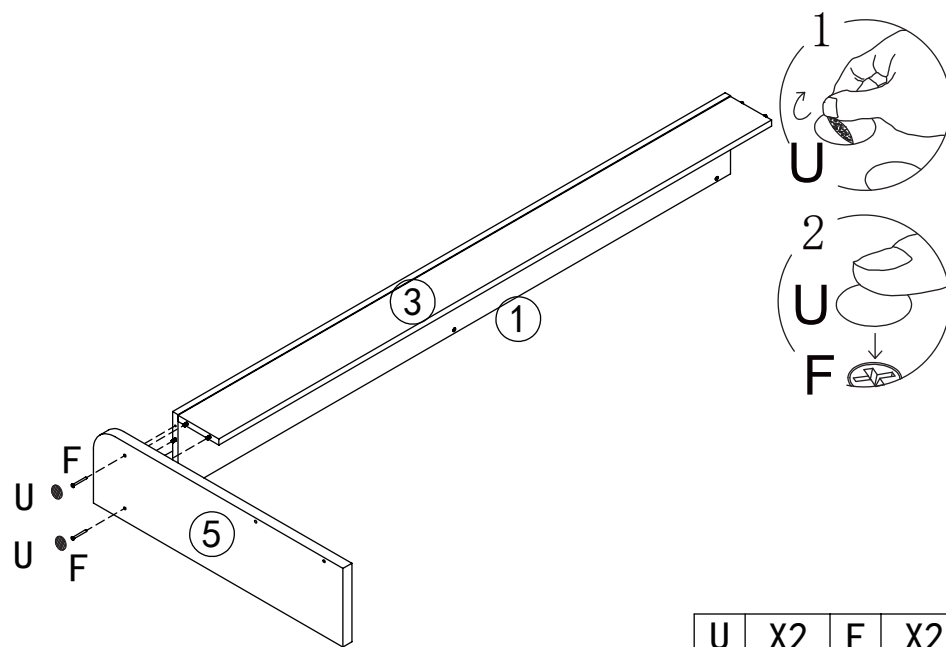


U	X2	F	X2
			
20mm		M5x60mm	

6

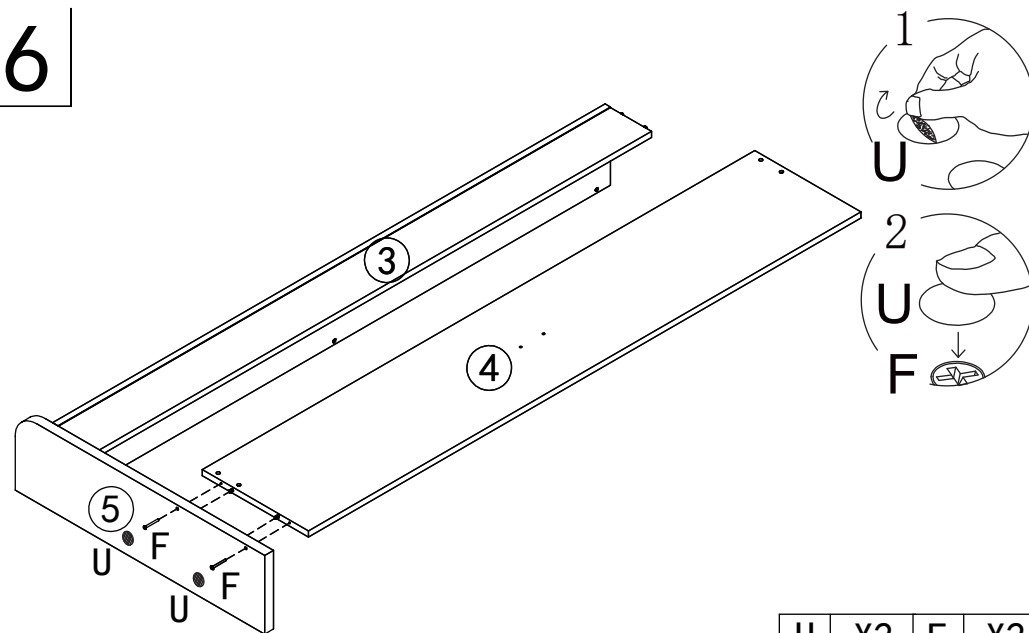


U	X2	F	X2
			
20mm		M5x60mm	


7

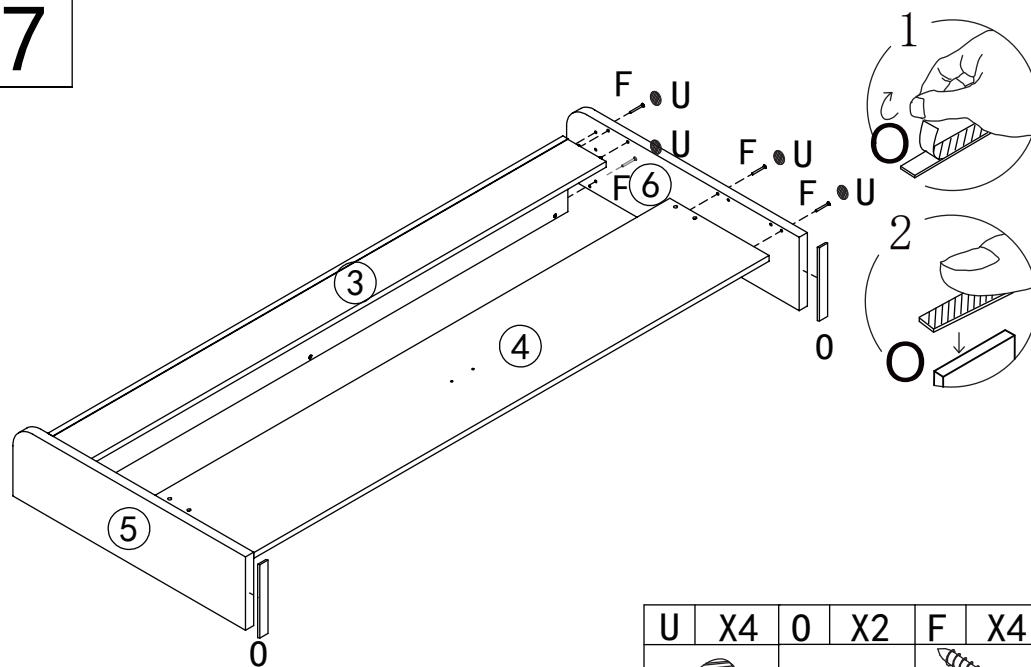

U	X4	0	X2	F	X4
					
20mm				M5x60mm	



8

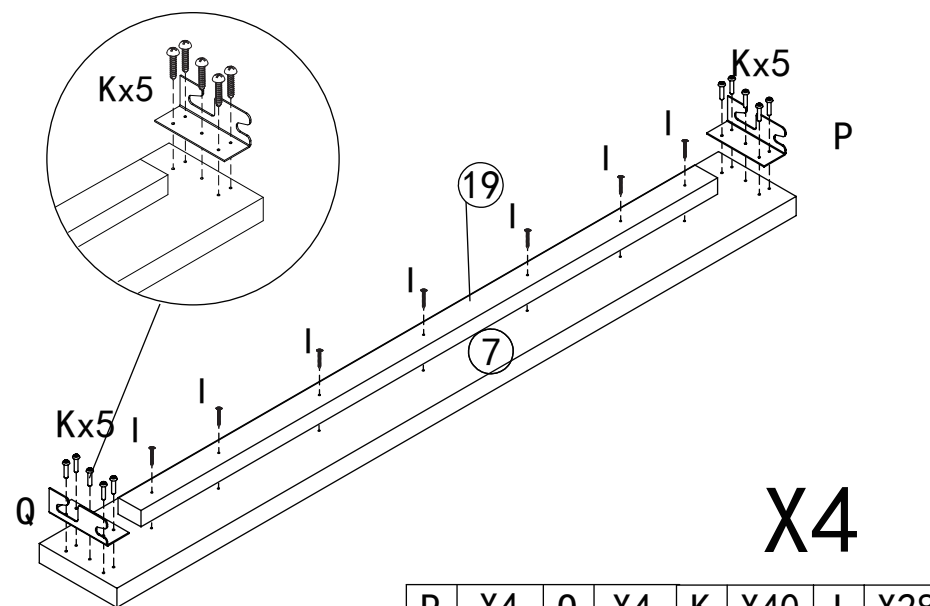

P	X4	Q	X4	K	X40	I	X28
							
				M4x20mm		M4x40mm	



X4

9

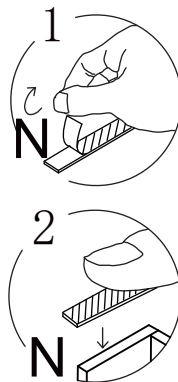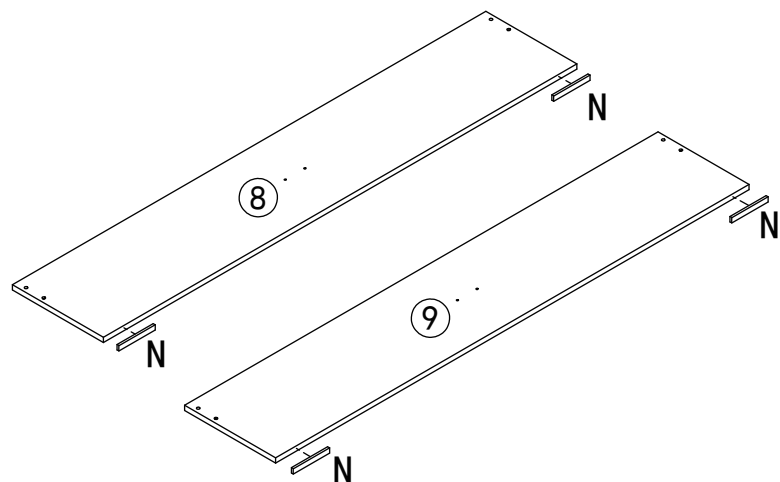



N	X4

10

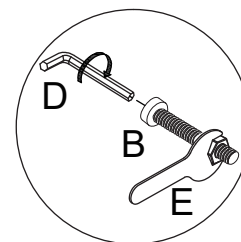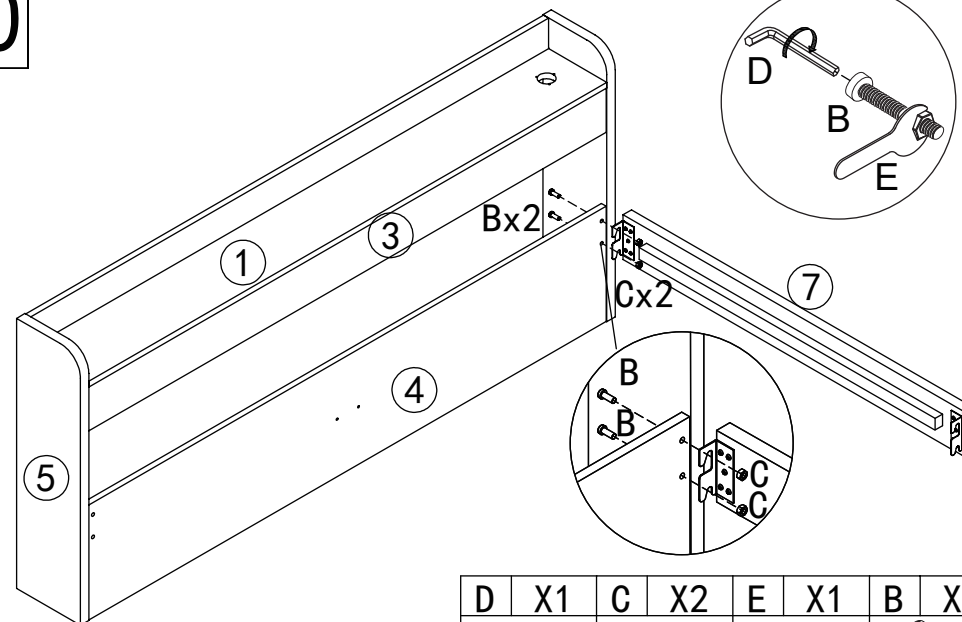



D	X1	C	X2	E	X1	B	X2
5mm		8mm		14mm		M8x40mm	

11

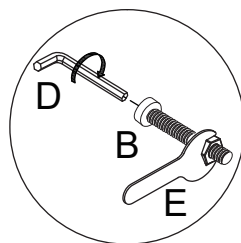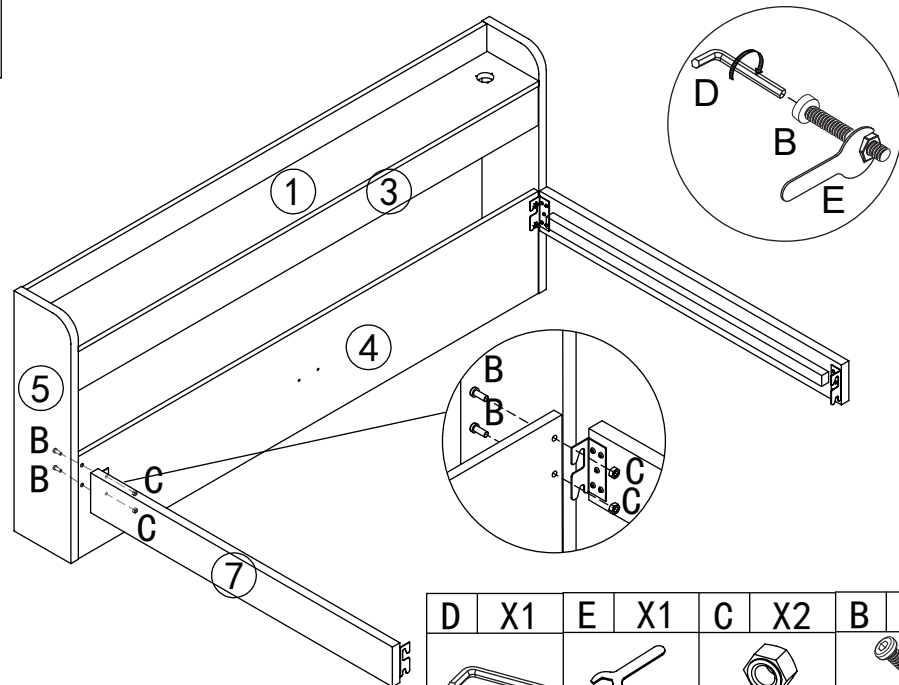


D	X1	E	X1	C	X2	B	X2
5mm		14mm		8mm		M8x40mm	

12

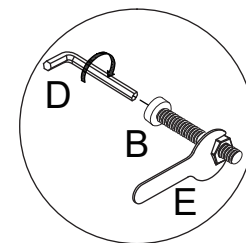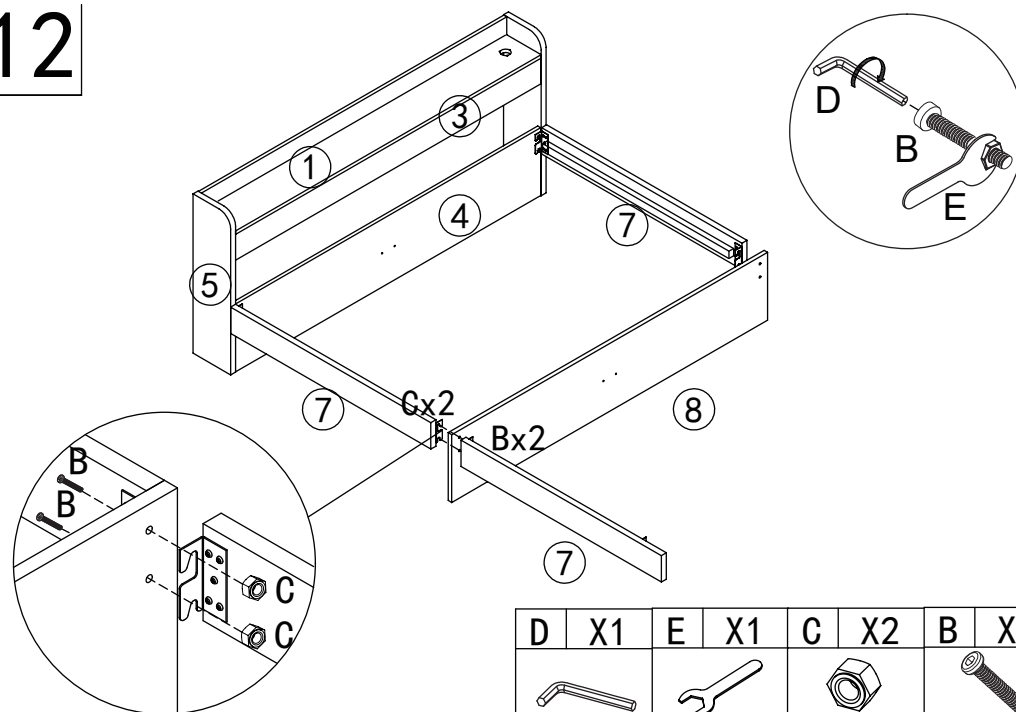


D	X1	E	X1	C	X2	B	X2
5mm		14mm		8mm		M8x40mm	


13

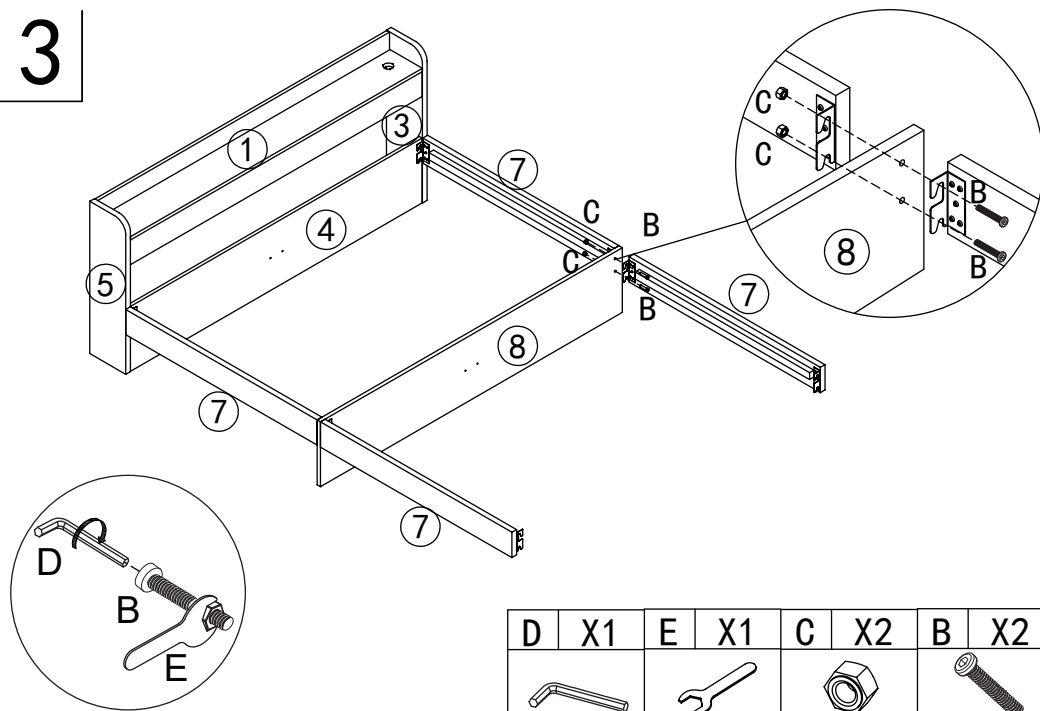


14

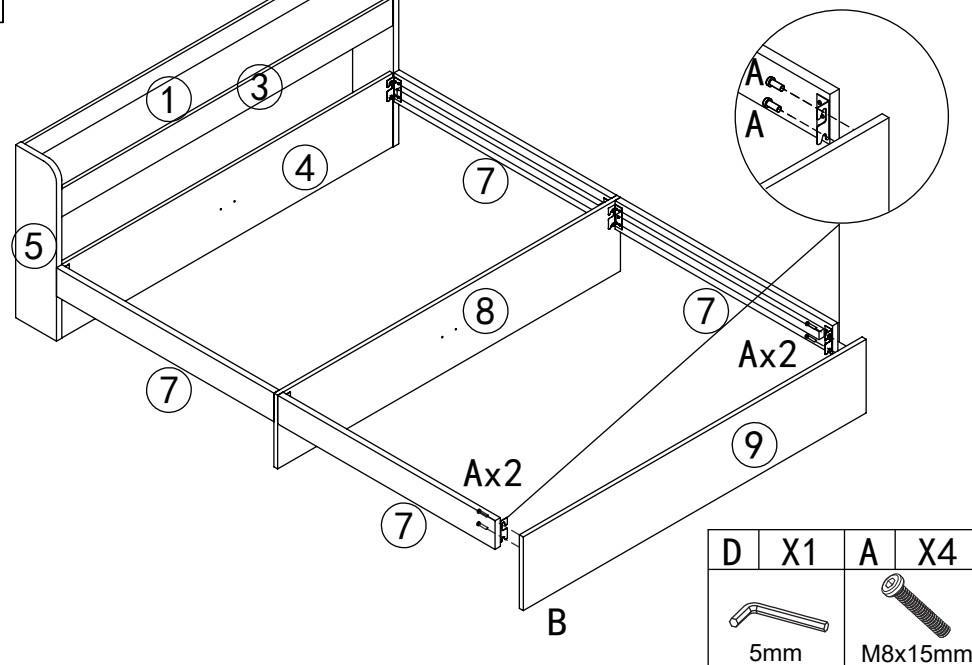


15

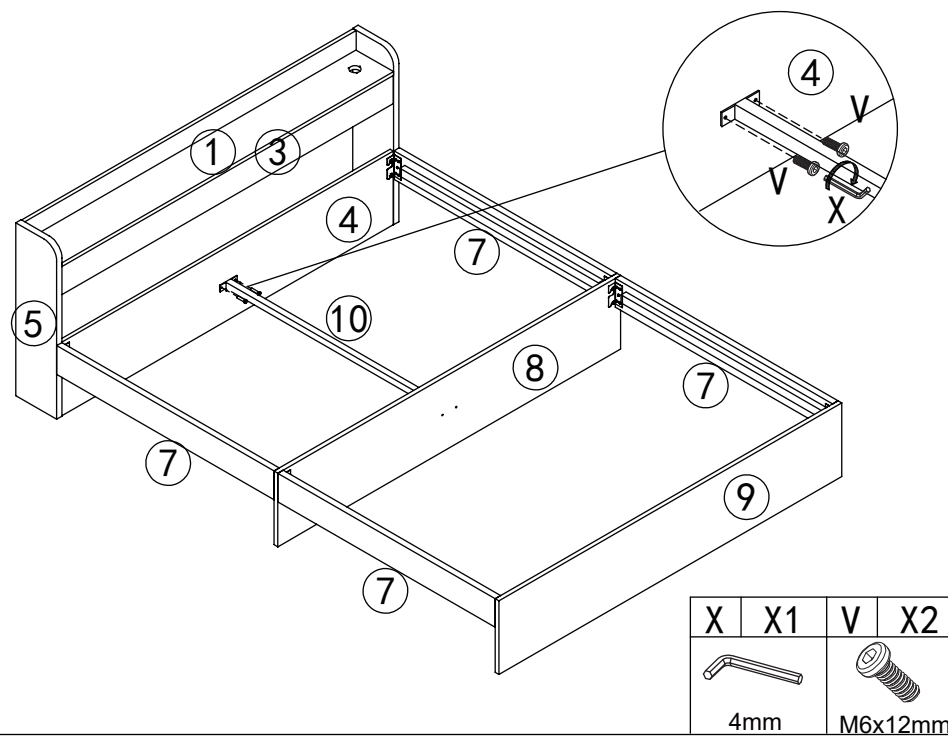

16

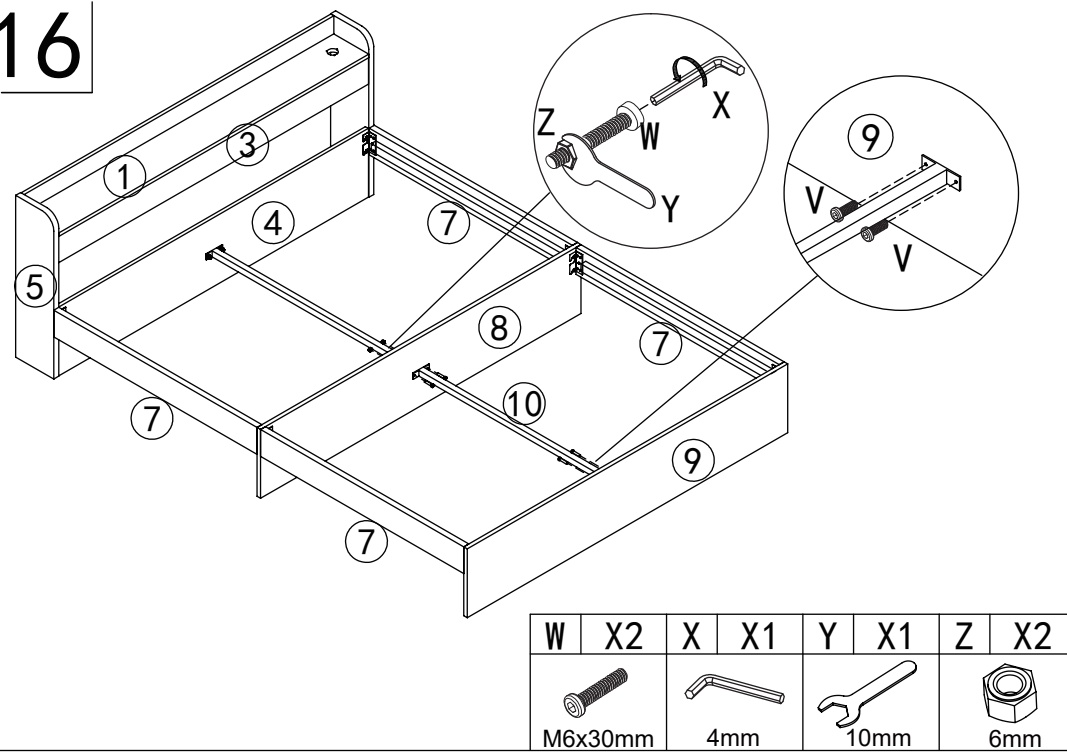


17

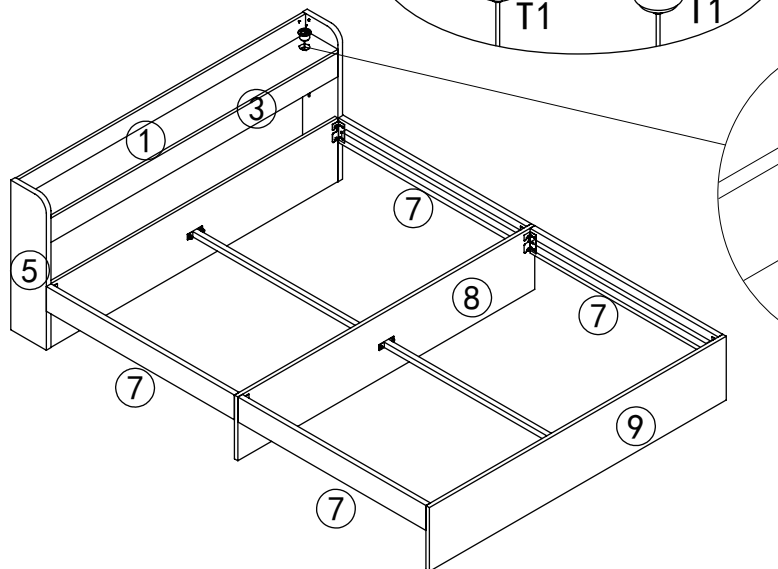


T1	X1	R	X3
			M3x12mm

18

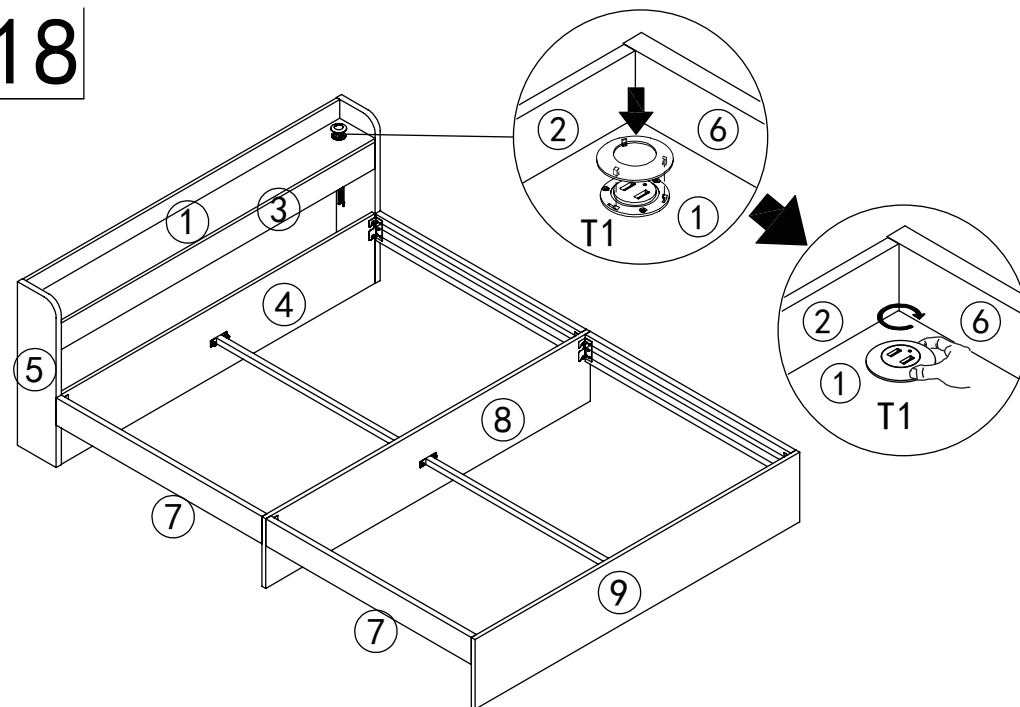


19

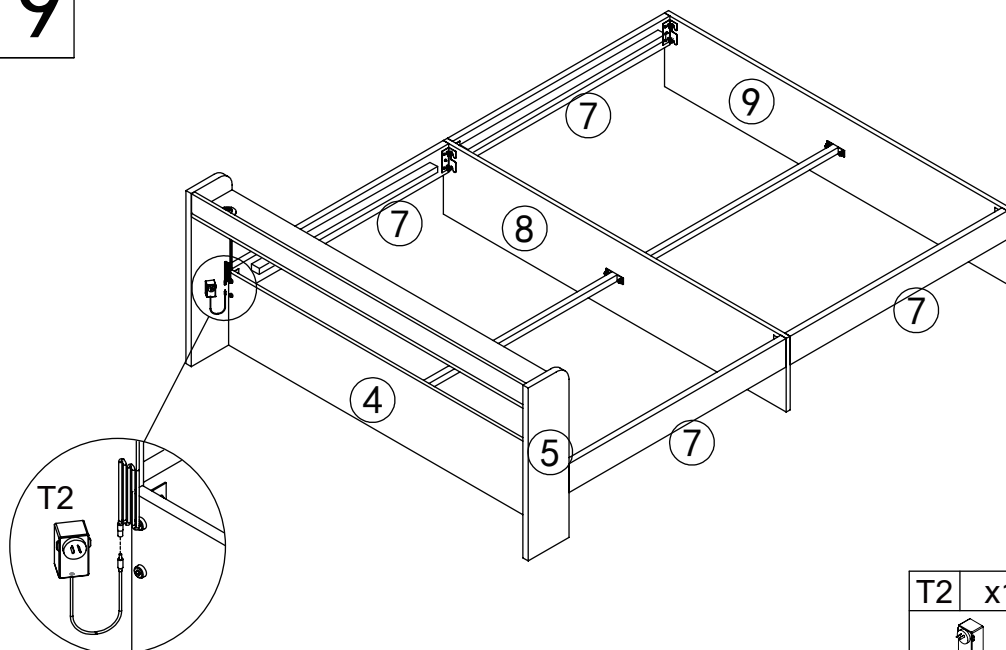


T2	x1

20

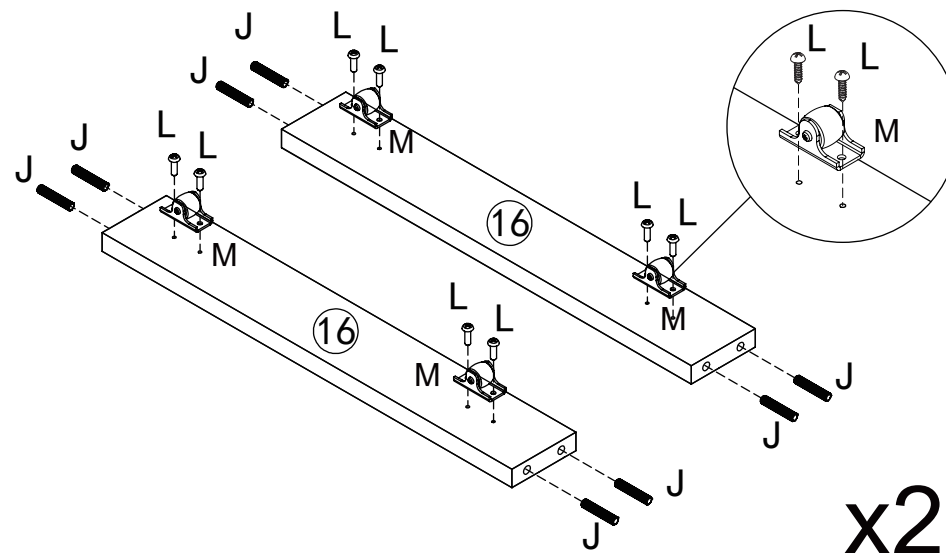


M	x8	J	x16	L	x16
		Ø6x30mm		M4x14mm	


21

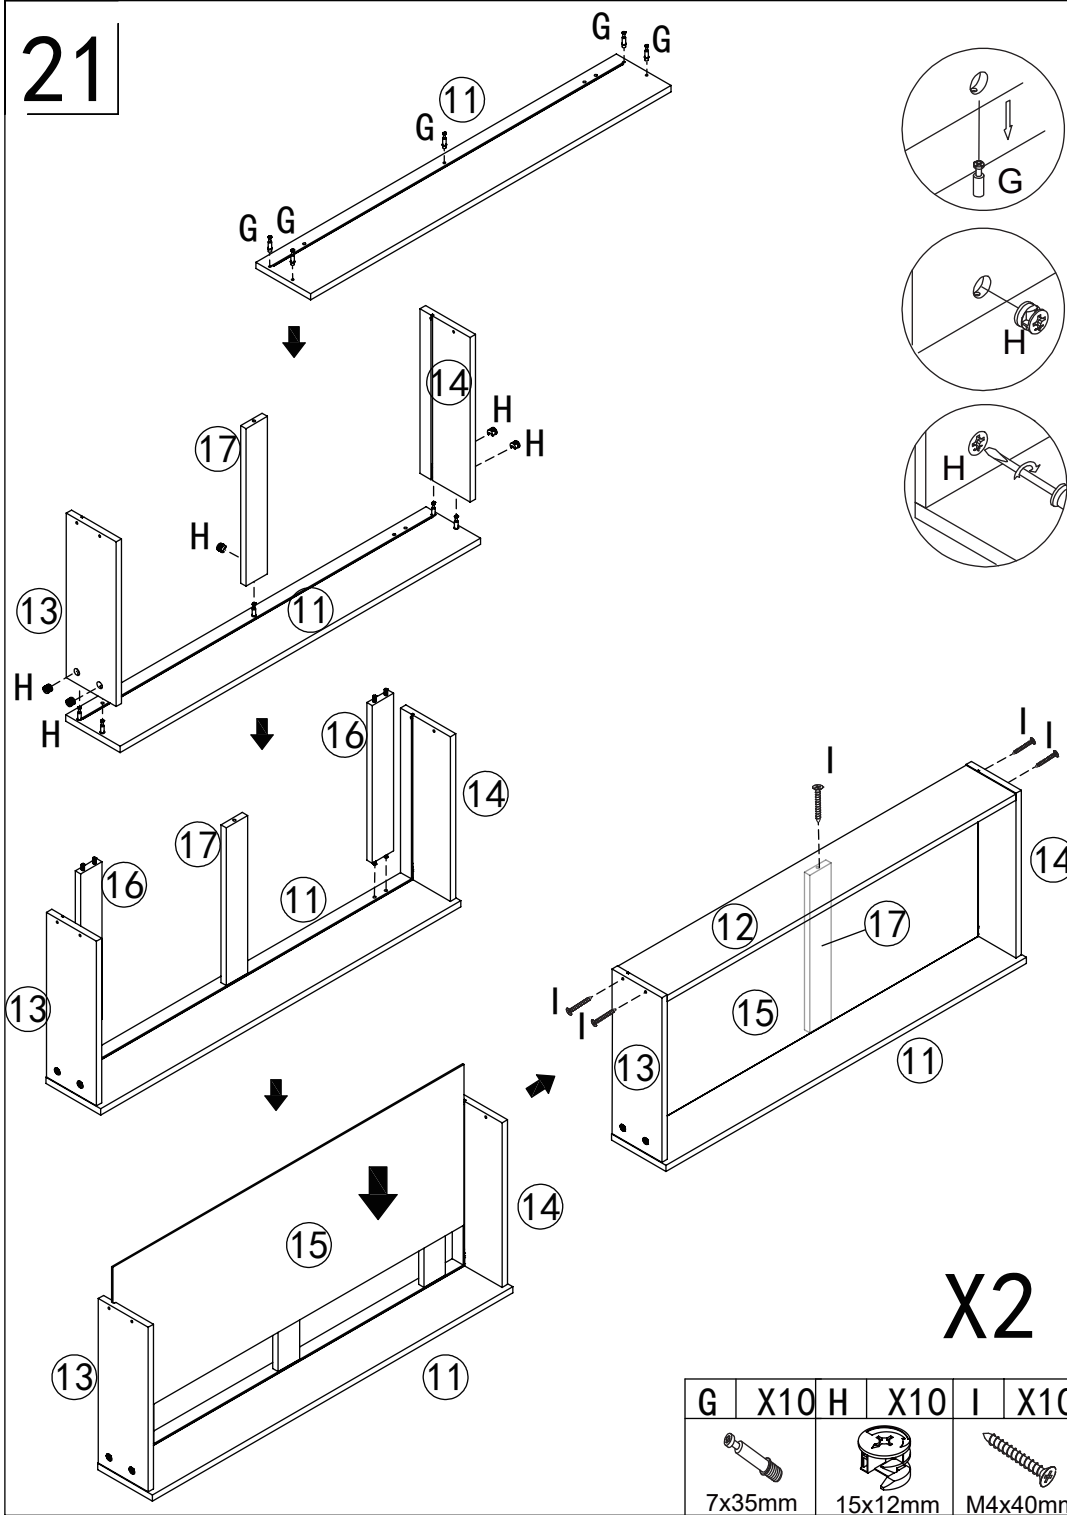


22

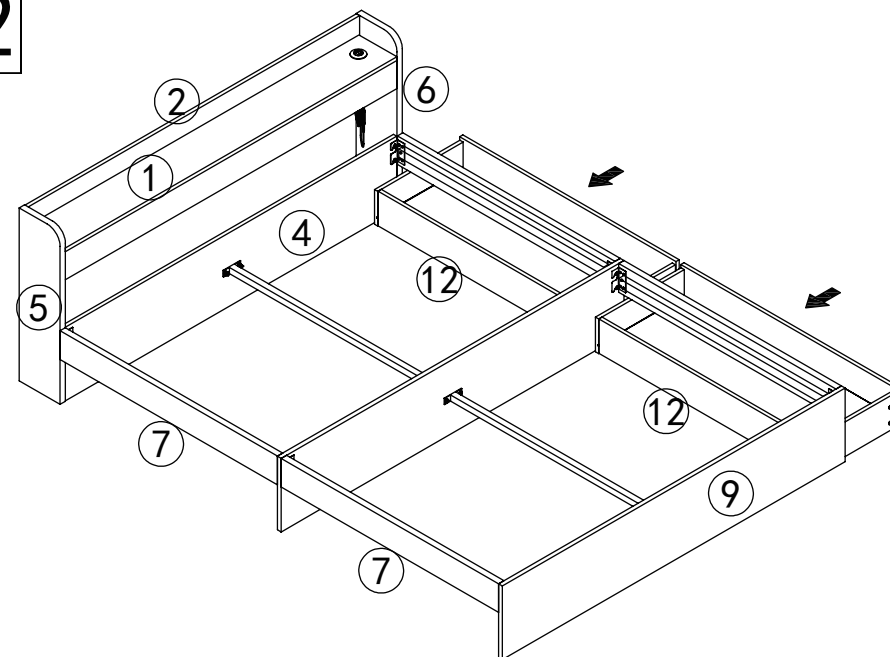

23

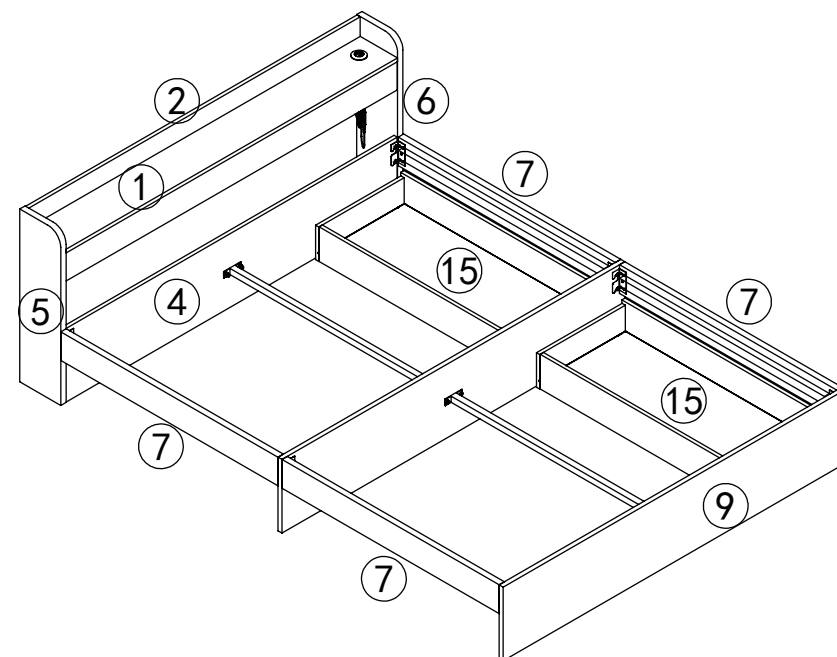

24

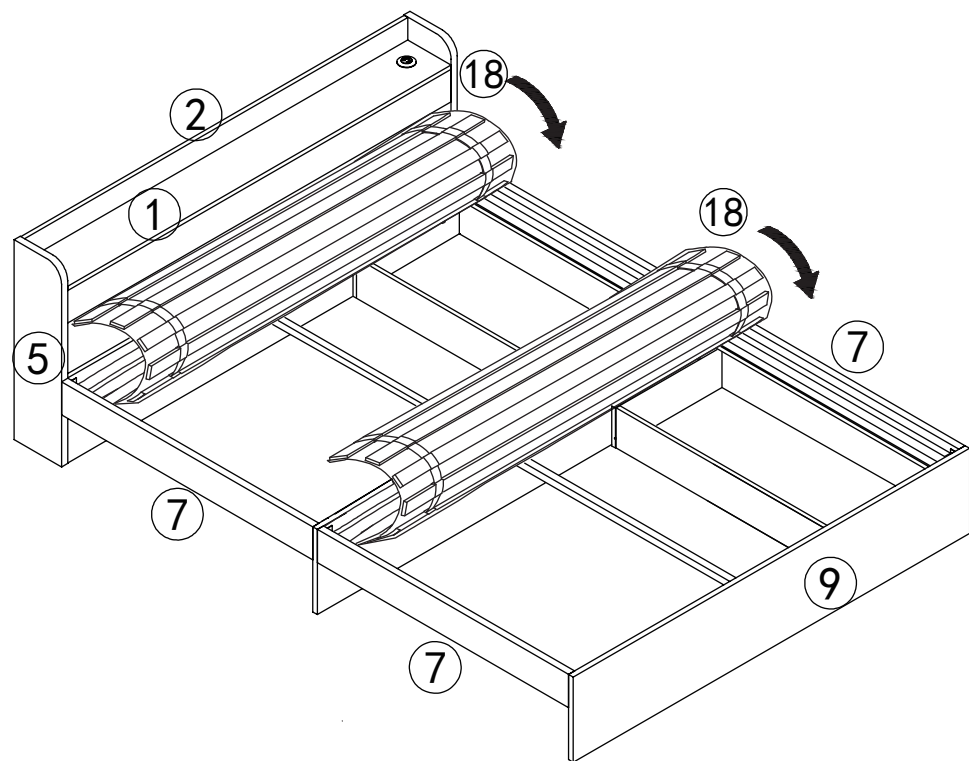

25

