


# CHEST OF DRAWS

MODEL:COD-A7-6D-WD

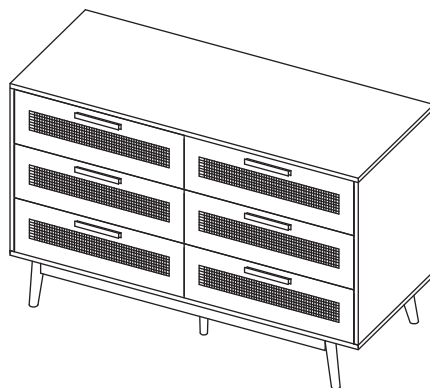

## ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.




Two persons and tools required for assembly

## HARDWARE


A	x24	B	x12	C	x28	D	x56	E	x36	F	x12
7x35mm		15x12mm		Ø6x30mm		M4x40mm		M3x12mm			
G	x12	H	x4	I	x1	J	x8	K	x4	L	x1
M4x11mm						M6					
M	x22	N	x2	O	x8	P	x12	Q	x8	R	x6
		M4x14mm		M6x60mm		12x10mm					
S	x12	T	x16	U	x2	V	x2	W	x2		
M4x18mm		M4x25mm				M4x30mm					

## PARTS



Wipe with dry cloths

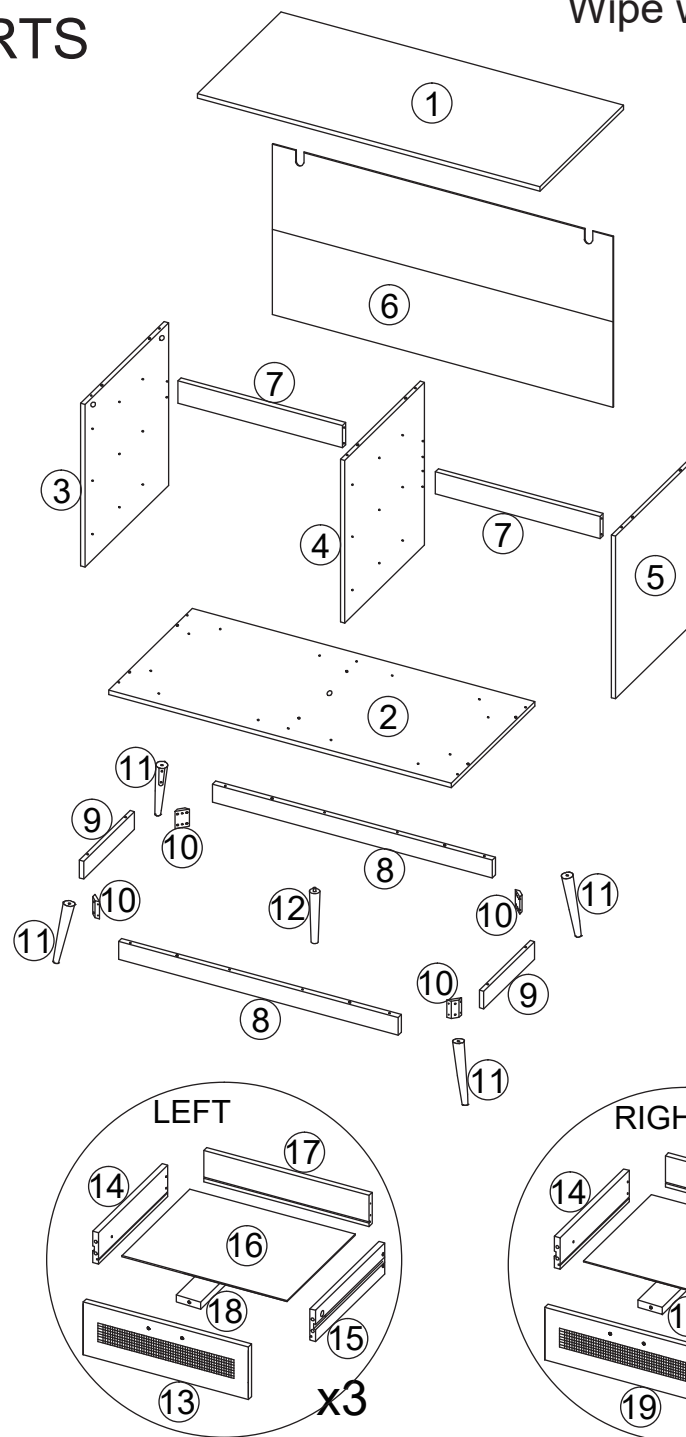

1

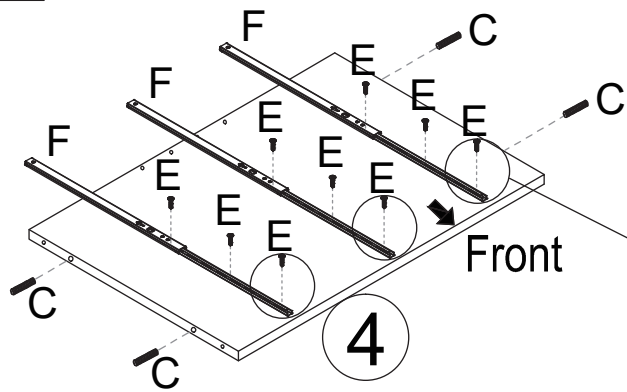


180°

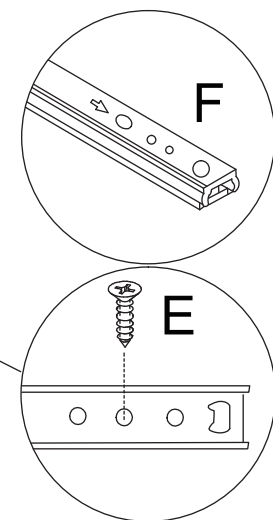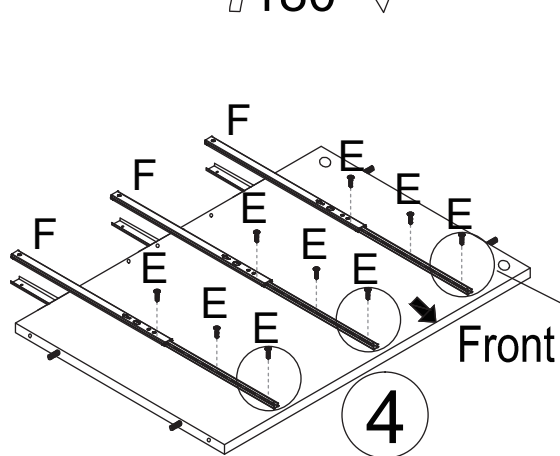

a.1



a.2



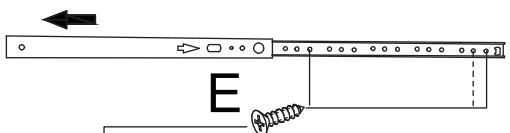


a.3



C	x4	E	x18	F	x6
Ø6x30mm		M3x12mm			


2

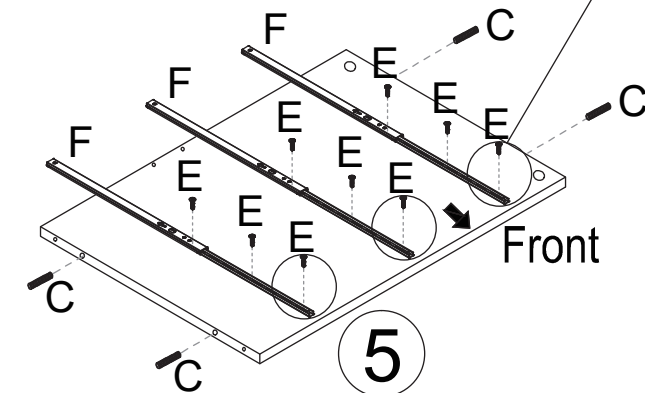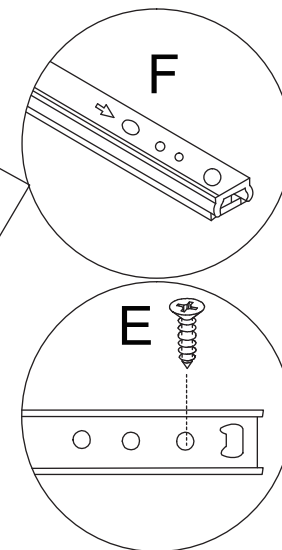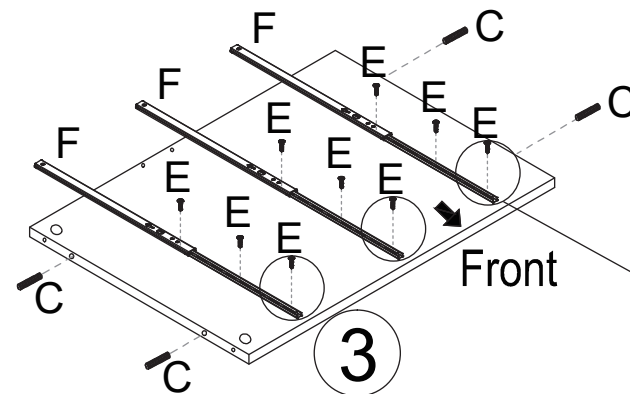


a.1



a.2

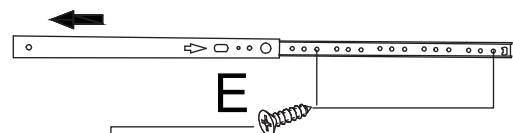


a.3




C	x8	E	x18	F	x6
Ø6x30mm		M3x12mm			

3

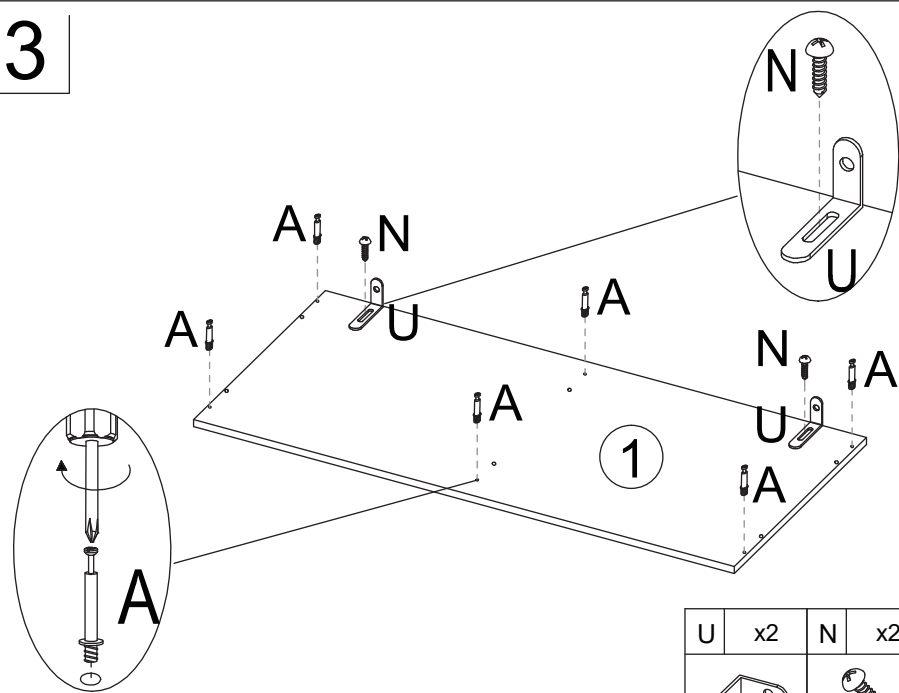


U	x2	N	x2	A	x6
		M4x14mm		7x35mm	

5

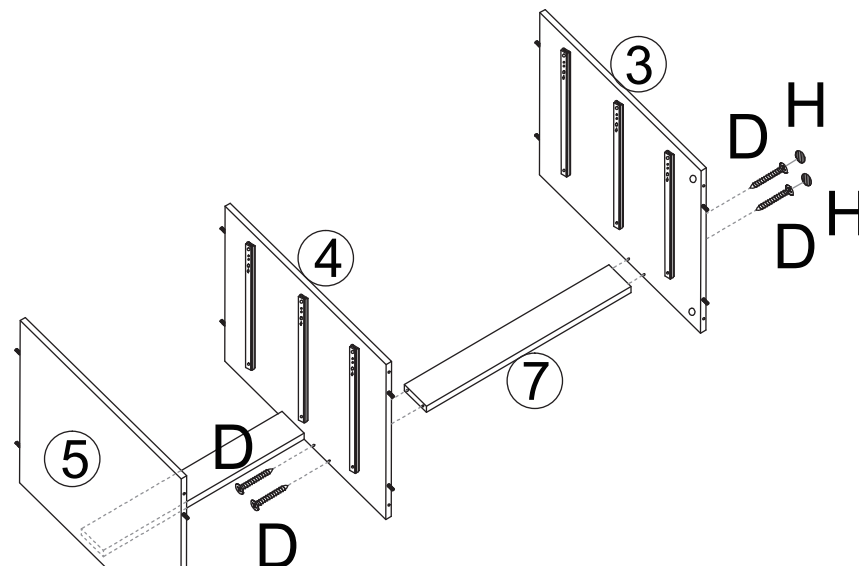



D	x4	H	x2
M4x40mm			

4

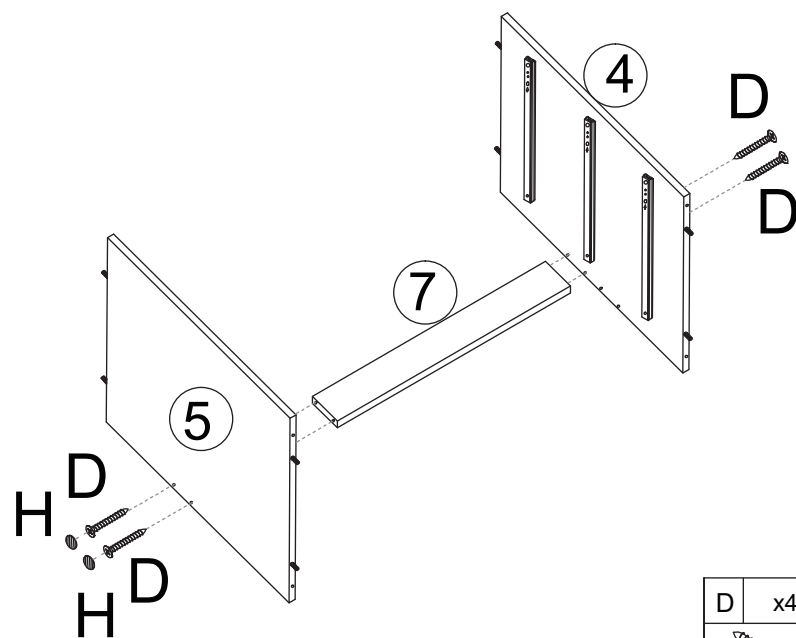


D	x4	H	x2
M4x40mm			



6

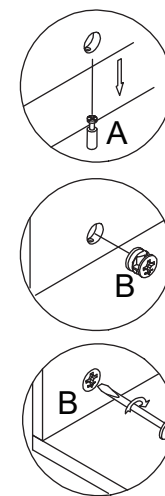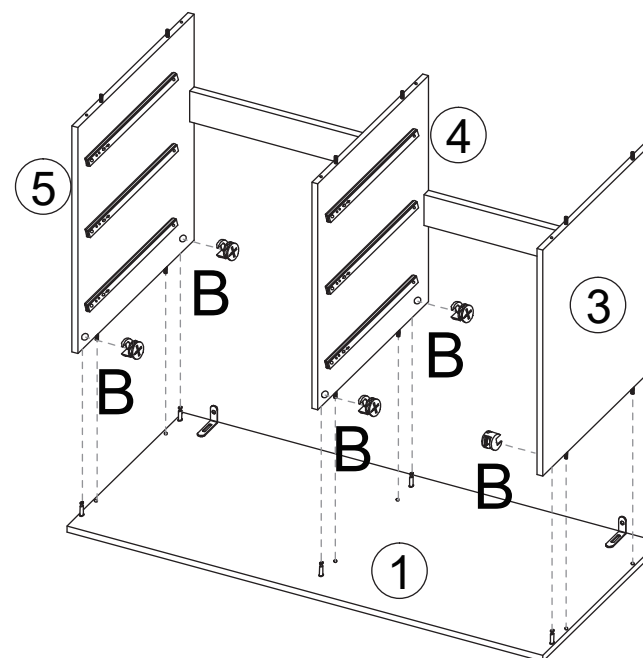


B	x6
15x12mm	


7

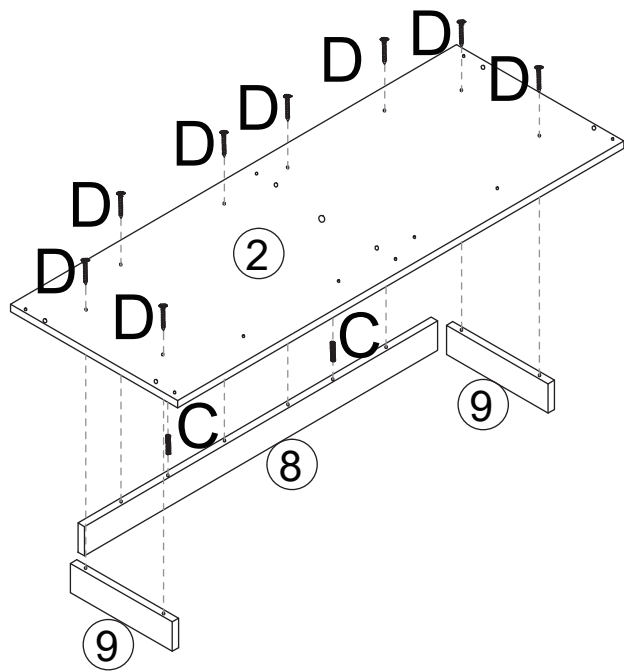


C	x2	D	x8
			
Ø4x40mm		M4x40mm	


9

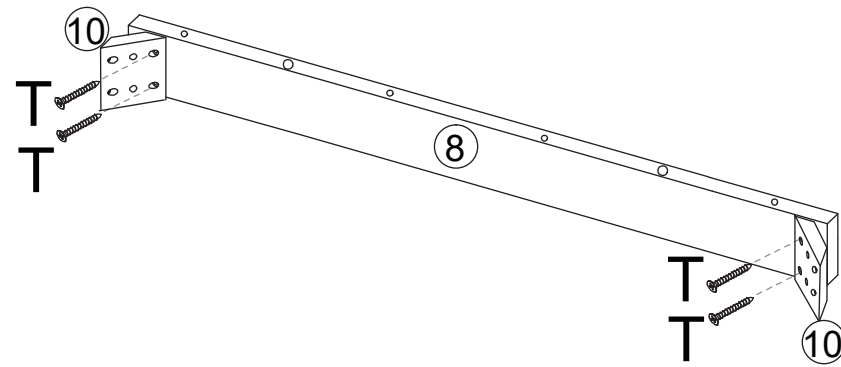


T	x4
	
M4x25mm	

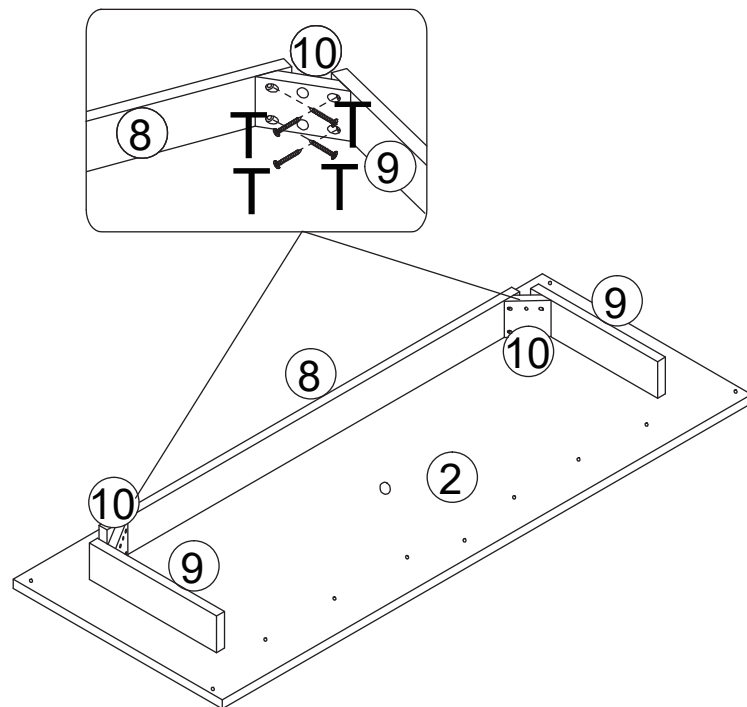

8




T	x8
	
M4x25mm	

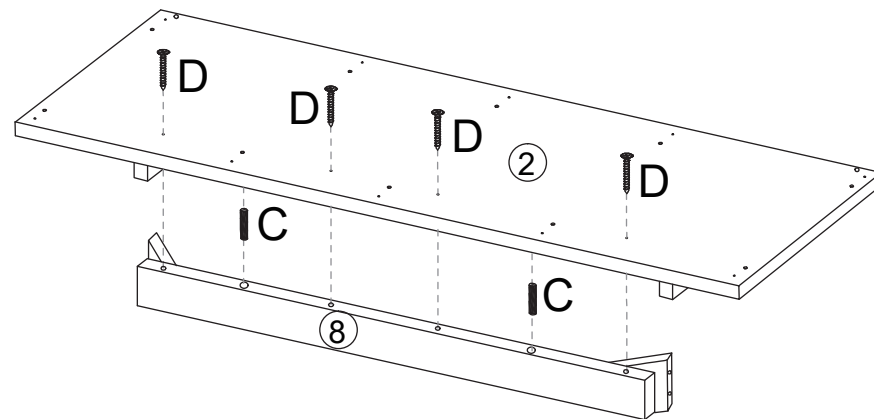
10




C	x2	D	x4
			
Ø4x40mm		M4x40mm	



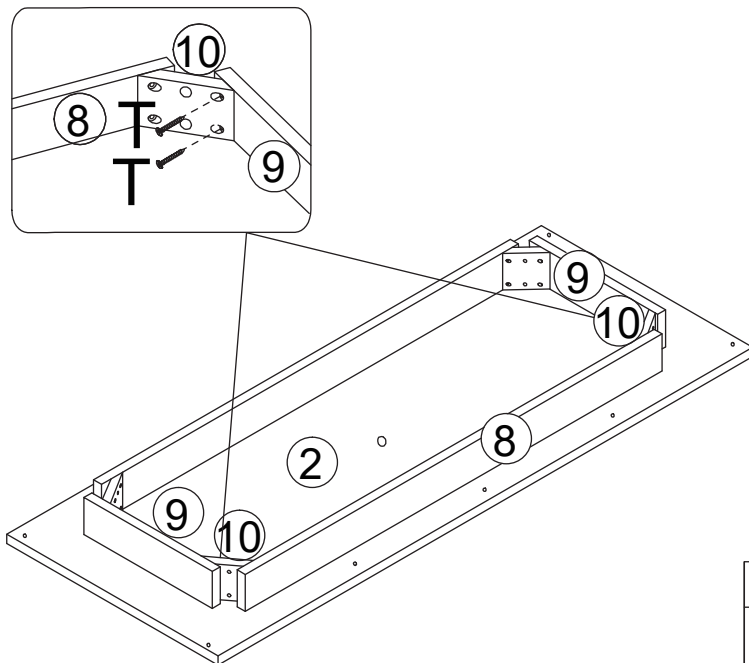

# 11

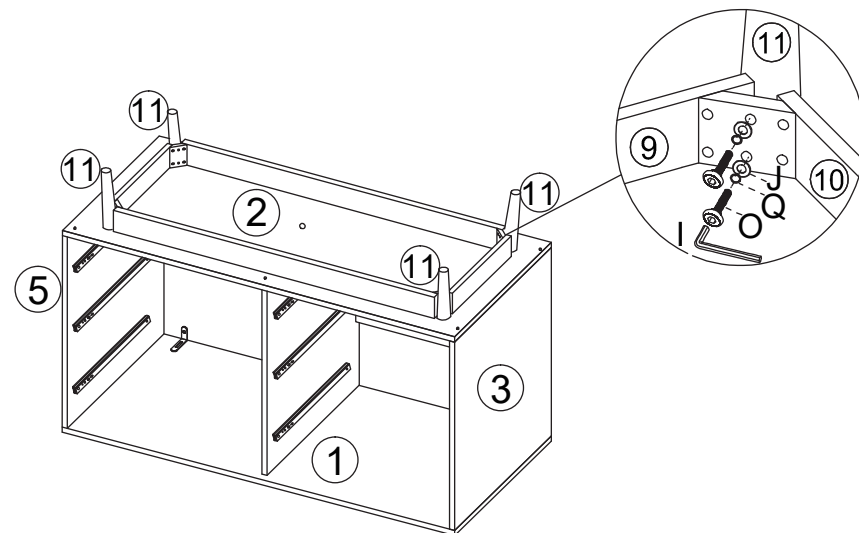


T	x4
	
M4x25mm	


# 13




I	x1	J	x8	O	x8	Q	x8
		 M6		 M6x60mm			

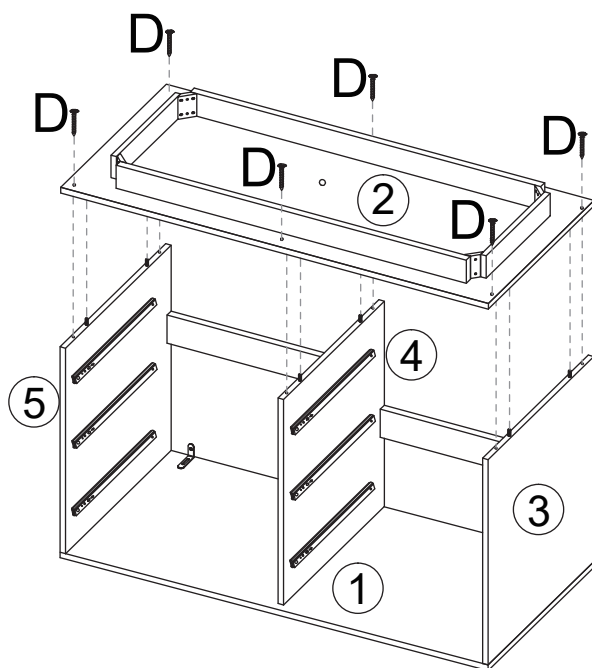

# 12






D	x6
	
M4x40mm	
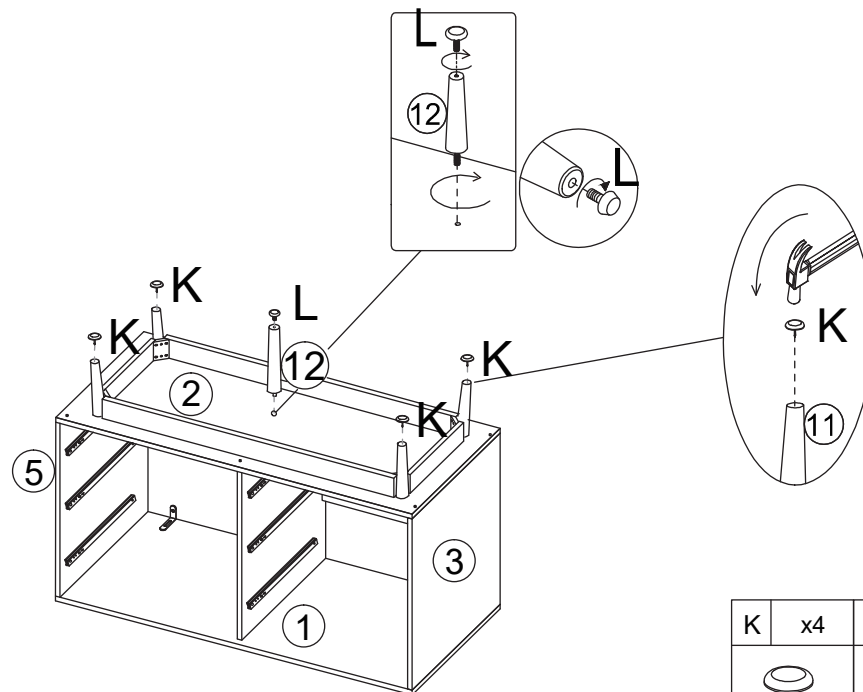
# 14



K	x4	L	x1
			

# 15

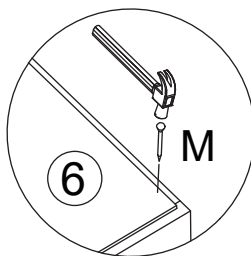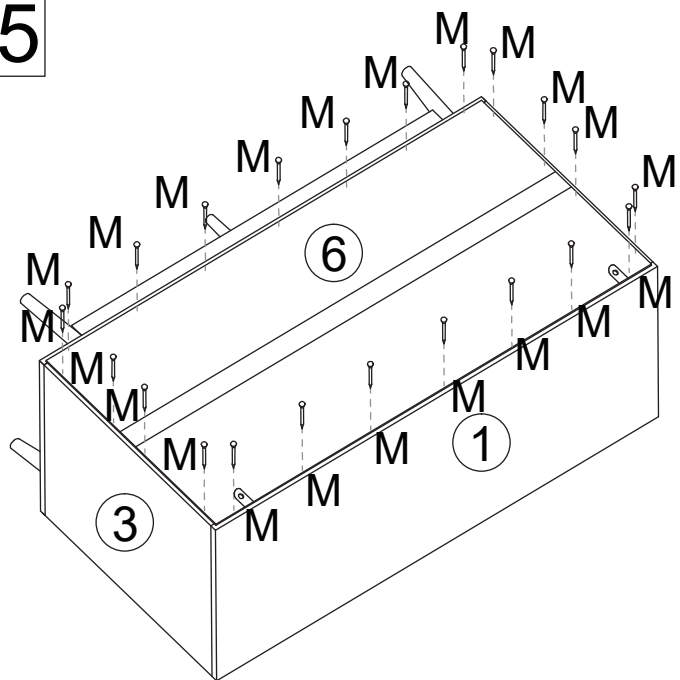



rear panels

M x22











# 17

Pre-drill hole in wall

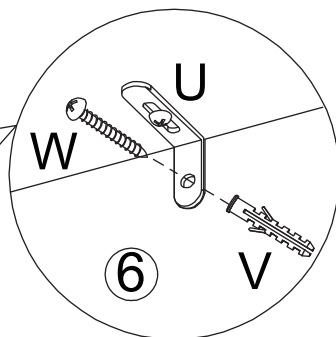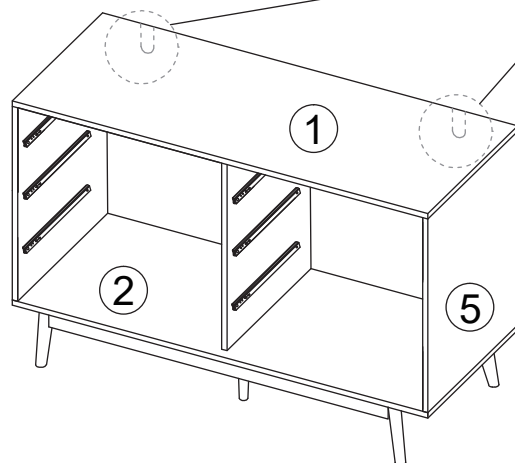

W	x2	V	x2
M4x30mm			

# 16

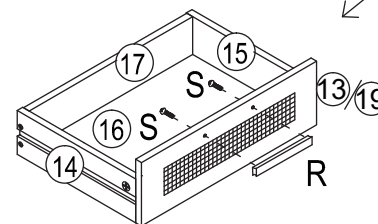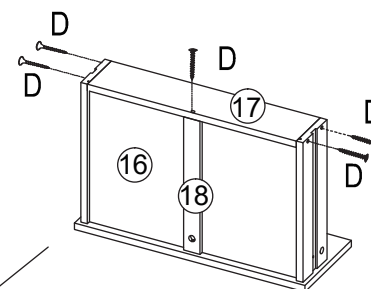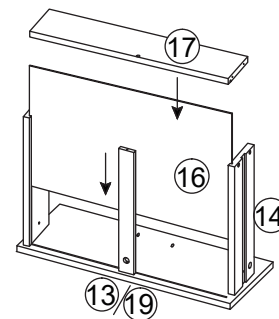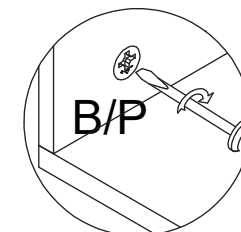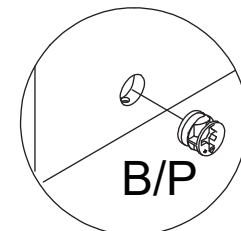
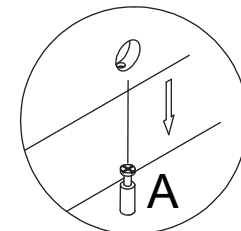
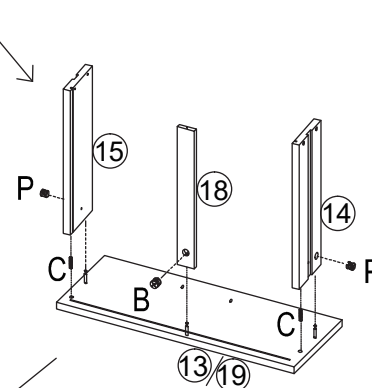
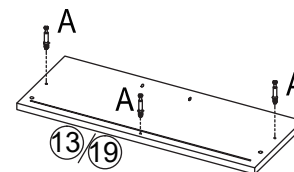


x6

A	x18	B	x6	P	x12	C	x12	D	x30	R	x6	S	x12
7x35mm		15x12mm		12x10mm		ø6x30mm		M4x40mm				M4x18mm	


# 18

Insert the LEFT drawers into the corresponding compartments as shown.

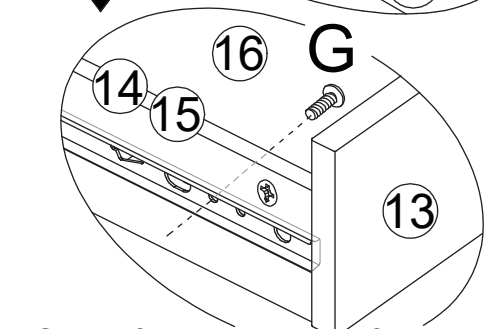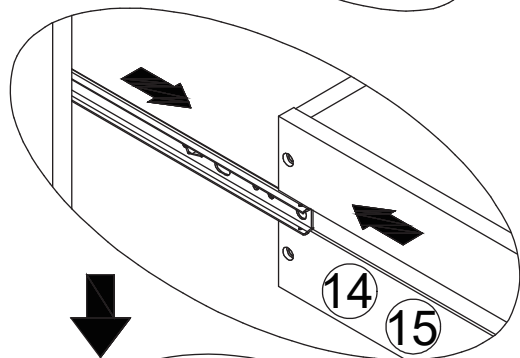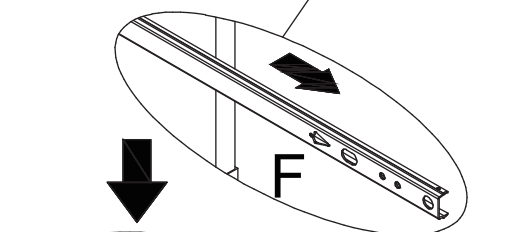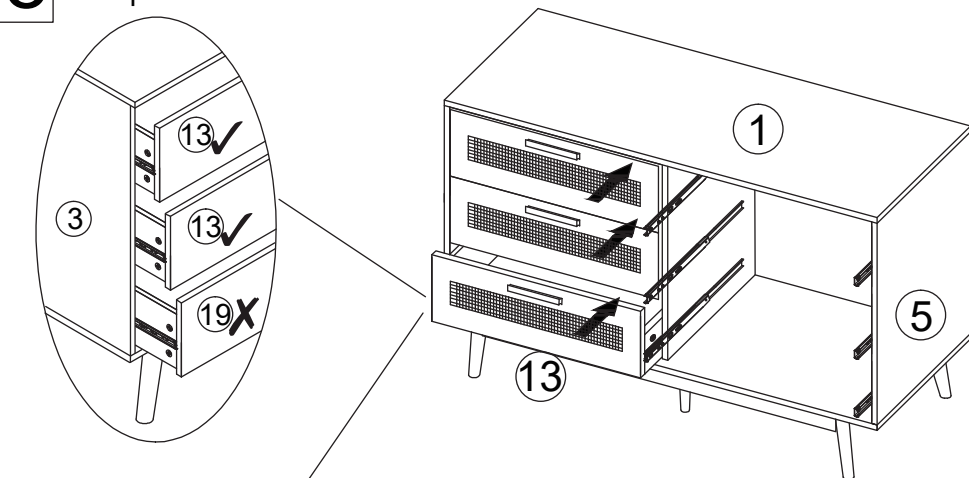



Screw from the inside of the drawers

13x3



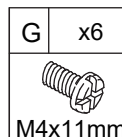


# 19

Insert the RIGHT drawers into the corresponding compartments as shown.

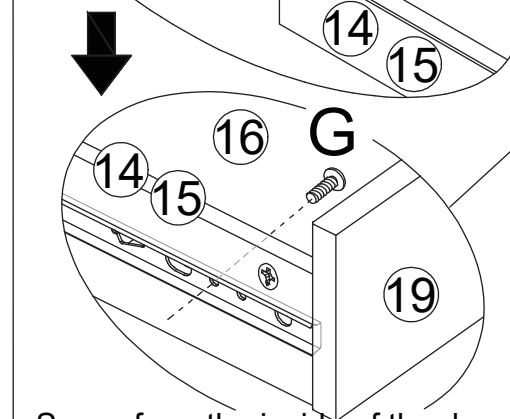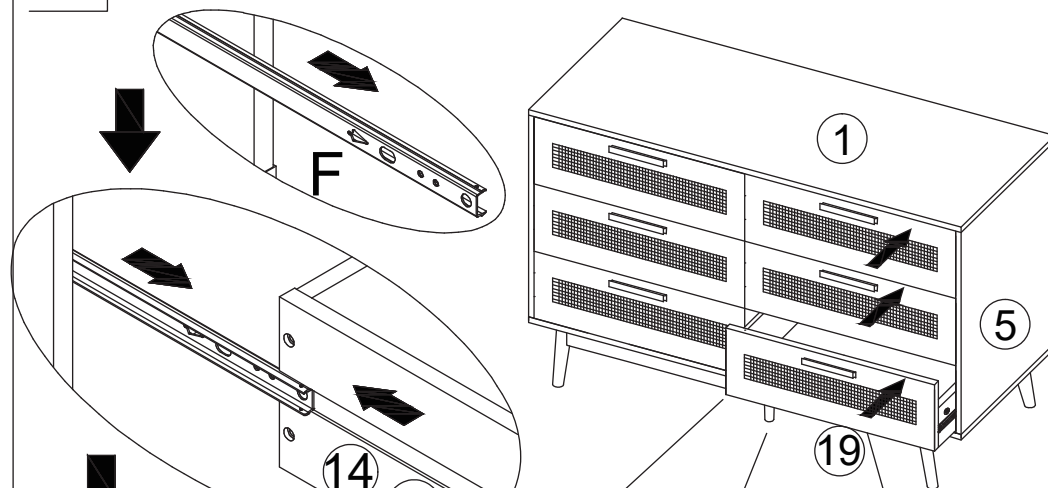

Screw from the inside of the drawers

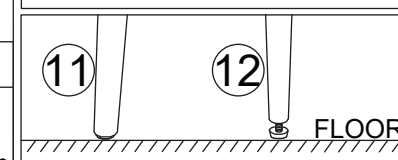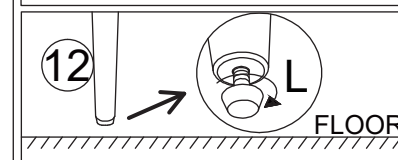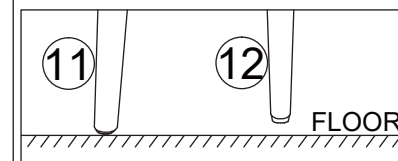

19x3

