
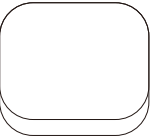


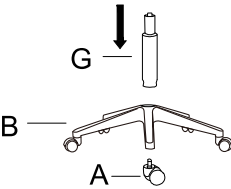
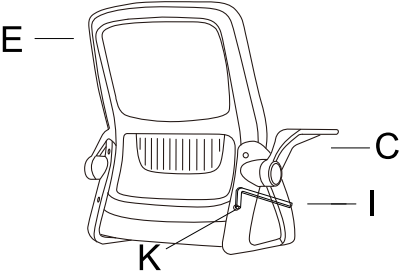



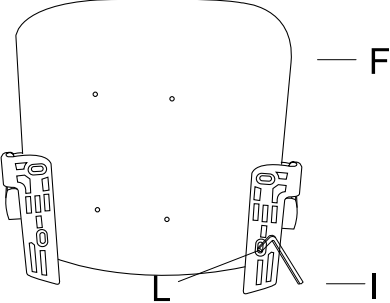
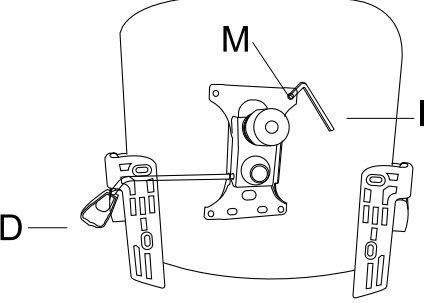


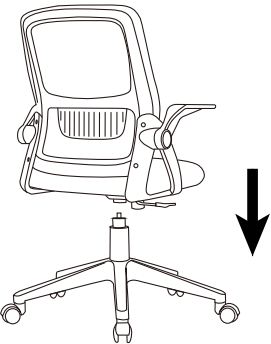
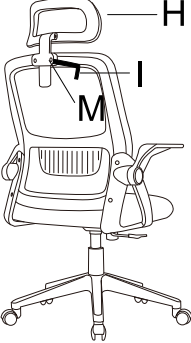




# ASSEMBLY INSTRUCTIONS

## OFFICE CHAIR OCH-B3-MESH

Notice: Do not fully tighten the screws until all of them are aligned properly with the holes.

<b>Ax5</b> 	<b>Fx1</b> 	<b>Kx4</b>  M6x25mm <b>Lx4</b>  M6x30mm	<b>①</b> attach the casters to the base install the gas lift into the center hole of the base 	<b>②</b> Install armrest M6x25mm:4 
<b>Bx1</b> 	<b>Gx1</b> 	<b>Mx6</b>  M6x20mm	<b>③</b> Install armrest to cushion M6x30mm:4 	<b>④</b> Install mechanism under the cushion M6x20mm:4 
<b>Cx1Lx1R</b> 	<b>Hx1</b> 		<b>⑤</b> Put the cushion on the gas lift 	<b>⑥</b> Install headrest to backrest M6x20mm:2 
<b>Dx1</b> 	<b>Ix1</b> 			
<b>Ex1</b> 