


WARDROBE

MODEL:WA-MEXI-185G3D-WH/WD/BK

VERSION: 2.0

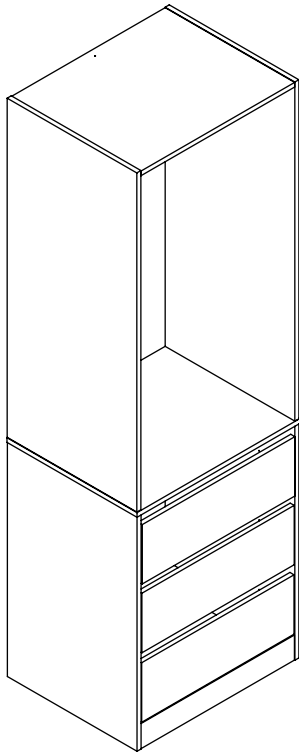

ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.





Two persons and tools required for assembly

HARDWARE

A	x19	B	x19	C	x6	D	x39	E	x20	F	x6	T	x6
7x35mm		15x12mm		Ø6x30mm		M4x40mm				M3.5x12mm			
H	x22	I	x6	J	x1	K	x4	L	x4	M	x3	N	x27
M3x12mm		M4x14mm				Ø6x50mm							
O	x2	P	x1	Q	x1	R	x1	S	x1				
				M4x30mm		M4x14mm							


PARTS





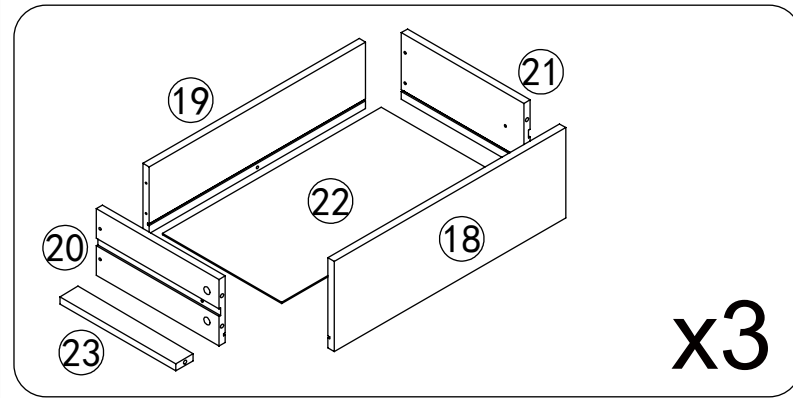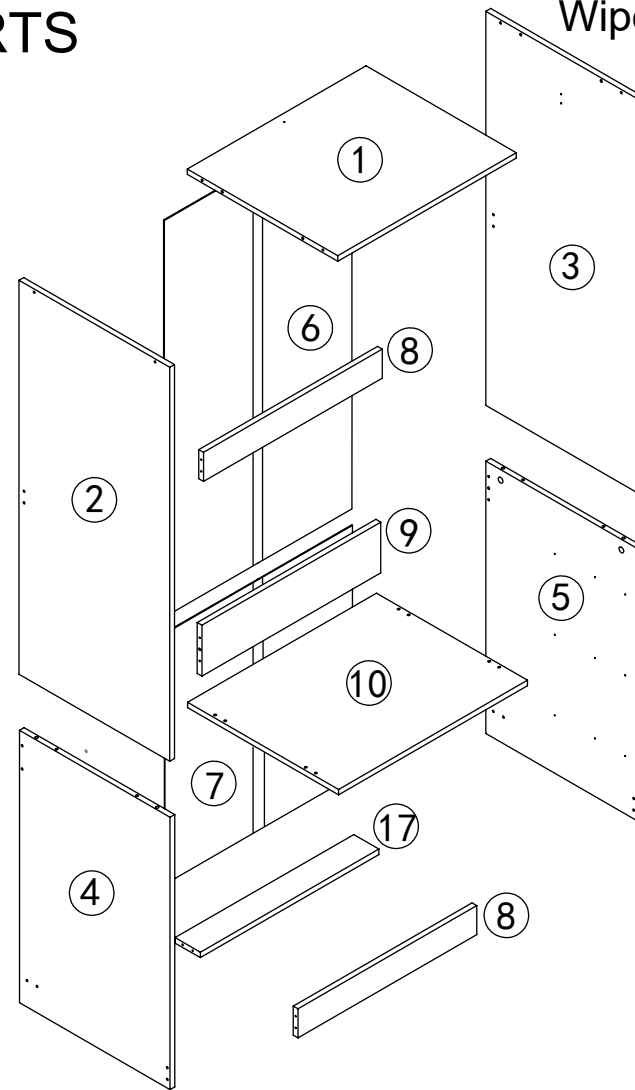Wipe with dry cloths




x3

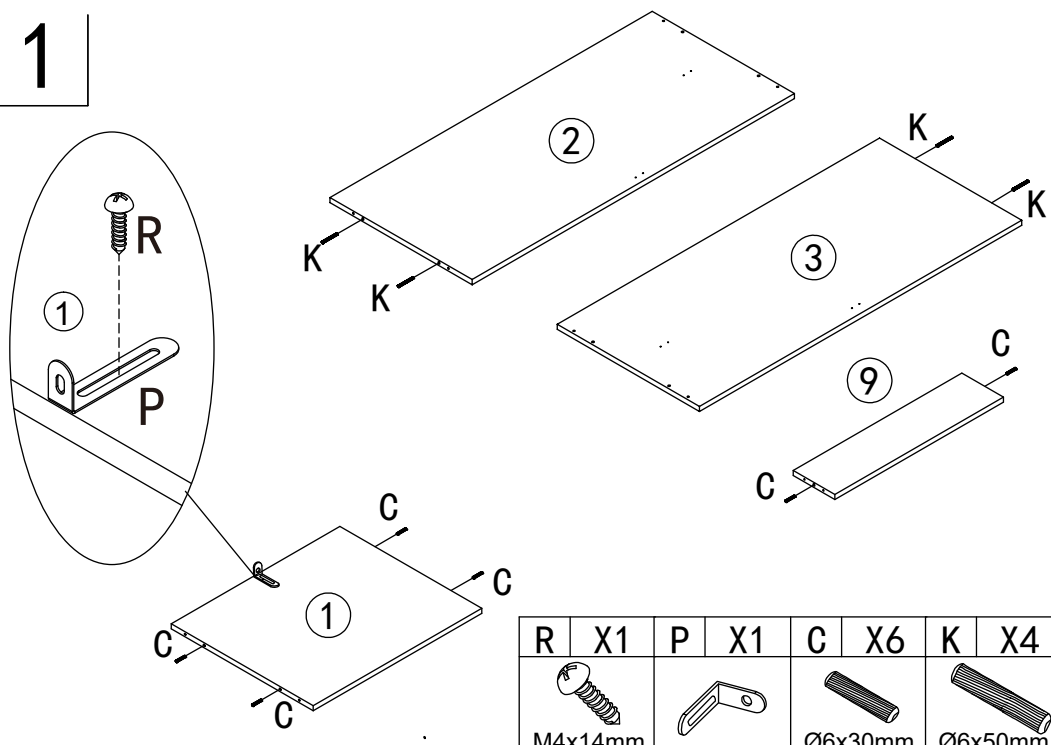

1




R	X1	P	X1	C	X6	K	X4
							
M4x14mm				Ø6x30mm		Ø6x50mm	

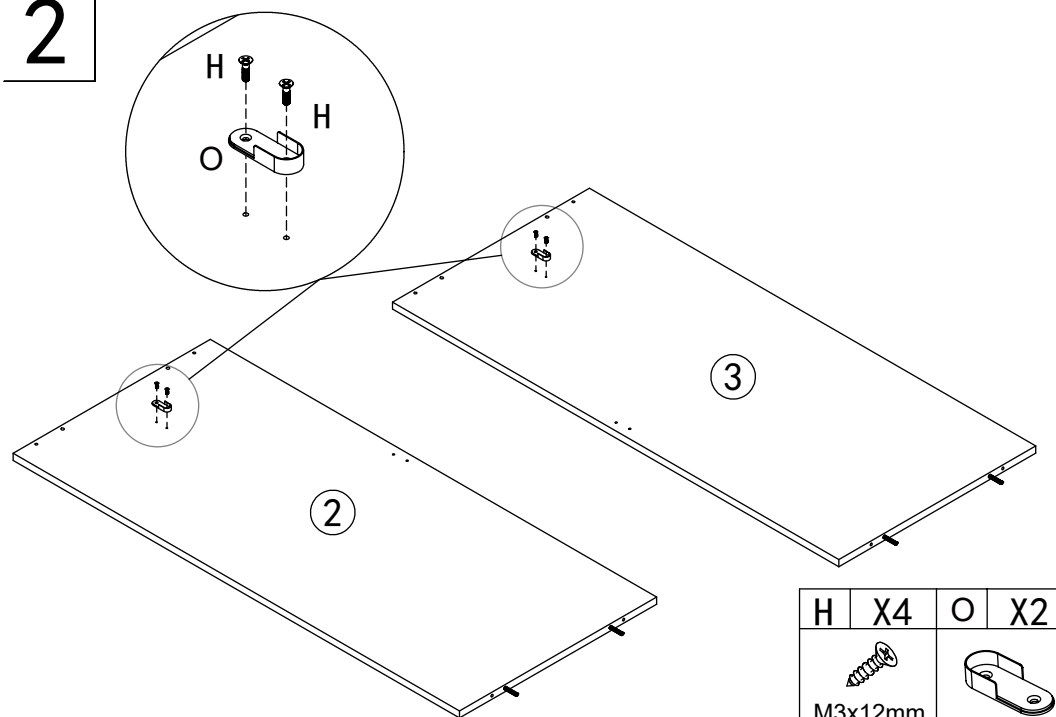

2




H	X4	O	X2
			
M3x12mm			

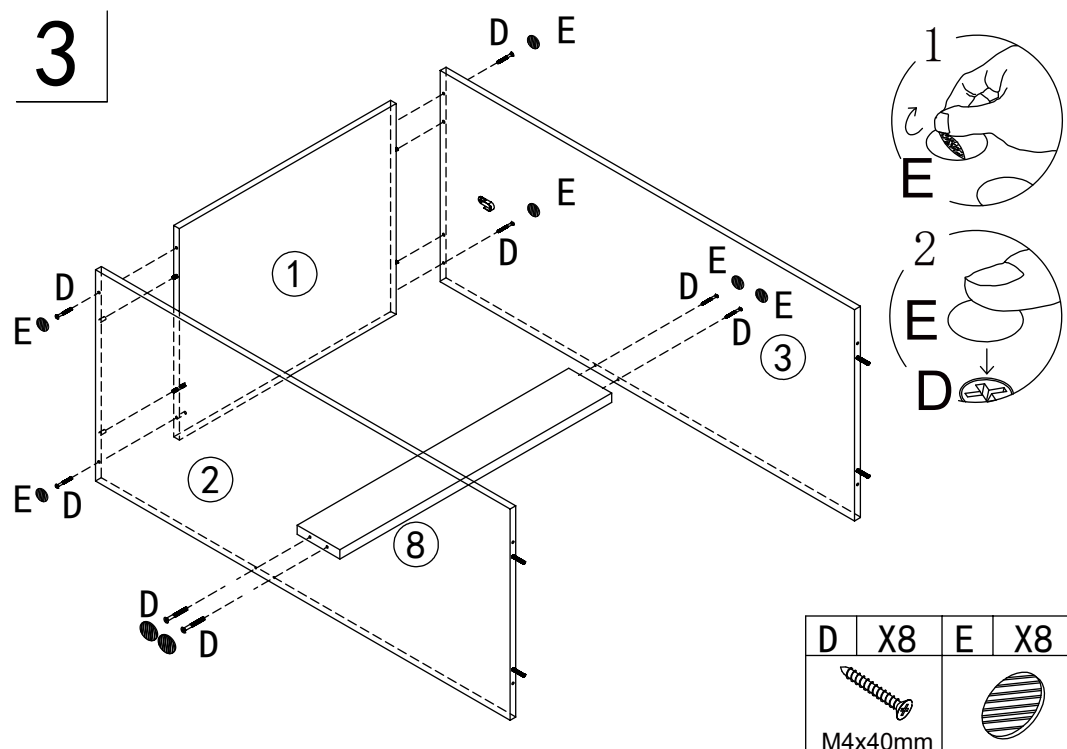
3




D	X8	E	X8
			
M4x40mm			


4

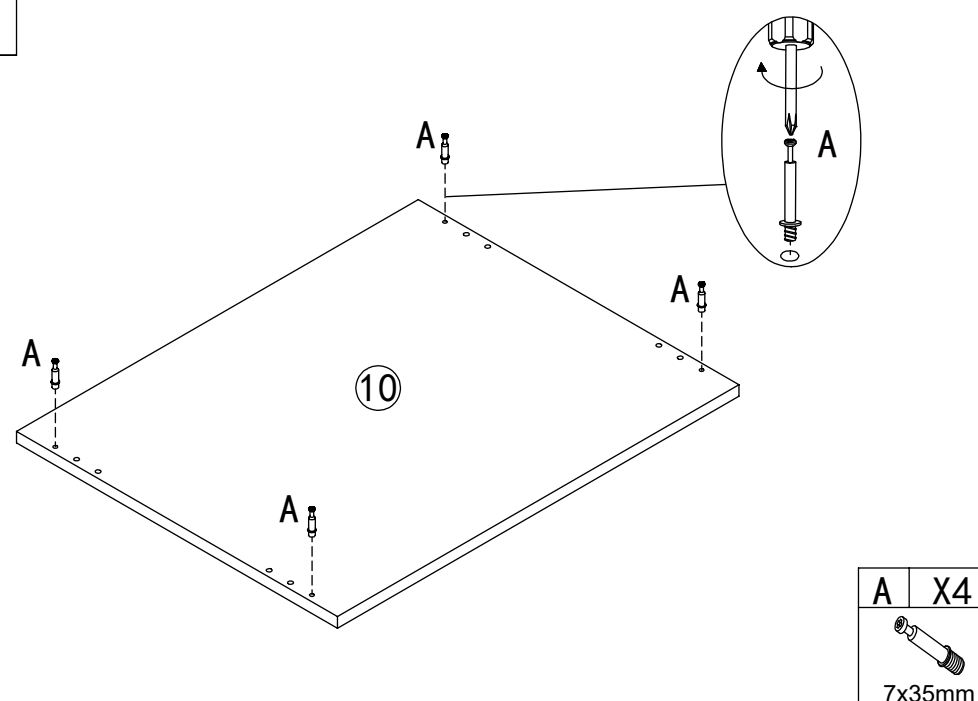


A	X4
	
7x35mm	

5

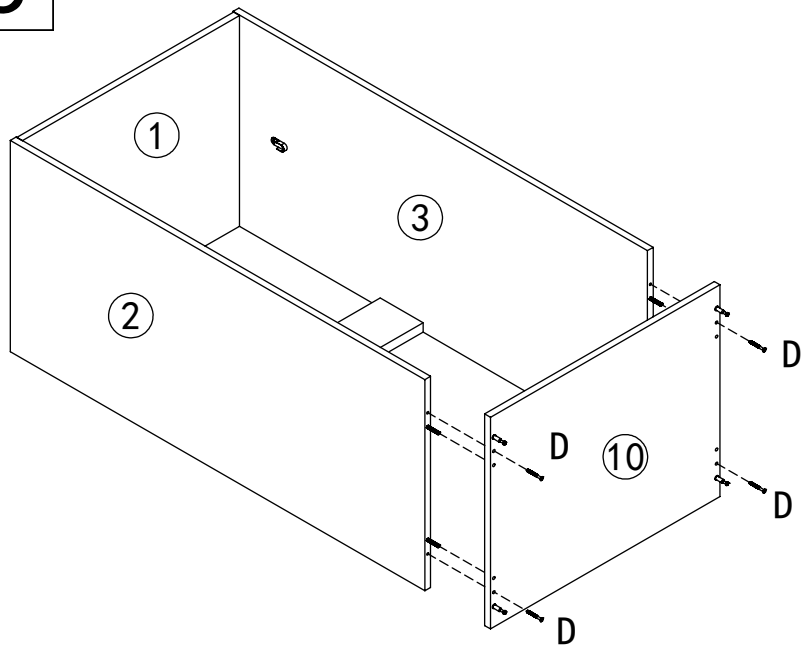




D	X4
	M4x40mm

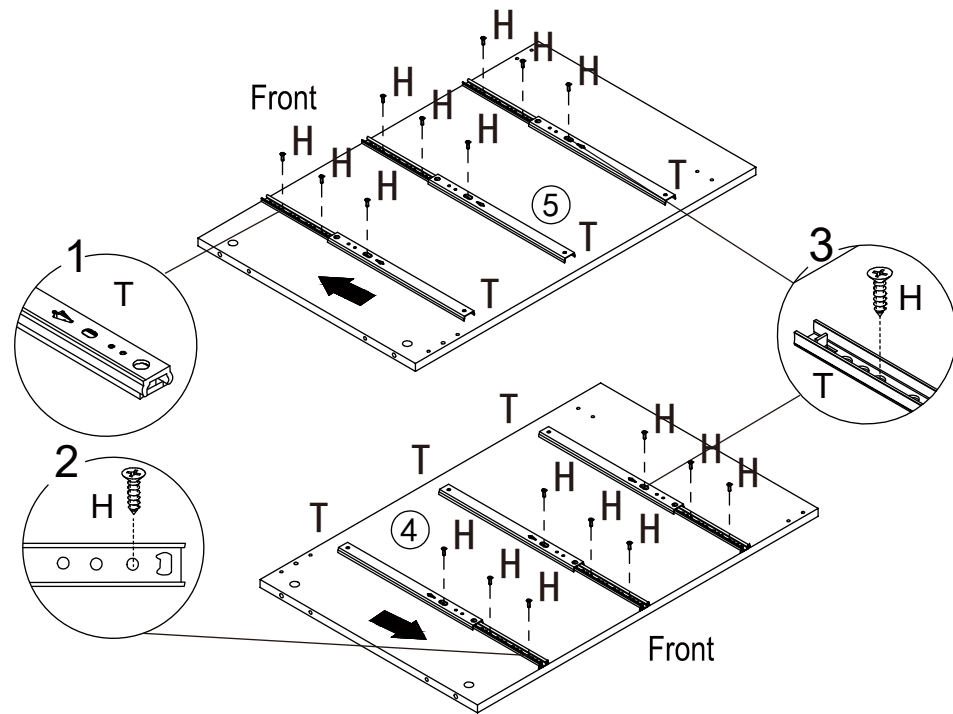
6



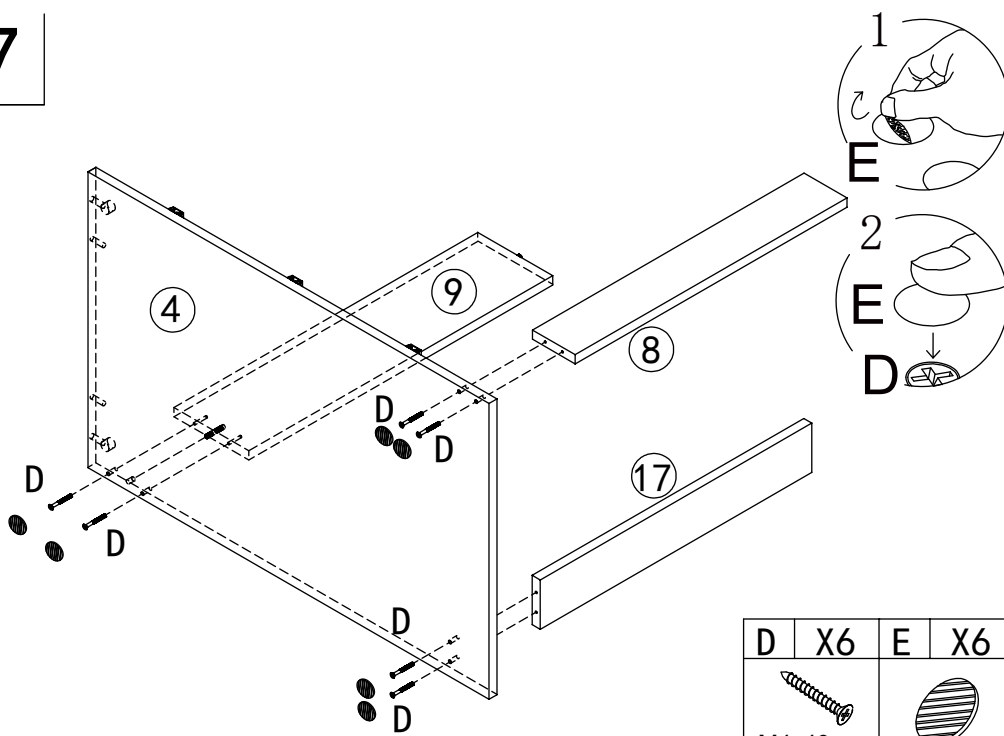

7





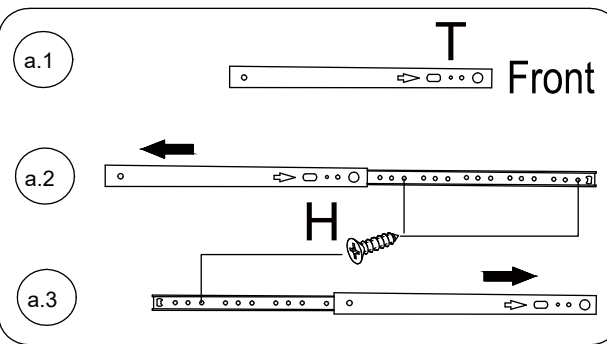

D	X6	E	X6
	M4x40mm		





T	X6	H	X18
			M3x12mm

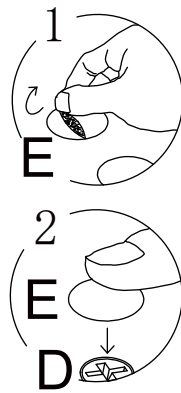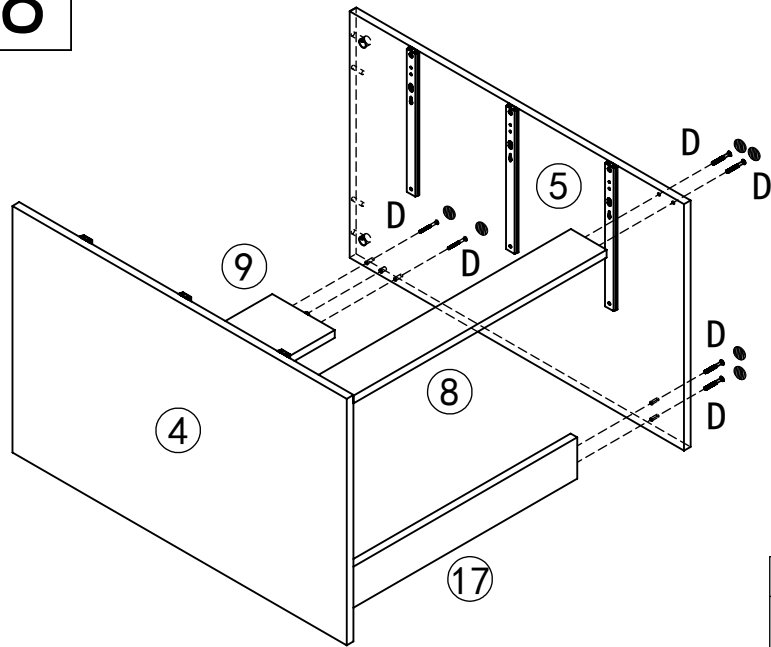
8





D	X6	E	X6
			
M4x40mm			


9

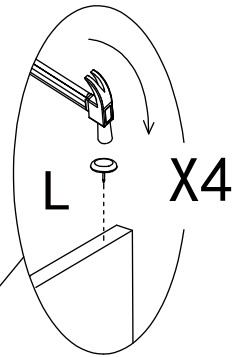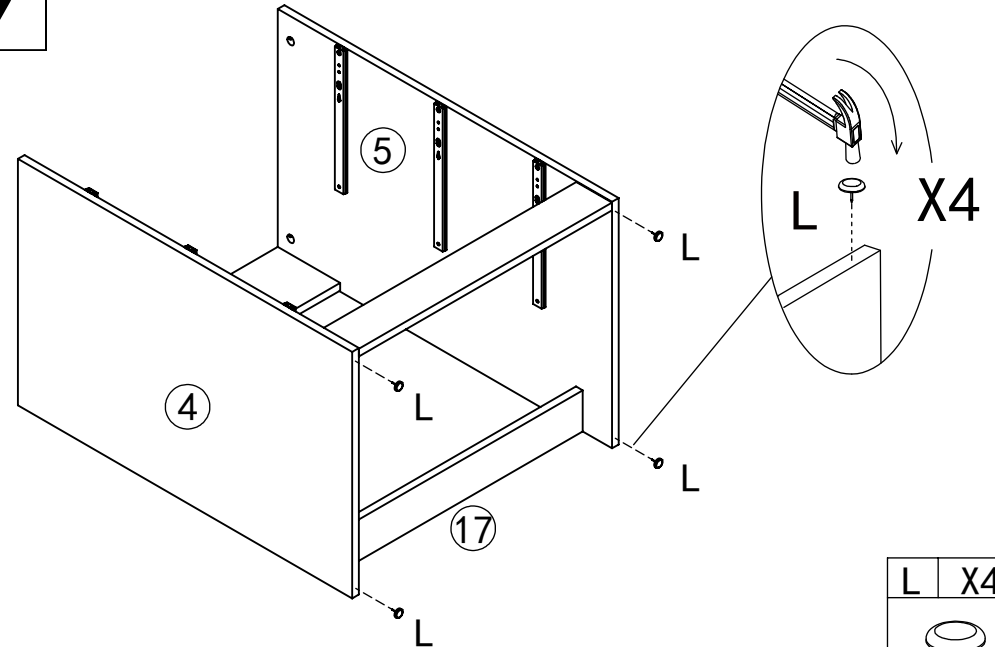





L	X4
	

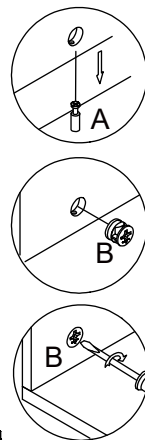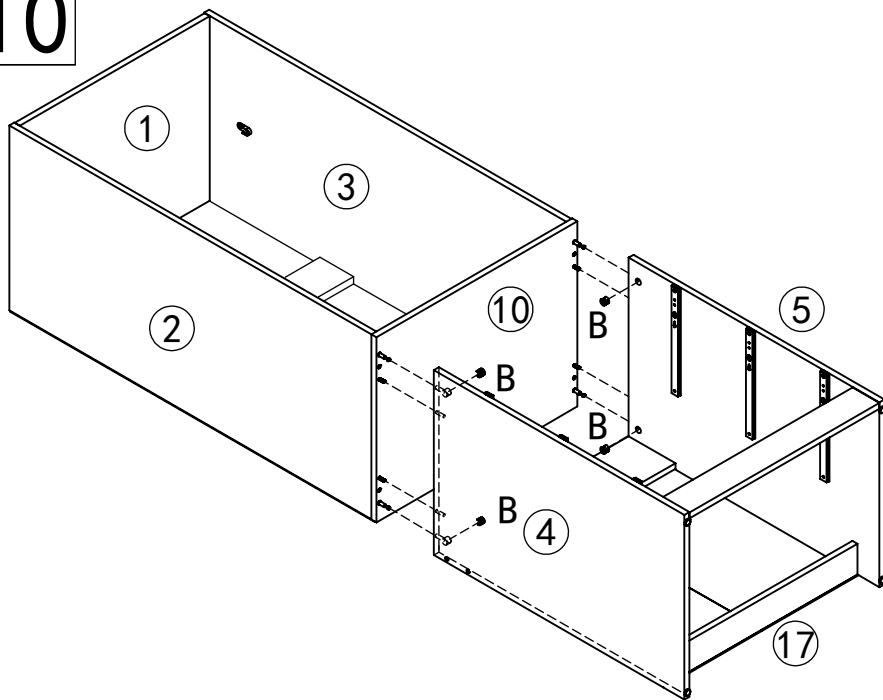

10





B	X4
	
15x12mm	

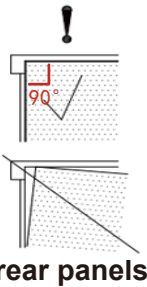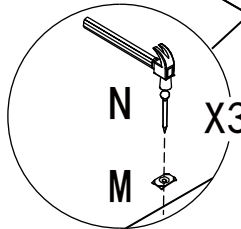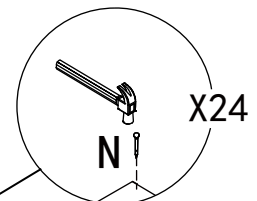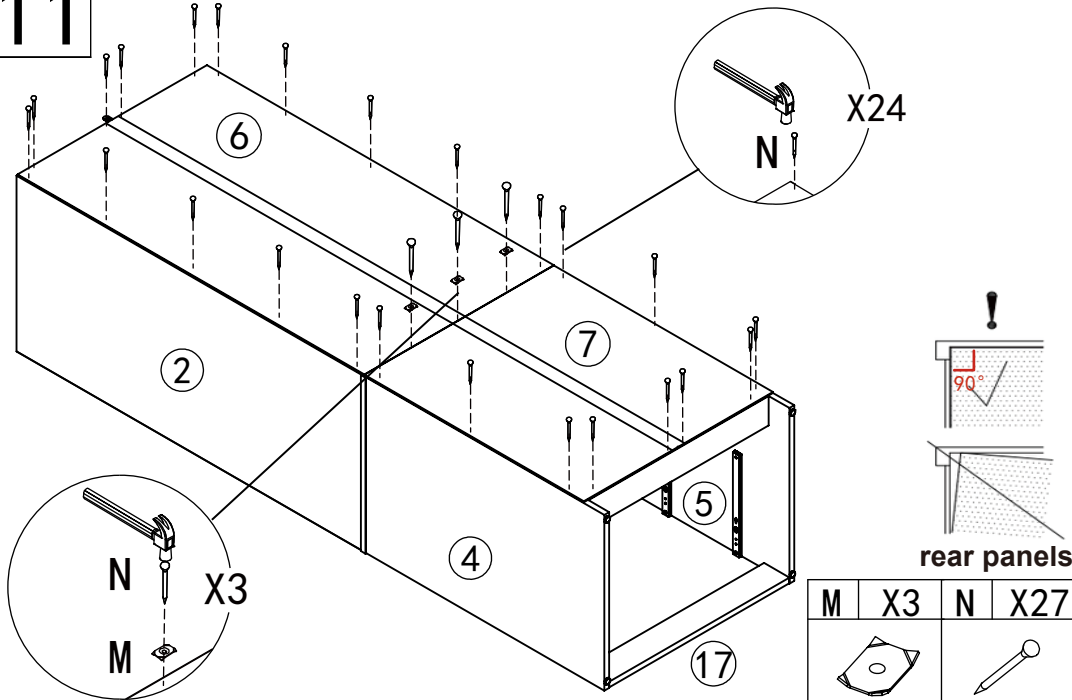11






M	X3	N	X27
			

12

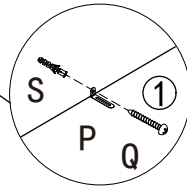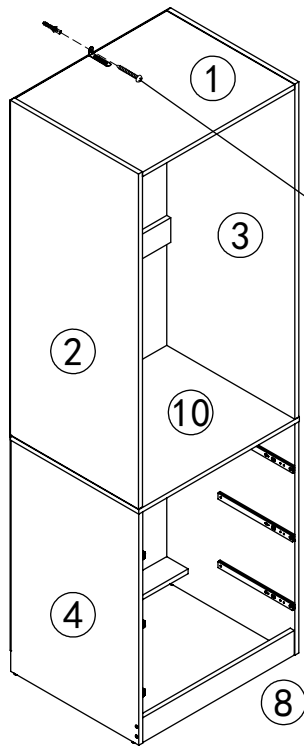


Pre-drilled hole at wall

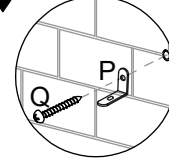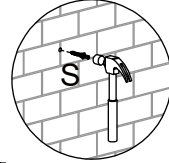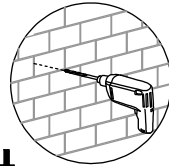






P	X1	Q	X1	S	X1
		M4x30mm			

13

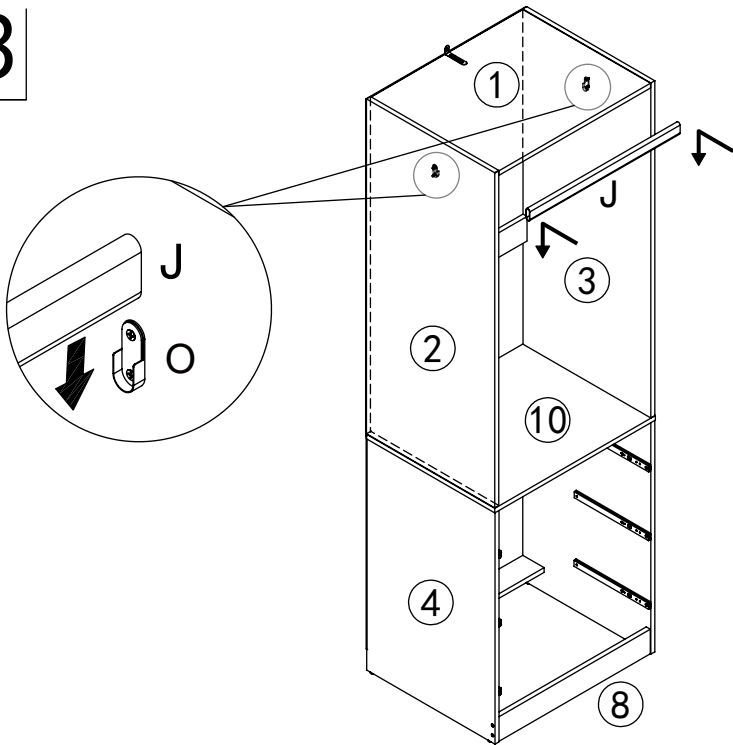

J	X1


14

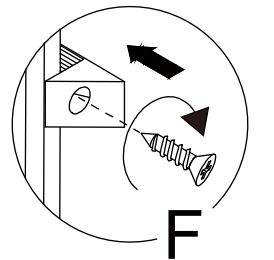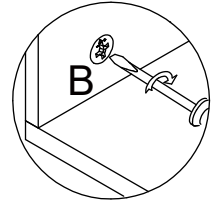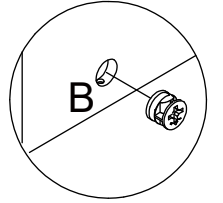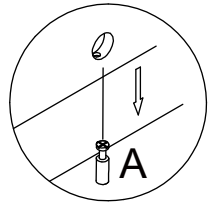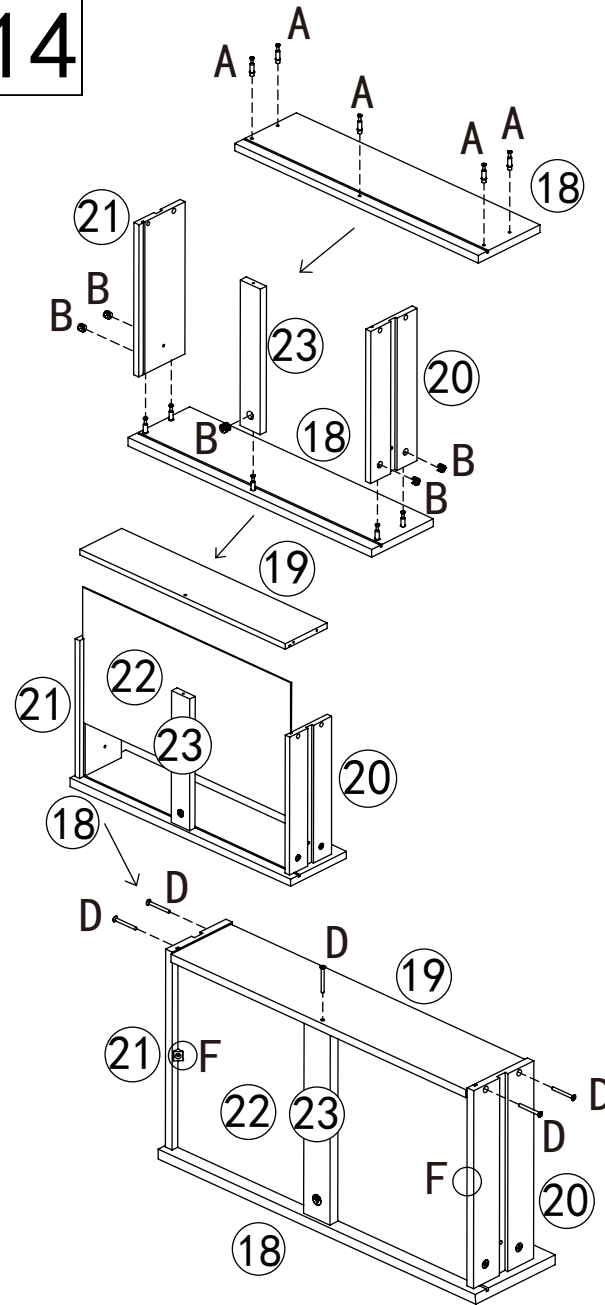


A	X15	B	X15	D	X15	F	X6
7x35mm		15x12mm		M4x40mm		M3.5x12mm	

X3

15

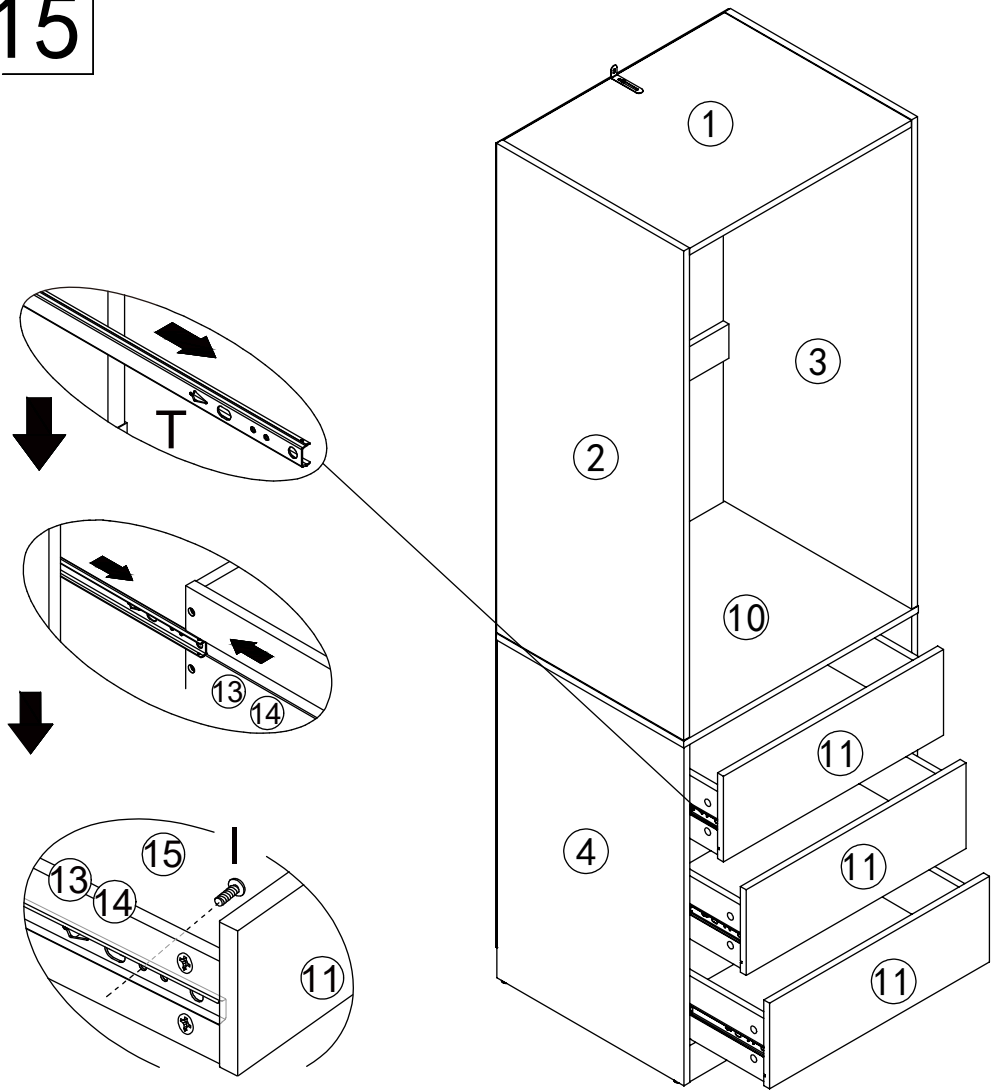

Screw from the inside of the drawers

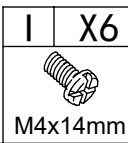

16

