







OFFICE CHAIR







MODEL: OCH-B5FOOT-MESH

ASSEMBLY INSTRUCTIONS

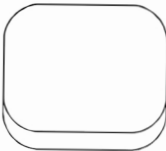PARTS



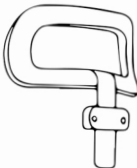



A 5pcs	B 1pc	C 2pcs
		

D 1pc	E 1pc	F 1pc
		

G 1pc	H 1pc	I 2pcs	J 1pc	K 1pc	L 2pcs
					

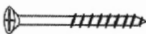


HARDWARE


M 6pcs	N 10pcs	O 2pcs	P 2pcs	Q 1pc	R 1pc
					
M6x20mm	M6x25mm	M6x25mm	M6x30mm	5x16mm	

ASSEMBLY STEPS


ATTENTION: Do not fully tighten all screws until all parts are aligned correctly with their connections. Once all screws are correctly in place, fully tighten them.

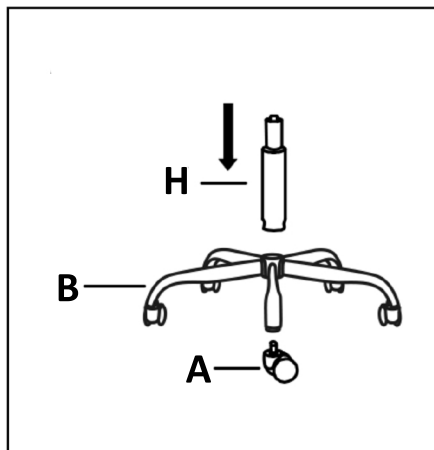


Attach the castor wheels (A) to the 5-prong base (B). Then insert the gas lift (H) into the centre hole of the base as shown.

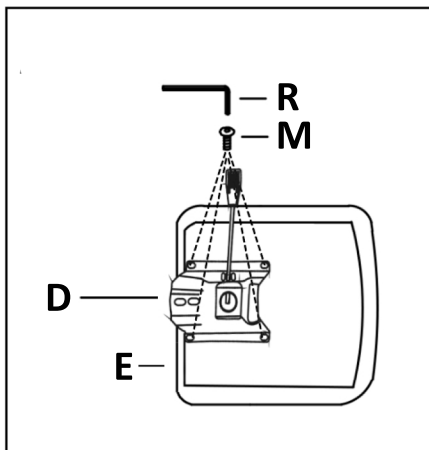


Attach the seat plate (D) beneath the seat cushion (E) with screws (M).

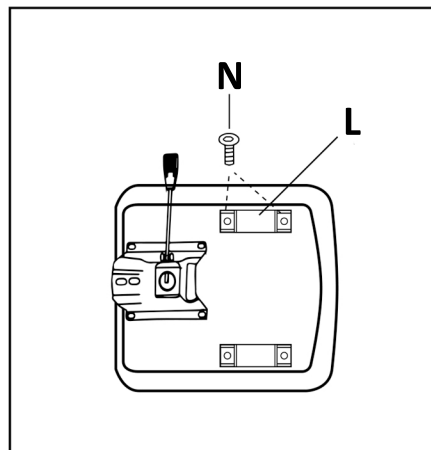


Attach the two footrest plate holders (L) to the seat cushion (E) with screws (N).

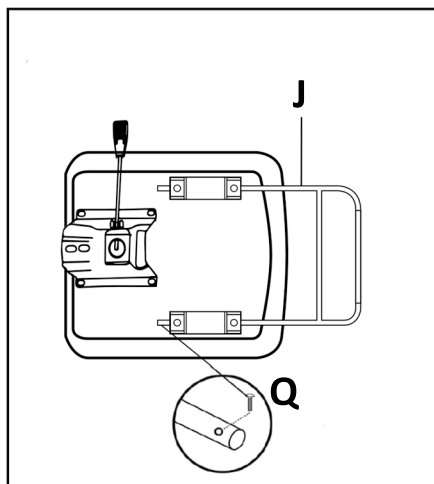


Slide the footrest frame (J) into the footrest plate holders and secure the footrest assembly with screws (Q).

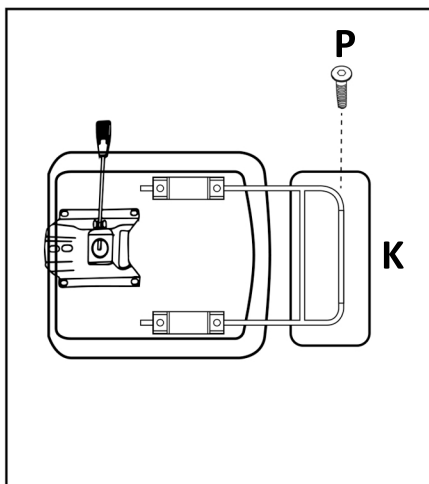


Attach the footrest cushion (K) to the footrest frame (J) as shown with screws (P).

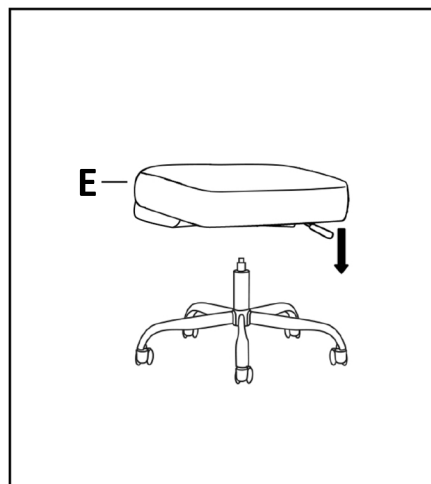


Insert the seat cushion sub-assembly (E) into the gas lift (H).

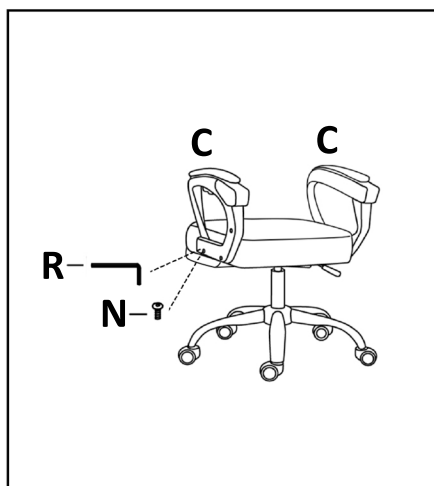

Install the two armrests (C) to the seat cushion as shown with screws (N).

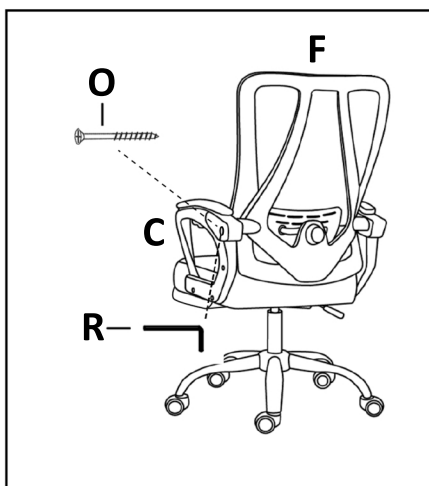

Attach the backrest (F) to the armrests (C) with screws O.

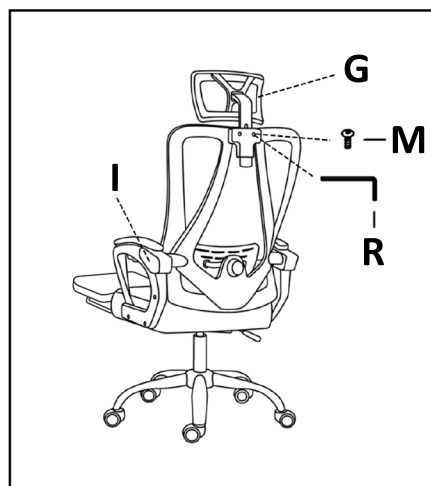

Attach the headrest (G) to the backrest (F) with screws (M). Finally, attach the armrest covers (I) to the armrests (C).