




WARDROBE

MODEL:WA-MEXI-H6D-WH/WD/BK

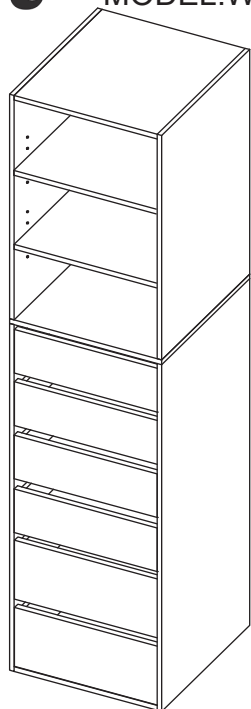

ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.




Two persons and tools required for assembly



HARDWARE

A	x20	B	x4	C	x16	D	x44	E	x16	F	x1
7x35mm		15x12mm		Ø6x30mm		M4x40mm				M4x30mm	
G	x1	H	x1	I	x1	J	x12	K	x12	L	x36
M4x14mm						M4x11mm				M3x12mm	
M	x24	N	x30	O	x2	P	x16	Q	x4	R	x4
M3x14mm						12x10mm				Ø6x50mm	
S	x8										
7x8mm											







PARTS

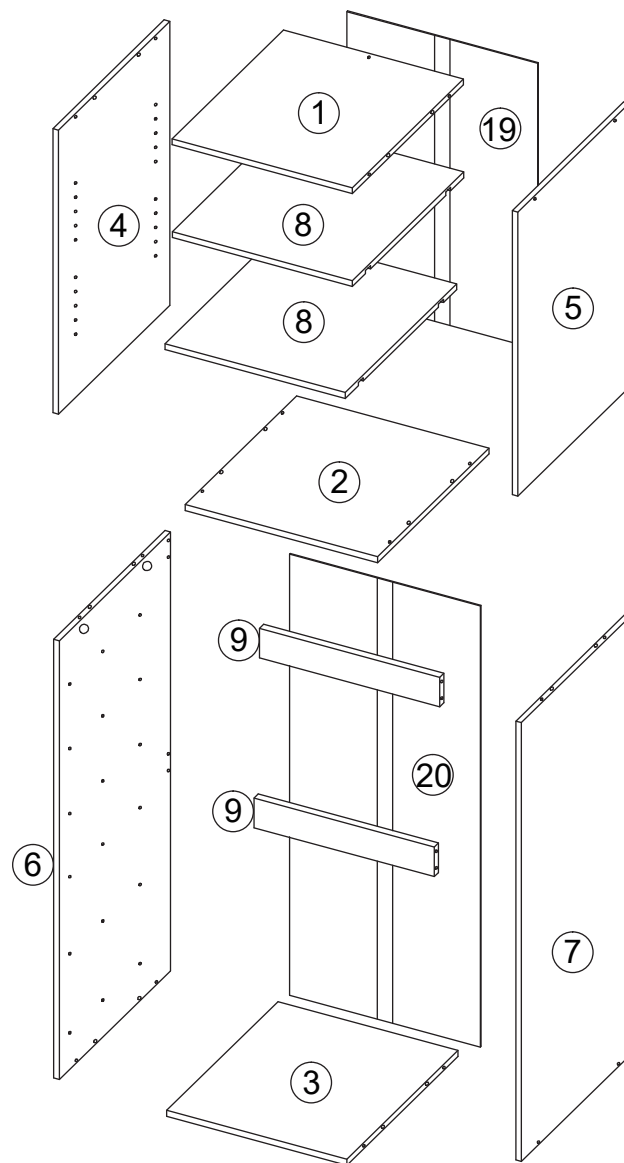

Wipe with dry cloths


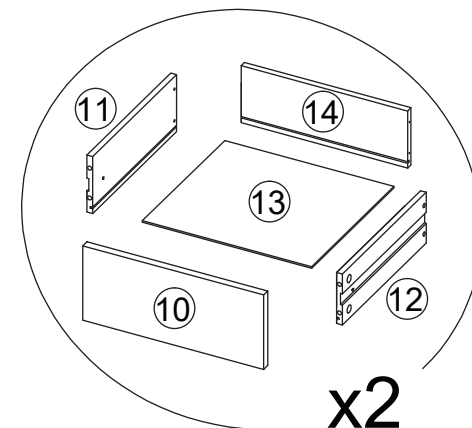
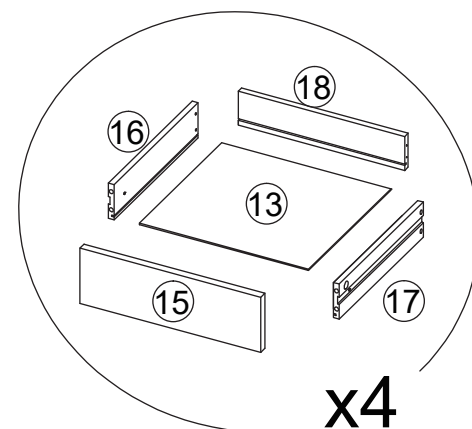


1

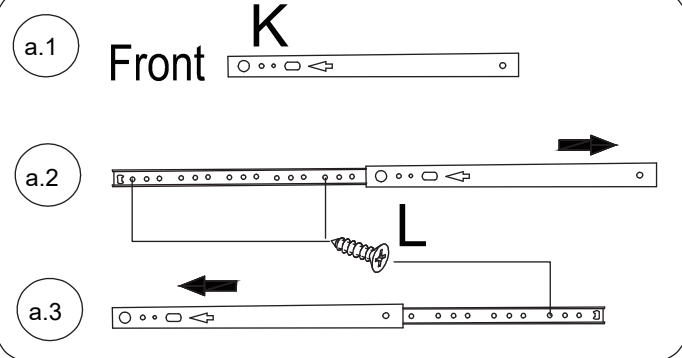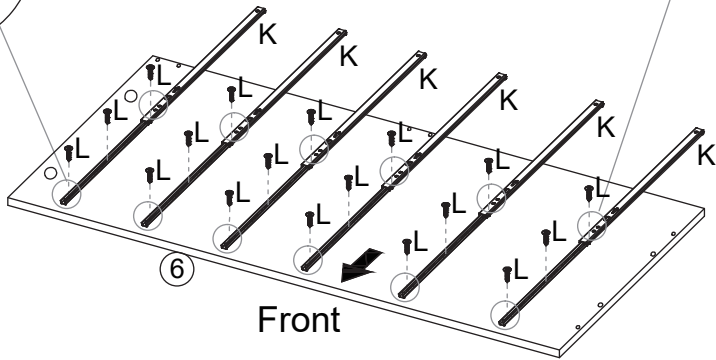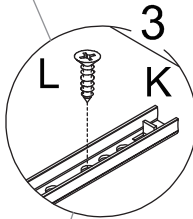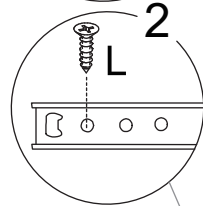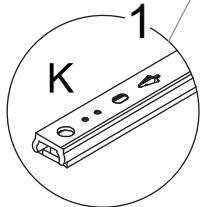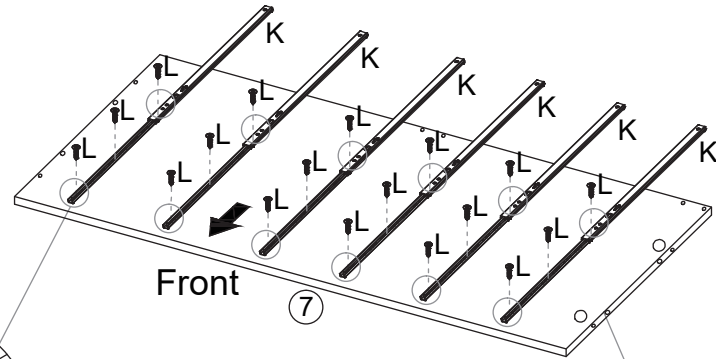





L	x36	K	x12
			
M3x12mm			

2

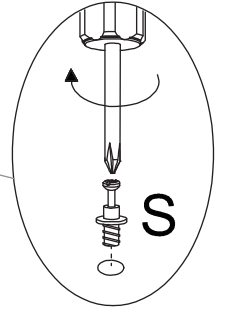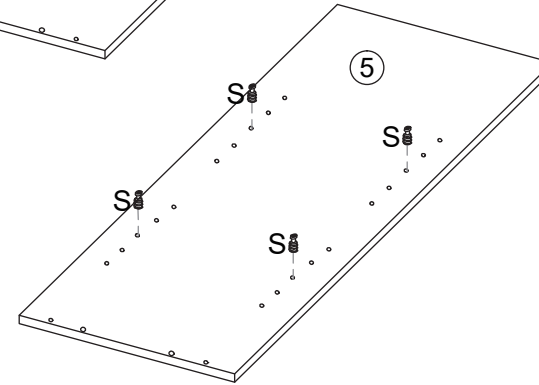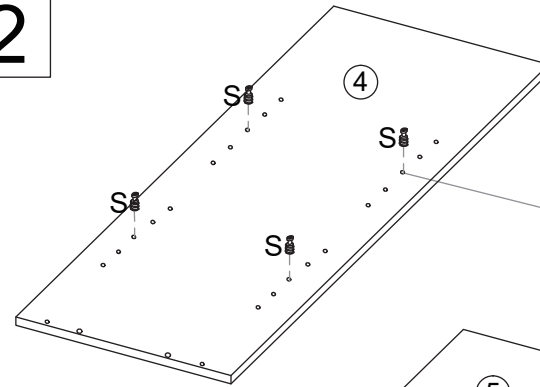


S	x8
	
7x8mm	

3

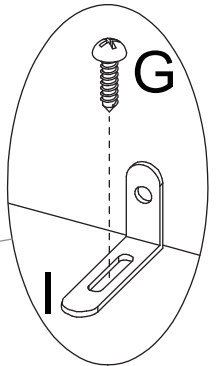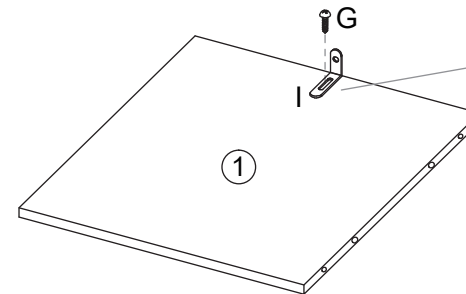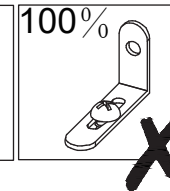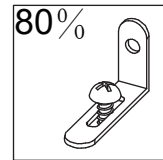


I	x1	G	x1
			
		M4x14mm	

4

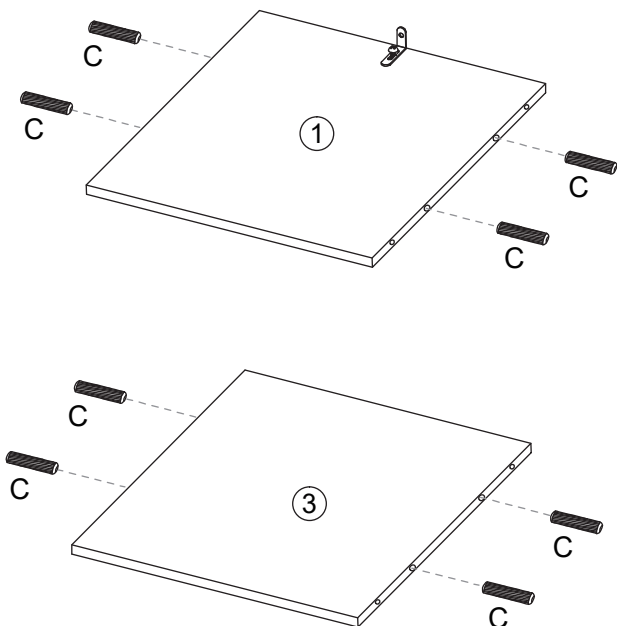


C	x8
	
Ø6x30mm	



6

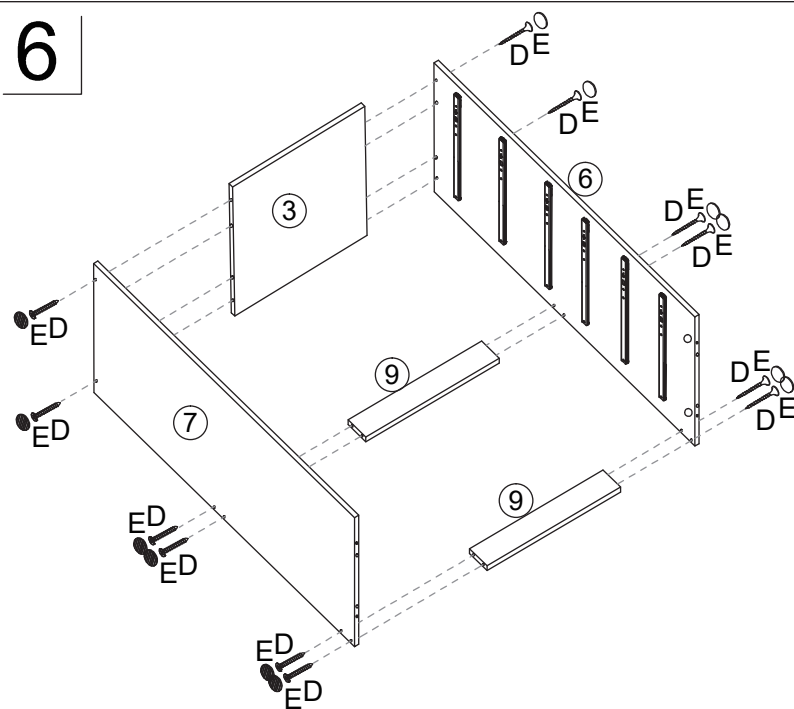

D	x12	E	x12
			
M4x40mm			

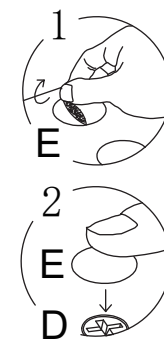


5

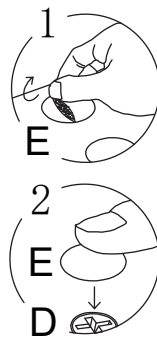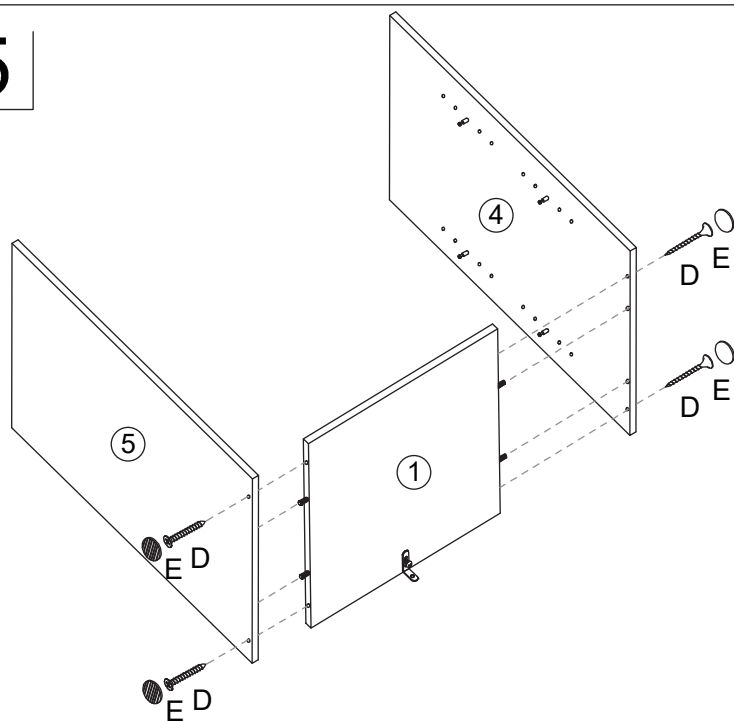


D	x4	E	x4
			
M4x40mm			

7

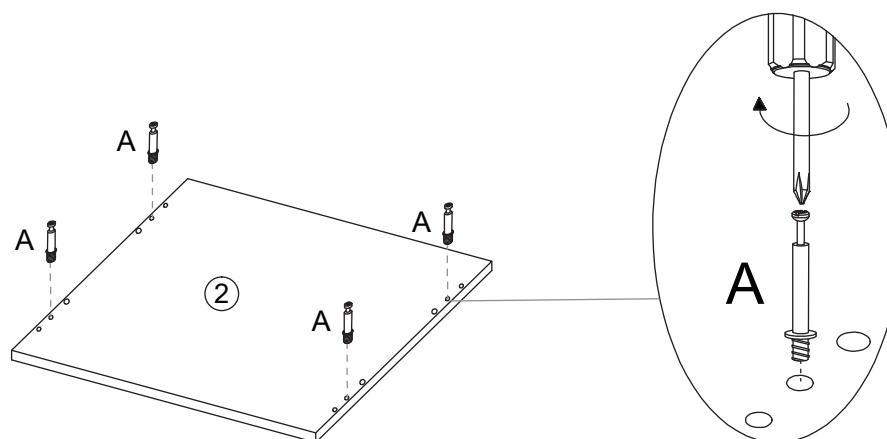


A	x4
	
7x35mm	


8

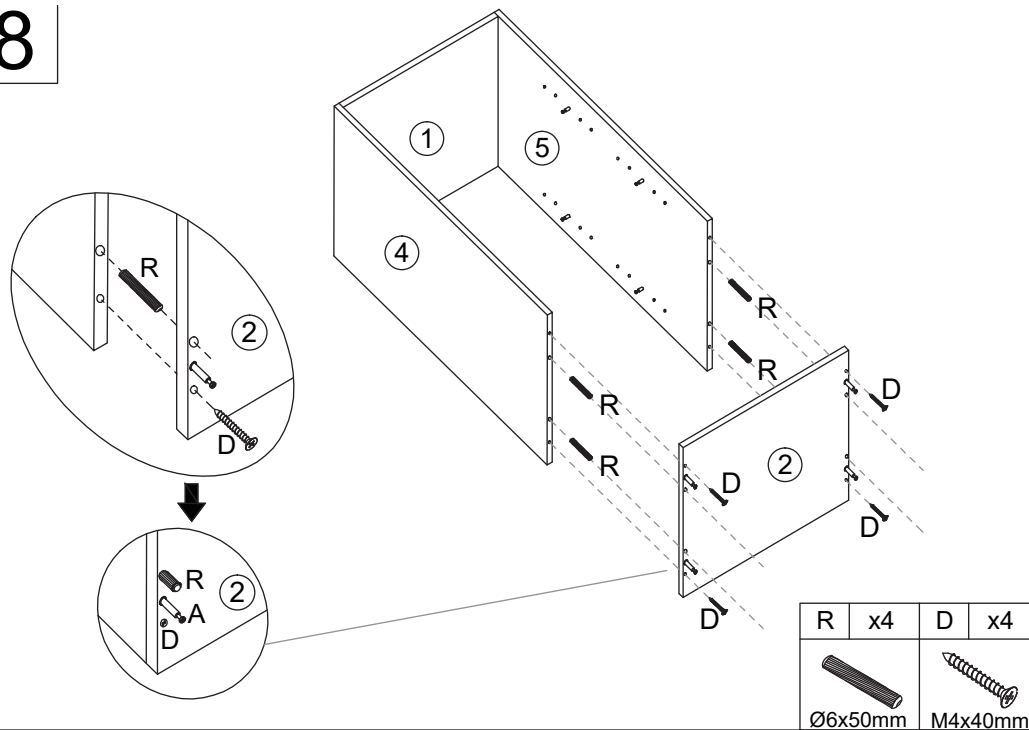

10


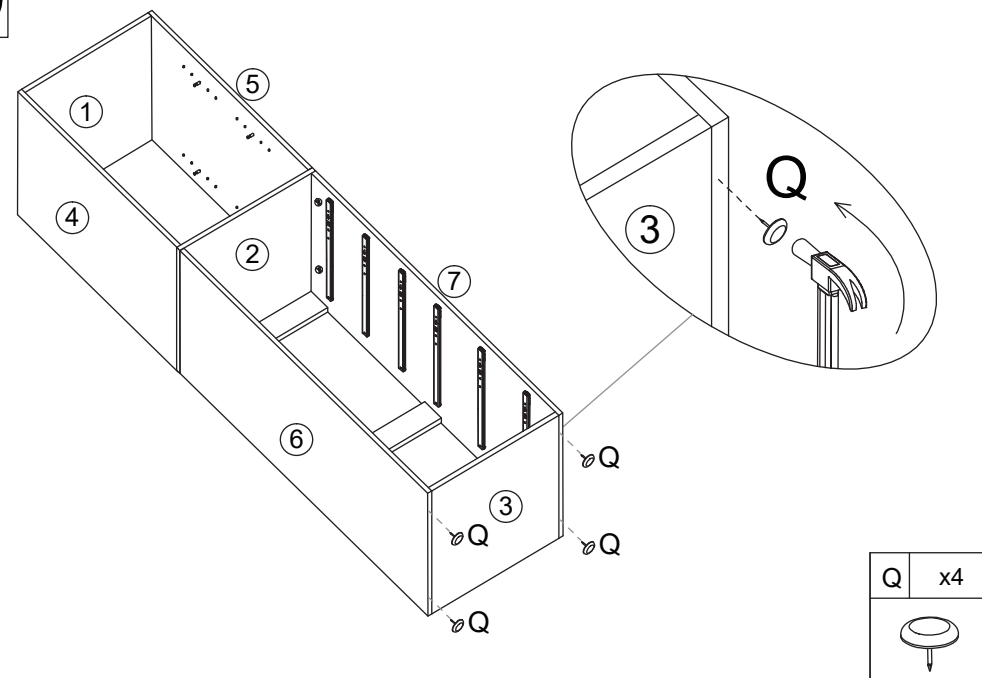


9

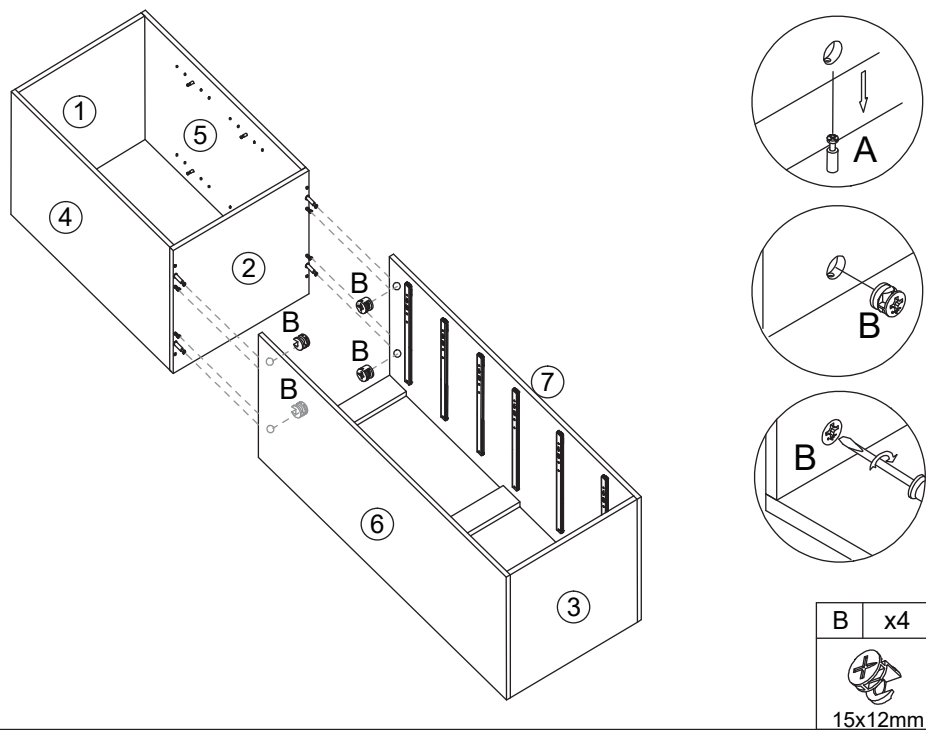


11

Ensure the diagonal of section A is equal to the section B.

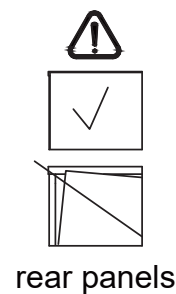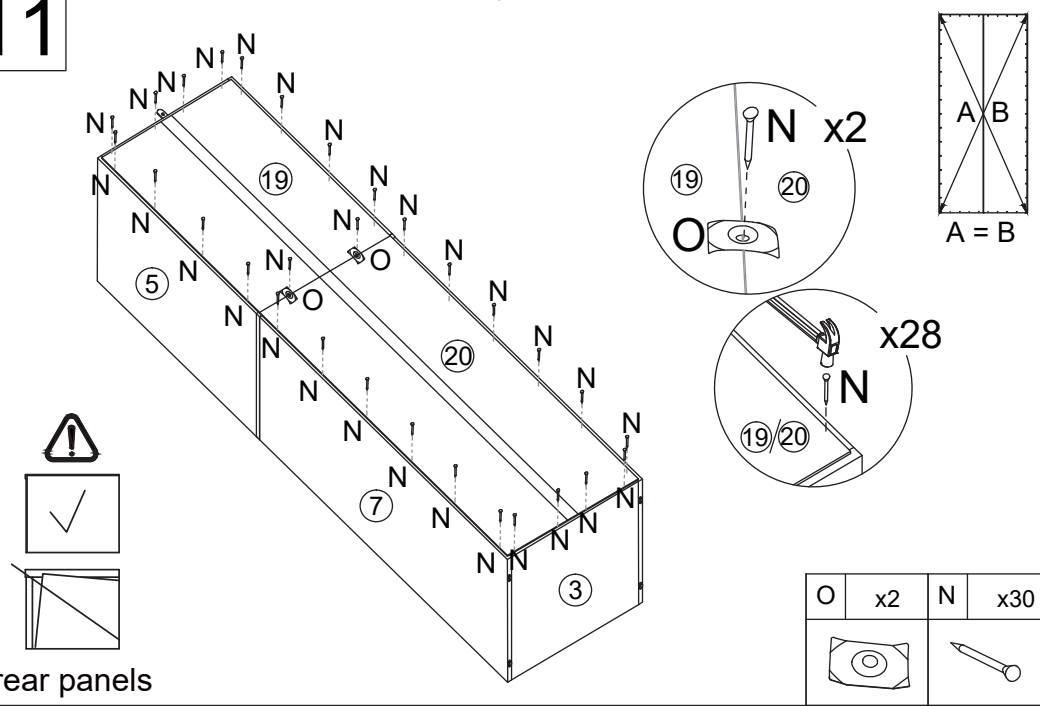


12

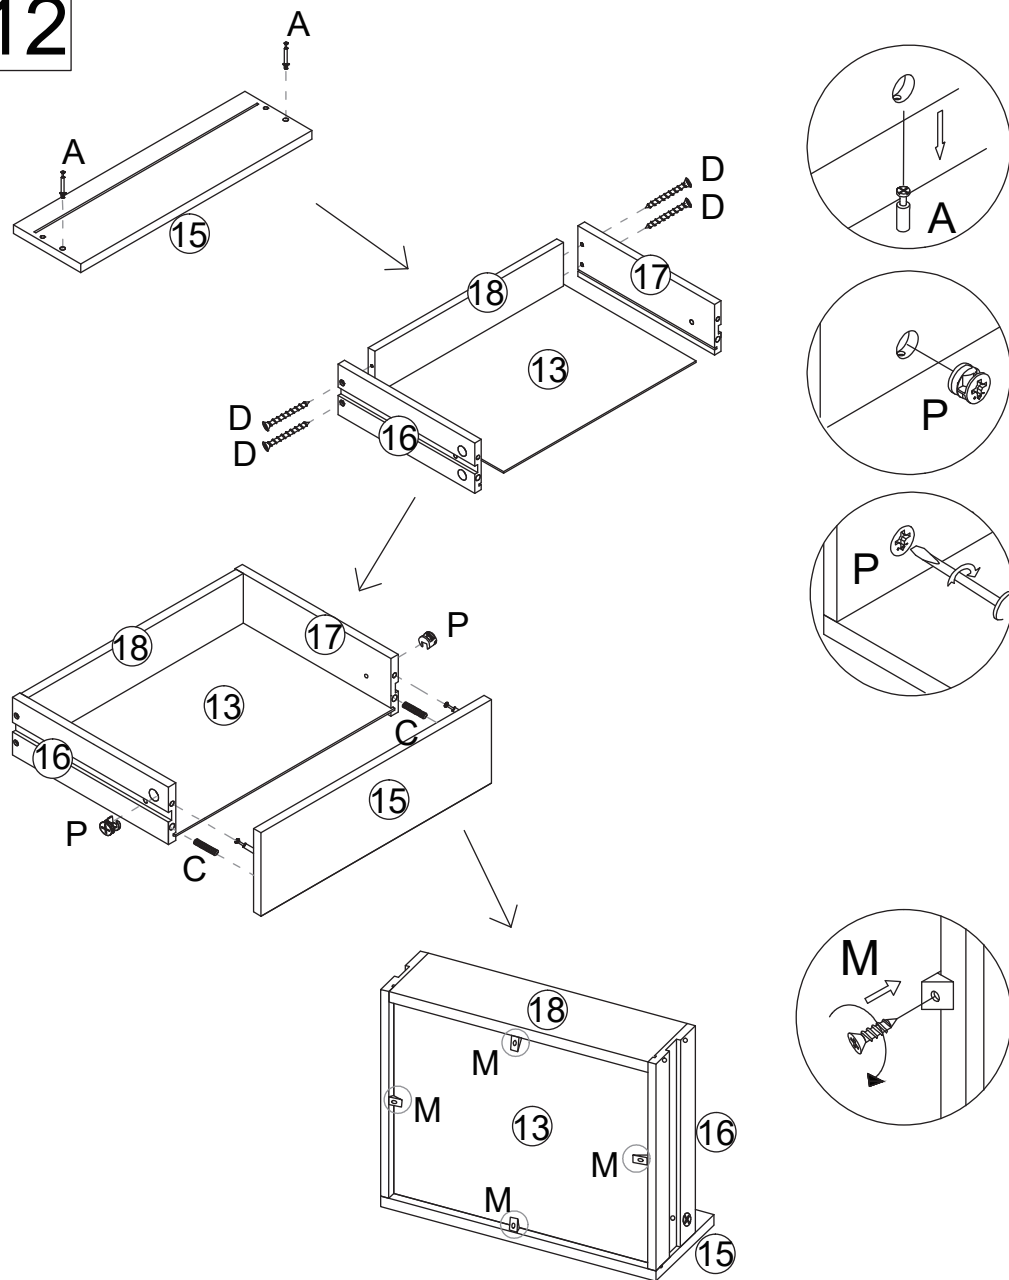

x4

C	X8	A	x8	P	x8	M	x16	D	x16
Ø6x30mm	7x35mm	12x10mm	M3x14mm	M4x40mm					


13

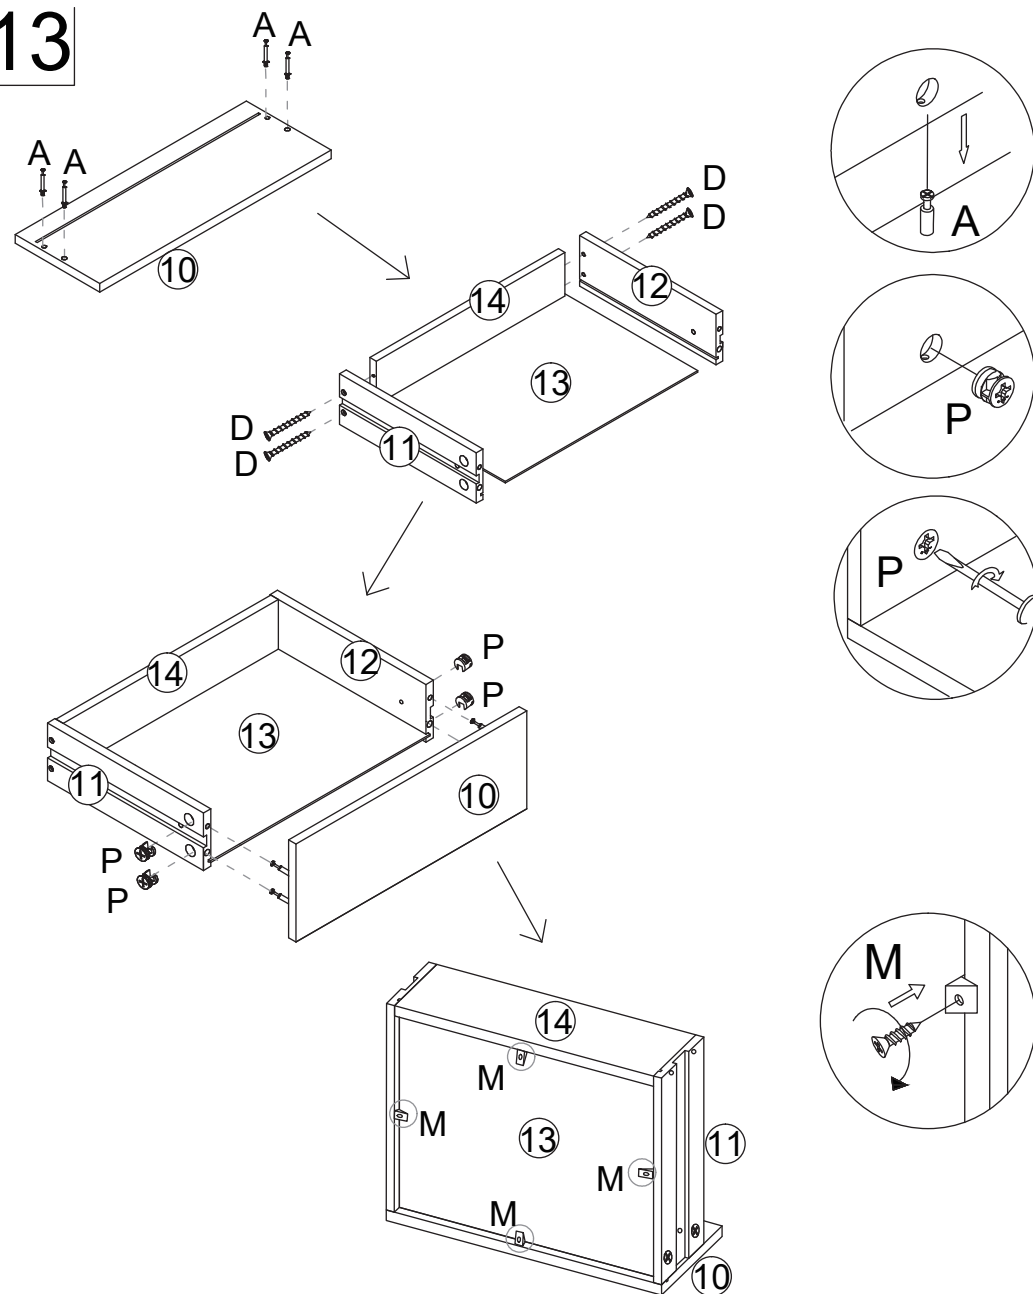

x2

A	x8	P	x8	M	x8	D	x8
7x35mm	12x10mm	M3x14mm	M4x40mm				

14

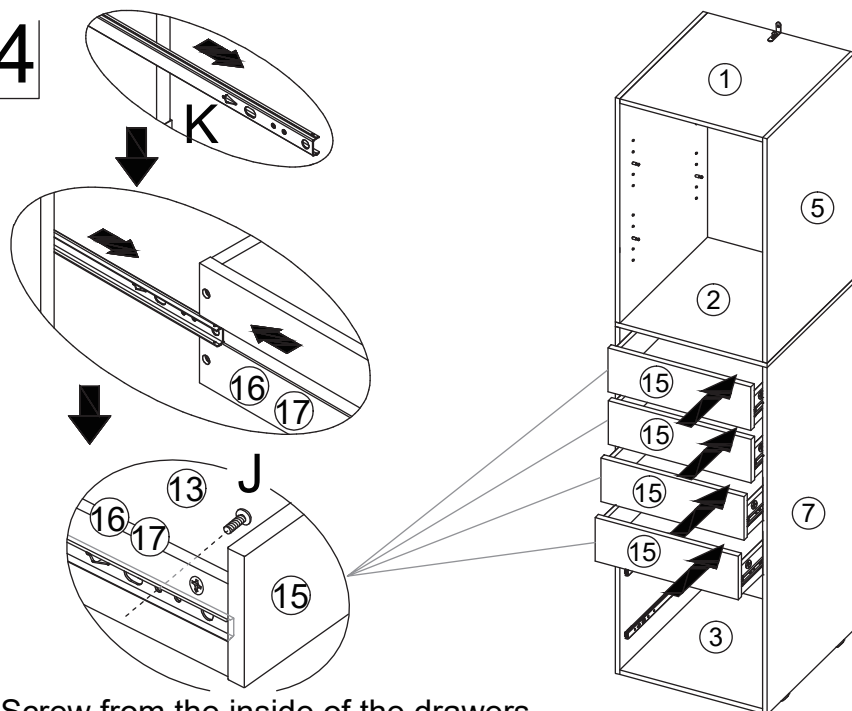



Screw from the inside of the drawers

J x8




M4x11mm

16

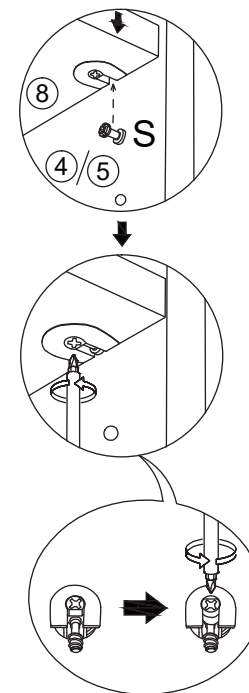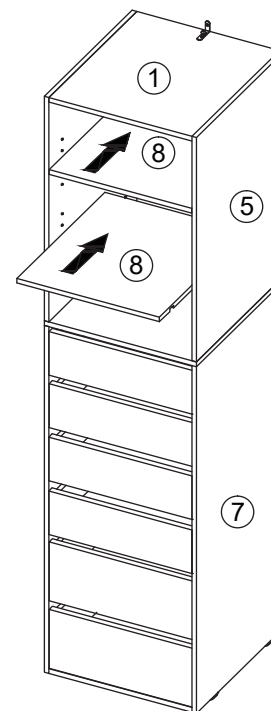

15

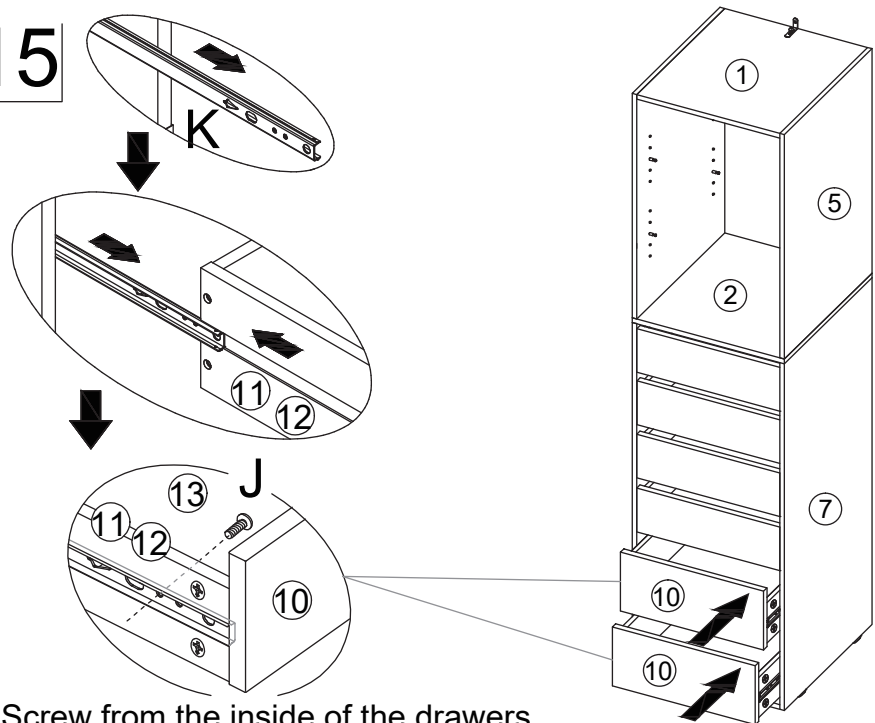


Screw from the inside of the drawers

J x4





M4x11mm

17

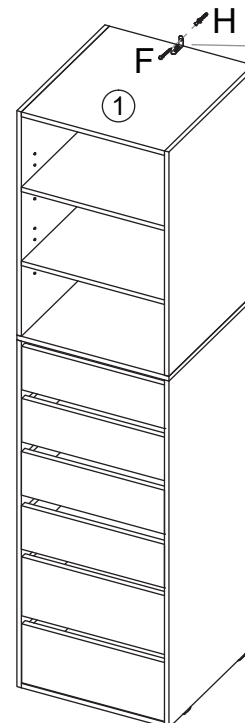

Pre-drilled hole at wall

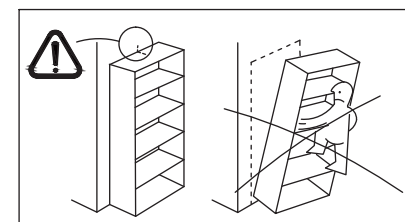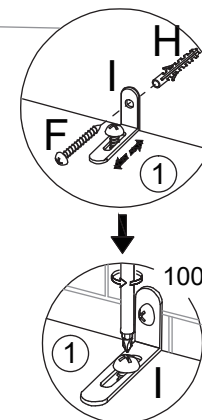

H x1 F x1



M4x30mm