

## Parcel box installation



More information for you:

Installation video web link: <https://youtu.be/0CH5gMzXOjA>

Also can scan below QR code to get installation video



# Bill of Material

<p>1 1x</p>  <p>1025mm x 383mm x 35mm</p>	<p>2 1x</p>  <p>1025mm x 383mm x 35mm</p>	<p>3 1x</p>  <p>1025mm x 415mm x 14mm</p>
<p>4 1x</p>  <p>1025mm x 415mm x 24mm</p>	<p>5 1x</p>  <p>385mm x 415mm x 22mm</p>	<p>6 1x</p>  <p>385mm x 415mm x 20mm</p>
<p>7 1x</p>  <p>500mm x 370mm x 20mm</p>	<p>8 1x</p>  <p>361mm x 350mm x 20mm</p>	<p>9 1x</p>  <p>341mm x 250mm x 20mm</p>
<p>10 1x</p> 	<p>11 2x</p>  <p>12 1x</p> 	<p>13 1x</p>  <p>14+</p> 

# Assembly

1

1\* back panel (3)

1\*side panel 2(2)

3\*tapping screw (16)

Tip: Place the back board flat on the floor (Please protect the paint against scratches with a blanket or soft base!)



Step 1: Screw the rear panel to the side panel with 3 self-tapping screws.

## Assembly

2

1\*side panel 1(1)

3\*tapping screw (16)




Step 2: Repeat step 1 for another side of panel.

3

1\*front(4)

1\*letter panel (13)

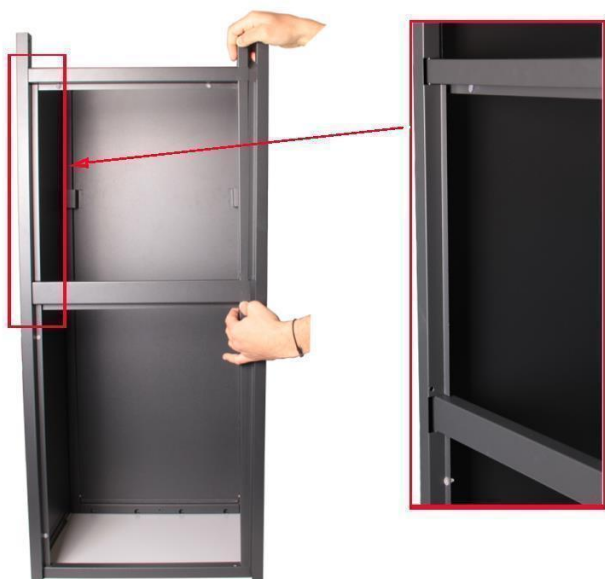

Step 3: Erect the body and insert the front frame.  
Insert the letter panel into the holes provided as shown to fix the front.

## Assembly

4

1\*lip(5)

4\*tapping screw (16)



Step 4: Install the top lid. Make sure that the double folded edge is on the front and the single folded edge closes off the rear board. Then screw the lid with the side boards at the marked places.

Press the top lid hard!

5

1\*bottom (6)

4\*tapping screw (16)



Step 5: Install the bottom panel. Tilt the box backwards on a soft surface. Insert the bottom panel. Make sure that the clips on the side panels enclose the edges of the bottom board. Push the bottom and you will hear a click. Then screw the bottom to the rear board at the marked point with a self-tapping screw.

## Assembly

6

2\*front panel (8)

1\*hatch (10)



Step 6: Install the door bracket.  
Open the wings of the flap hatch by bending them as shown.



Guide the tabs on the front panel into the slots provided on the flap bracket. Bend the tabs on the faceplate to secure the door bracket in place.

## Assembly


7

1\*front panel (8)

1\*inside panel (9)


2\*strut (11)

2\* screw set (14,15)

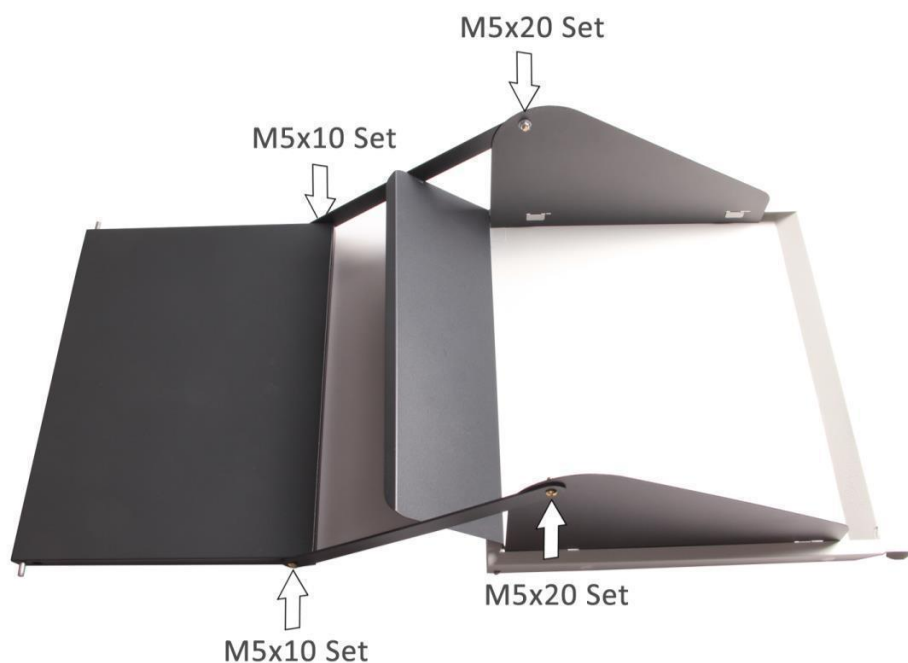

Install the inside panel and the front panel with the connecting struts(12) and the screw sets (13) as shown. Make sure that the screw heads point inwards.

8

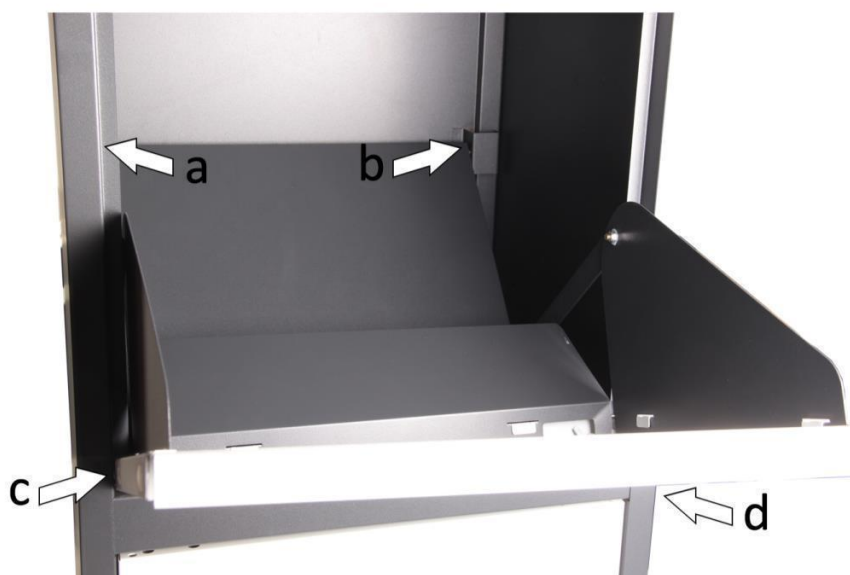

Insert the hinge pins (a,b) of the inside panel into the holes in the rear board bracket. Then insert the hinge pins (c,d) of the front panel into the holes provided in the side boards. Check that the hinge pins can be moved.



## Assembly

9

1\*door (7)

1\*lock (12)

4\*spreading bush (18)



Step 7: Install the door. Insert a hinge pin (underside of the door edge) into the hole provided in the front board. Insert the door and fix the door with the hinge pin.