

ASSEMBLY INSTRUCTIONS















PAGE: 1/6




MODEL : OMI SHELVING UNIT


Before you begin, please follow assembly instructions carefully, then follow them step by step.

Read instruction carefully . See Furniture Parts list and Hardware List for guidance . Be sure you have all parts before you start assembling .
Place and assemble furniture on a clean flat soft surface , such as carpet or rug to prevent being scratched .

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL	3 PCS
4	SMALL SIDE PANEL	1 PC
5	CENTER PANEL	5 PCS
6	CENTER PLATE	5 PCS
7	MIDDLE PANEL	1 PC
8	MIDDLE PANEL - 1	1 PC
9	MIDDLE PANEL - 2	1 PC
10	MIDDLE PANEL - 3	1 PC
11	METAL SUPPORT	3 PCS

HARDWARE				
A	MINI FIX	A1  A2  A3 		20 SETS
B	M8 X 30MM WOOD DOWEL			36 PCS
C	M6 X 50MM CSK CAP WOOD SCREW			36 PCS
D	ALLEN KEY M4			1 PC
E	JCBC SCREW M6 X 30MM			6 PCS
F	5/8 PVC NAIL LEG			6 PCS
G	TIPPING PACK WITHOUT AI  G1  G3  G5  G2  G4 			2 SETS

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
 SCREWDRIVER	 HAMMER
 POWER DRILL	

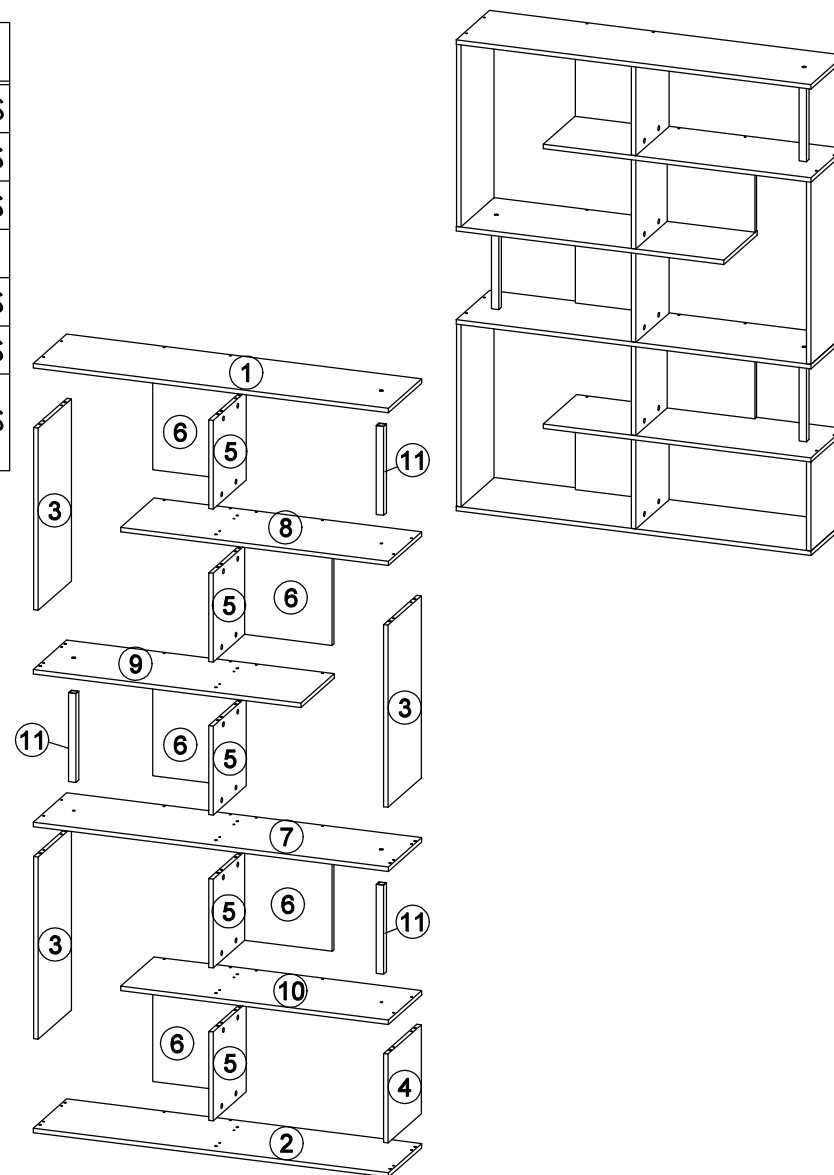

Reminder:


Please ensure that all surfaces and edges with colours/laminations are facing forward/outward.

ASSEMBLY INSTRUCTIONS

PAGE: 2/6


STEP 1

- Insert hardware **A2** onto panel **(1)** and panel **(2)**.
(Repeat 4 times.)

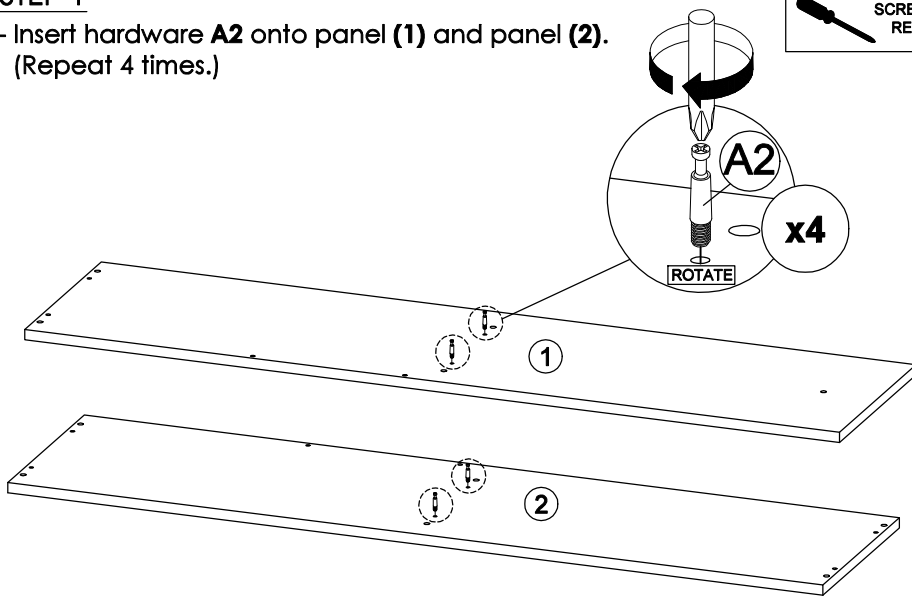

STEP 3


- Insert hardware **A2** onto panel **(7)** and panel **(8)**.
(Repeat 8 times.)

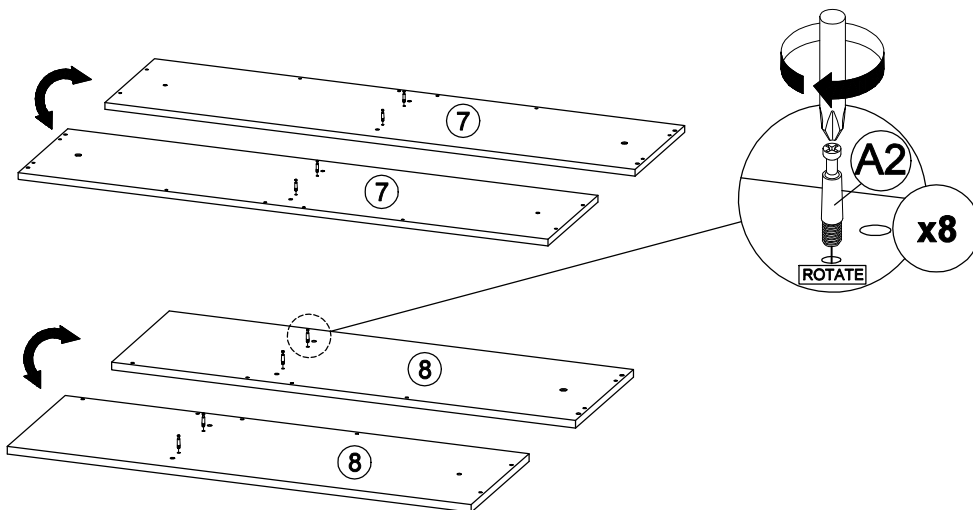

MODEL : OMI SHELVING UNIT

STEP 2


- Insert hardware **A1** onto panel **(5)**.
(Repeat 20 times.)
- Insert hardware **B** onto panel **(3)**, **(4)** and **(5)**.
(Repeat 36 times.)

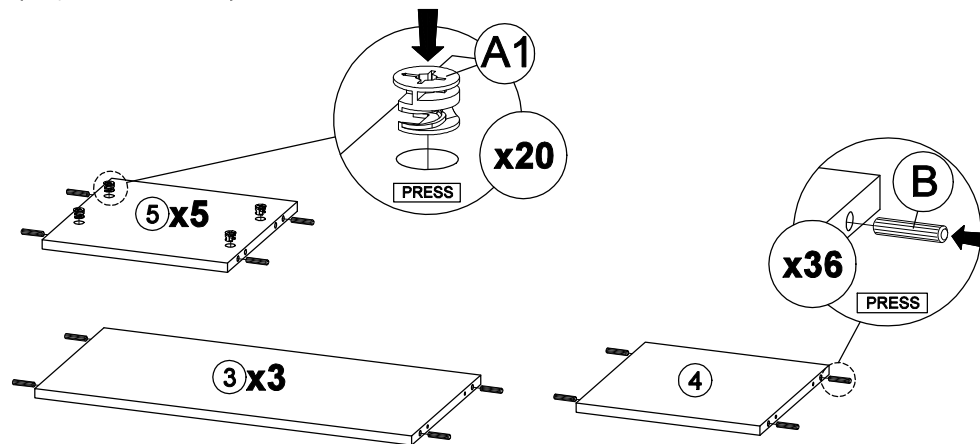

* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 4

- Insert hardware **A2** onto panel **(9)** and panel **(10)**.
(Repeat 8 times.)

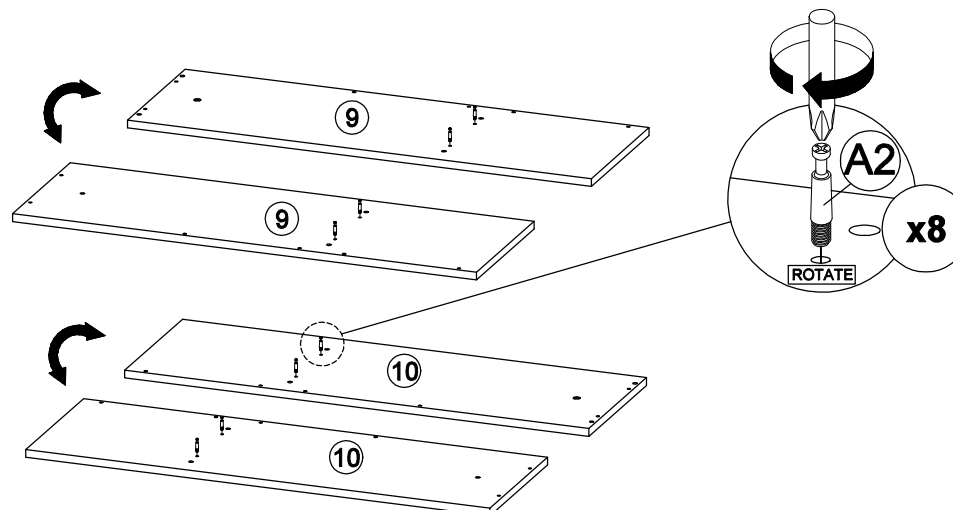


ASSEMBLY INSTRUCTIONS

PAGE: 3/6

STEP 5


- Attach panel (5) and (6) to panel (10).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.
- (Repeat 4 times.)
- Connect panel (10) to panel (6) by using hardware C and D.
- (Repeat 4 times.)

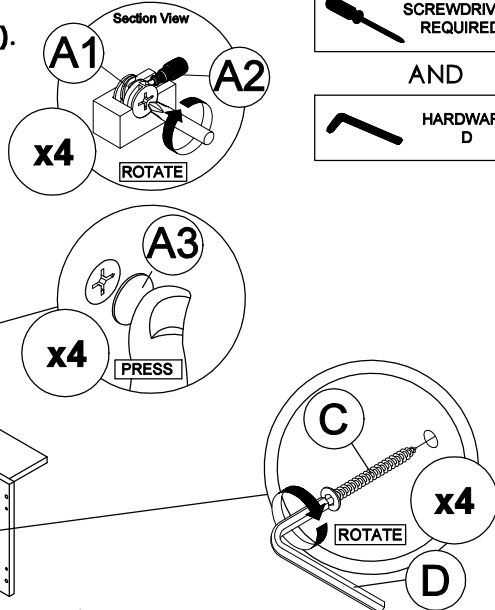

* In this step hardware A1, A2 and B are pre-inserted.

STEP 7

- Connect panel (2) and (7) to panel (3) and (6) and then panel (2) and (10) to panel (4) by using hardware C and D.
- (Repeat 12 times.)
- Connect panel (7) and (10) to metal support (11) by using hardware D and E.
- (Repeat 2 times.)

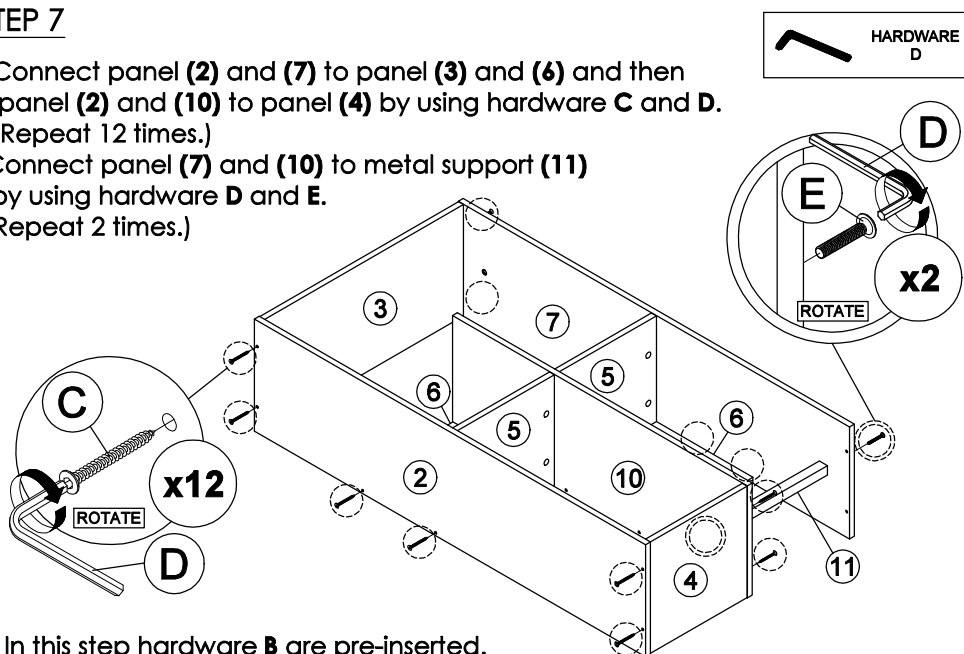


* In this step hardware B are pre-inserted.

MODEL : OMI SHELVING UNIT

STEP 6


- Attach panel (2) and (7) to panel (3), (5) and (6).
- Attach panel (2) and (10) to panel (4).
- Attach panel (7) and (10) to metal support (11).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.
- (Repeat 4 times.)

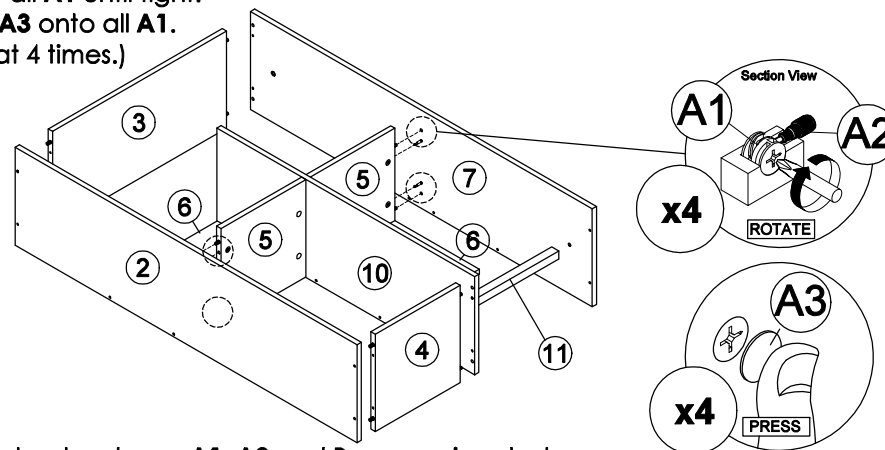

* In this step hardware A1, A2 and B are pre-inserted.

STEP 8

- Attach panel (5) and (6) to panel (8).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.
- (Repeat 4 times.)
- Connect panel (8) to panel (6) by using hardware C and D.
- (Repeat 4 times.)

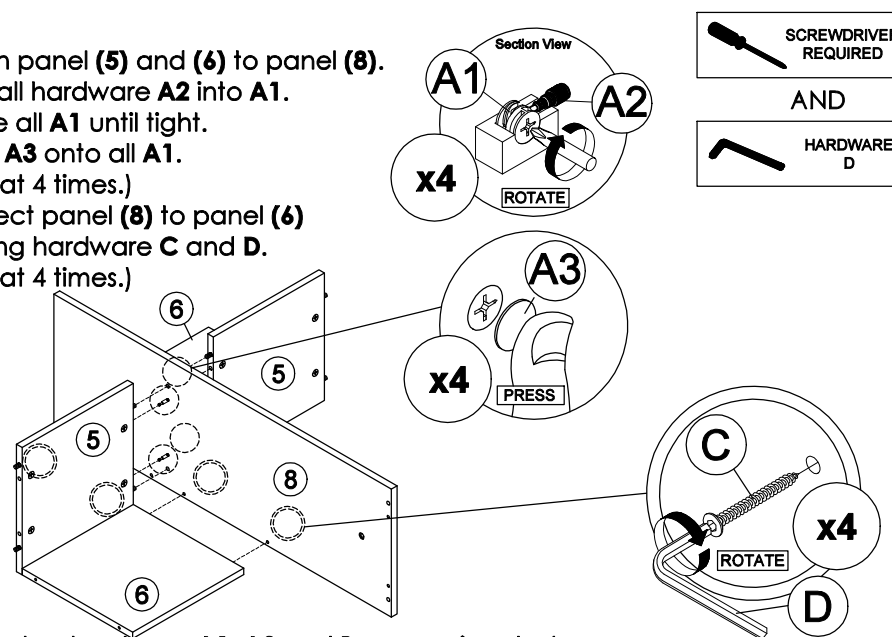


* In this step hardware A1, A2 and B are pre-inserted.

ASSEMBLY INSTRUCTIONS

PAGE: 4/6

STEP 9


- Attach panel (1) and (9) to panel (3), (5) and (6).
- Attach panel (1) and (8) to metal support (11).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.
- (Repeat 4 times.)

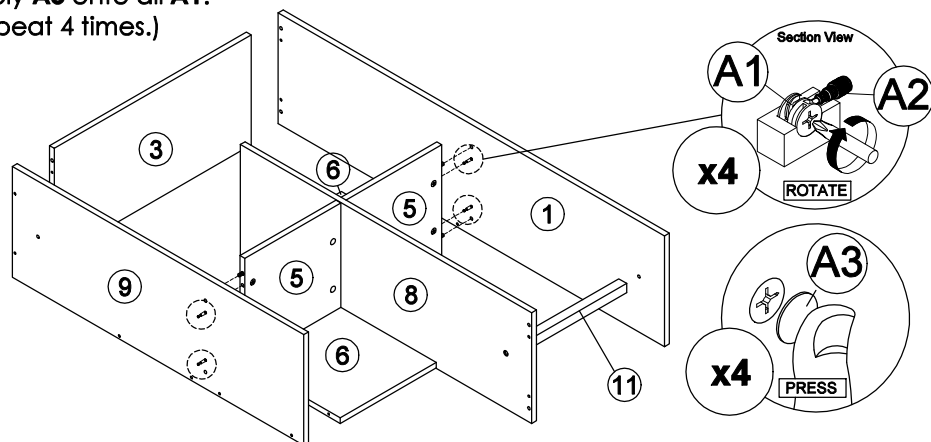

* In this step hardware A1, A2 and B are pre-inserted.

STEP 11

- Attach panel (7) and (9) to panel (5) and (6).
- Attach panel (7) and (8) to panel (3).
- Attach panel (7) and (9) to metal support (11).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.
- (Repeat 4 times.)

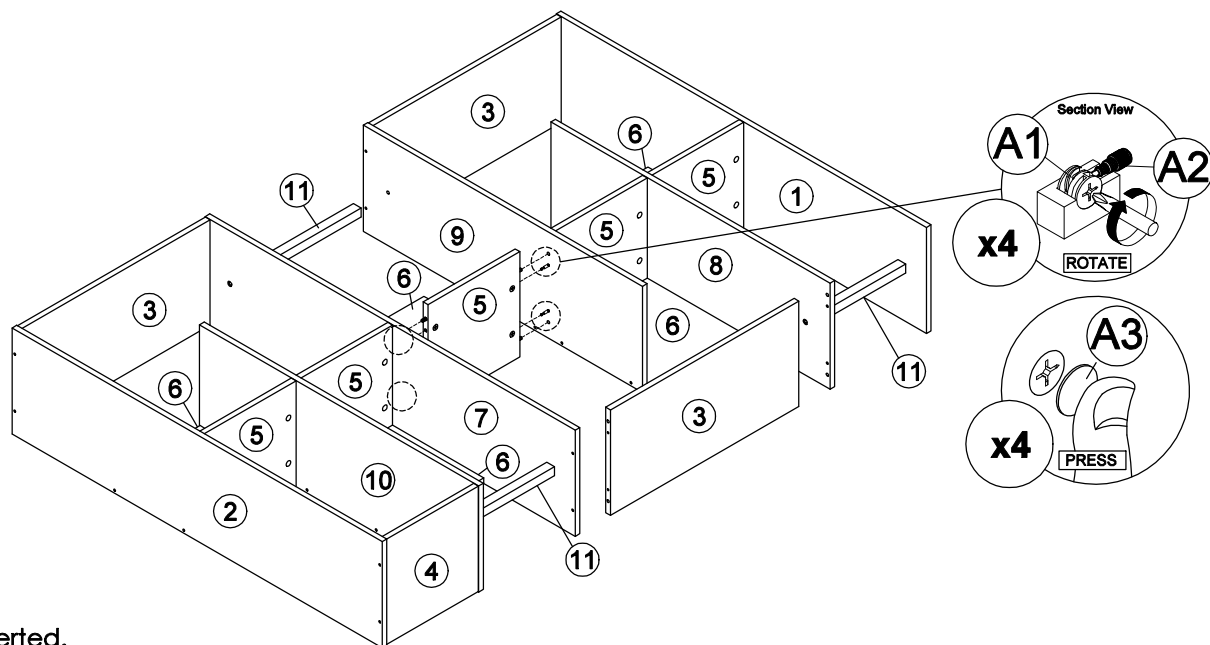


* In this step hardware A1, A2 and B are pre-inserted.

MODEL : OMI SHELVING UNIT

STEP 10

- Connect panel (1) and (9) to panel (3) and (6) by using hardware C and D.
- (Repeat 8 times.)
- Connect panel (1) and (8) to metal support (11) by using hardware D and E.
- (Repeat 2 times.)

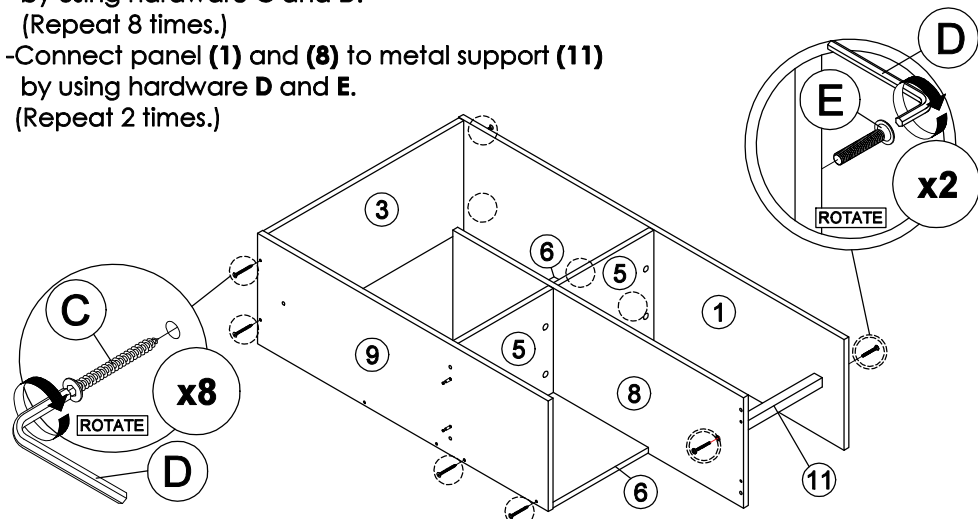

* In this step hardware B are pre-inserted.


ASSEMBLY INSTRUCTIONS

PAGE: 5/6

MODEL : OMI SHELVING UNIT


STEP 12

- Connect panel (7) and (9) to panel (6) and then panel (7) and (8) to panel (3) by using hardware C and D.
(Repeat 8 times.)
- Connect panel (7) and (9) to metal support (11) by using hardware D and E.
(Repeat 2 times.)

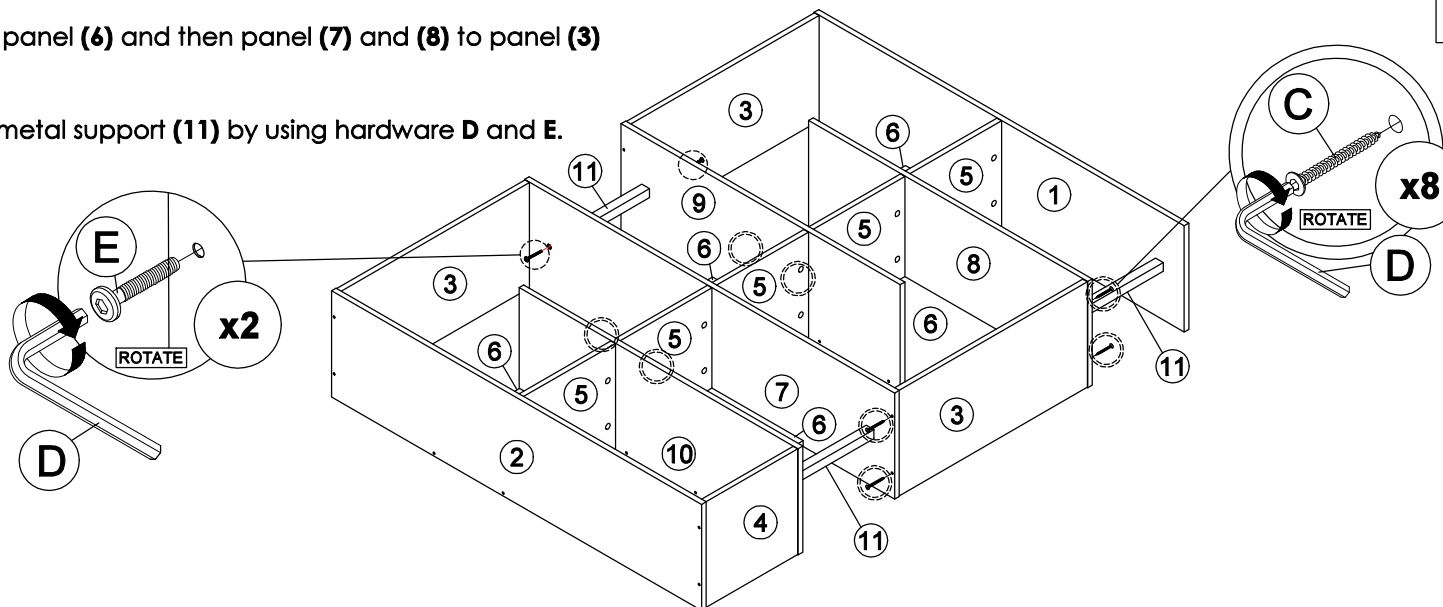

STEP 13

- Hit hardware F into bottom of panel (2).
(Repeat 6 times.)

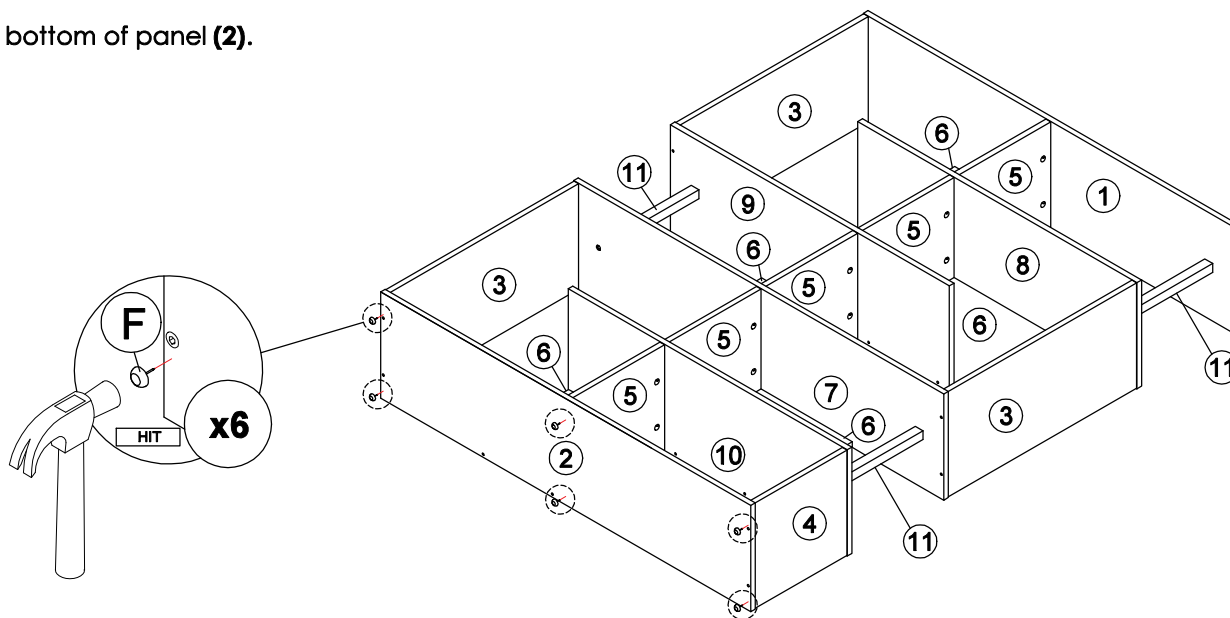


ASSEMBLY INSTRUCTIONS

PAGE: 6/6

STEP 14


Assemble hardware **G1** into panel **(1)** by using hardware **G2**.
(Repeat 2 times.)

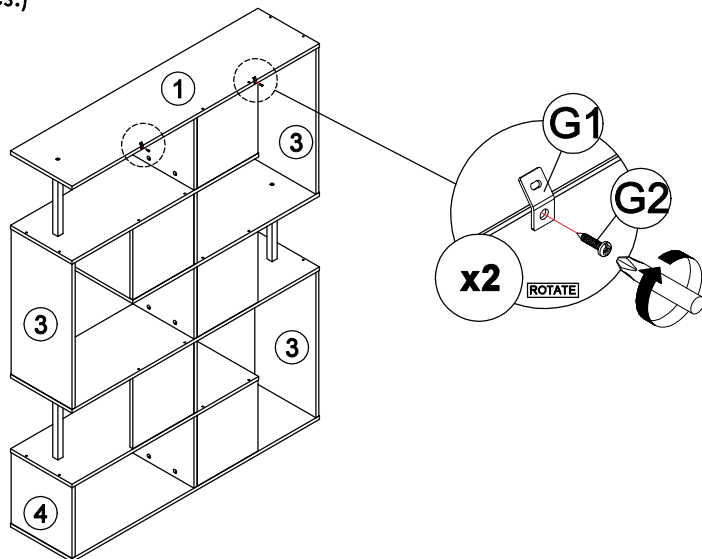

MODEL : OMI SHELVING UNIT


STEP 15

- Mark and use the power drill to drill a hole on the wall.
- Hit hardware **G3** into the wall.
(Repeat 2 times.)

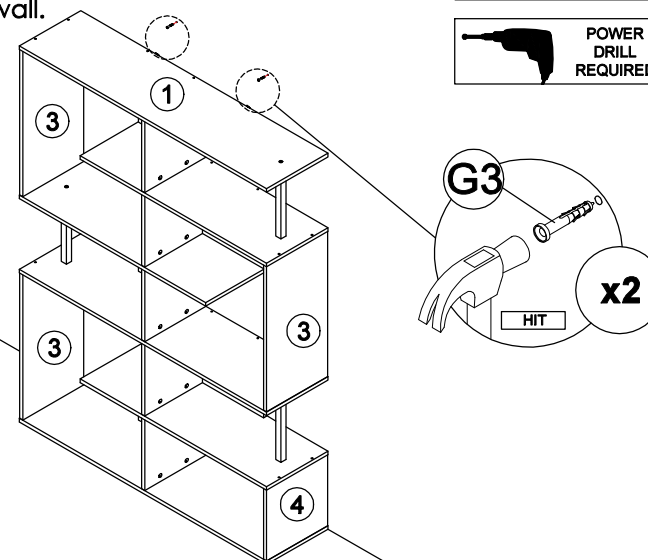

STEP 16

- Assemble hardware **G1** to **G3** by using hardware **G4**.
(Repeat 2 times.)

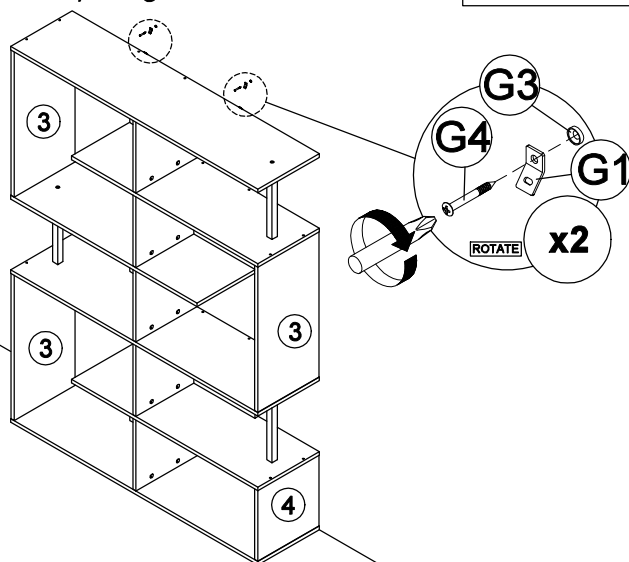

STEP 17

- Connect both of the hardware **G1** by using hardware **G5**.
- Tighten the hardware **G5**.
(Repeat 2 times.)

