
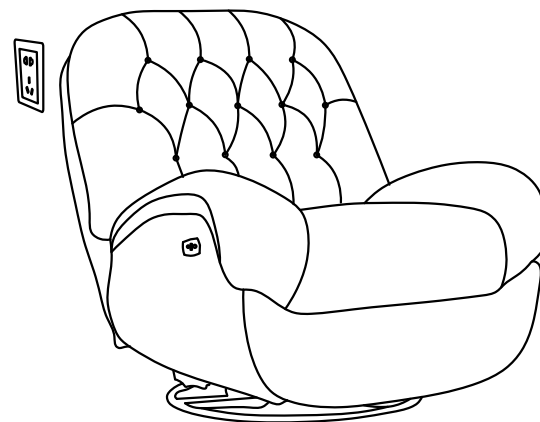
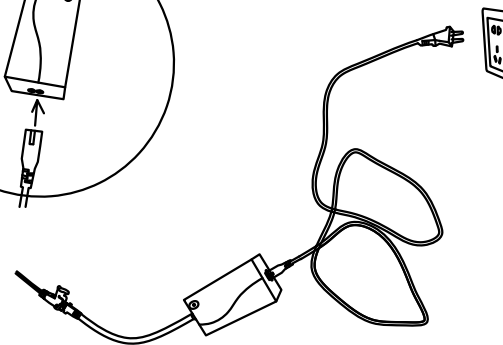
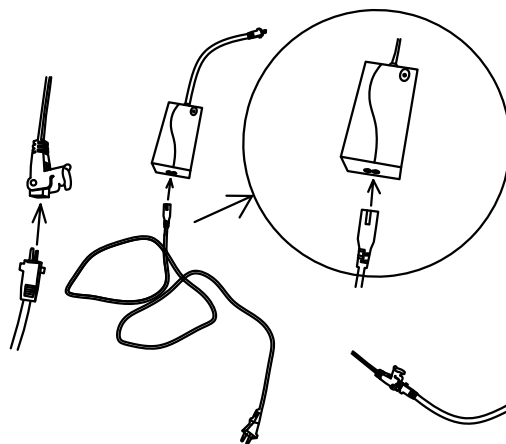


ASSEMBLY INSTRUCTION

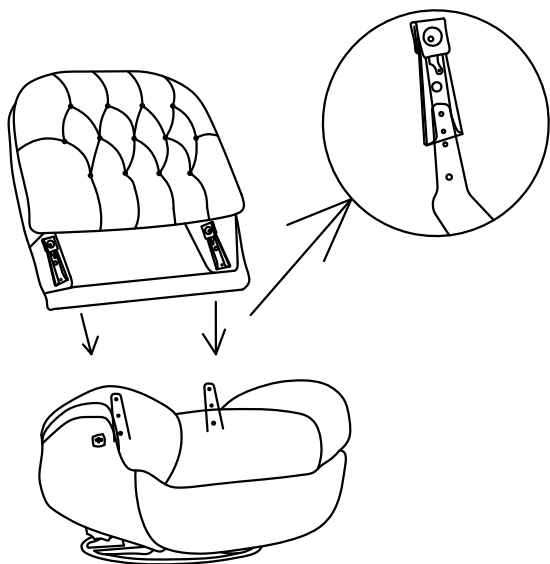

STEP1: INSERT BACKREST

STEP2: CONNECT ELECTRIC WIRE

STEP3: PLUG IN

STEP4: READY TO USE