



1

Fit Fibre Washer to Spindle and then firmly screw Spindle into the Breach.

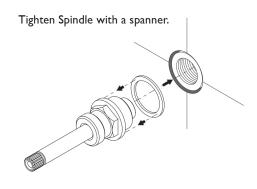

2

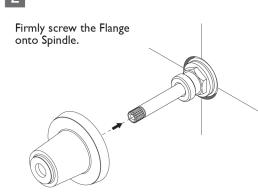

3

- Fit the Handle Screw over the Spindle Arm.
- Fit the C-Clip into the groove in the Spindle Arm.
- Fit the O-Ring then the Handle onto the Spindle Arm.
- Fasten the Handle Screw using the Spanner provided.

