


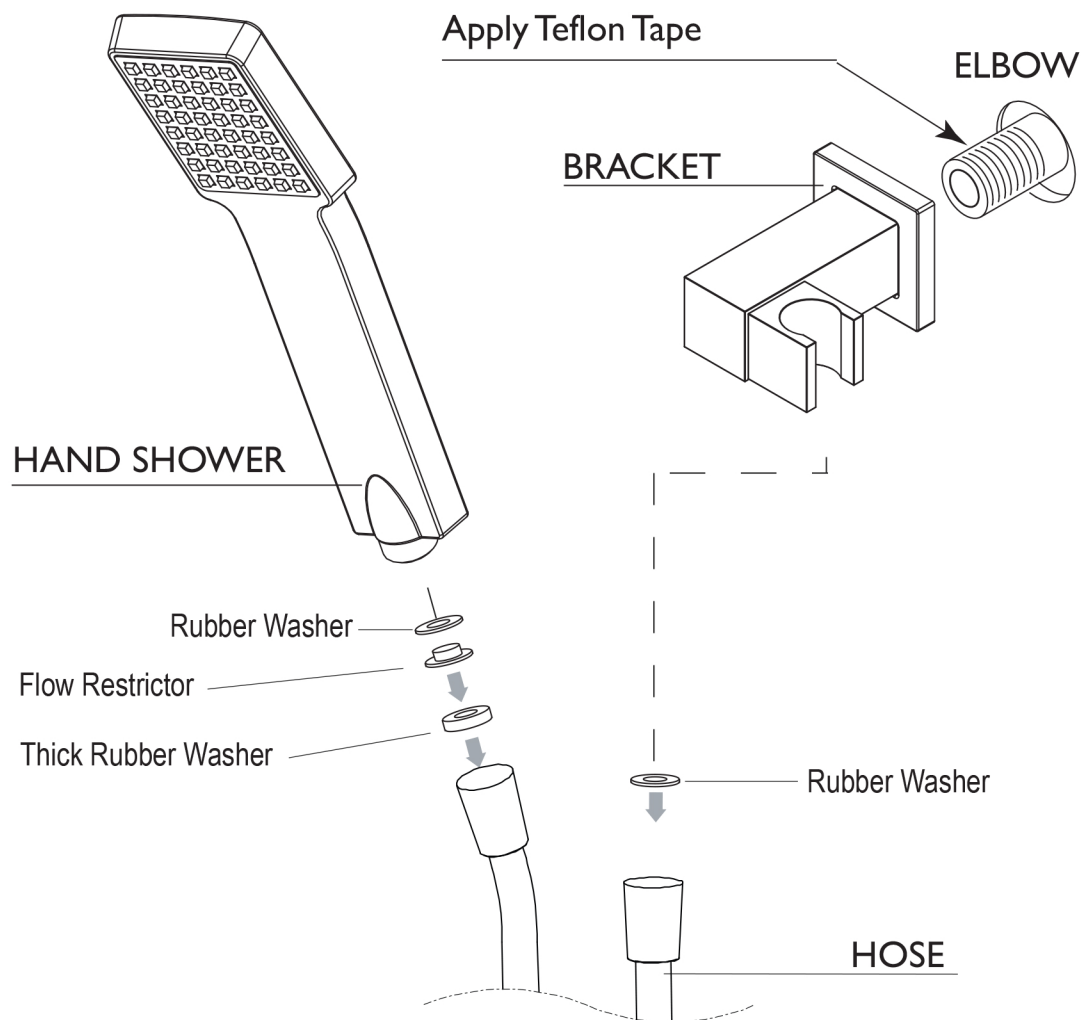

Instruction

- Apply Teflon tape to elbow thread and screw on bracket.
- Ensure that rubber washers and flow restrictor are attached, as shown.
- Connect bracket and hand shower with hose. **TEST & CHECK FOR LEAKS.**



recommended
working pressure

**150-500
KPa**

maximum hot
water temperature

**75
degrees**

