


## BREECH SET-UP:

Total adjustment range is from 52mm to 69mm.

Between 61mm to 70mm, handle can be installed without trimming the spindle.

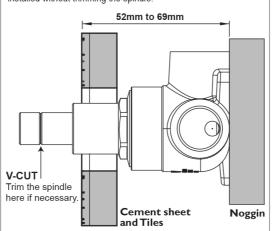

Ø25mm






Free Flow Aerator

## CONVERTING TO BATH FILLER:

Remove Basin Aerator from the outlet with the aerator key. Install Free Flow Aerator to the outlet.



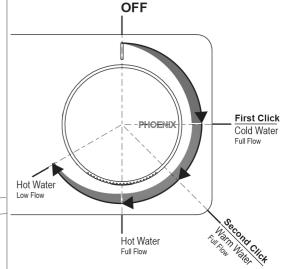




Mount the Mixer Breech in place using the wood screws provided. Ensure that Mixer Body is level.

Connect water supply, as shown.

Test and check for leaks.

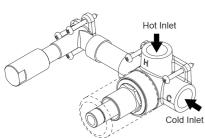

2

Create a 25mm and a 40mm round holes, 100mm apart as shown in diagram, in cement sheet and tiles.


Remove the protective cover and the testing cap. Push on the Dress Plate onto the Mixer Breech.





Ø40mm

Check if the spindle needs to be trimmed. Mixer handle should be resting on the plastic ring.

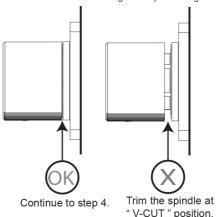

Turn the spindle Anti-Clockwise until the cartridge is set to OFF position.

Fit the mixer handle to the spindle and fasten with the grub screw. Push the rubber plug into position.

