


1

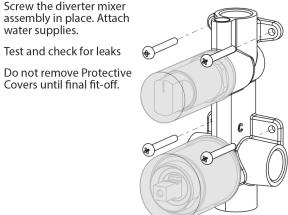

Cut a 40mm hole and a 45mm hole in cement sheet and tiles, 60mm apart, as shown.


CARTRIDGE REPLACEMENT


Removing Diverter:


- a) Remove the dress plate.
- b) Remove the diverter shroud with a 27mm tube spanner.
- c) Remove the plastic spacer.
- d) Release grub screws.
- e) Remove the diverter button.
- f) Release the screw. Remove the adaptor.
- g) Remove the diverter cartridge with a 21mm tube spanner.

Installing Diverter:

- a) Install the diverter shroud with a 27mm tube spanner.
- b) Push the dress plate back to position.
- c) Fasten grub screws and fit the plastic spacer to position.
- d) Fasten the screw to secure Spindle Adaptor on the spindle.
- e) Turn spindle Anti-Clockwise until it stops.
- f) Push on Diverter Button.
- g) Fasten New Diverter Cartridge with the tube spanner.

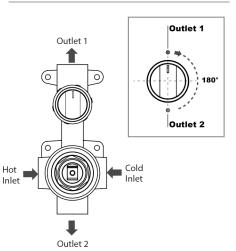

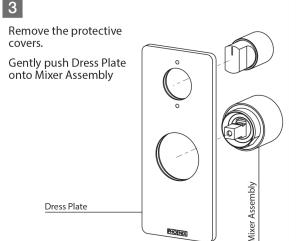

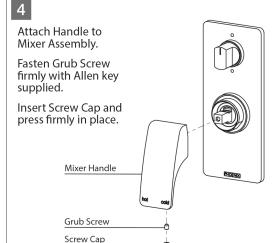

45mm

