



MEASUREMENTS

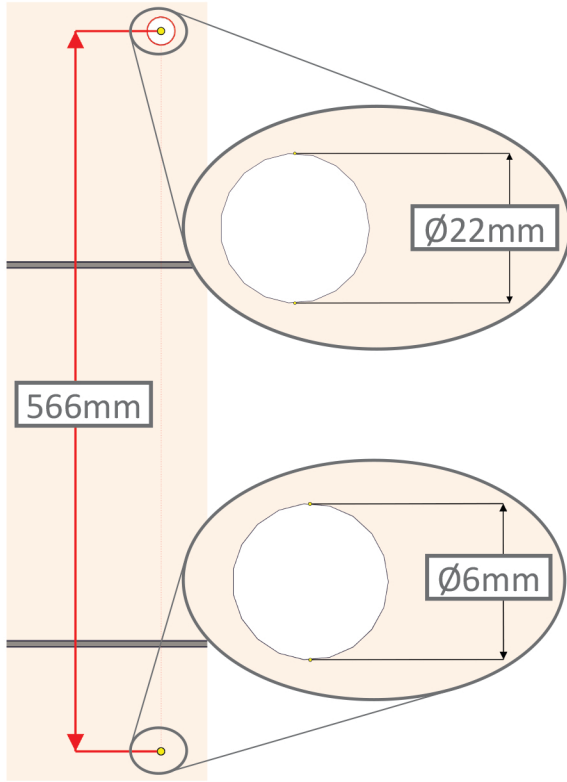

Mark two points 566mm apart vertically.


Drill a Ø22mm hole at the top point for the wall thread, and a Ø6mm hole at the bottom point for the mounting bracket.

1

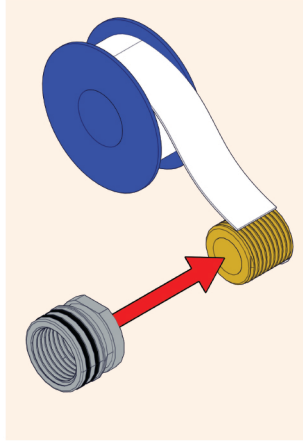


Apply Teflon Tape to the Wall Thread and attach the Shower Adaptor.

2

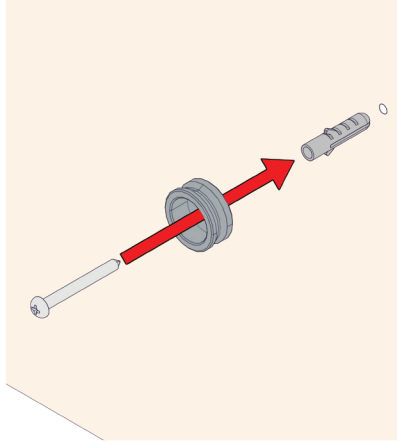

Screw Mounting Bracket into wall.


3

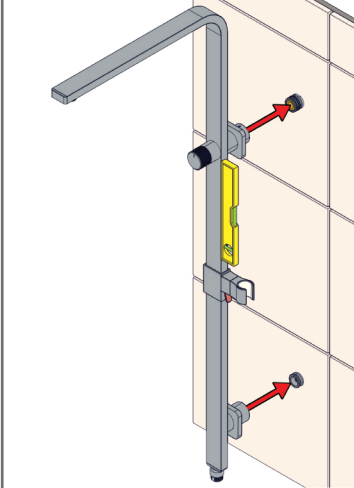


Place Shower Rail onto the Adaptor and Wall Mounting Bracket.

Ensure Rail is level.


4

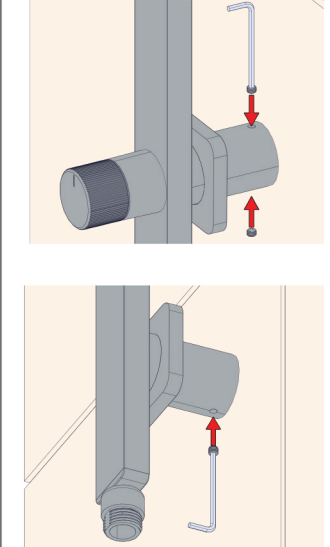


5

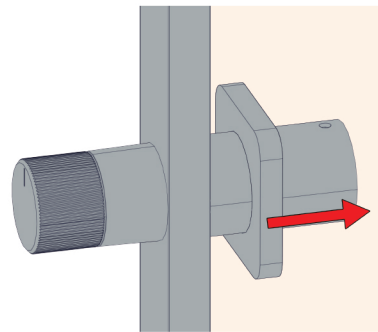


6

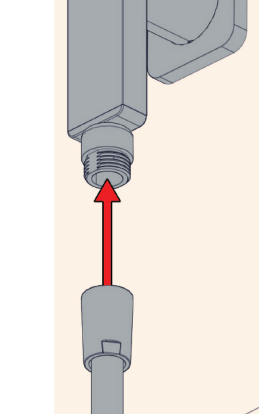

7

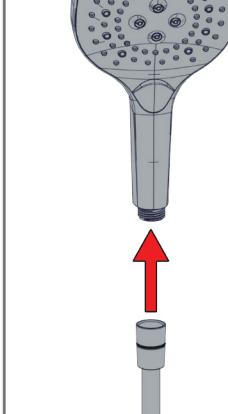

8

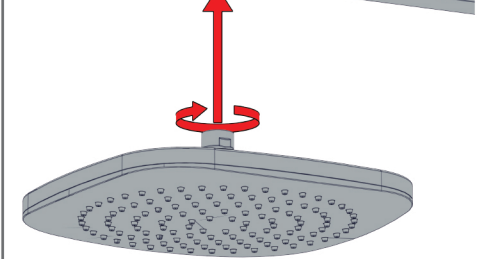

Turn on and check for leaks.



recommended
working pressure
**150-
500KPa**
maximum hot
water temperature
**75
degrees**