


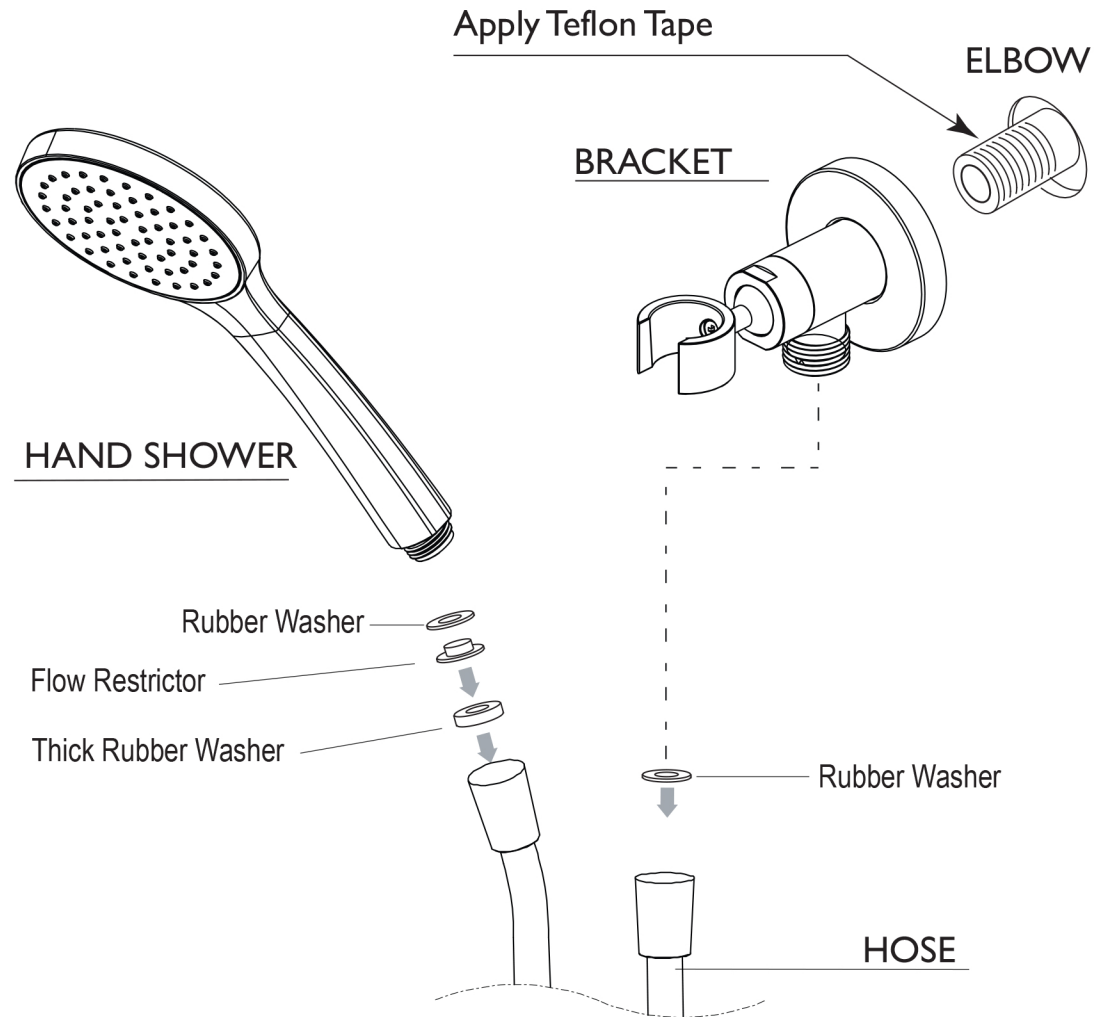

### Instruction


- Apply Teflon tape to elbow thread and screw on bracket.
- Ensure that rubber washers and flow restrictor are attached, as shown.
- Connect bracket and hand shower with hose. TEST & CHECK FOR LEAKS.



recommended  
working pressure

**150-500  
KPa**

maximum hot  
water temperature



**75  
degrees**