


1

- Apply Teflon Tape to Threaded Elbow.
- Fit Dress Plate over the Threaded Elbow.
- Firmly screw on the Shower Arm.
- Place the Flow Regulator between the two Rubber Washers, as shown.
- Firmly screw on the Shower Rose.

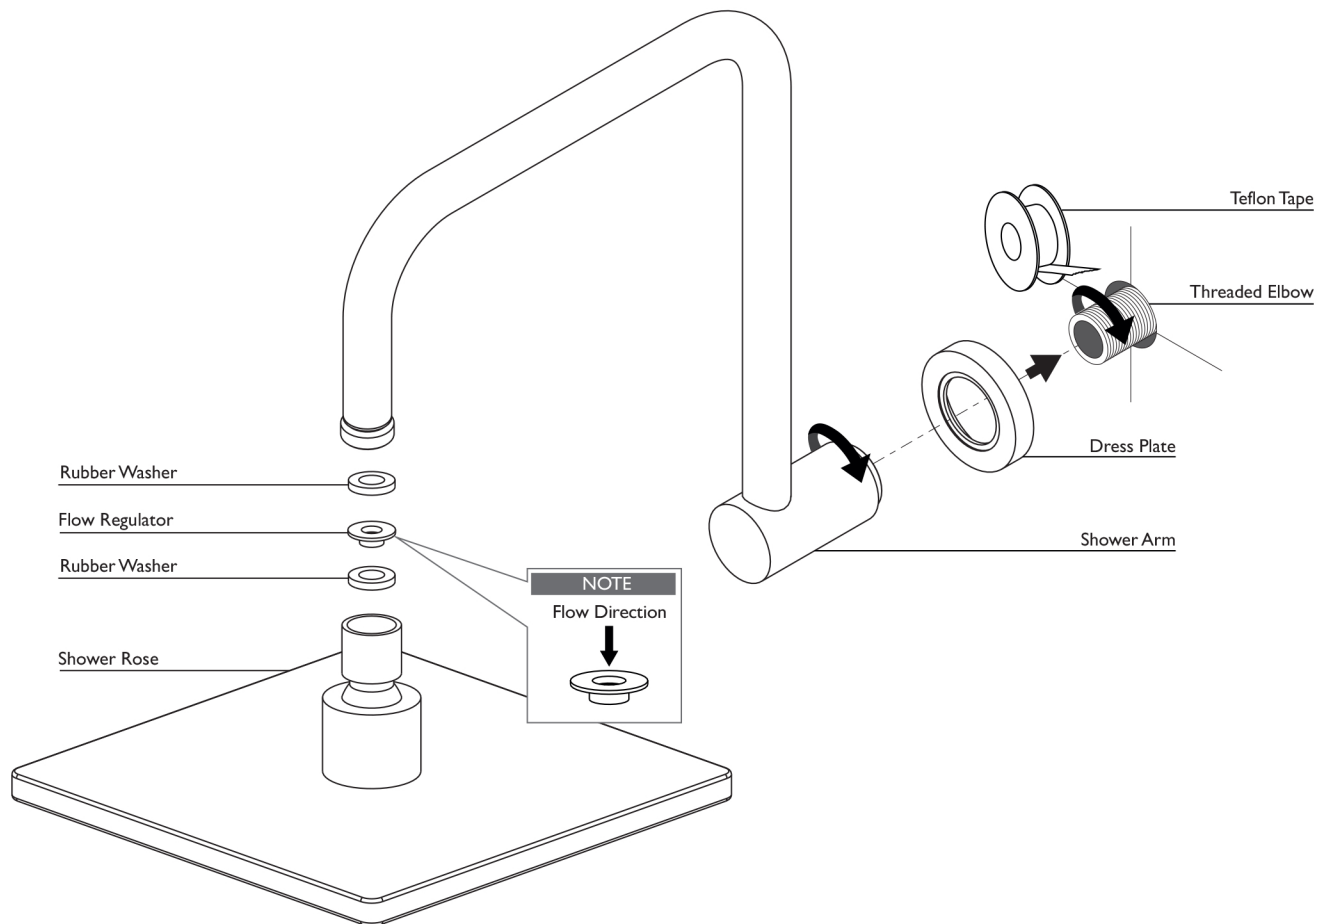

recommended  
working pressure  
**150-500  
KPa**  
maximum hot  
water temperature  
**75  
degrees**