




## MEASUREMENTS

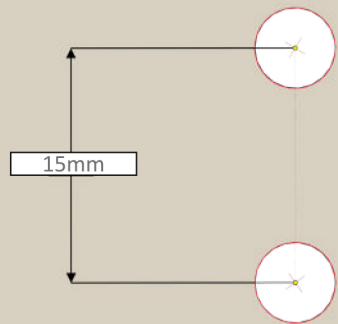

Brick

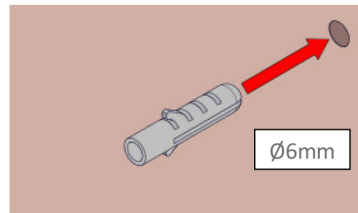


Plaster

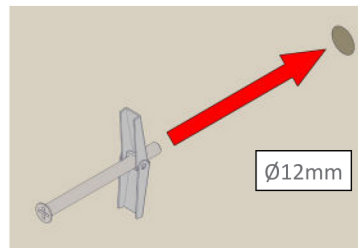


1

Fasten Mounting Bracket to wall.

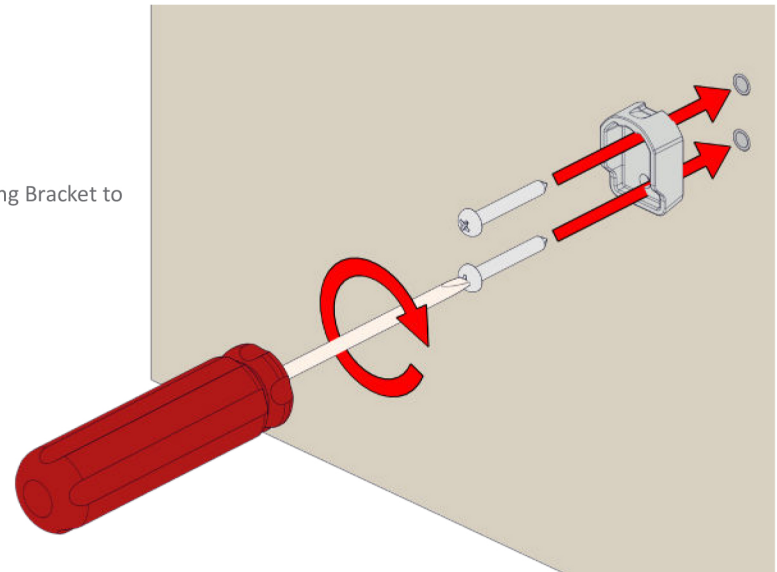

2

Insert Robe Hook onto mounting bracket.  
Fasten grub screw tightly.

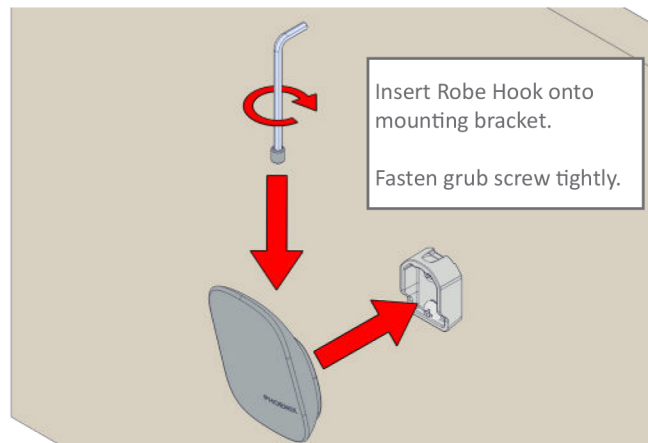

3

