


MEASUREMENTS




Allow enough space to attach both shower shelves to wall.


Brick

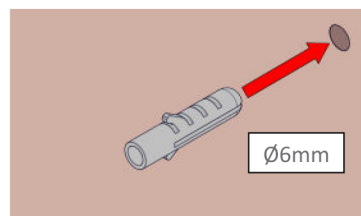

Plaster


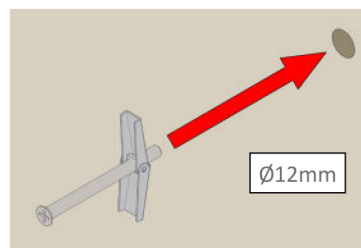


1

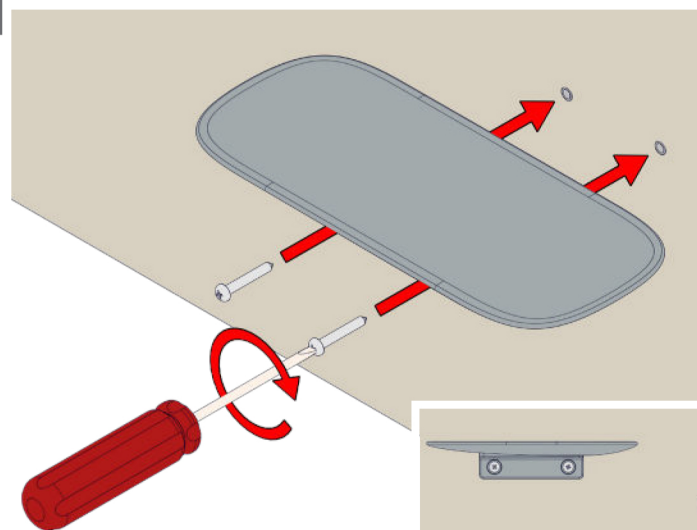


Screw both Shower Shelves into wall.

Ensure they are level once installed.

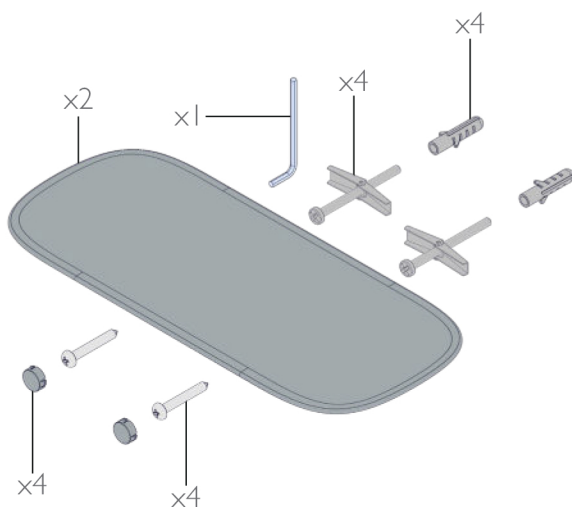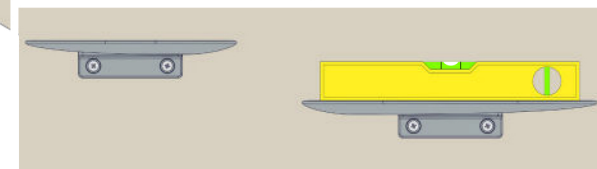

2

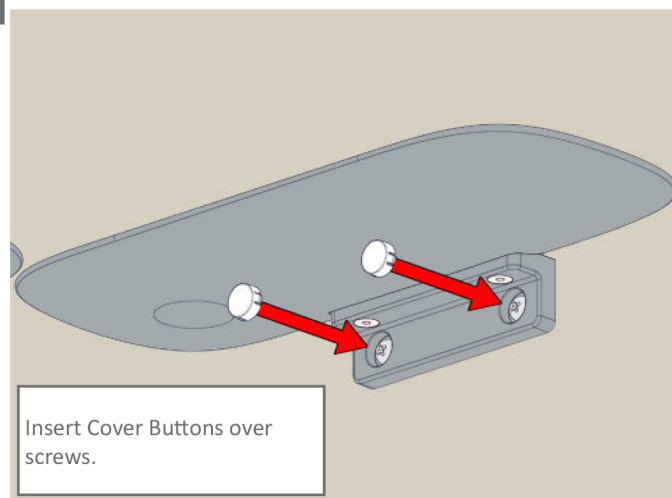

Insert Cover Buttons over screws.

3

