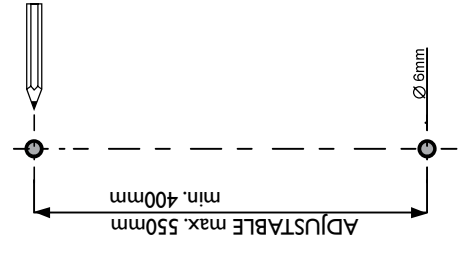
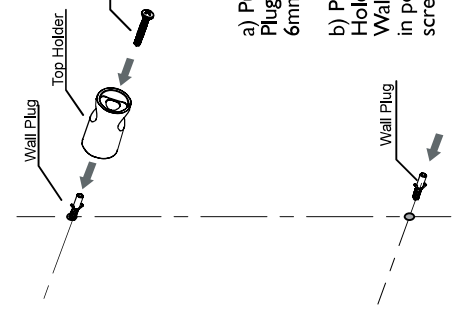
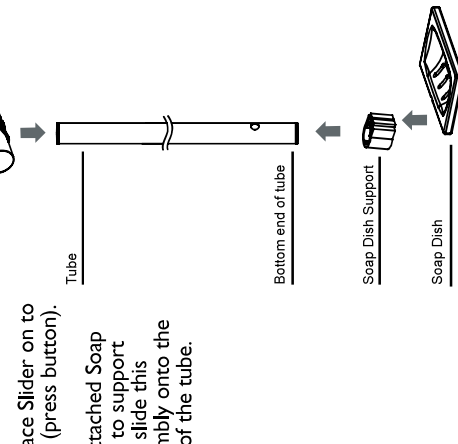
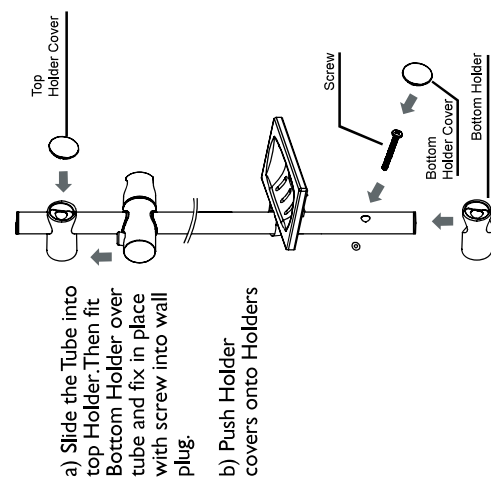
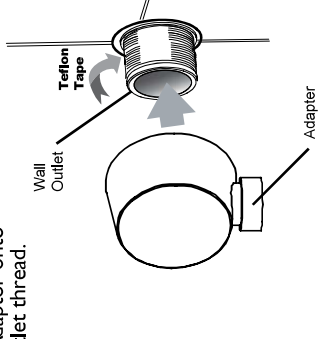
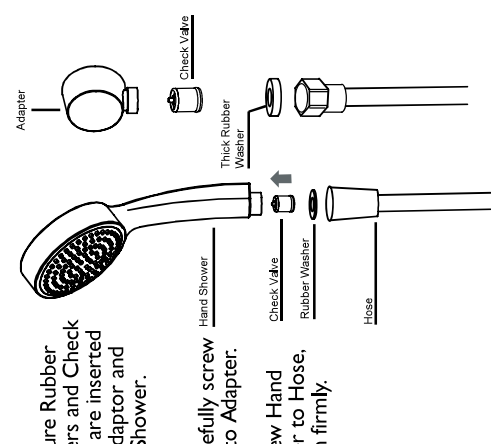
	1 a) Measure and mark desired mounting positions. b) Drill mounting holes with 6mm drill bit. 	2 a) Push both Wall Plugs into each 6mm hole. b) Place top Holder over top Wall Plug and fix in position with screw provided. 	3 a) Place Slider on to tube (press button). b) Attached Soap Dish to support then slide this assembly onto the end of the tube. 	NOTE: - If the pressure exceeds or is likely to exceed 550kpa, an approved pressure limiting device must be installed. - Flush out all pipe work prior to installation. - If the water temperature exceeds 75°C, an approved tempering valve must be fitted. - Installation should comply with Australian standard AS3500.1 or relevant local authority requirements. Showers may not be suitable for use within: • Gravity-fed water systems	recommended working pressure 150-500KPa maximum hot water temperature 75 degrees	Maintenance and Care: - Chrome plated surfaces should be cleaned with mild liquid detergent or soap and water. - Do not use cream cleaners or citrus based cleaning products, as they are abrasive. - Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty. WARRANTY: Please refer to the full warranty statement enclosed with the product before installing.	DISCLAIMER: While we aim to ensure the specifications shown are correct at the time of printing, we reserve the right to make modifications without prior notice. Always use the physical product measurements for mark-ups and roughing-in as the line drawing shown may differ from the actual product over time. *All measurements are shown in millimeters.
4 a) Slide the Tube into top Holder. Then fit Bottom Holder over tube and fix in place with screw into wall plug. b) Push Holder covers onto Holders 	5 a) Apply teflon tape to Water Outlet thread. b) Fasten Adaptor onto Water Outlet thread. 	6 a) Ensure Rubber Washers and Check Valves are inserted into Adaptor and Hand Shower. b) Carefully screw Hose to Adaptor. c) Screw Hand Shower to Hose, tighten firmly. 	7 a) Attach Hand Shower to Hose. b) Attach Soap Dish to Support. c) Attach Soap Dish to Support. 