



► Illustration for Drilling

- 1 Drill 12 holes with \varnothing of 2.5mm each side.

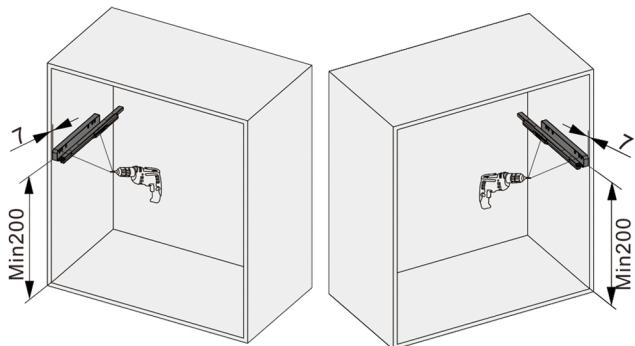


► Slider Installation


- 2 Affix the left and right sliders using 12pcs of screws.

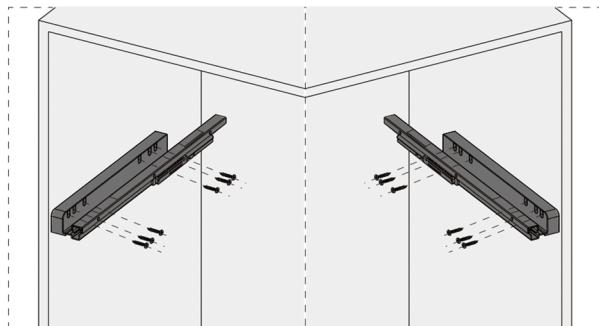

Drilling size (Left)


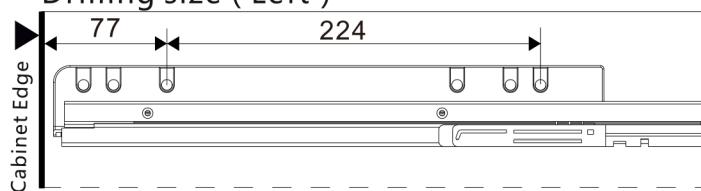


Drilling size (Right)

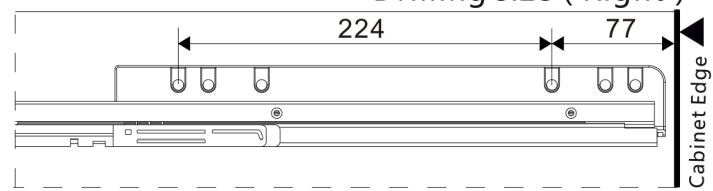

► Frame Assembly

- 3 Hold the frame at the illustrated angle (3.1) and push to the sliders (3.2).

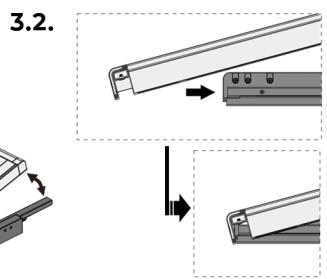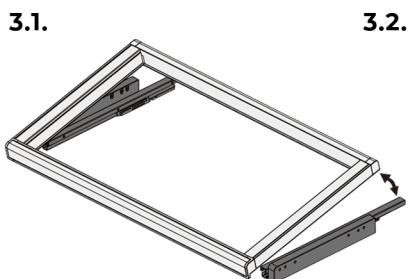

► Tray Assembly

- 4 Place the storage tray inside the frame.

