

## Laptop Desk


## **INSTALLATION INSTRUCTIONS**

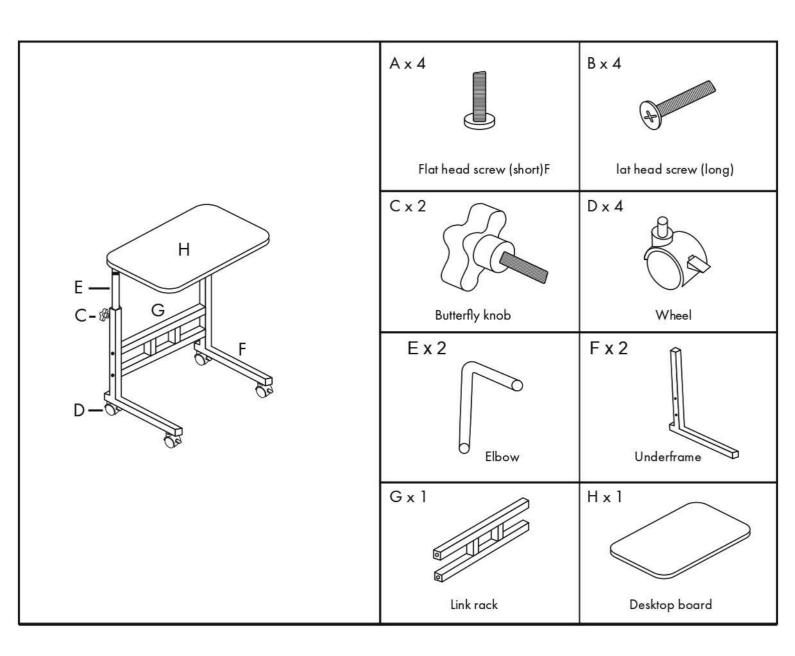

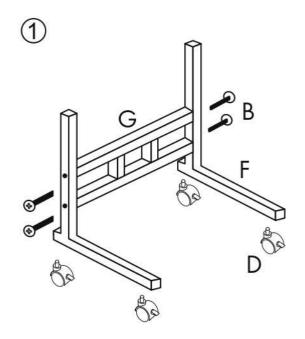


Please use B - the flat headed screw (long) to combine G - the link rack and F- the underframe.

Attach D - the wheels.

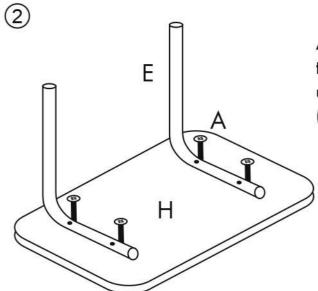

Align E - the elbows on H the desktop board and install using A - the flat head screw (short).

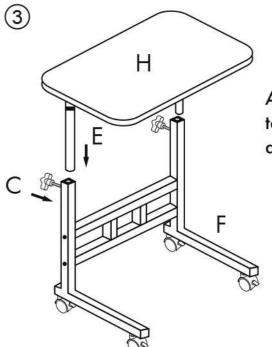

Attach the assembled part 2 to part 1 at the desired height and tighten the butterfly knobs.