


















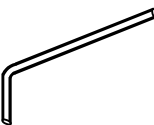











PARTS LIST
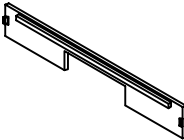
<b>A</b> HEADBOARD (1 PC) 	<b>B</b> FOOTBOARD (1 PC) 	<b>C</b> SIDE RAIL (2 PCS) 	<b>D</b> CENTRAL RAIL (1 PC) 1880mm 	<b>E</b> SIDE RAIL (4PCS) SUPPORT 268 x 60 x 15mm 	<b>F</b> LEGS (4 PCS) Wooden Leg 70 x 70 x 50(H) 
<b>G</b> FOOTBOARD (1 PC) FRONT PANEL ( WITH LABEL 1) 	<b>H</b> FOOTBOARD (1 PC) BACK PANEL ( WITH LABEL 2) 	<b>I</b> FOOTBOARD & SIDE RAIL SIDE PANEL (6 PCS) ( WITH LABEL 3) 	<b>J</b> FOOTBOARD (1 PC) BOTTOM PANEL ( WITH LABEL 4) 	<b>K</b> SIDE RAIL (2 PCS) FRONT PANEL ( WITH LABEL 5) 	<b>L</b> SIDE RAIL (2 PCS) BACK PANEL ( WITH LABEL 6) 
<b>M</b> SIDE RAIL (2 PCS) BOTTOM PANEL ( WITH LABEL 7) 	<b>N</b> BOTTOM PANEL (7 PCS) BIG SUPPORT ( WITH LABEL 8) 	<b>O</b> BOTTOM PANEL (4 PCS) SMALL SUPPORT ( WITH LABEL 9) 	<b>P</b> SLAT (13 PCS) 1477mm 		


HARDWARE LIST

<b>1</b> JCBC M6 x 20 mm (4pcs) 	<b>2</b> JCBB M8 x 20 mm (8pcs) 	<b>3</b> ALLEN KEY M4 X 65mm (1 PC) 	<b>4</b> ALLEN KEY M5 X 70mm (1 PC) 	<b>5</b> CSK M3.5 x 16mm (56 PCS) 
<b>6</b> CSK M4 x 28mm (12 PCS) 	<b>7</b> CSK M4 x 32mm (62 PCS) 	<b>8</b> CSK M4 x 50mm (32 PCS) 	<b>9</b> ROLLER (14 PCS) 	<b>10</b> WOOD DOWEL 20MM (8 PCS) 
<b>11</b> Power Nail 6/8 (24 PCS) 	<b>12</b> Metal Stopper (6 PCS) 			


Step 1 : Tighten the legs (F) to both headboard (A) and footboard (B) as shown. Predrilled holes not required.

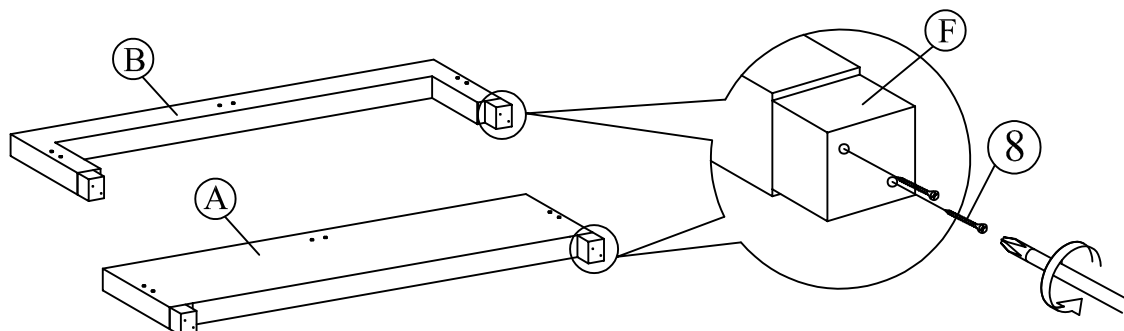


Step 2 : Attach wood dowel (10) to side rail (C). Tighten the side rail support (E) to the side rail (C) with screws (6) using screw driver (not included).

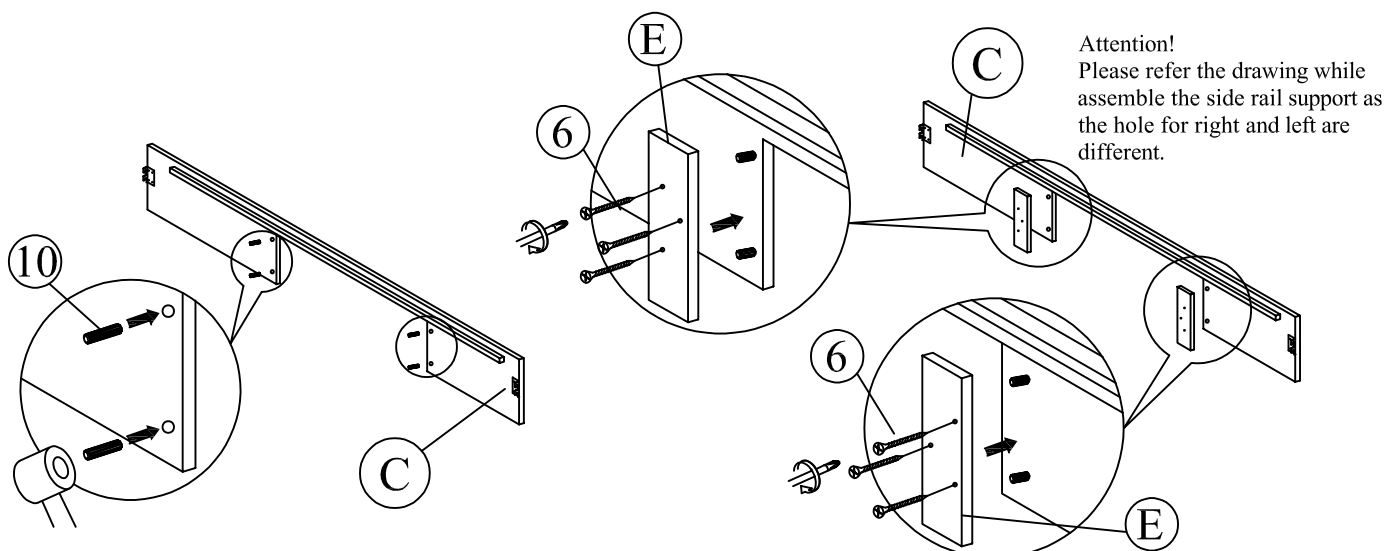


Step 3 : Attach side rail (C) to headboard (A) and footboard (B) by pushing the bracket down to fit it.

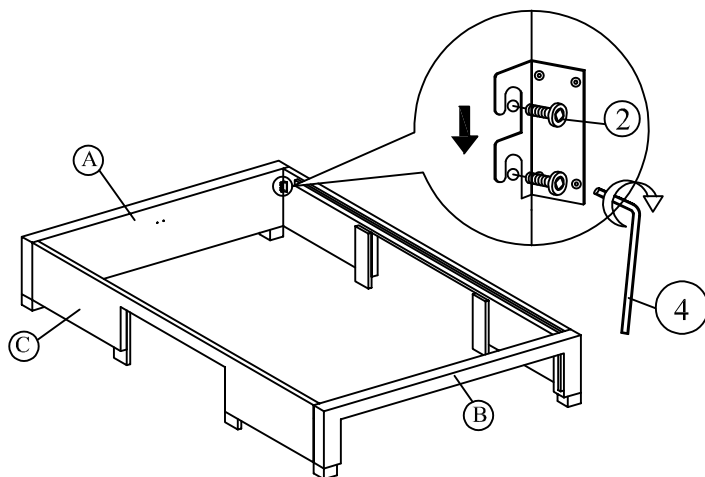


Step 4 : Slide the center rail (D) to the headboard (A) and footboard (B). Attach JCBC (1) to the headboard (A) and footboard (B).

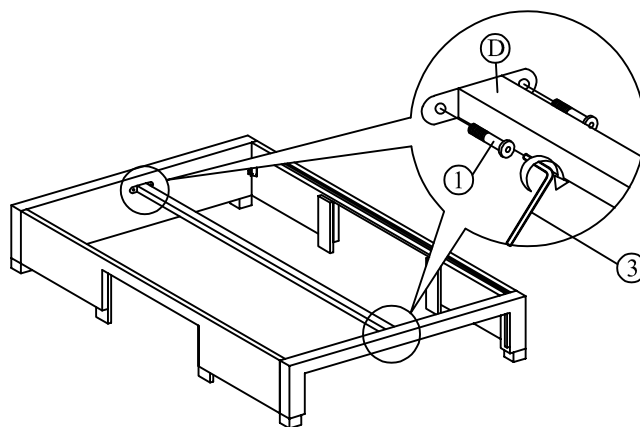

Step 5 : Tighten the footboard side panel (I) to the footboard front panel (G) and footboard back panel (H) with screws (8) using screw driver (not included).

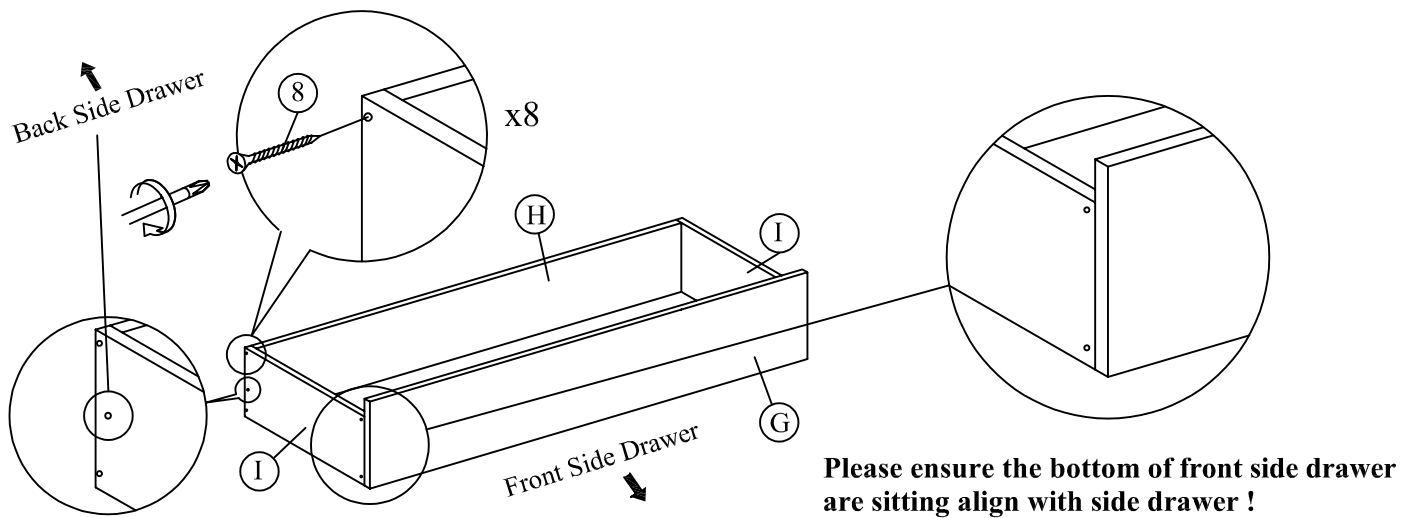


Step 6 : Slide the footboard bottom panel (J) to the set up drawer.

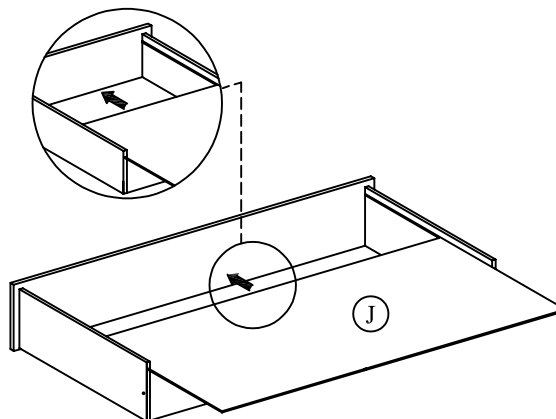


Back view

Step 7 : Tighten the bottom panel support (N&O) with screws (7) using screw driver (not included). Attach the bottom panel with Nail (11) using the hammer (not included).

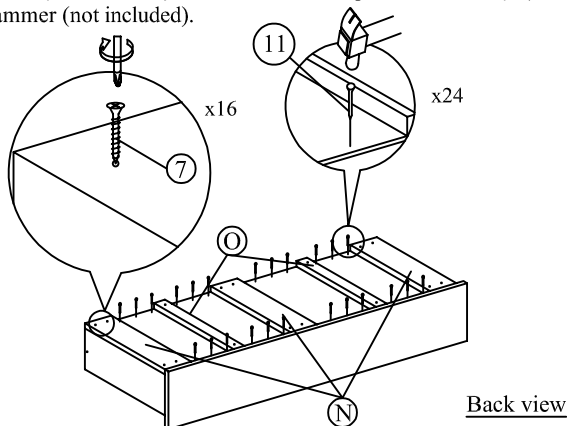


Back view

Step 8 : Tighten the roller (9) with screws (5) using screw driver (not included).

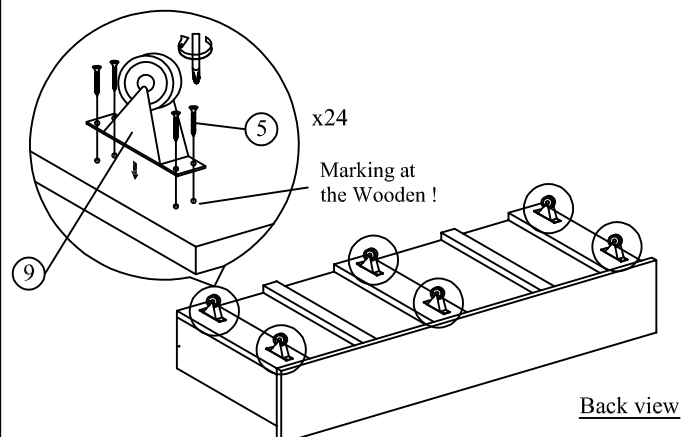


Back view


Step 9 : Tighten the side rail side panel (I) to the side rail front panel (K) and side rail back panel (L) with screws (8) using screw driver (not included).

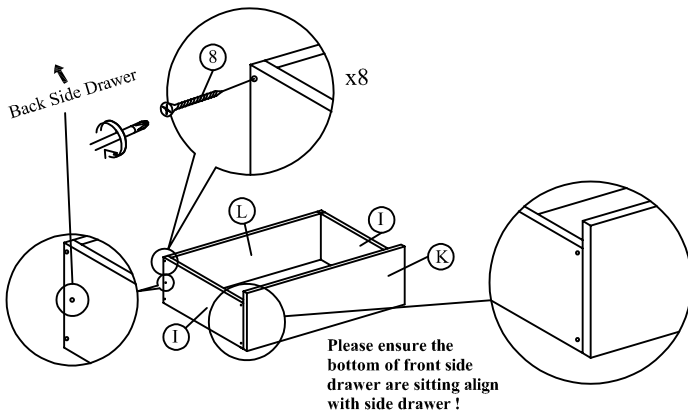


Step 10: Slide the side rail bottom panel (M) to the set up drawer.

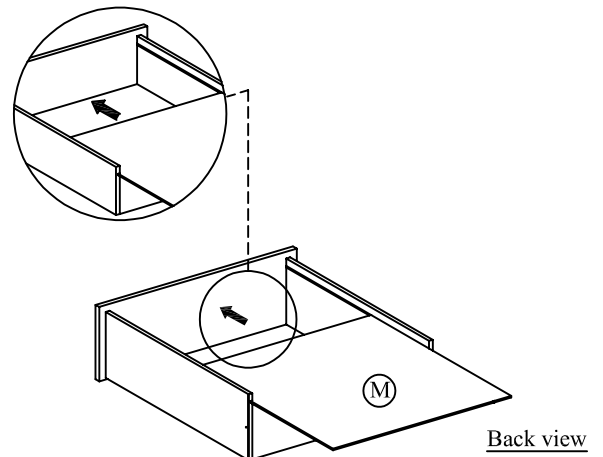


Step 11 : Tighten the bottom panel support (N & O) with screws (7) using screw driver (not included) .

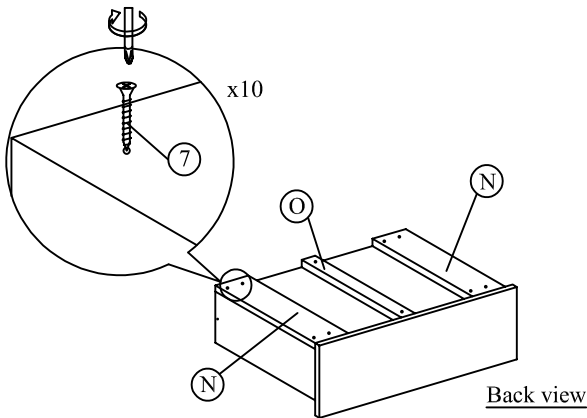

Step 12 : Tighten the roller (9) with screws (5) using screw driver (not included).

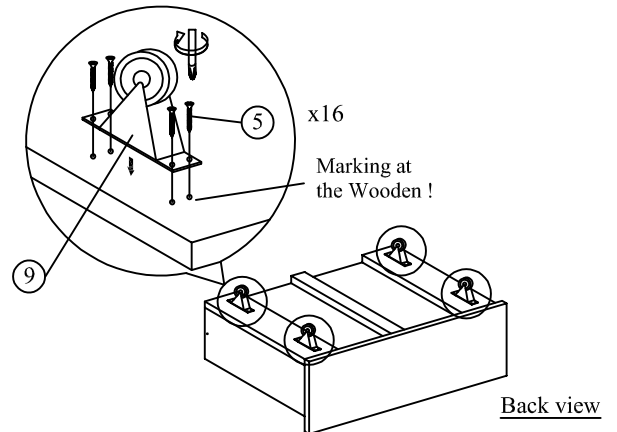

Step 13 : Affix the Slat (P) to the side rail support wood and the center rail (D). Tighten all the 4 corner .

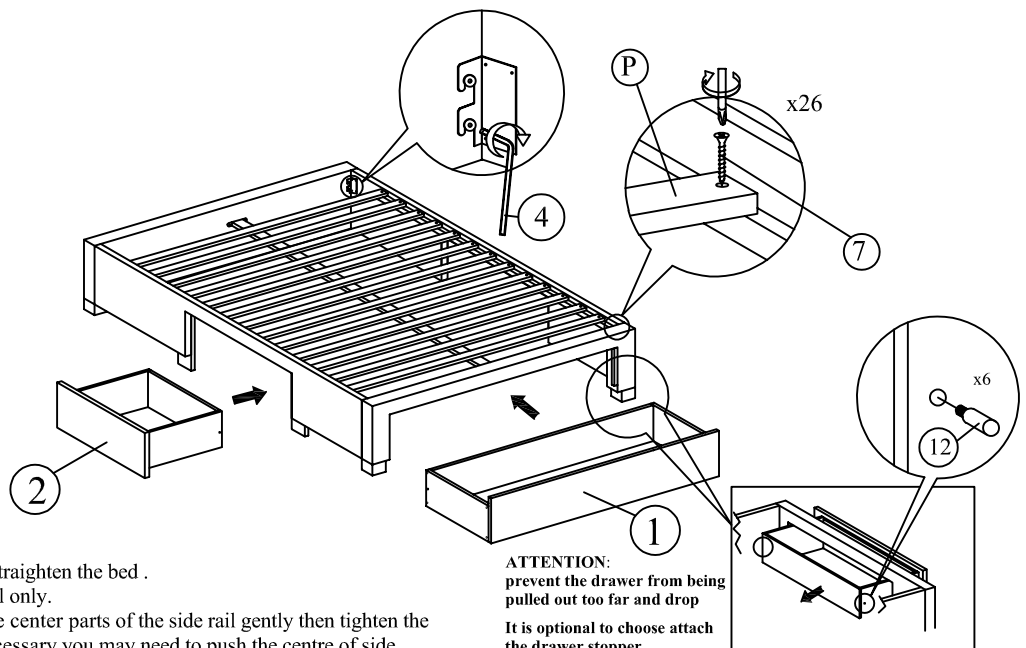

**Remark**

- A) Please lift up the foot end gently to straighten the bed .
- B) Tighten screws on one side of side rail only.
- C) Side rail is flexible please push on the center parts of the side rail gently then tighten the screw on side rail immediately. If necessary you may need to push the centre of side rail and pull the slat gently toward you all at the same time which will close the gap .
- D) Tighten all the screw.