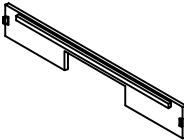
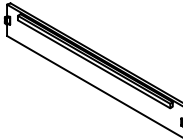











PARTS LIST

A HEADBOARD (1 PC) 	B FOOTBOARD (1 PC) 	C SIDE RAIL (1 PC) 	D SIDE RAIL (1 PC) 	E SIDE RAIL SUPPORT (2PCS) 268 x 65 x 15mm 	F LEGS (4 PCS) 70 x 70 x 50(H) 
G FRONT PANEL (2 PCS) (WITH LABEL 1) 	H BACK PANEL (2 PCS) (WITH LABEL 2) 	I SIDE PANEL (4 PCS) (WITH LABEL 3) 	J BOTTOM PANEL (2 PCS) (WITH LABEL 4) 	K BOTTOM PANEL (4 PCS) BIG SUPPORT (WITH LABEL 5) 	L BOTTOM PANEL (2 PCS) SMALL SUPPORT (WITH LABEL 6) 
M SLAT (13 PCS) 1017mm 					


HARDWARE LIST

1 JCB M8 x 20 mm (8 PCS) 	2 ALLEN KEY M5 X 70mm (1 PC) 	3 CSK M3.5 x 16mm (32 PCS) 	4 CSK M4 x 28mm (6 PCS) 	5 CSK M4 x 32mm (46 PCS) 
6 CSK M4 x 50mm (24 PCS) 	7 ROLLER (8 PCS) 	8 WOOD DOWEL 20MM (4 PCS) 	9 METAL STOPPER (4 PCS) 	


Step 1 : Tighten the legs (F) to both headboard (A) and footboard (B) as shown. Predrilled holes not required.

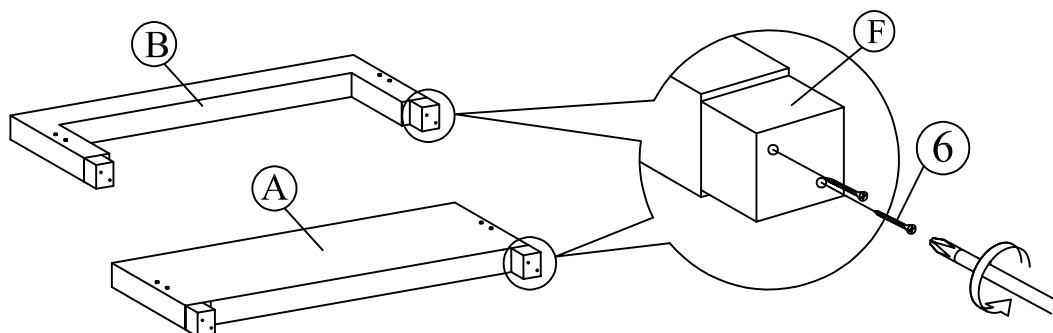


Step 2 : Attach wood dowel (8) to side rail (C). Tighten the side rail support (E) to the side rail (C) with screws (4) using screw driver (not included).

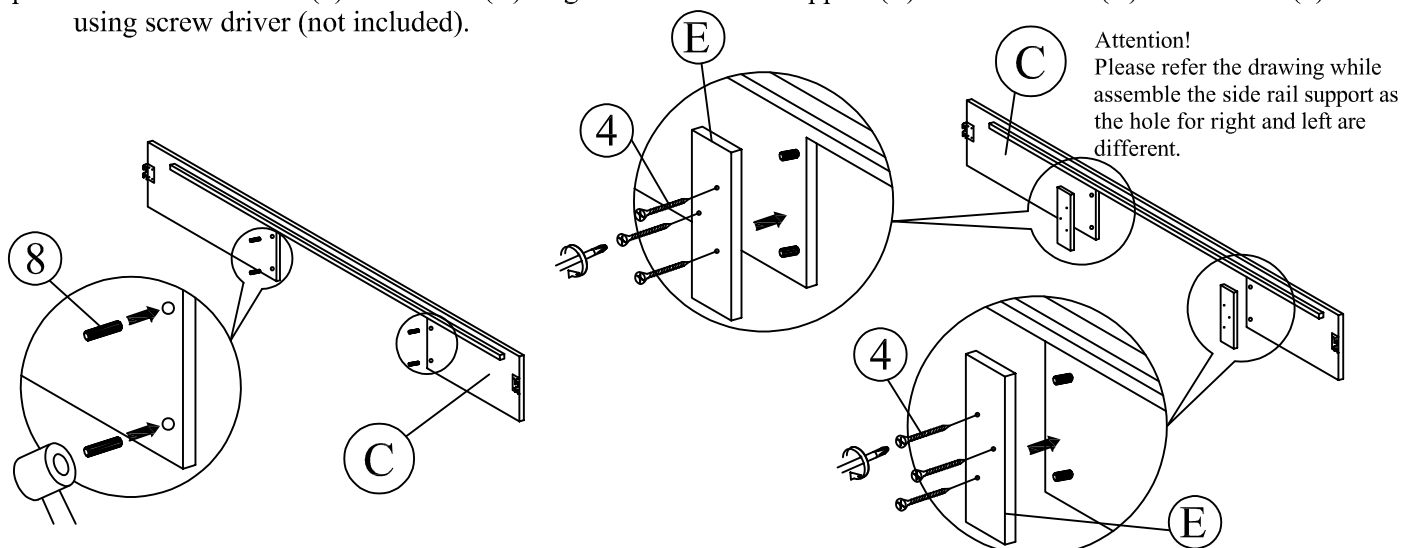


Step 3 : Attach side rail (C+D) to headboard (A) and footboard (B) by pushing the bracket down to fit it. Please note that side rail are interchangeable either assembly at left or right side.

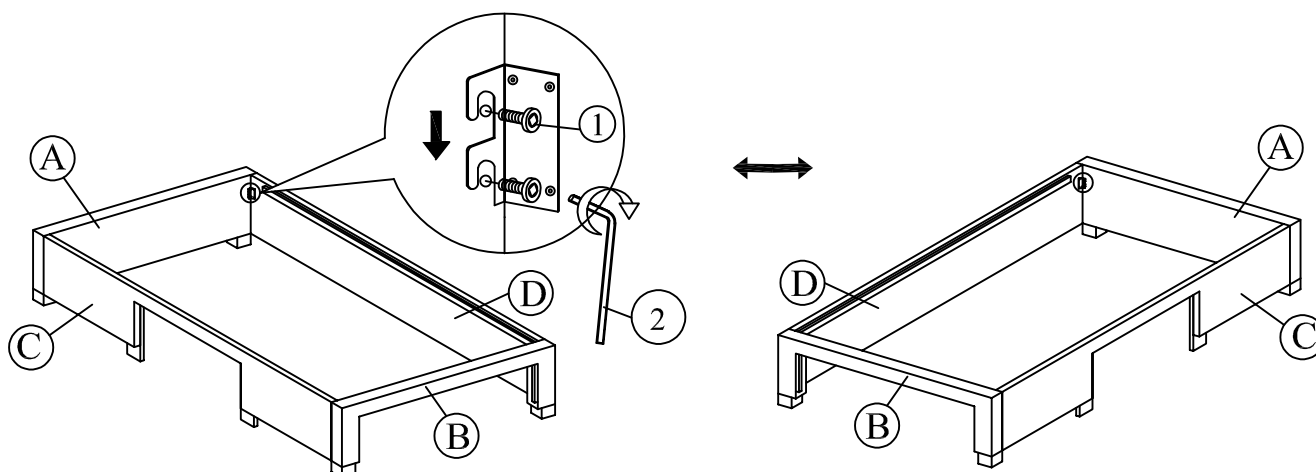


Step 4 : Tighten the side panel (I) to the front panel (G) and back panel (H) with screws (6) using screw driver (not included).

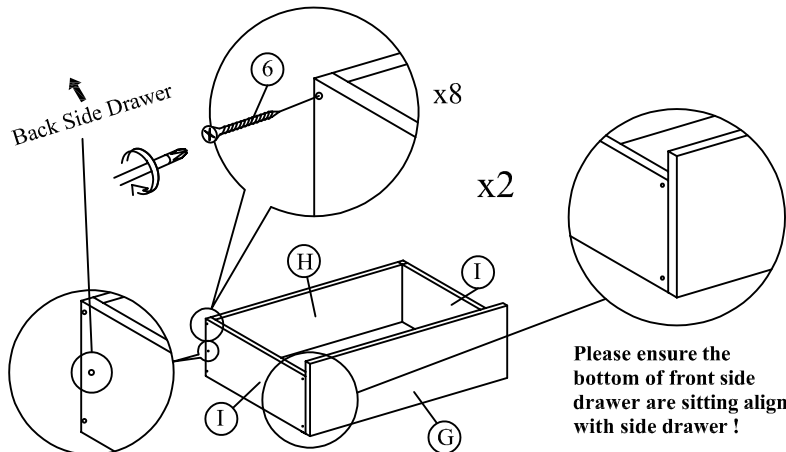


Step 5 : Slide the bottom panel (J) to the set up drawer.

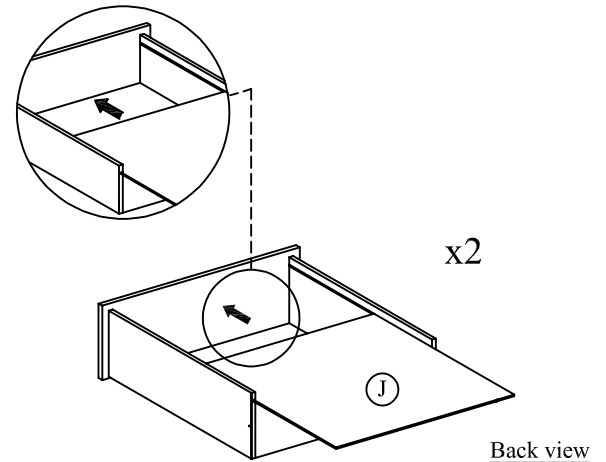


Step 6 : Tighten the bottom panel support (K & L) with screws (5) using screw driver (not included).

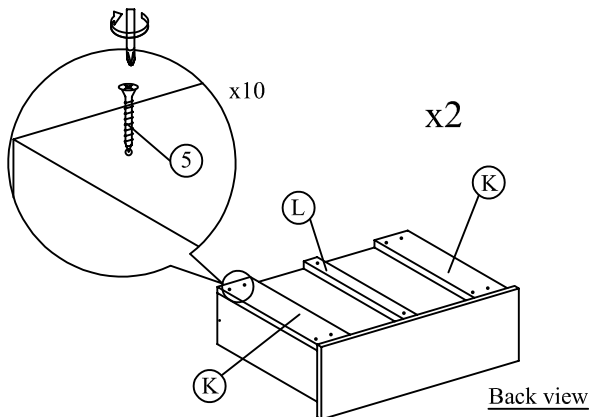

Step 7 : Tighten the roller (7) with screws (3) using screw driver (not included).

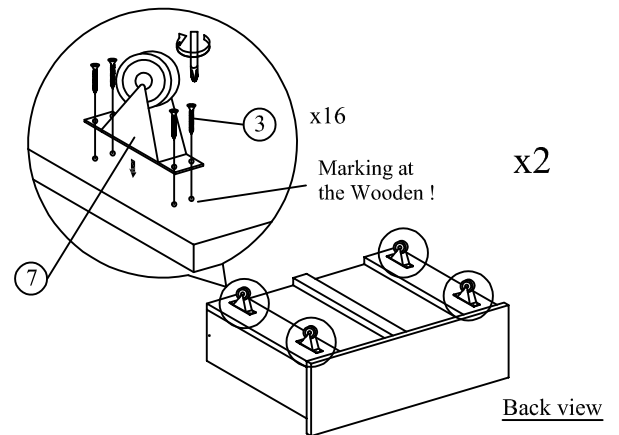

Step 8 : Affix the Slat (M) to the side rail support wood. Tighten all the 4 corner.

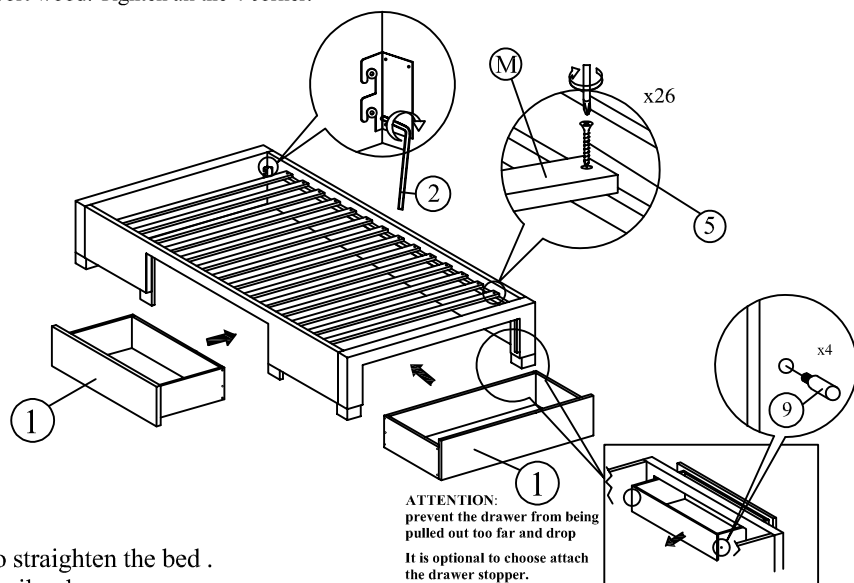

Remark

- Please lift up the foot end gently to straighten the bed .
- Tighten screws on one side of side rail only.
- Side rail is flexible please push on the center parts of the side rail gently then tighten the screw on side rail immediately. If necessary you may need to push the centre of side rail and pull the slat gently toward you all at the same time which will close the gap .
- Tighten all the screw.