



FN-ARC-DP
Assembly Video

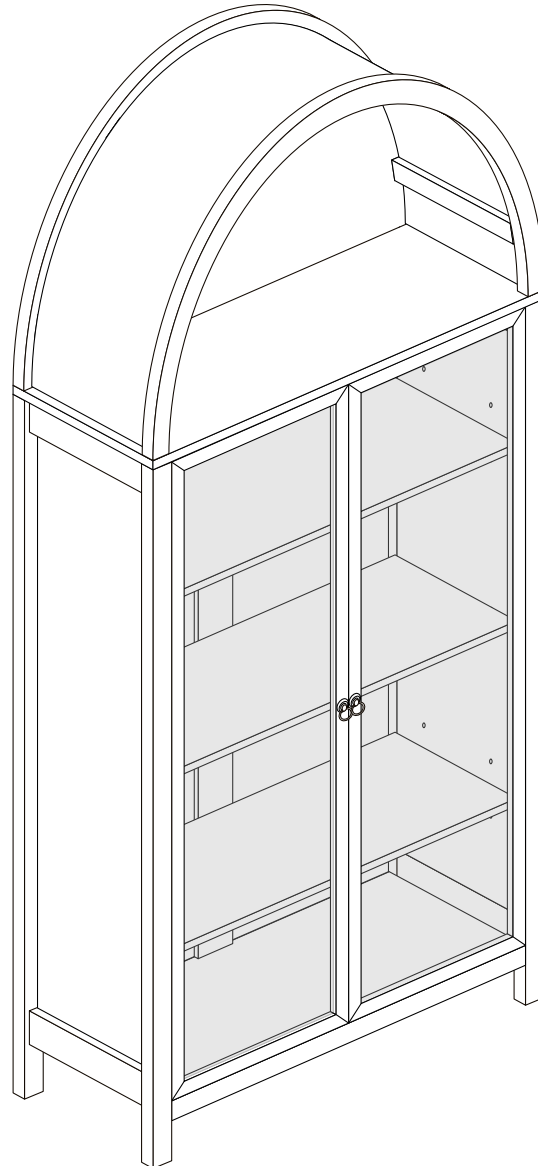

Before installation, please be sure to watch the assembly video. If the video cannot be viewed after scanning the QR code, please contact our customer service for assistance.



⚠ WARNING


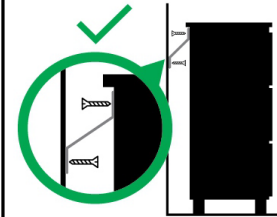



Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture




 Ax24	 Bx24	 Cx19	 Dx7	 Ex6	 Fx24	 Gx8
 Hx2	 Ix1	 Jx2	 Kx2	 Lx2	 Mx2	 Nx2
 Ox8	 Px8	 Qx4	 Rx12			

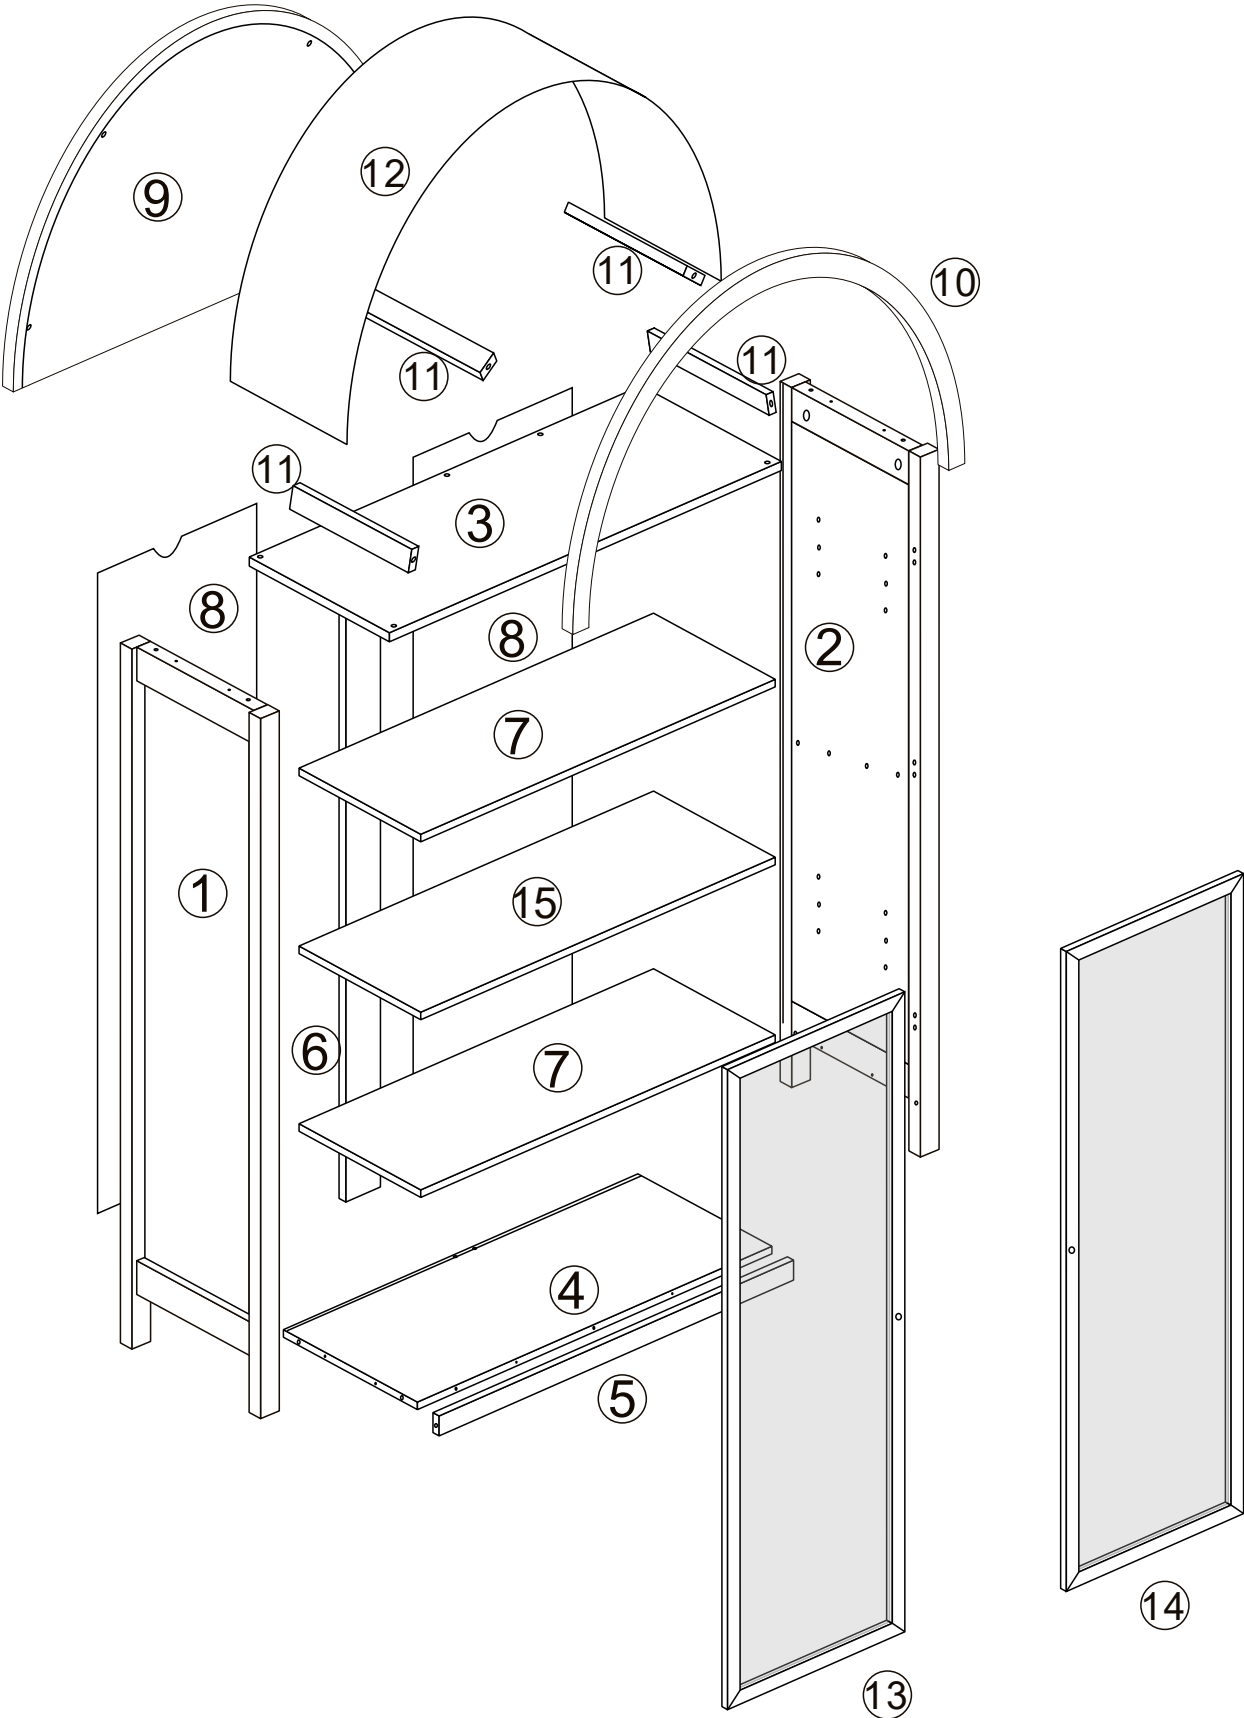


1

Fix parts K with screws L.

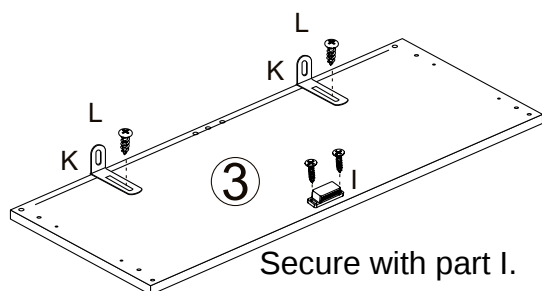


2

Place the components in the position as shown in the figure, and the fix it with A, B screws.

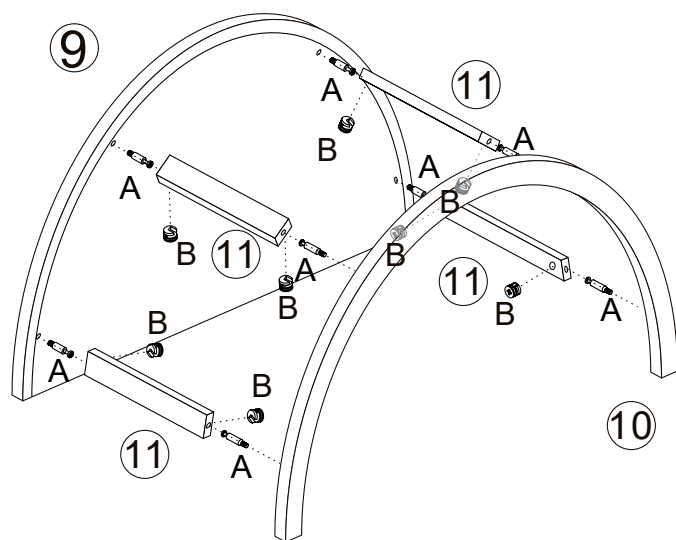


3

Insert parts 12 into the frame which completed in step 2.

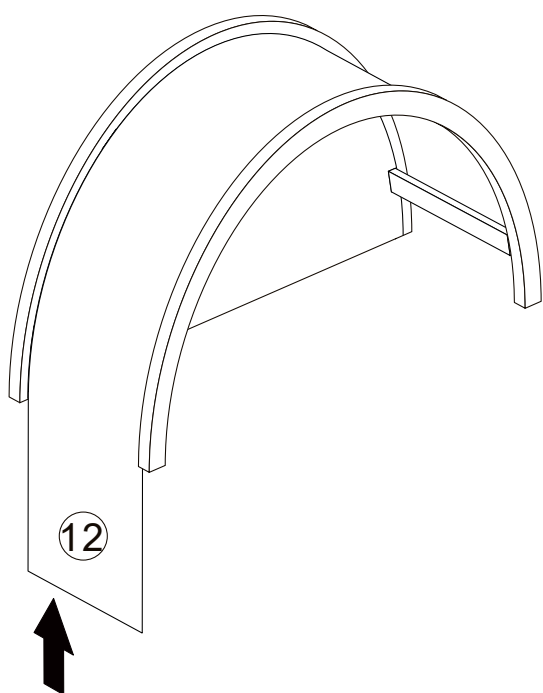


4

Secure the connection with C,D screws,

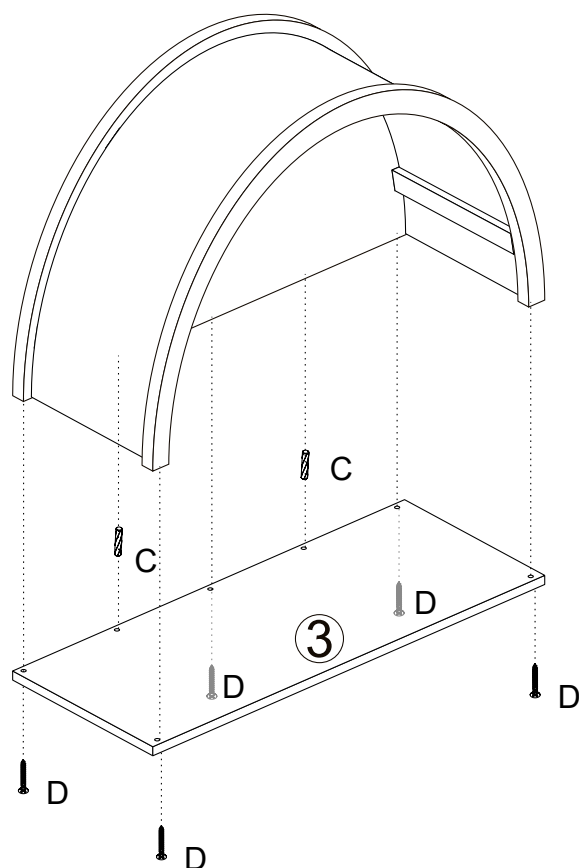


5

Install the screws in the correct position.

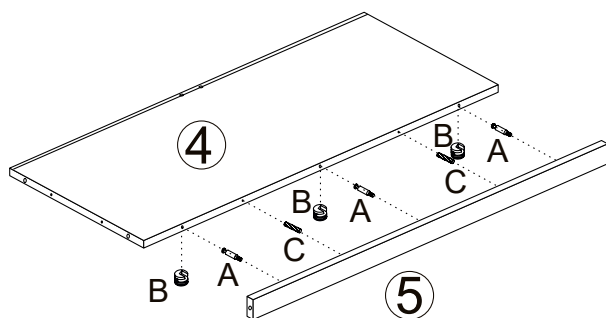


6

Secure the connection with D screws.

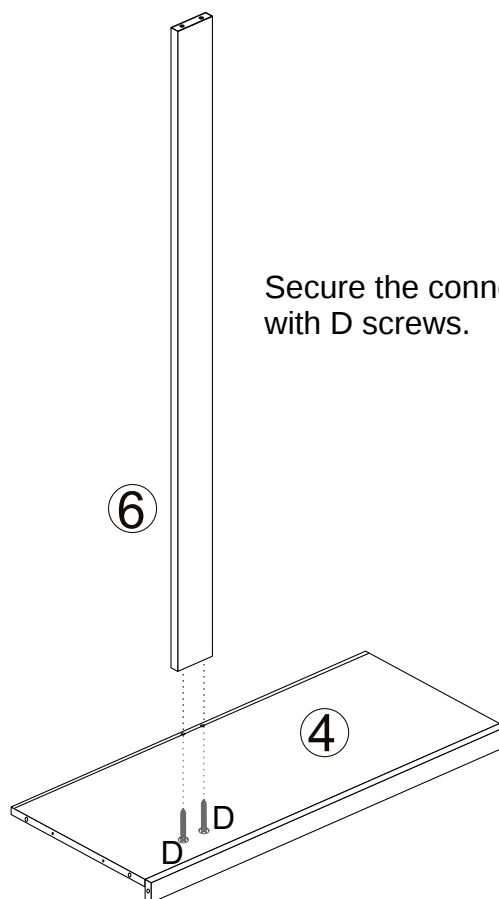


7

Fix the componet with screws A,B,C.Make sure each screws is in the right position.

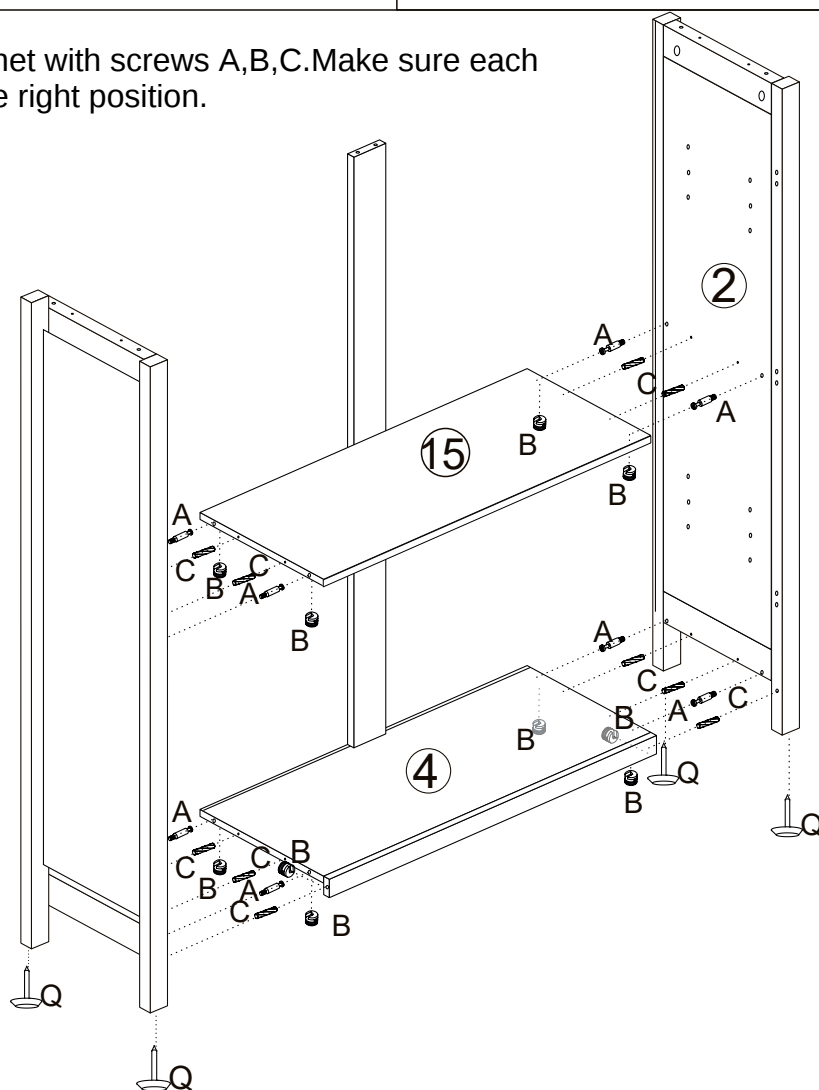


8

Embed part 8 into the fram which completed in step 7.

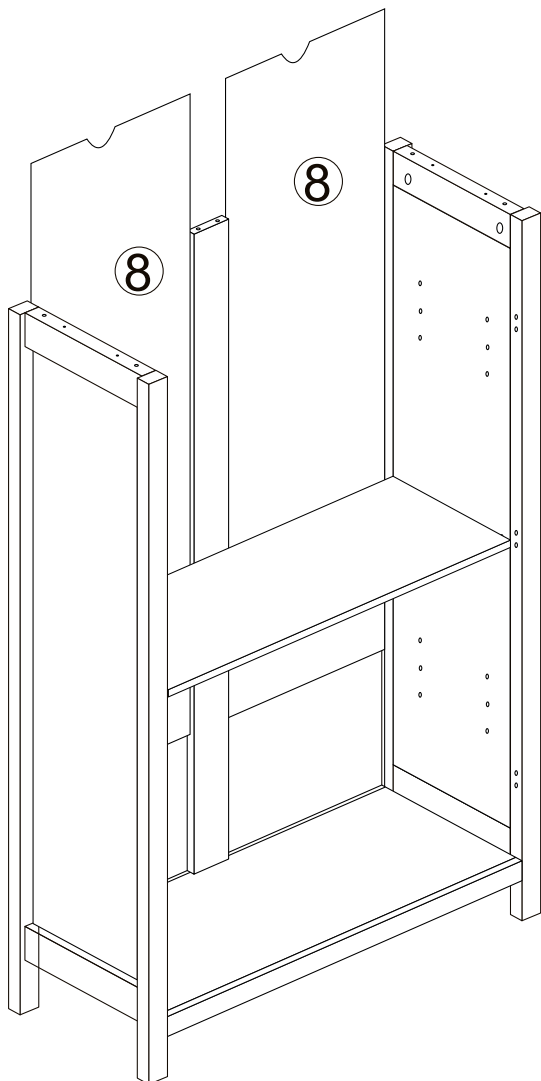




9

Connect the componet with screws A,B,C .Make sure each screws is in the right position.

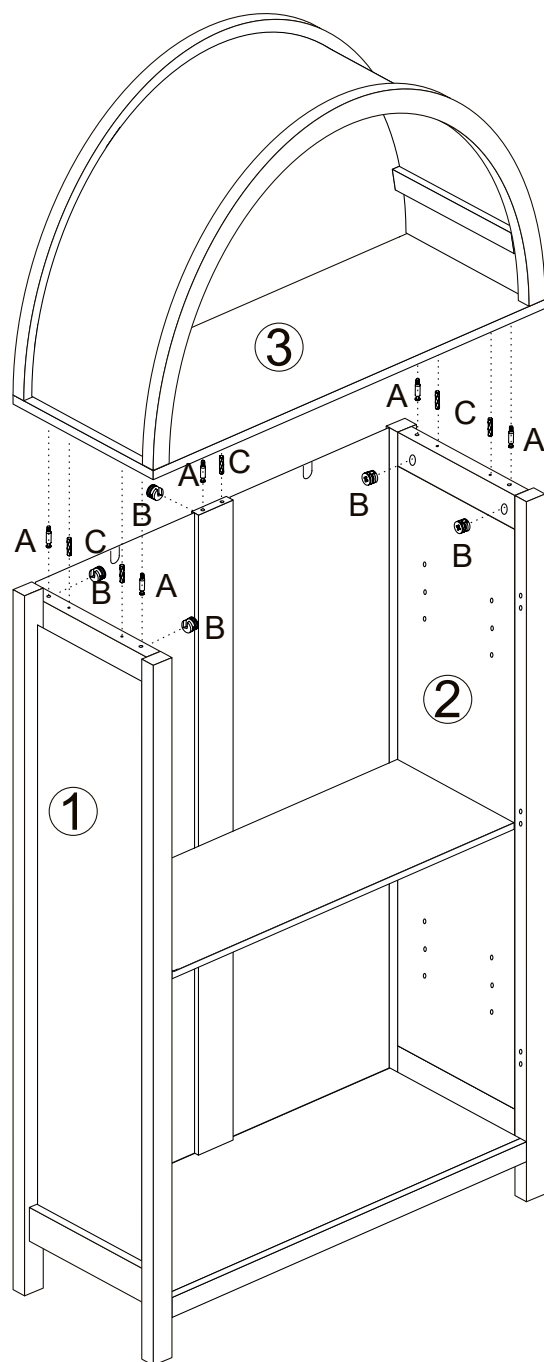



10

Install parts G at the desired hole position height, then place the partition in the cabinet.

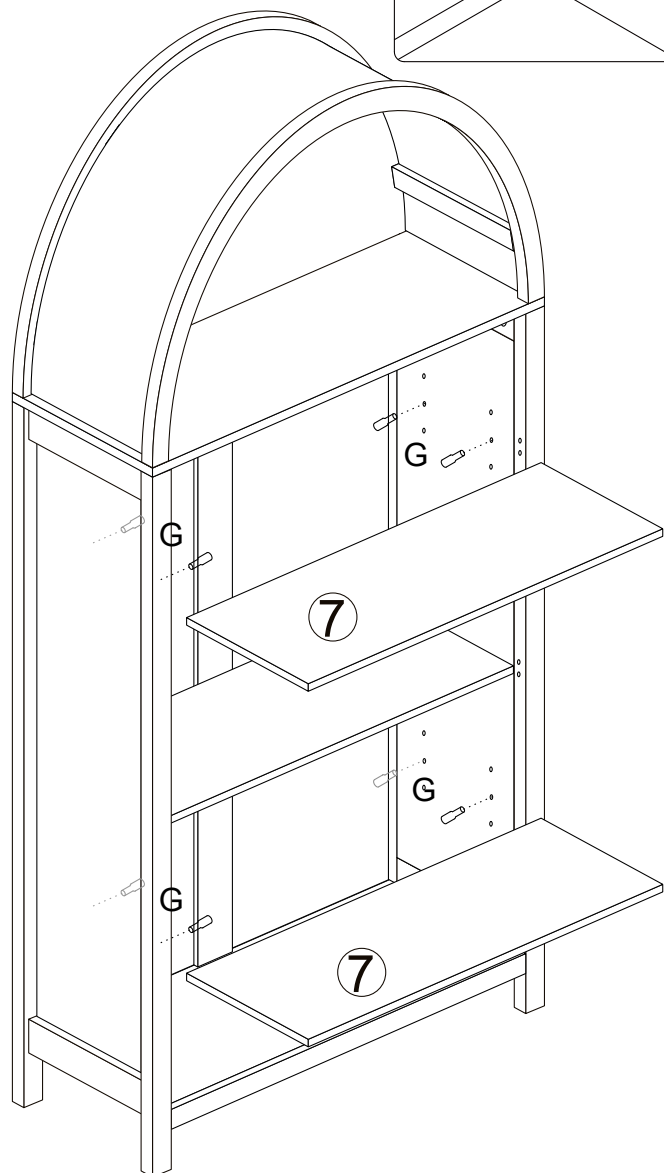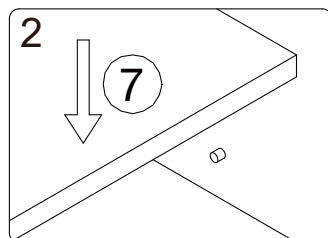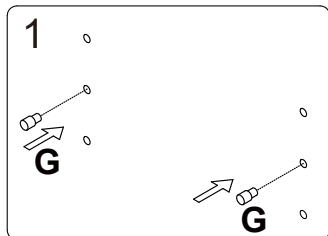


11

Install the hinge in the right direction, then secure with F screws.

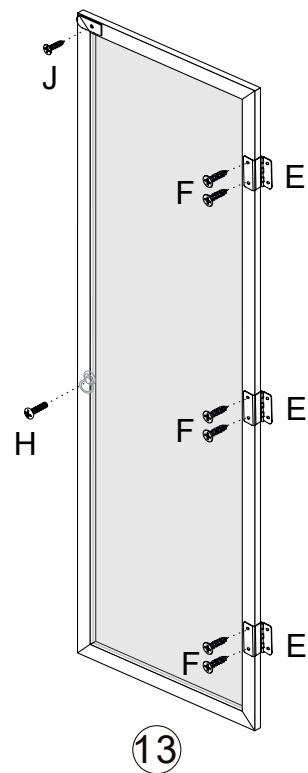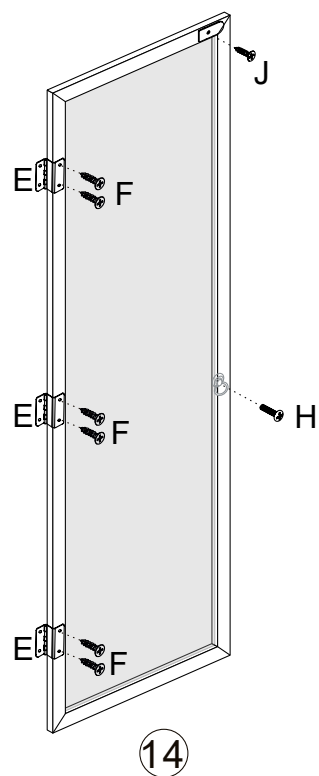


12

Place part Q in the position as shown in the figure, and then fix it with P screws.

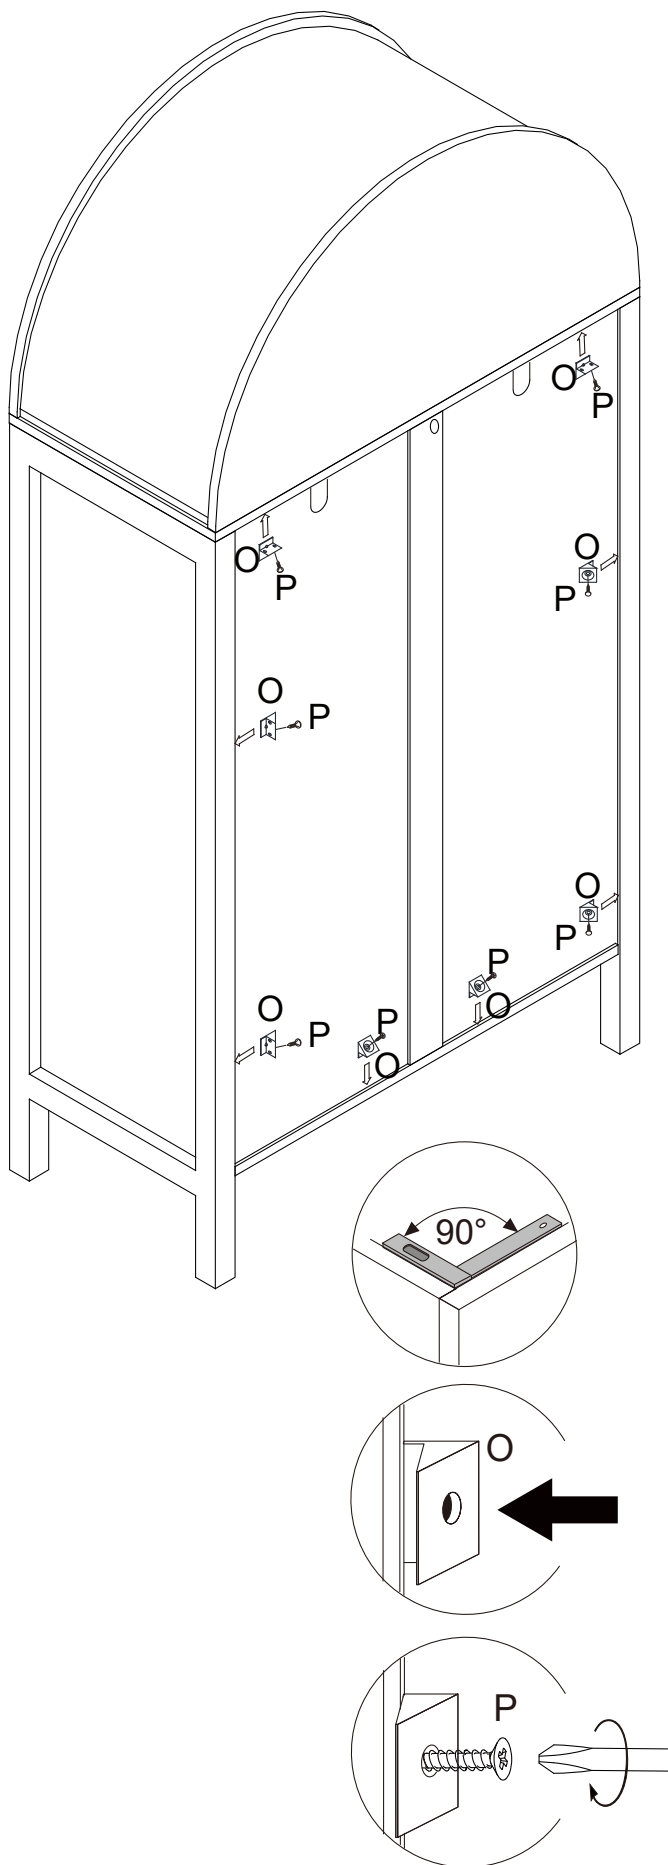

13

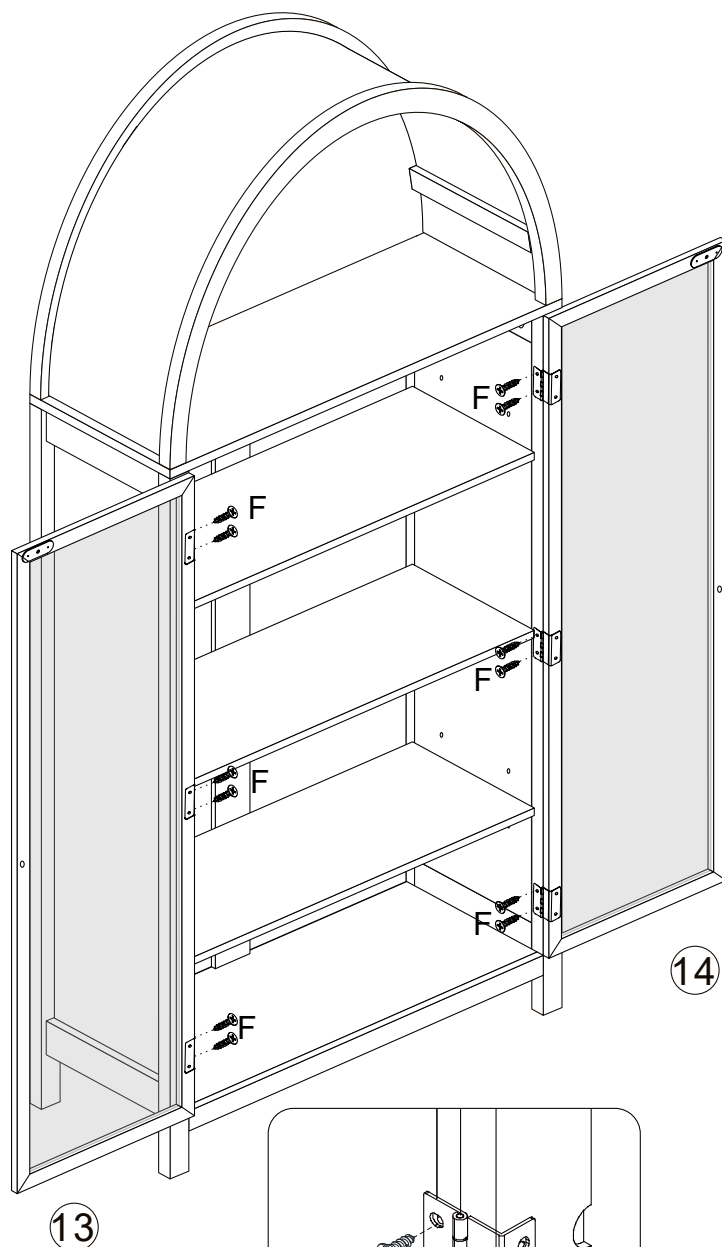

Install the door panel in the correct direction, then fasten with F screws.

Fasten with M,N screws

