



WINFIELD SIDELIFT OTTOMAN QUEEN BED IS FOR DOMESTIC USE AND STRICTLY NOT FOR CONTRACT USE.


PLEASE ASSEMBLE THE BED BY TWO PERSONS.


PART LIST									
HARDLabelABDEFGH	Picture Constraints Constrain	Descripti Single Plas Double Plas Bolt M Bolt M Washer Nut Bolt M6	tic Cap stic Cap 8x20 6x35 M8 x65		Label   		Descript Bolt M6 Connection F Bolt M8 Bolt M8	x20 Plate Left Plate Right x35	
Label T-1 T-2 T-3	Picture		Description Spanner Allen key M5 Allen key M4					Qty 1 1 1	

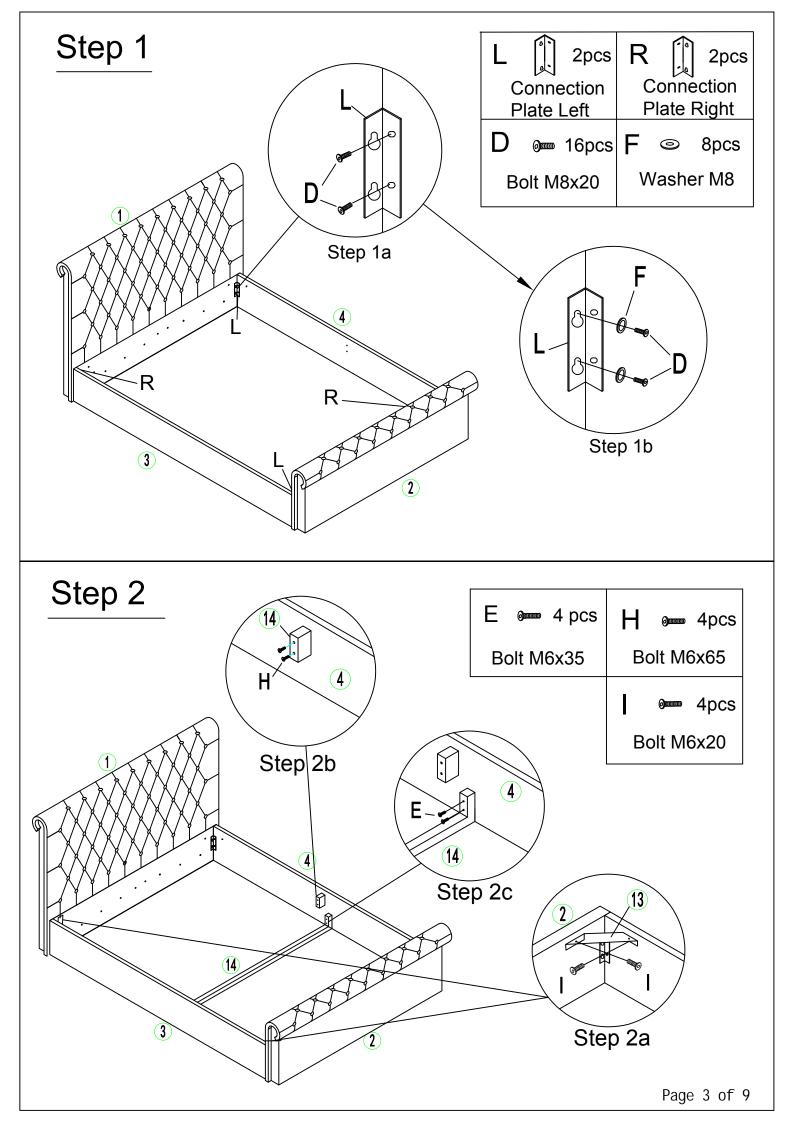


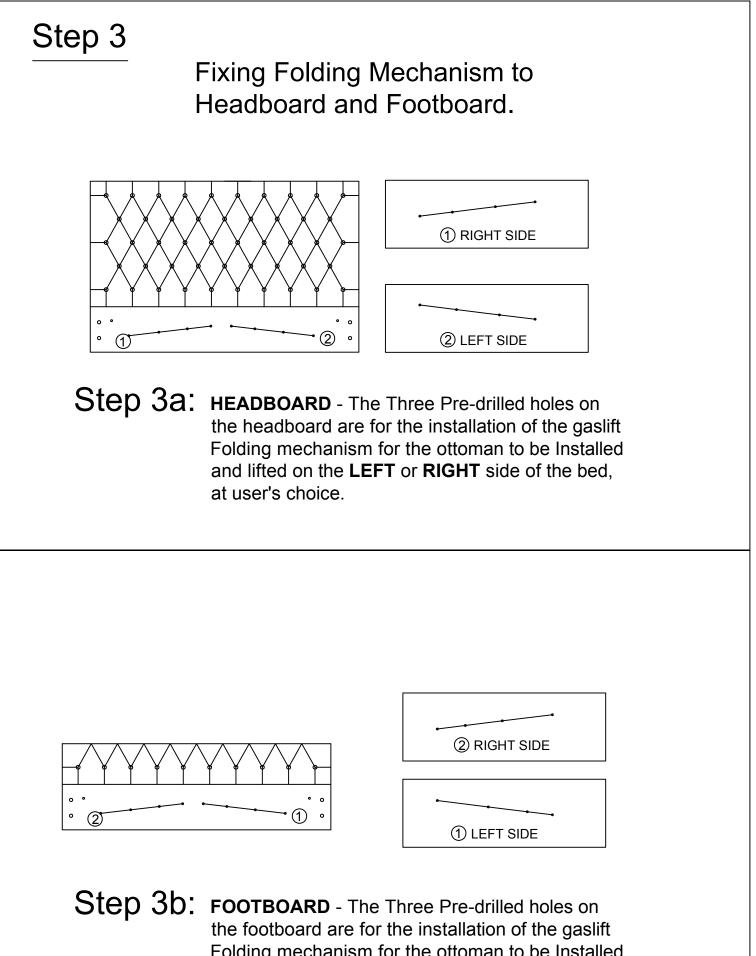

the footboard are for the installation of the gaslift Folding mechanism for the ottoman to be Installed and lifted on the **LEFT** or **RIGHT** side of the bed, at user's choice.

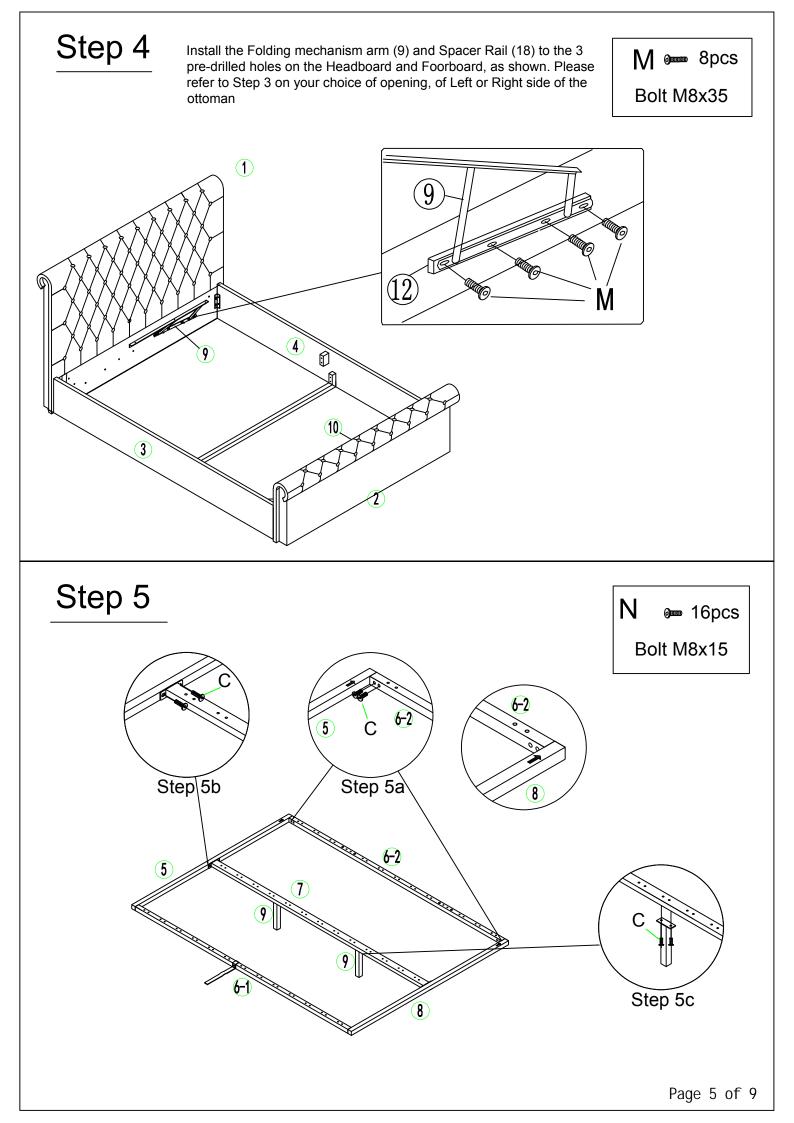

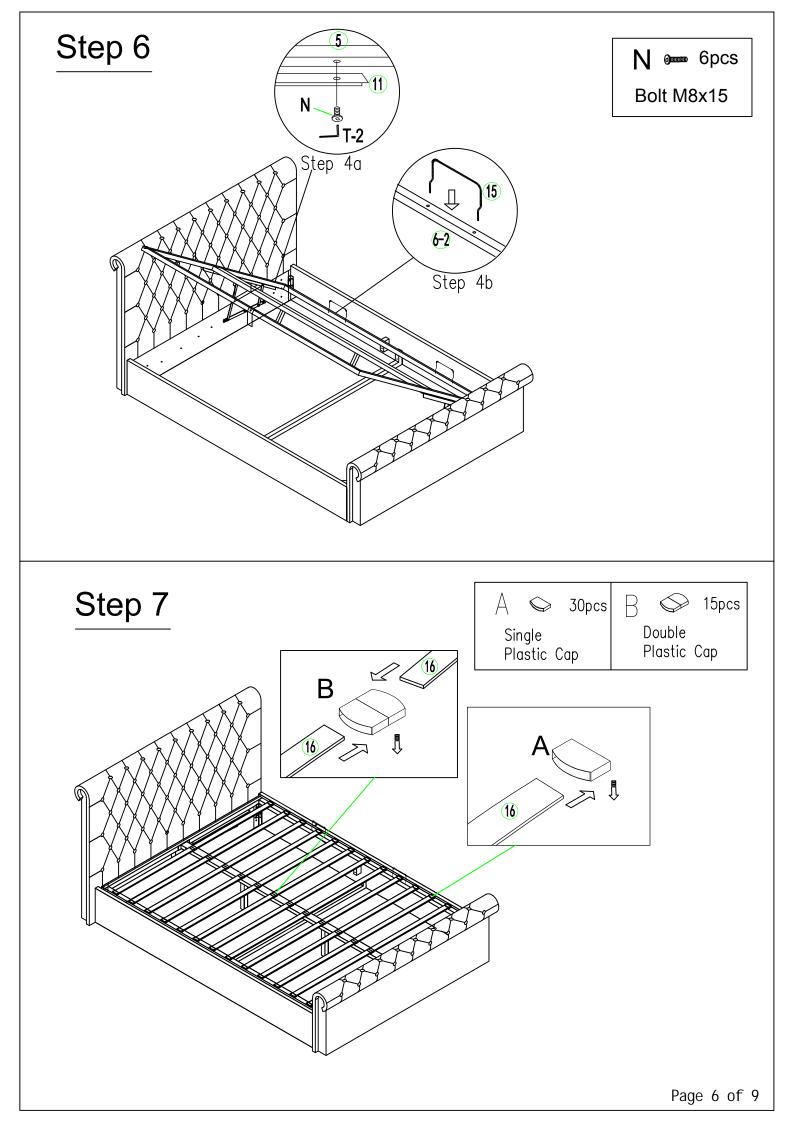

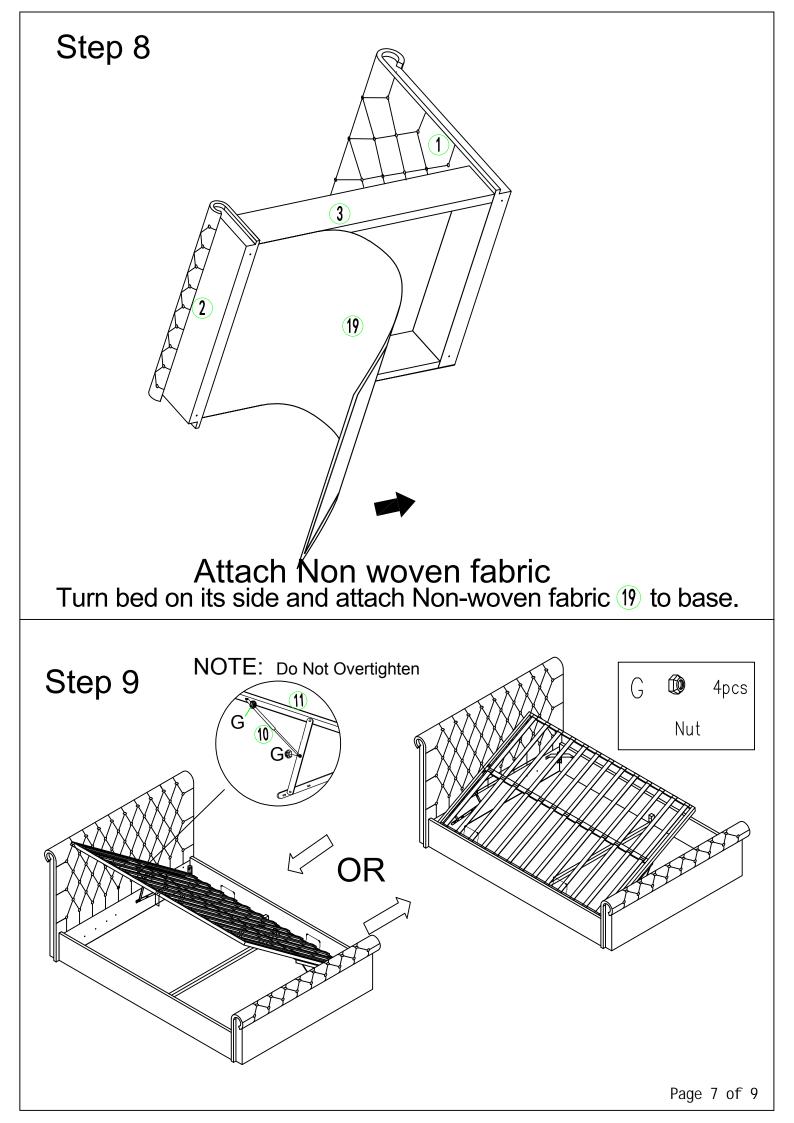

# IMPORTANT NOTICE OTTOMAN OPERATING INSTRUCTIONS

Once your bed frame is completely assembled the slat frame will not operate correctly unless a mattress is placed on the slat frame. Place the mattress on the slat frame whilst it is in the closed position. Use the strap handle and pull up to Open the ottoman. To Close use 2 hands at arm's length to push down the bed frame end, in between the 2 rows of bed slates. DO NOT use the strap handle to close the ottoman.

PLEASE NOTE - it takes a lot of force to make the initial movement to close the ottoman. This is a design feature of the product so the slat frame does not fall shut down involuntary. The nearer the slat frame to being closed the easier the slat frame will move downwards. When the ottoman is almost shut it will close completely under its own and mattress weight.

When lowering the slat frame for the first time, take care to make sure it does not rub unevenly on the inside face of the side rails. If it does, the bed has been assembled slightly out of square. This can be aligned by moving the foot end of the bed slightly to the left or right whilst leaving the head end stationary.

#### PISTONS

The pistons used in the construction of this product are extremely strong and cannot be operated by hand when taken off the ottoman. All pistons are tested for correct pressure and operation before being attached to the slat frame,

Initially it might appear that the pistons are very stiff when opening and closing the ottoman - THIS IS PERFECTLY NORMAL.

After operating the ottoman a few times, the movement of the pistons and the opening and closing of the ottoman will become easier.

## WARNING

For the safety of yourselves and others, please ensure that:

- Use only the strap handle when lifting up the slat frame. Failure to comply with this warning may result in injury and finger entrapment.
- The handle is attached and always left visible on the outside of the bedstead frame.
- The metal slat frame is fully raised in full 'Up' position before using the ottoman space, otherwise the metal slat frame could close (fall) or open(spring up) causing injury.
- Children and pets MUST NOT be left unattended when the frame is in the lifted 'Up' position as they could become trapped inside the ottoman space.
- Please keep children and pets away from the ottoman bedstead whilst opening and closing the slat frame to avoid injury.
- The items store under the bed i.e. the top of an item must not touch the underside of the mattress metal frame base or it may get damaged.

### **IMPORTANT INFORMATION**

The pistons used in the construction of this product are extremely strong and cannot be operated by hand when not fitted to the ottoman hinges. All pistons are tested in the factory for correct pressure and operation before use.


## Initially it might appear that the pistons are very stiff when opening and closing the ottoman frame, THIS IS NORMAL.

After operating the ottoman a few times, the movement of the pistons and the opening and closing of the ottoman will become easier.


**PLEASE NOTE** - It takes a lot of force to make the initial movement of the ottoman. **THIS IS A DESIGN FEATURE OF THE PRODUCT SO THAT IT DOES NOT FALL SHUT.** When the ottoman is almost shut, it will close completely under its own weight. The speed of closing depend on the weight of the mattress so always keep fingers clear of the frame. Periodically check and tighten bolts to ensure that the components are tight and secure.

When lowering the slat unit for the first time, take care to make sure it does not rub unevenly on the inside face of the Side Rail. If it does, the bed has been assembled slightly out of square. This can be rectified by moving the Footboard of the bed slightly to the left or right whilst leaving the headboard of the bed frame stationary.

If you are experiencing difficulty with the initial compression try fitting one piston at a time (following the Assembly Instructions) then press down on the side of the frame with the piston fitted - this acts like a big lever (The weight of the mattress can be used to supplement the load exerted). Effectively you are doubling the amount of force applied, because you have halved the resistance offered by the pistons. It can take slightly more effort than you might feel comfortable applying to the bed frame at first.

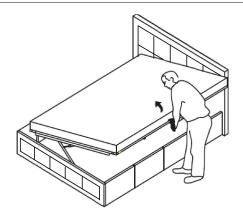

To operate the ottoman, always use 2 hands at arm's length. You must ensure the mattress is on the bed frame before lifting the mechanism. **Failure to do so may result in injury.** 

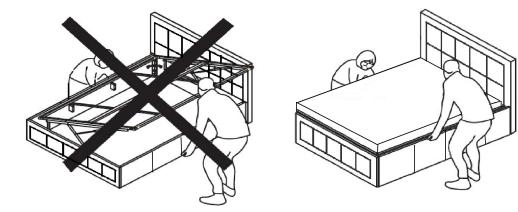

Do not attempt to move the bed whilst the frame is opened in the upright positon.