Before you begin, please follow assembly instructions carefully, then follow them step by step.

Read instruction carefully . See Furniture Parts list and Hardware List for guidance . Be sure you have all parts before you start assembling .
Place and assemble furniture on a clean flat soft surface , such as carpet or rug to pervent being scratched .

	PART LIST	QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL	1 PC
6	BONE PANEL UP	1 PC
7	BONE PANEL DOWN	2 PCS
8	BACK BONE	1 PC
9	BACK PANEL	1 PC
10	DRAWER FRONT SMALL (L)	1 PC
11	DRAWER FRONT SMALL (R)	1 PC
12	DRAWER FRONT BIG	3 PCS
13	DRAWER BACK SMALL	2 PCS
14	DRAWER BACK BIG	3 PCS
15	DRAWER SIDE (L)	5 PCS
16	DRAWER SIDE (R)	5 PCS
17	DRAWER BONE	3 PCS
18	DRAWER BOTTOM SMALL	2 PCS
19	DRAWER BOTTOM BIG	3 PCS
20	CABINET LEG	4 PCS

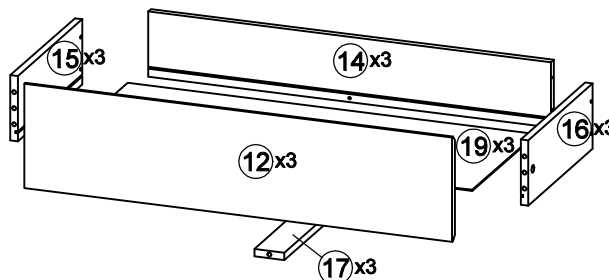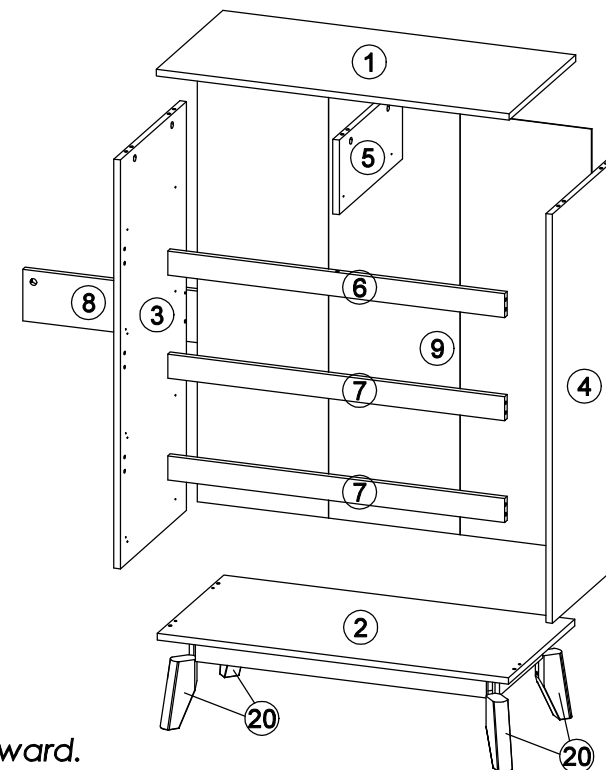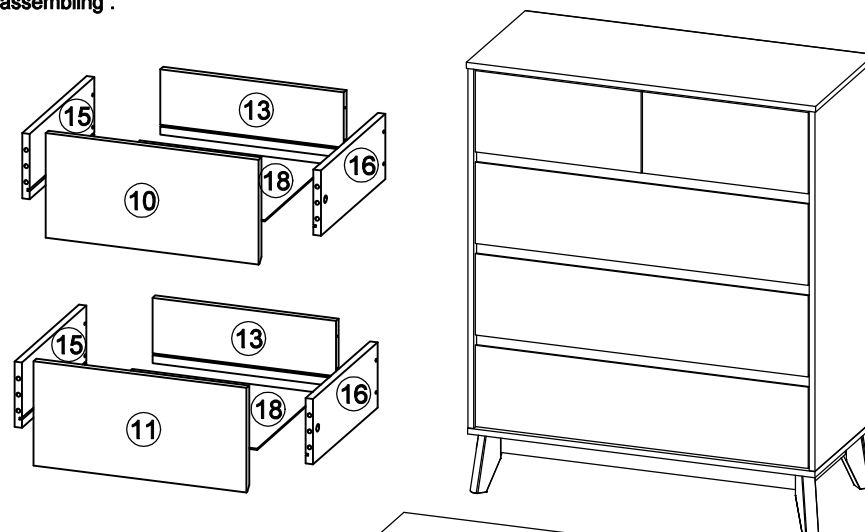|	HARDWARE		QTY
A	MINI FIX A1 A2 A3		24 SETS
B	M8 X 30MM WOOD DOWEL		45 PCS
C	M6 X 50MM CSK CAP WOOD SCREW		4 PCS
D	ALLEN KEY M4		1 PC
E	M3.5 X 16MM C.B SCREW		78 PCS
F	M4 X 38MM C.B SCREW		20 PCS
G	5/8 NAIL		22 PCS
H	ONE HOLE L BRACKET (2MM)		6 PCS
I	JCBC Screw M6 x 70		8 PCS
J	SPRING WASHER M6		8 PCS
K	FLAT WASHER M6		8 PCS
L	14" DRAWER SLIDE	L1 (L/R) L2 (L/R)	5 SETS
M	TIPPING PACK WITH AI M1 M2 M3 M4		2 SETS
N	WALL PLUG (NOT INCLUDED)		-

SELF-PREPARED TOOLS: *Tools below are NOT included in package.*

SCREWDRIVER   HAMMER

Reminder:
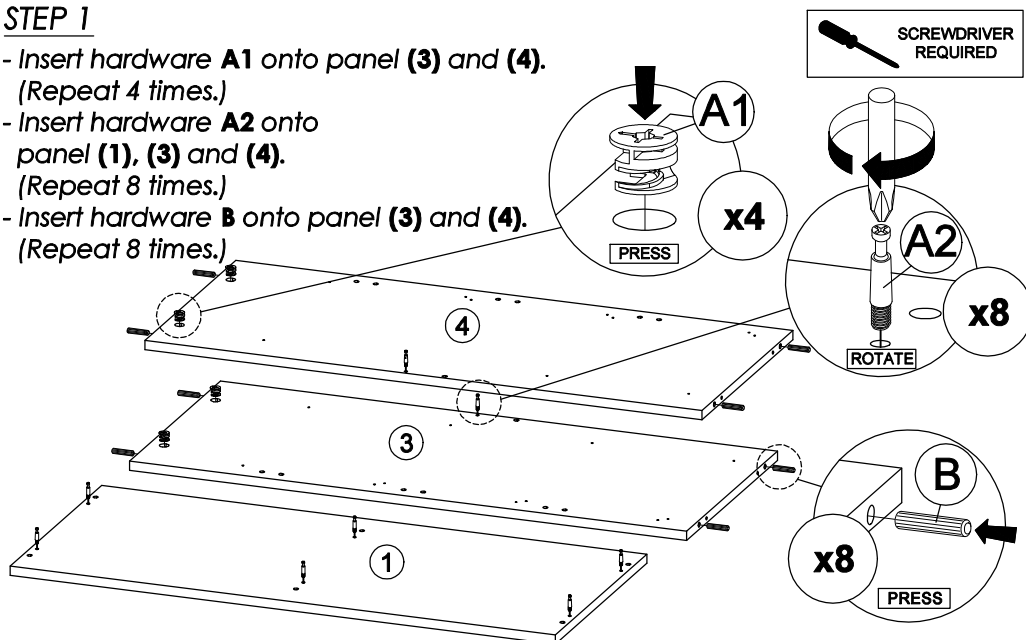*Please ensure that all surfaces and edges with colours/laminations are facing forward/outward.*
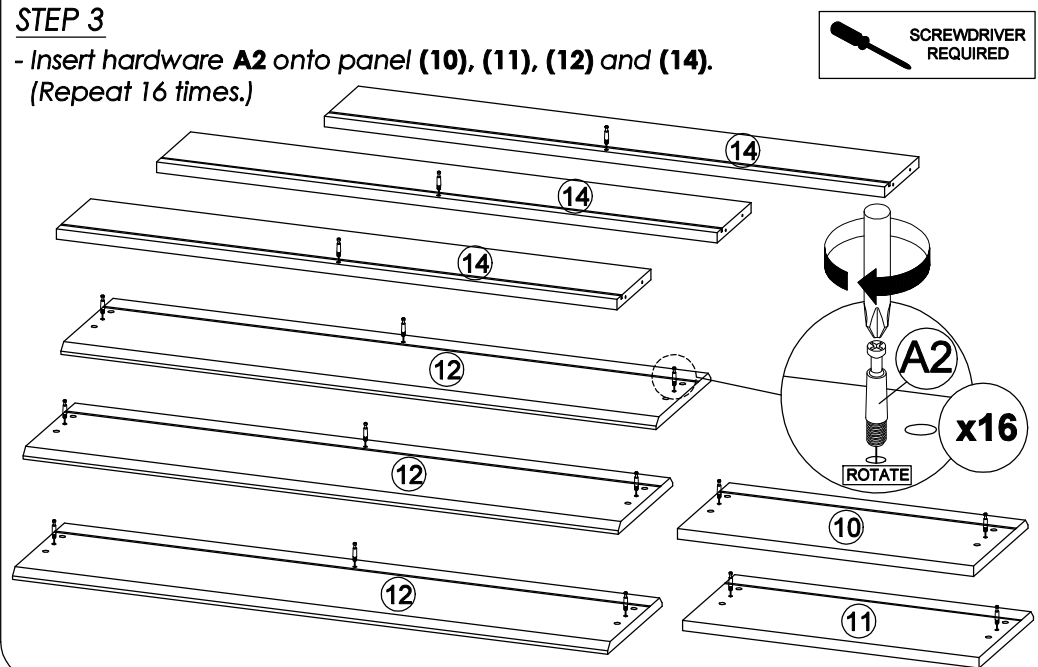
STEP 1

- Insert hardware **A1** onto panel **(3)** and **(4)**.
  (Repeat 4 times.)
- Insert hardware **A2** onto
  panel **(1)**, **(3)** and **(4)**.
  (Repeat 8 times.)
- Insert hardware **B** onto panel **(3)** and **(4)**.
  (Repeat 8 times.)

SCREWDRIVER REQUIRED

A1

PRESS **x4**

A2

ROTATE **x8**

B

x8 **PRESS**

4

3

1

*Ensure the arrows on hardware **A1** point towards mounting positions.*

STEP 2

- Insert hardware **A1** onto panel **(5)**, **(8)**, **(15)**, **(16)** and **(17)**.
  (Repeat 20 times.)
- Insert hardware **B** onto panel **(5)**, **(8)**, **(15)** and **(16)**.
  (Repeat 25 times.)

SCREWDRIVER REQUIRED

A1

x20 **PRESS**

5

8

15 15 16 16

15 15 16 16

15 17 17 17 16

B

x25 **PRESS**

*Ensure the arrows on hardware **A1** point towards mounting positions.*

STEP 3

- Insert hardware **A2** onto panel **(10)**, **(11)**, **(12)** and **(14)**.
  (Repeat 16 times.)

SCREWDRIVER REQUIRED

14

14

14

12

12

12

10

11

A2

ROTATE **x16**
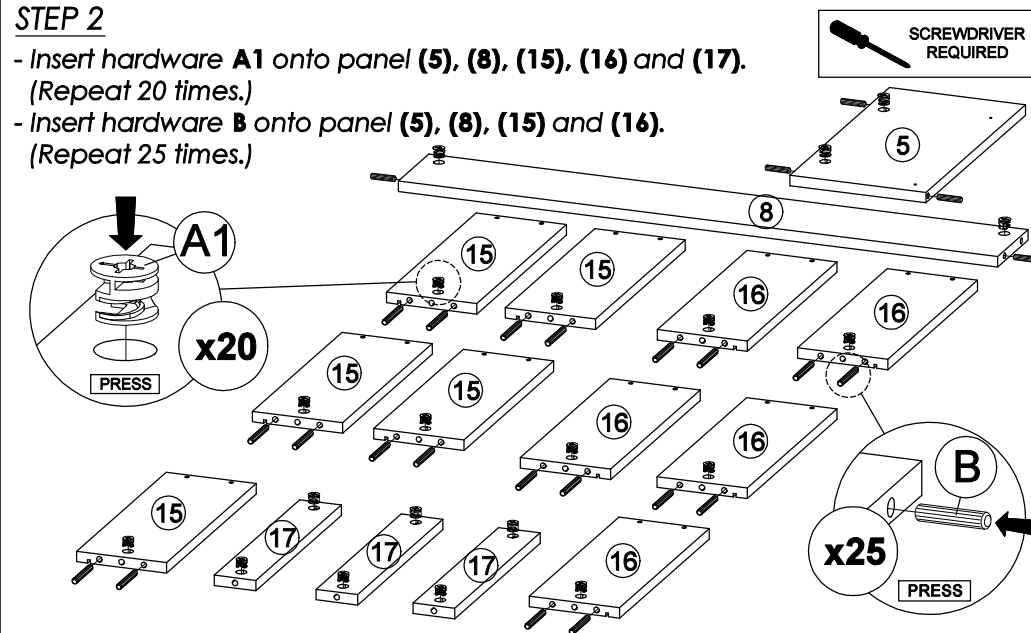
STEP 4

- Assemble hardware **H** to panel **(6)** and **(7)** with hardware **E**.
  (Repeat 6 times.)
- Insert hardware **B** onto panel **(6)** and **(7)**.
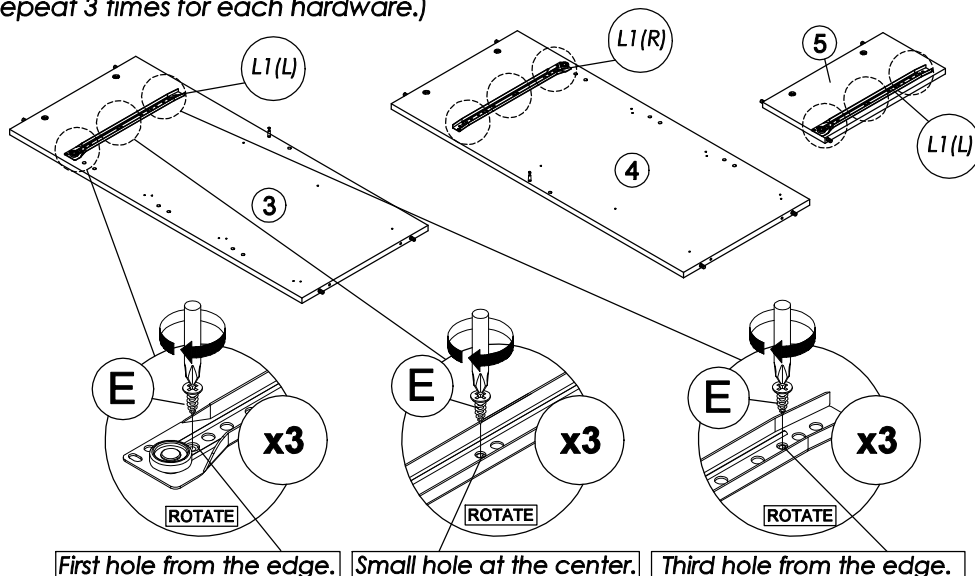 (Repeat 12 times.)

SCREWDRIVER REQUIRED

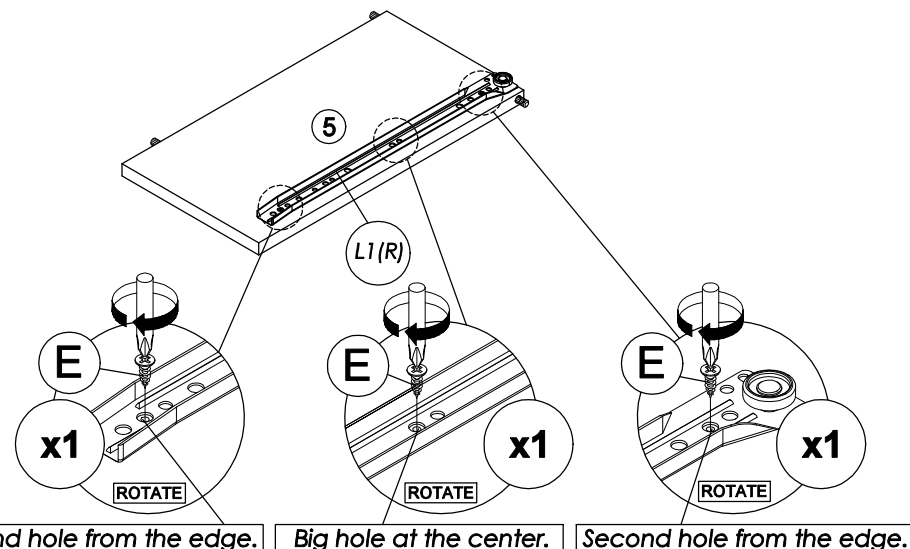**E**

H **x6**

ROTATE

6

7

7

B

x12 **PRESS**
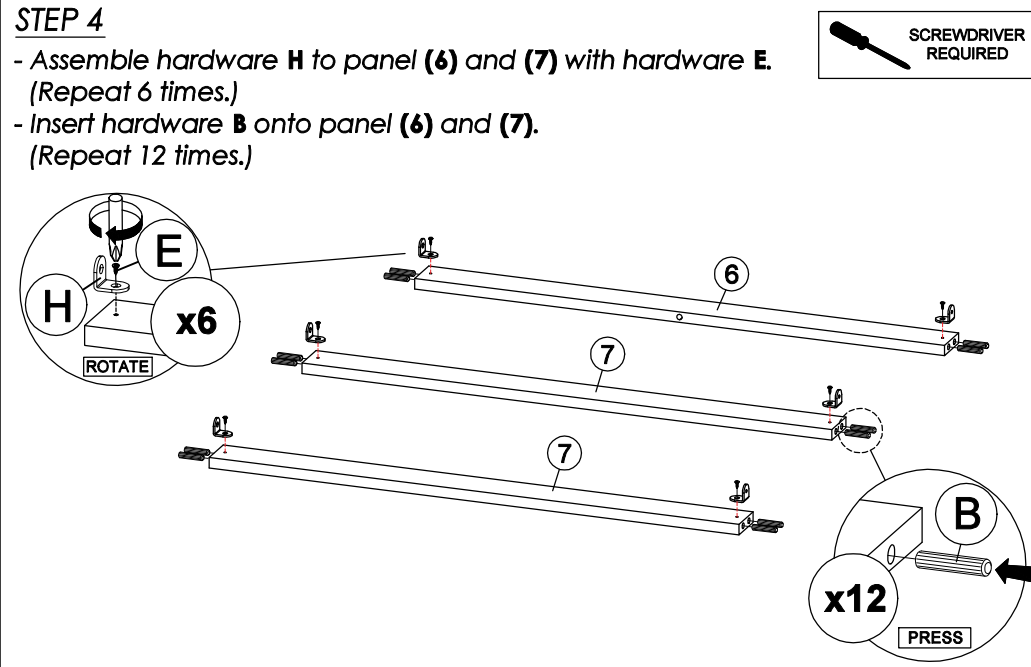
STEP 5

Fix hardware **L1 (L/R)** into panel **(3)**, **(4)** and **(5)** with hardware **E**.
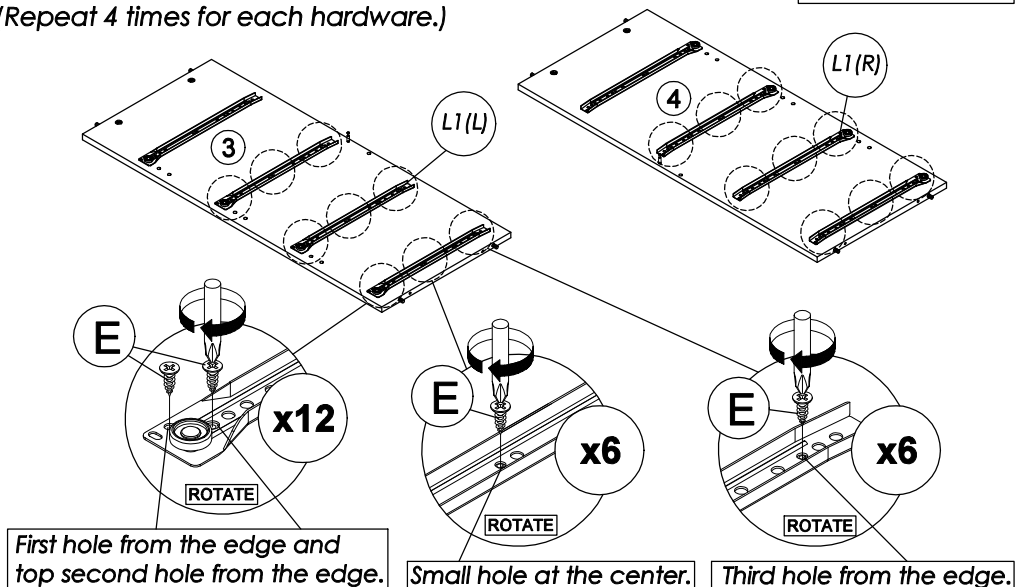*(Repeat 3 times for each hardware.)*

SCREWDRIVER REQUIRED

L1(L)
L1(R)
5
4
3
L1(L)

E x3 — ROTATE
E x3 — ROTATE
E x3 — ROTATE

First hole from the edge. | Small hole at the center. | Third hole from the edge.

STEP 6

Fix hardware **L1 (R)** into panel **(5)** with hardware **E**.
(Repeat 3 times for each hardware.)

SCREWDRIVER REQUIRED

5
L1(R)

E x1 — ROTATE
E x1 — ROTATE
E x1 — ROTATE

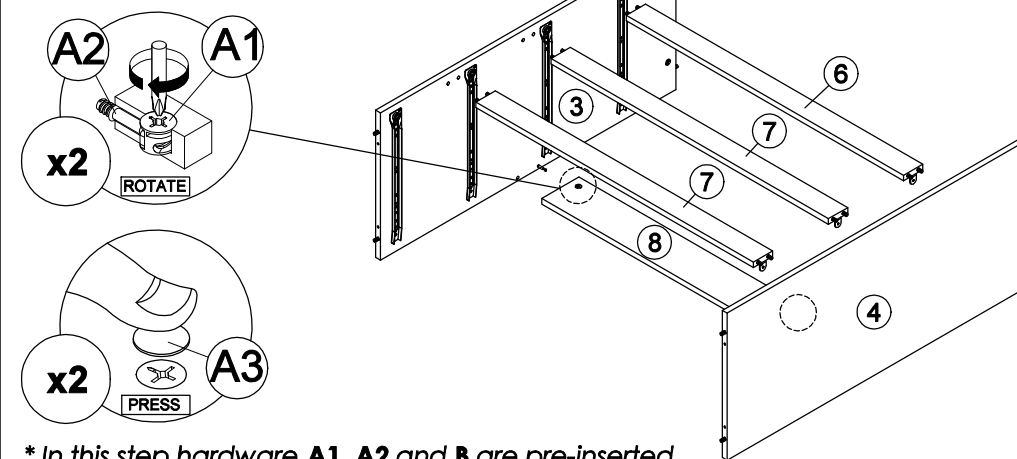Second hole from the edge. | Big hole at the center. | Second hole from the edge.

STEP 7

Fix hardware **L1 (L/R)** into panel **(3)** and **(4)** with hardware **E**.
(Repeat 4 times for each hardware.)

SCREWDRIVER REQUIRED

L1(R)
3
L1(L)
4

E x12 — ROTATE
E x6 — ROTATE
E x6 — ROTATE

First hole from the edge and top second hole from the edge. | Small hole at the center. | Third hole from the edge.

STEP 8

- Attach panel **(3)** and **(4)** to panel **(6)**, **(7)** and **(8)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 2 times.)

SCREWDRIVER REQUIRED

OR

HARDWARE D

A2 A1
x2 — ROTATE

x2 A3 — PRESS

6
3
7
7
8
4

* In this step hardware **A1**, **A2** and **B** are pre-inserted.

STEP 9

Attach panel **(5)** to panel **(6)**.
(Repeat 1 times.)

STEP 10

- Attach panel **(1)** to panel **(3)**, **(4)** and **(5)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 6 times.)
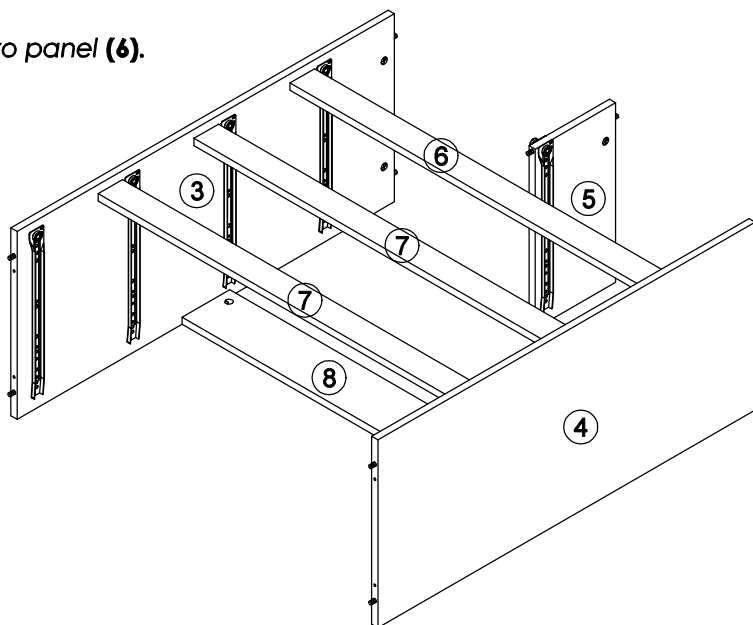
SCREWDRIVER REQUIRED

OR

HARDWARE D

A1   Section View   A2

x6   ROTATE

A3

x6   PRESS
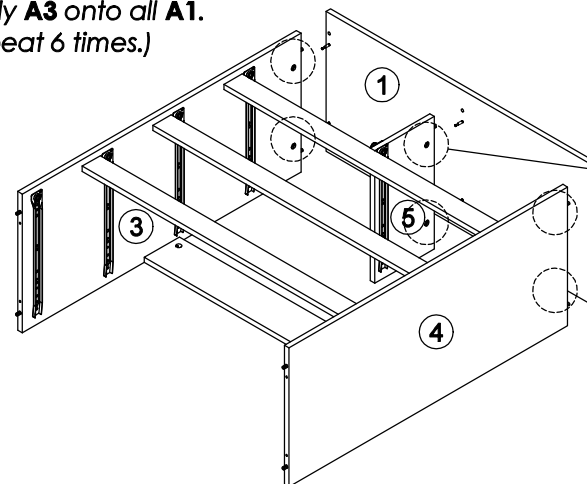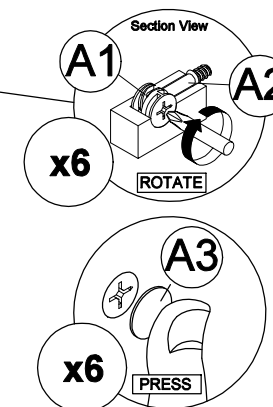
* In this step hardware **A1**, **A2** and **B** are pre-inserted.

STEP 11

- Connect panel **(2)** to panel **(3)** and **(4)**
  by using hardware **C** and **D**.
  (Repeat 4 times.)

HARDWARE D

C

x4

ROTATE

D
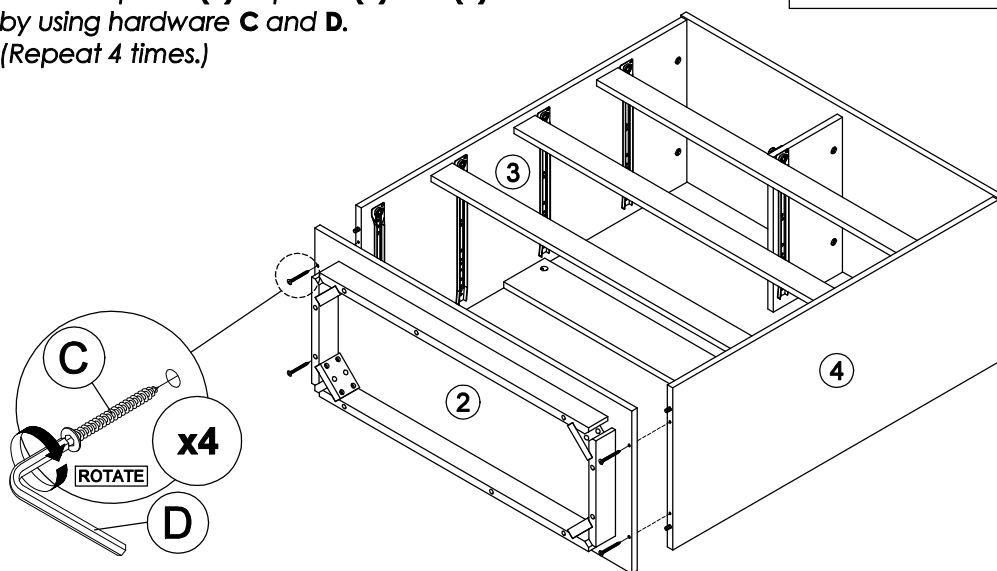
* In this step hardware **B** are pre-inserted.

STEP 12

- Assemble hardware **H** to panel **(3)** and **(4)** with hardware **E**.
  (Repeat 6 times.)

SCREWDRIVER REQUIRED

E

H   x6   ROTATE
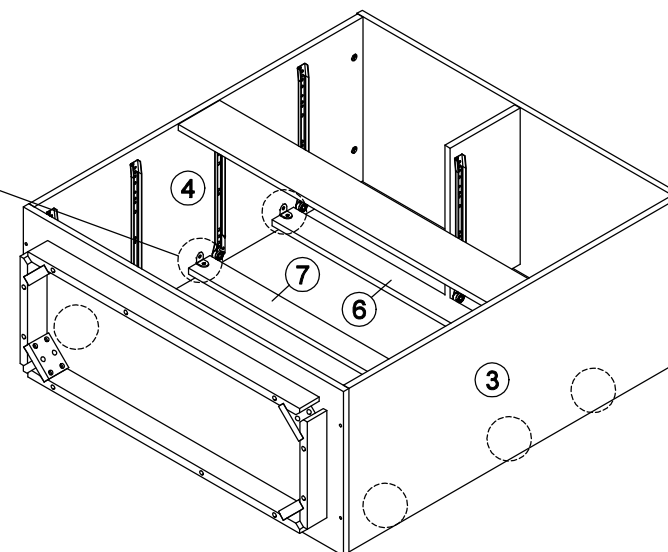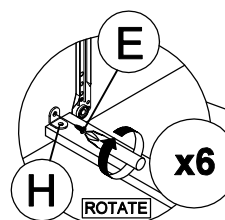
STEP 13

Assemble panel **(9)** to entire body with hardware **G.**
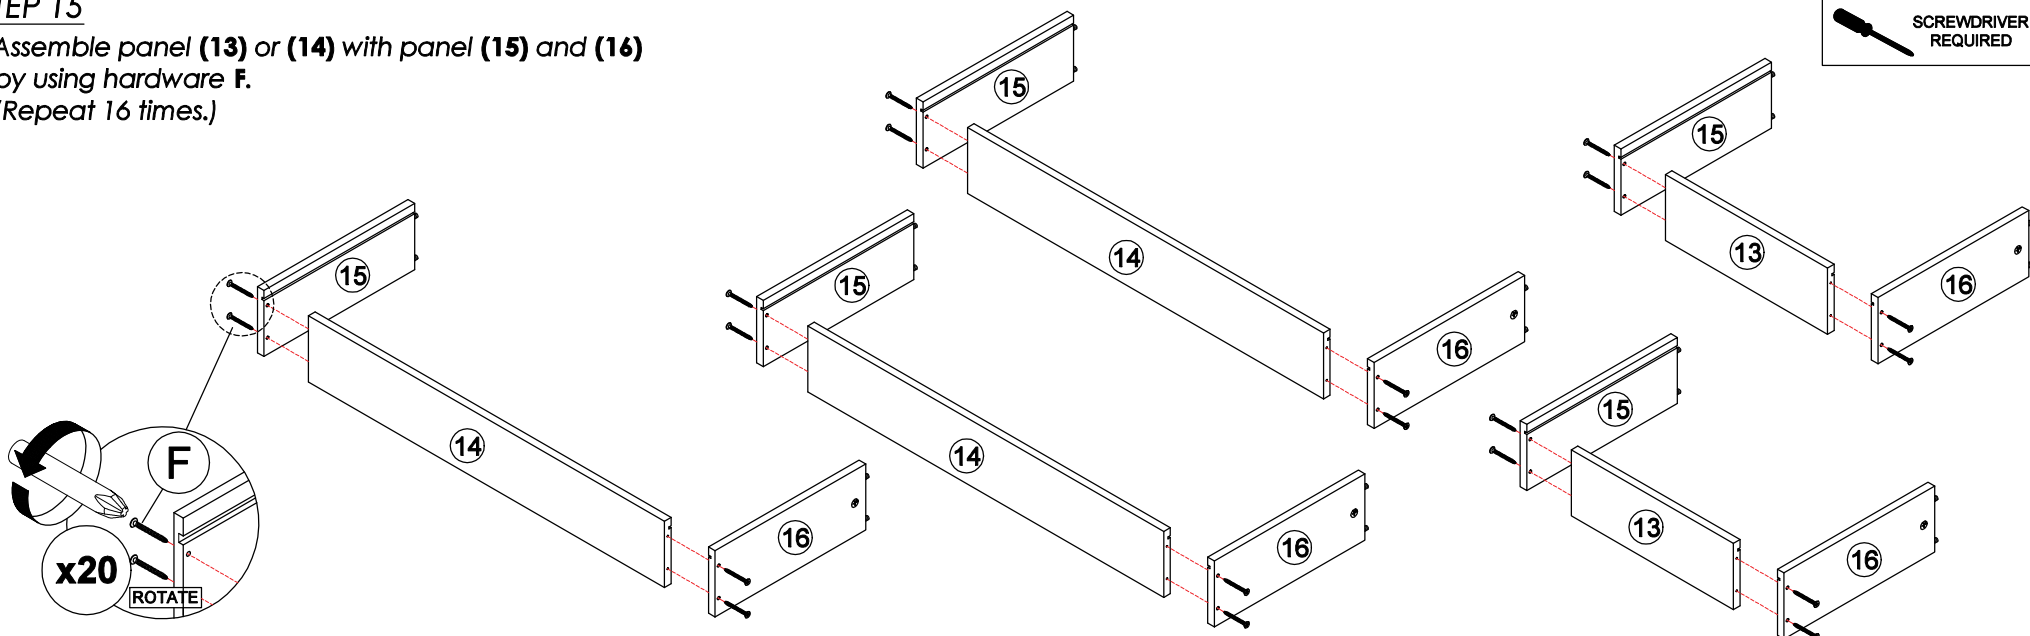(Repeat 22 times.)

HAMMER REQUIRED

G
x22
HIT
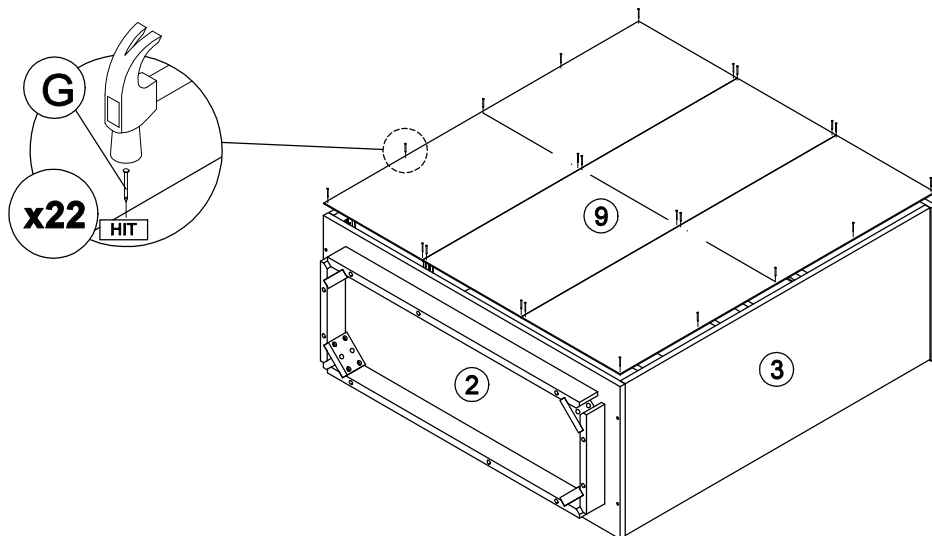
STEP 14

Assemble part **(20)** into panel **(2)** by
using hardware **D, I, J** and **K.**
(Repeat 2 times for each Leg.)

HARDWARE D

K I D
x8
ROTATE
J
20
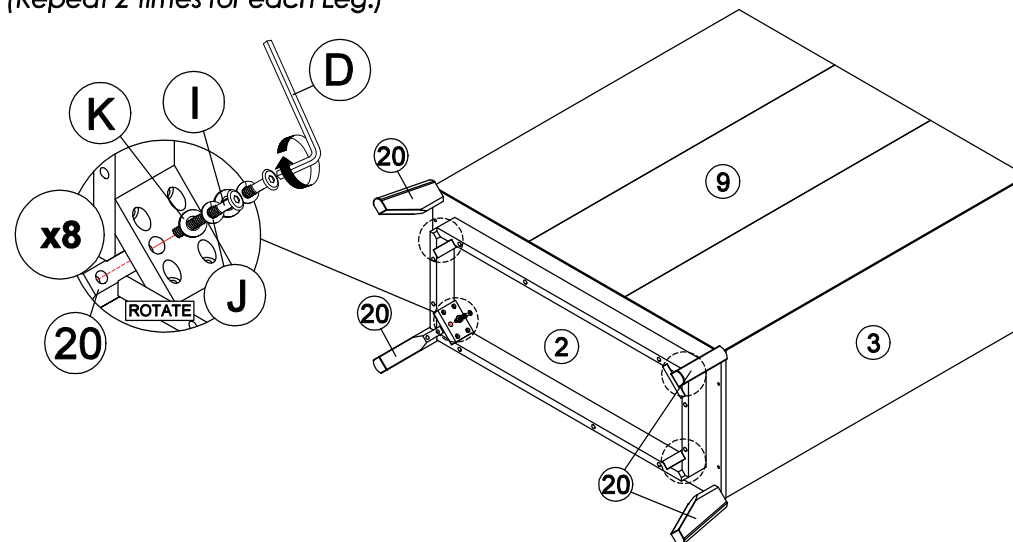
STEP 15

- Assemble panel **(13)** or **(14)** with panel **(15)** and **(16)**
  by using hardware **F.**
  (Repeat 16 times.)

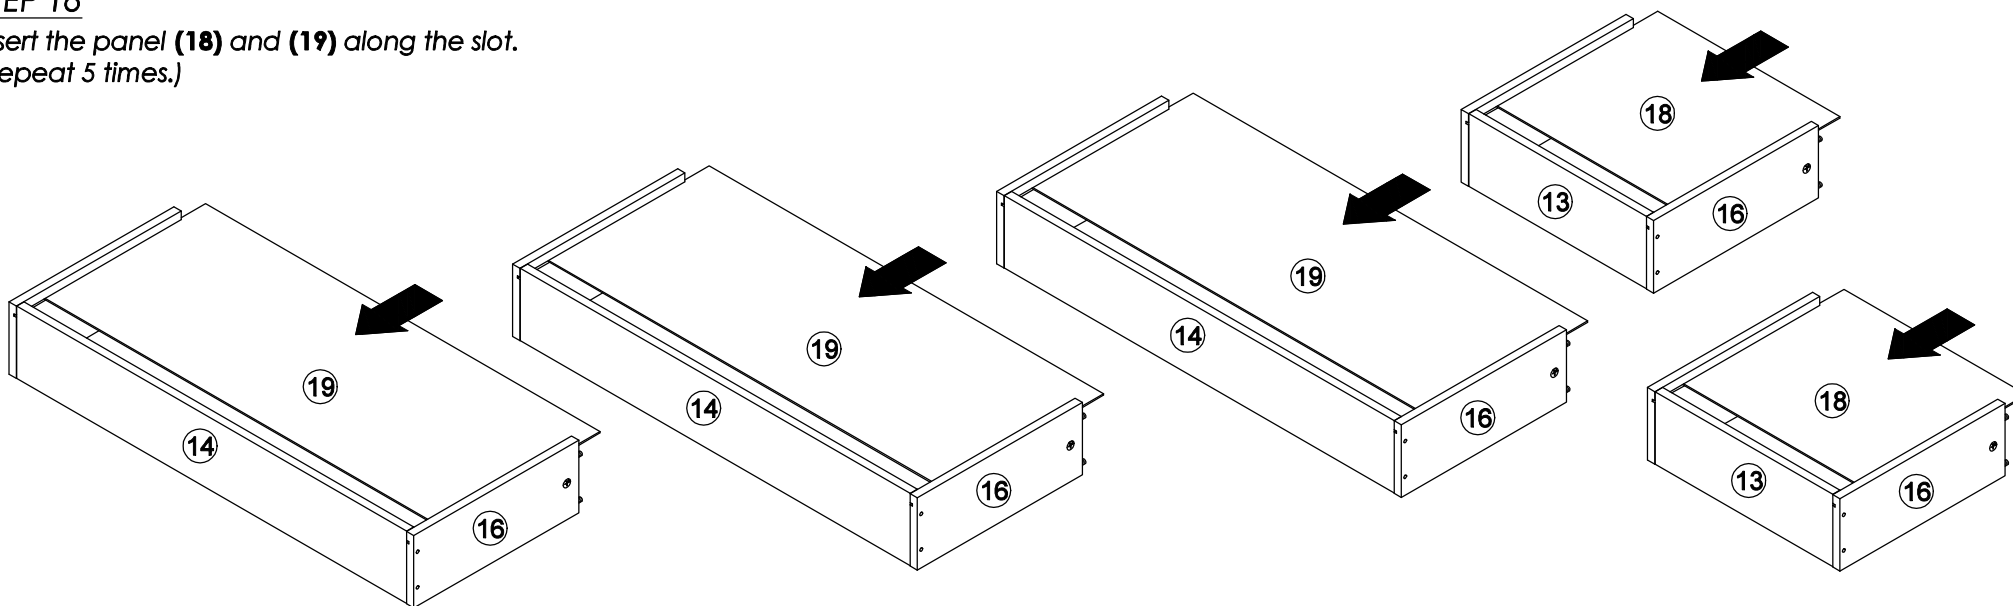**SCREWDRIVER REQUIRED**

F
x20
ROTATE

STEP 16

Insert the panel **(18)** and **(19)** along the slot.
(Repeat 5 times.)

STEP 17

- Attach panel **(10)** or **(11)** to panel **(15)** and **(16)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 4 times.)

SCREWDRIVER REQUIRED

OR

HARDWARE D

Section View

A1   A2
x4   ROTATE

A3
x4   PRESS
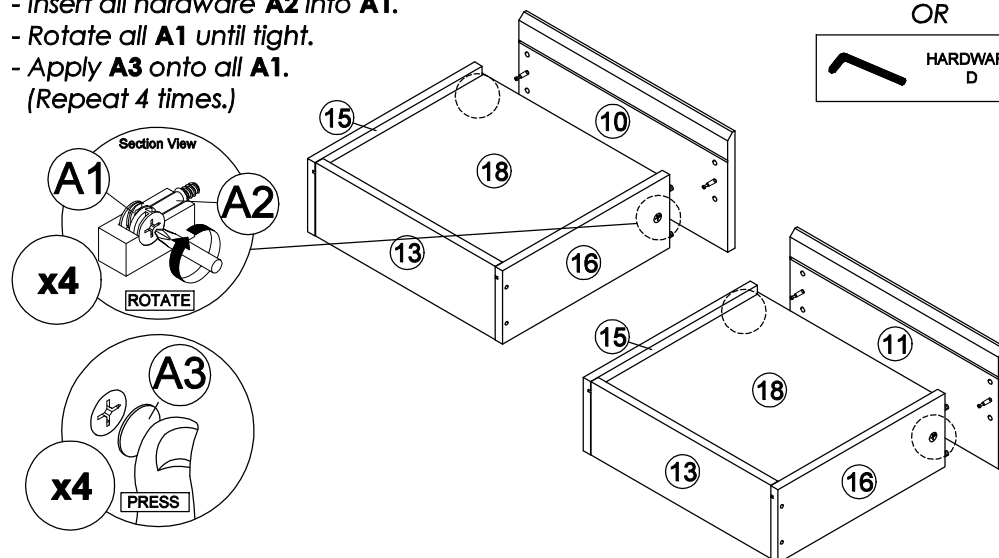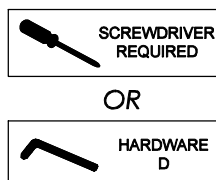
* In this step hardware **A1**, **A2** and **B** are pre-inserted.

STEP 18

- Attach panel **(17)** to panel **(14)**.
- Attach panel **(12)** to panel **(15)**, **(16)** and **(17)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 12 times.)
* In this step only show one of the drawers.
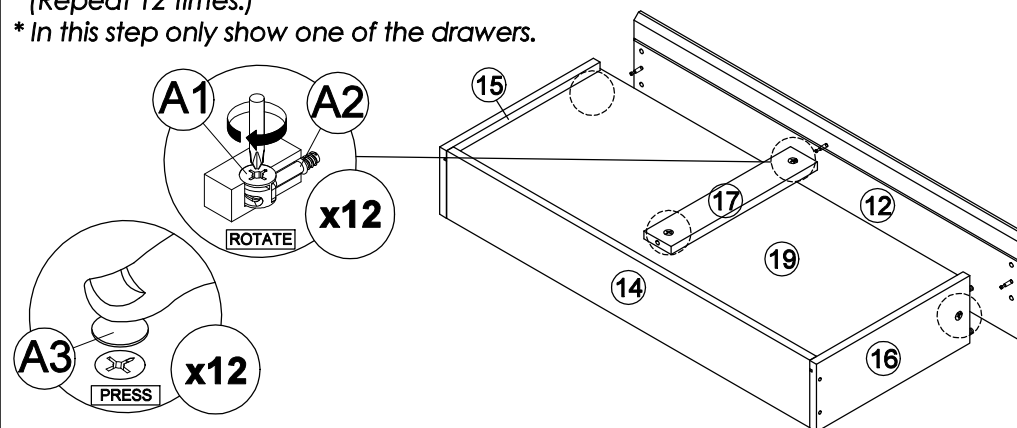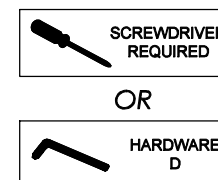
SCREWDRIVER REQUIRED

OR

HARDWARE D

A1   A2
ROTATE   x12

A3   x12
PRESS

* In this step hardware **A1**, **A2** and **B** are pre-inserted.

STEP 19

Assemble hardware **L2 (L/R)** to panel **(15)** and **(16)** by using hardware **E**.
(Repeat 3 times for each hardware.)

SCREWDRIVER REQUIRED

E x4 — Third hole from the edge.
E x4 — Hole at the center.
E x4 — Third hole from the edge.

ROTATE
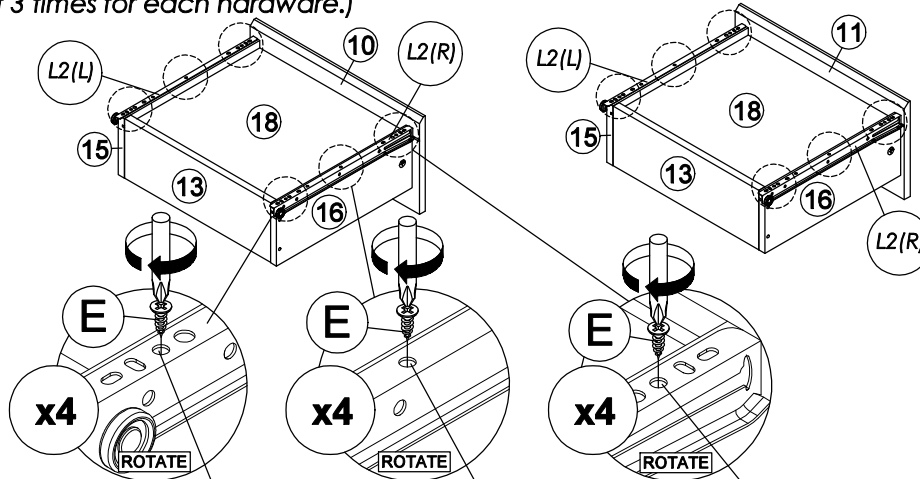
*Hardware **L2 (L/R)** shall be leaning against panel **(10)** or **(11)** when assembling.

STEP 20

Assemble hardware **L2 (L/R)** to panel **(15)** and **(16)** by using hardware **E**.
(Repeat 3 times for each hardware.)
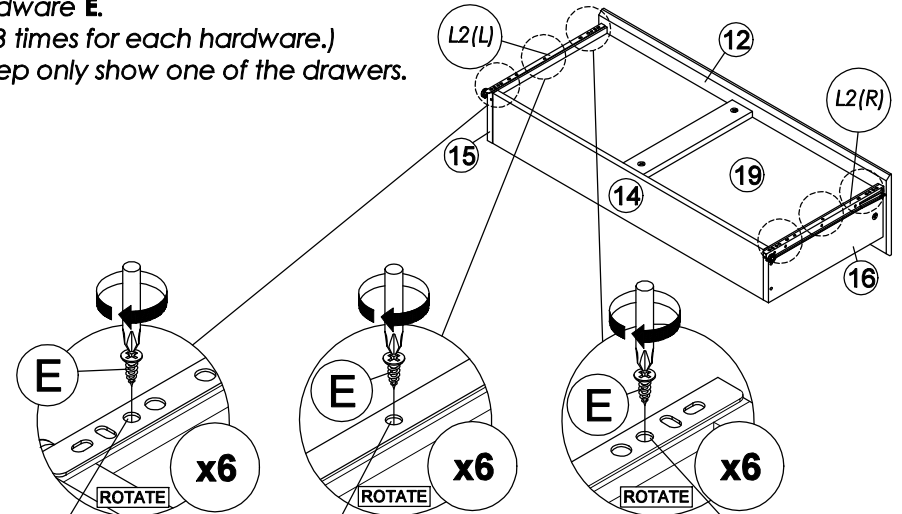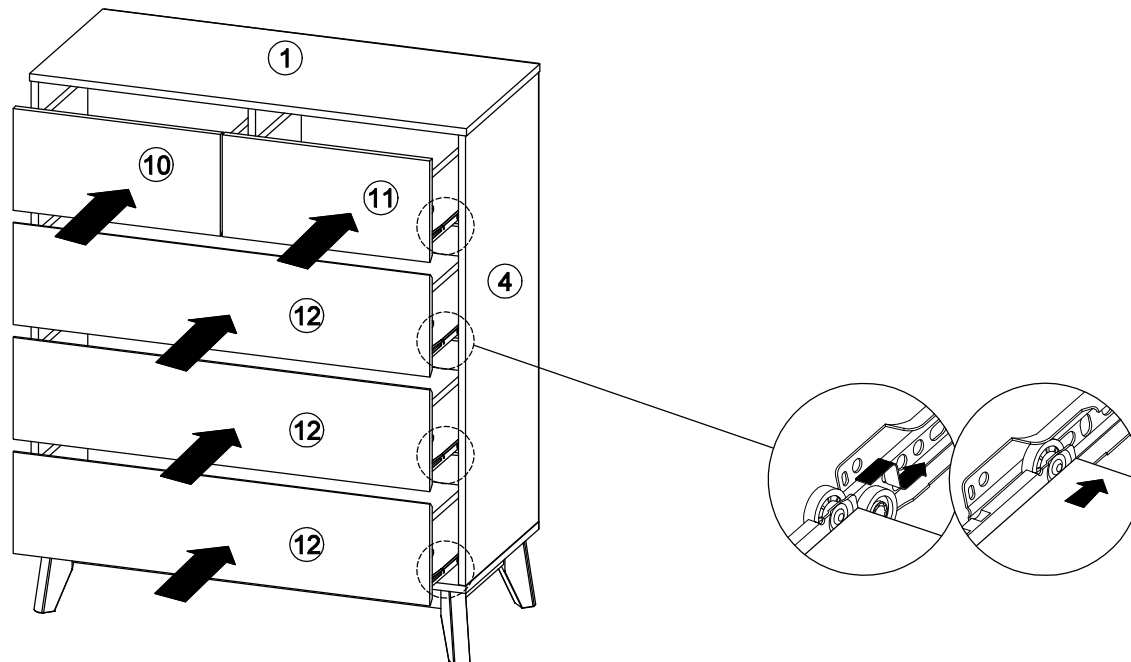* In this step only show one of the drawers.

SCREWDRIVER REQUIRED

E x6 — Third hole from the edge.
E x6 — Hole at the center.
E x6 — Third hole from the edge.

ROTATE

*Hardware **L2 (L/R)** shall be leaning against panel **(12)** when assembling.

STEP 21
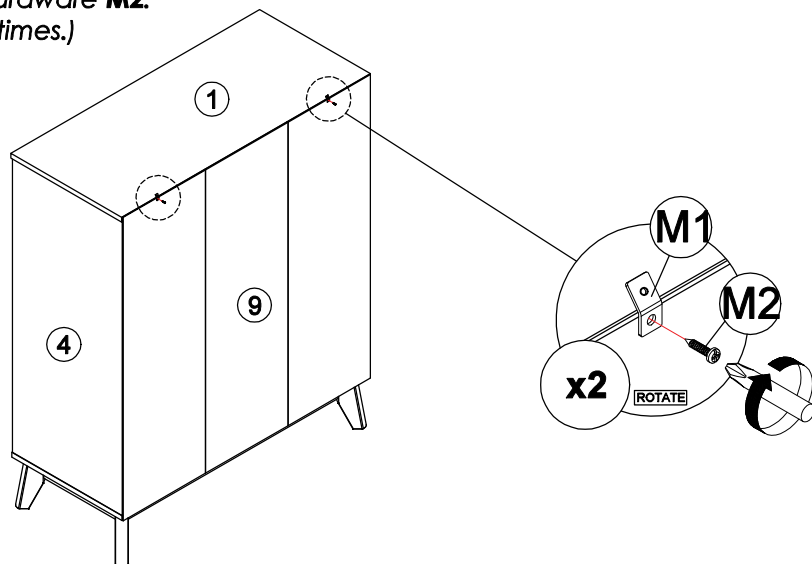
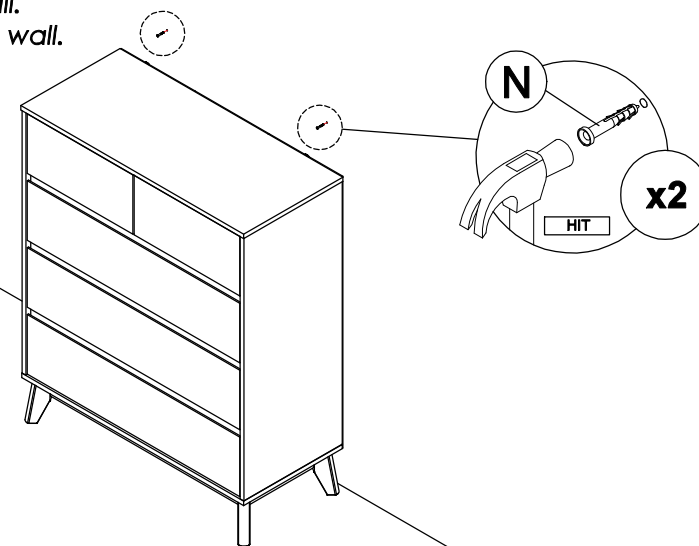Put all the drawer in place along the drawer slides.

MODEL : UH 8736

STEP 22

Assemble hardware **M1** into panel **(1)** and **(9)**
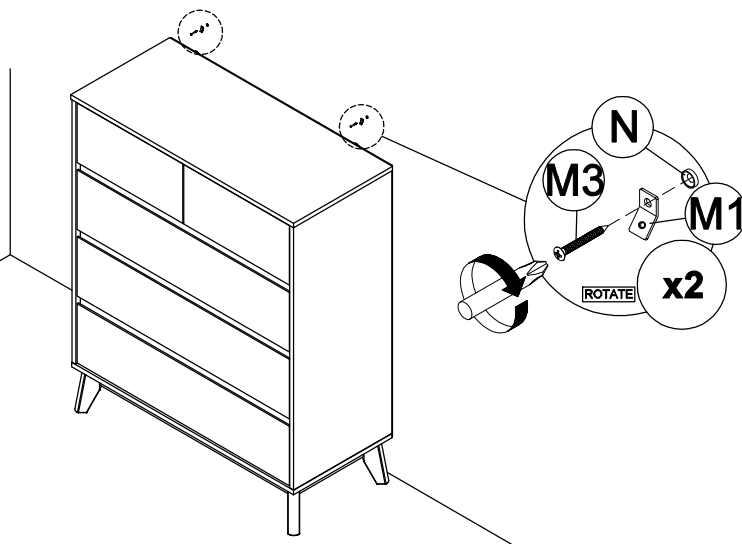by using hardware **M2**.
(Repeat 2 times.)

SCREWDRIVER REQUIRED

STEP 23

- Mark and use the power drill
  to drill a hole on the wall.
- Hit hardware **N** into the wall.
  (Repeat 2 times.)

POWER DRILL REQUIRED

HAMMER REQUIRED

* In this step hardware **N** are **NOT included**.

STEP 24

- Assemble hardware **M1** into **N** by using hardware **M3**.
  (Repeat 2 times.)

SCREWDRIVER REQUIRED

* In this step hardware **N** are **NOT included**.

STEP 25

- Connect both of the hardware **M1** by using hardware **M4**.
- Tighten the hardware **M4**.
  (Repeat 2 times.)